


GC 1000-14

Grass Catcher

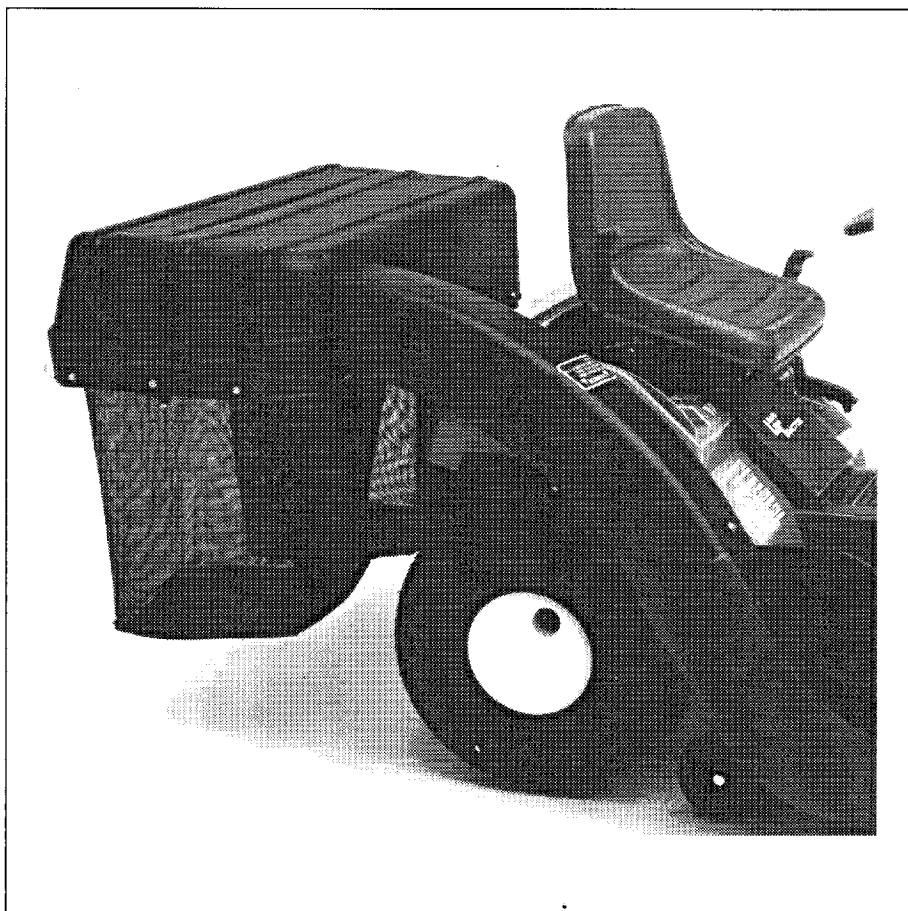

1.1991

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

No.	Part No.		Description
1	533 30 93-20	#	Lid, Grass Catcher
2	533 31 01-94	#	Pivot Rod
3			Pin, Cotter.062 Dia. x 3/4 In.
4			Flatwasher, 9/32 In.
5	533 30 51-97	#	Baffle, Grass Catcher
6			Screen, Slit, Ma Hd, 1/4 x 5/8 In.
7	533 30 92-95	#	Cover, Grass Catcher
8			Screw, Taptite, 1/4-20 x 3/4 In.
9	533 30 97-09	#	Grass Catcher Support
10			Pin, Clevis, 1-3/4 In.
11			Pin Cotter .091 Dia. x 1 -5/8 In.
12	533 31 16-52	#	Support Rod
13	533 30 97-12		Bracket Assy., R H.
14	533 30 97-11		Bracket Assy., L.H.
15	533 30 96-48		Rubber Strap, Hold Down
16			*Locknut, 1/4-20 Thd.
17			Screw, Taptite, 1/4-20 x 1-1/2 In.
18			Spacer
19			Screen
20	533 30 93-65		Bag Grass Catcher
21	533 30 59-03		Chute, Lower, (40 In. mover deck)
24			*Locknut 5/16-18 Thd.
26	533 30 53-19		Chute, Upper
28			Screw, HexHd, 1/4-20 x 3/4 In.
29	533 30 64-92		Latch, Lever
31			Screw, Hex Hd, 1/4-20 x 1 In.
32	533 05 75-05		Strap, Rubber
33			Spacer
34	533 05 11-83		Bolt Eye, 5/16-18 x 2 In.
35			Nut, Keps, 5/16-18 x 2 In.
36			Screw Hex Hd 5/16-18 x 1 In.
37			Flatwasher, 11/32 In. (40 In. m.deck)
38	533 00 91-37	#	Lever Assembly (40 In. m.deck)
39			Nut, Keps, 1/4-20 Thd.
40			Push Nut
41	533 30 90-70		Blade Hi-Lift
42	533 04 76-65		Screw Lock, 3/8-24 x 1,25

Ej lagerförda artiklar. Leveranstid längre än normalt
Not stocked item. Longer delivery time then normal

