


**H** Husqvarna



# Jet 50

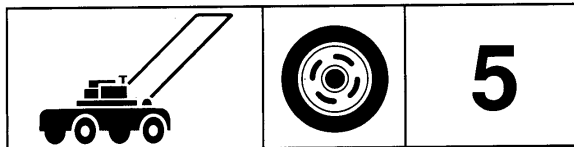

**1.1992**

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**

**Repuestos**

**Reservdelar**

# REPAIR PARTS

## 20"ROTARY LAWN MOWER MODEL NO. JET 50, PRODUCT NO. 954 05 3711

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	532 80 13-58 Control Bar	25	532 85 09-98 Hex Head Thread Rolling Screw 3/8-16 x 1-1/8
2	532 12 53-38 Upper Handle	26	819 15 12-16 Washer
3	532 12 52-93 Lower Handle	27	874 78 05-16 Bolt 5/16-18 x 1
4	532 13 20-01 Rope Guide	28	819 13 20-12 Washer
5	532 06 36-01 Locknut 1/4-20	29	532 75 15-92 Locknut 3/8-16
6	532 13 19-59 Handle Bolt 5/16-18 x 1 -3/4	30	874 76 04-24 Hex Head Bolt 1/4-20 x 1 1/2
7	874 76 04-24 Machine Screw 1/4-20 x 1-1/2	31	532 85 10-84 Hex Head Screw 3/8-24 x 1 -3/8 Gr. 8
8	819 09 14-13 Washer	32	532 85 02-63 Helical Lockwasher 3/8
9	532 13 06-40 Spacer	33	532 85 10-74 Hardened Washer
10	532 85 16-71 Engine Zone Control Cable	34	532 85 09-72 20" Blade
11	532 75 00-97 Hex Washer Head Screw #10-24 x 1/2	35	532 85 09-77 Blade Adapter
12	532 12 51-62 Up-Stop Bracket	36	--- --- --- --- --- --- *Engine - Briggs & Stratton Model No. 95902-3119-01
15	532 12 86-38 Steel Wingnut 5/16-18	37	532 13 06-40 Spacer
16	532 06 64-26 Wire Tie	38	532 00 82-59 Rear Skirt
17	532 05 17-93 Hairpin Cotter	39	532 08 12-76 Hex Washer Head Screw # 10-24 x .50
18	532 85 17-50 Discharge Guard	41	532 10 73-39 Decal, Danger
19	532 12 84-23 Housing Assembly	#	— 532 13 20-75 Operator's Manual (Scandinavian)
20	532 12 50-49 Handle Bracket Assembly (Left)	#	— 532 13 20-76 Operator's Manual (European)
21	532 12 50-47 Handle Bracket Assembly (Right)	#	— 532 80 17-09 Decal, Housing
22	819 15 12-16 Washer	#	— 532 80 06-39 Decal, Warning
23	532 13 04-91 Wheel & Tire Assembly 7.0 x 11/2	#	— 532 80 11-13 Decal, Warning
24	532 06 76-09 Shoulder Bolt		

\* These Parts must be purchased through an authorised Briggs & Stratton Dealer.

