


# Jet 50R

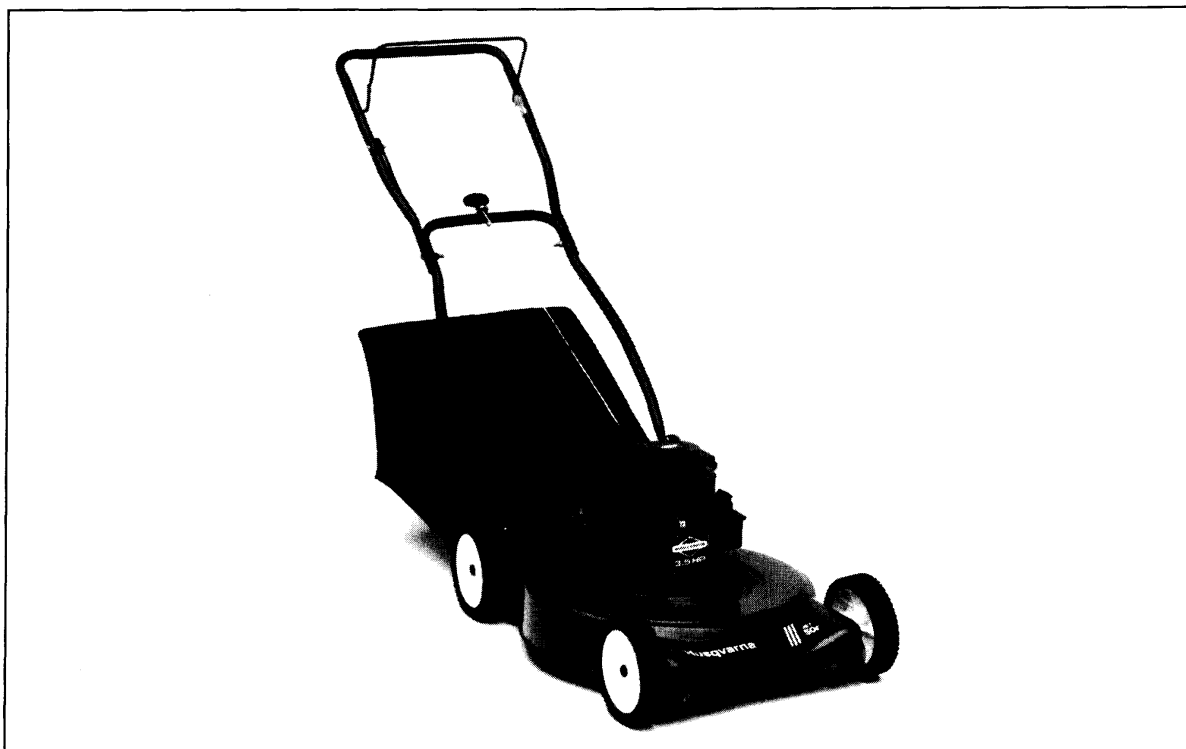

**1.1995**

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**

**Repuestos**

**Reservdelar**

Replaces

Ersetzt

Remplace

Vervangt

Reemplaza

Ersätter

106 23 55-64

PART NUMBER SQUARE NOTE

532 05 17-93		
532 05 21-60		
532 05 45-83		
532 05 51-87		
532 06 23-35		
532 06 36-01		
532 06 64-26		
532 08 38-16		
532 08 49-20		
532 08 49-21		
532 08 51-79		
532 08 56-92		
532 08 57-23		
532 08 69-02		
532 08 78-77		
532 08 79-30		
532 08 86-14		
532 08 86-52		
532 10 73-39		
532 12 51-62		
532 12 51-68		
532 12 51-72		
532 12 52-93		
532 12 53-11		
532 12 53-38		
532 12 84-15		
532 12 86-38		
532 13 04-91		
532 13 08-61		
532 13 19-59		
532 13 20-01		
532 13 62-33		
532 13 88-64		N
532 13 88-65		
532 13 88-66		
532 13 88-67		
532 13 88-68		
532 13 99-01		
532 14 06-57		N
532 14 17-30		N
532 14 20-07		N
532 14 20-08		N
532 14 27-48		N
532 14 49-29		N
532 14 51-06		N
532 14 61-43		N
532 14 66-94		N
532 14 68-96		N
532 14 76-13		N
532 14 91-00		N
532 21 31-46		
532 75 00-97		
532 75 15-92		
532 80 00-90		
532 80 01-97		
532 80 10-90		
532 85 02-63		
532 85 09-77		
532 85 09-98		
532 85 10-74		
532 85 10-84		
532 85 14-62		

N=New part  
 Neues teil  
 Nouvelle piece  
 Nueva pieza  
 Ny detalj

KEY NO.	PART NO.	DESCRIPTION
1	532 08 69-02	Control Bar
2	532 12 53-38	Upper Handle
3	532 12 52-93	Lower Handle
4	532 13 20-01	Rope Guide
5	532 06 36-01	Locknut 1/4-20
6	532 13 19-59	Handle Bolt
7	532 06 64-26	Wire Tie
8	532 14 49-29	Hex Washer Head Screw 1/4-20x2-1/8
9	532 85 14-62	Throttle Control
10	532 14 66-94	Screw
11	532 13 08-61	Engine Zone Control Cable
12	532 75 00-97	Hex Washer Head Screw #10-24x1/2
13	532 12 51-62	Up-Stop Bracket
14	532 12 86-38	Wing Nut
15	532 05 17-93	Hairpin Cotter
16	532 14 61-43	Foot Guard
19	532 13 88-65	Back Plate
20	532 13 88-66	Side Baffle
21	532 14 06-57	Rear Skirt
23	532 14 76-13	Rear Door Assembly Kit
24	532 75 15-92	Locknut 3/8-16
25	532 14 20-08	Handle Bracket Assembly (Left)
26	532 14 20-07	Handle Bracket Assembly (Right)
27	532 05 51-87	Screw 5/16-18 x 3/4
29	532 13 99-01	Wheel Adjusting Bracket
30	532 08 49-20	Spacer
32	532 14 17-30	Selector Spring
33	532 08 78-77	Selector Knob
34	532 12 51-72	Axle Arm Assembly
35	532 06 23-35	Belleville Washer

KEY NO.	PART NO.	DESCRIPTION
36	532 14 27-48	Shoulder Bolt 3/8-16
37	532 13 04-91	Wheel Assembly
38	532 05 21-60	Washer
39	532 08 51-79	Retainer Clip
40	532 80 00-90	Hubcap
41	532 08 86-52	Hinge Screw
43	532 05 45-83	Hex Tapping Screw 1/4-20 x 1/2
45	532 85 09-98	Hex Head Thread Rolling Screw 3/8-16x1
51	532 13 88-64	Front Baffle
52	532 14 91-00	Housing Assembly (Incl. Ref. #46, 51,19, & 20)
53	532 85 10-84	Hex Head Screw 3/8-24 x 1-3/8 Grd. 8
54	532 85 02-63	Helical Lock Washer
55	532 85 10-74	Hardened Washer
56	532 14 51-06	20" Blade
57	532 85 09-77	Blade Adapter
64	532 21 31-46	* Cable Clamp (Engine)
65	532 08 38-16	Screw #10x5/8
66	532 08 79-30	Cable Clip
67	532 14 68-96	Grass Bag
68	532 08 86-14	Catcher Frame
70	-----	*Engine-Briggs/StrattonModelNo.95902
72	532 12 84-15	Pop Rivet

