



Jet 55S



1.1995

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Replaces

Ersetzt

Remplace


Vervangt

Reemplaza

Ersätter

106 23 58-64

A

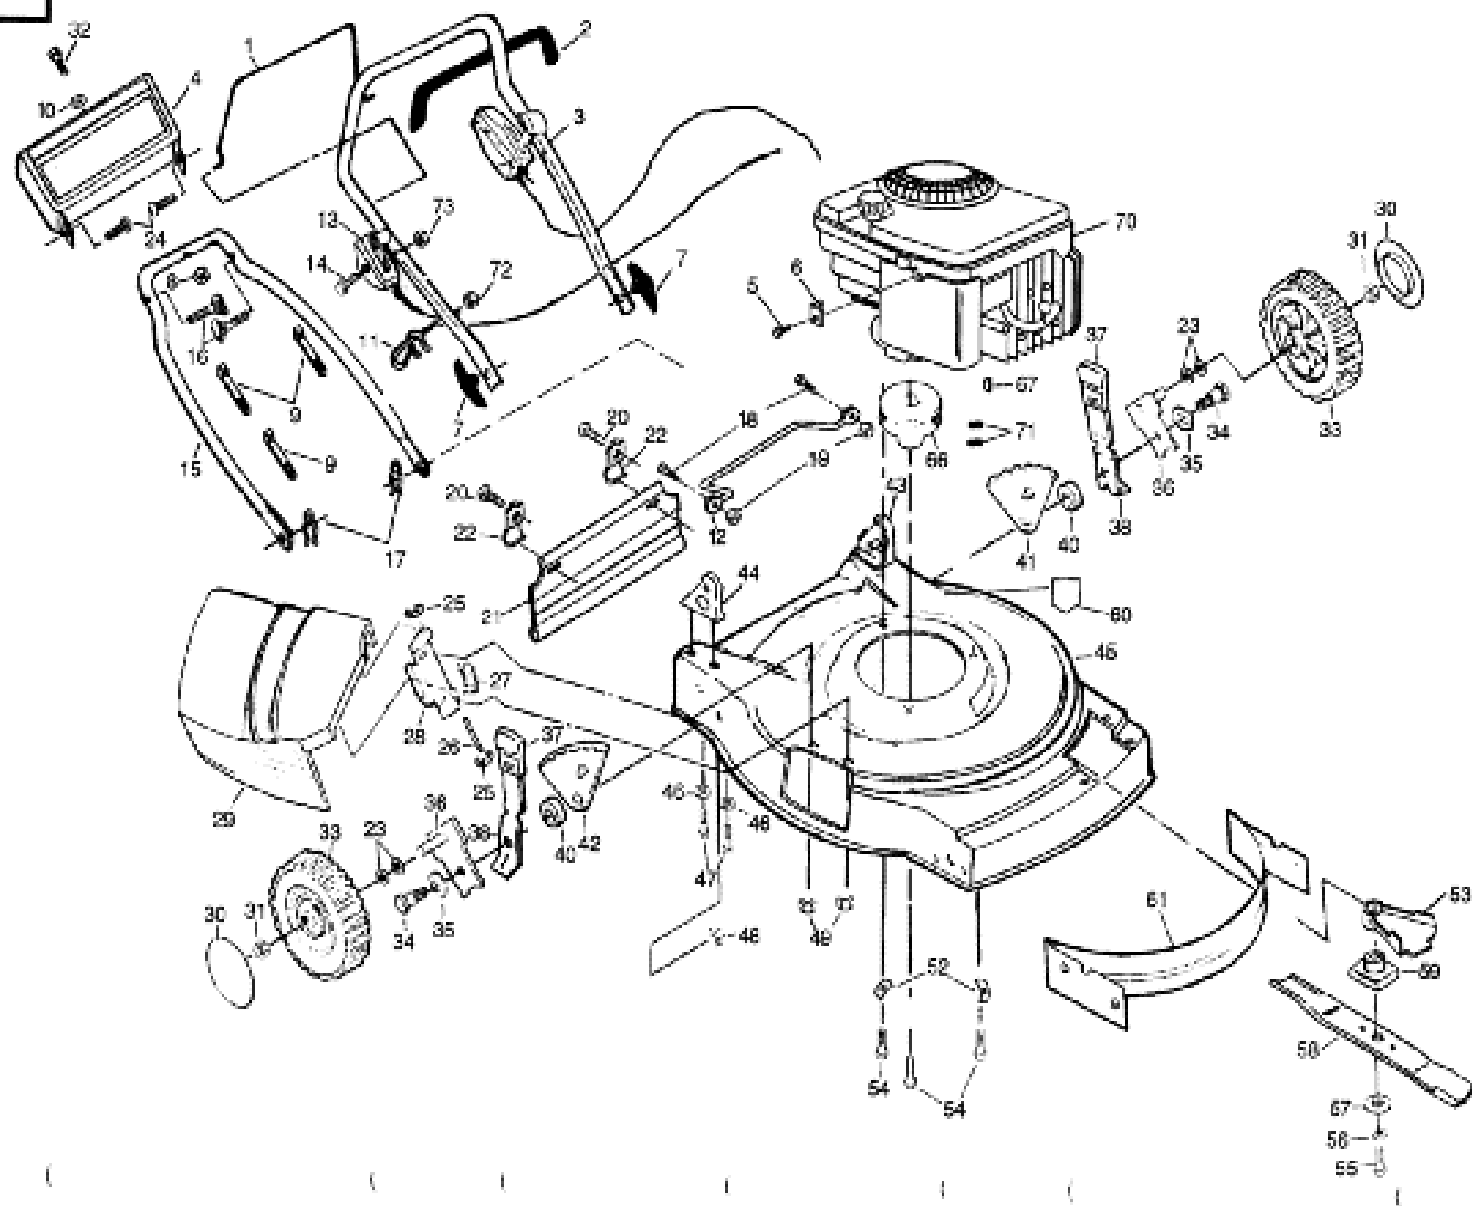




KEY PART NO. NO.	DESCRIPTION
1 532 13 10-94	Control Bar
2 532 85 07-24	Handle Grip
3 532 12 52-94	Upper Handle
4 532 80 05-47	Trim Plate
5 532 08 38-16	Thread Rolling Screw #10-32x5/8
6 532 21 31-46	* Cable Clamp
7 532 13 63-76	Handle Knob
8 532 06 36-01	Locknut 1/4-20
9 532 06 64-26	Wire Ties
10 532 08 57-23	Washer Plate
11 532 13 20-01	Rope Guide
13 532 70 04-17	Throttle Control
14 532 05 99-35	Screw
15 532 12 52-93	Lower Handle
16 532 13 19-59	Handle Bolt 5/16-18x1-3/4
17 532 05 17-93	Hairpin Cotter
20 532 75 00-97	Screw, Hex, #10-24x 1/2
21 532 14 05-40	Rear Skirt
22 532 12 52-07	Skirt Bracket
23 532 05 71-43	Wave Washer
24 532 03 69-53	Screw,#10-24x5/8
25 812 00 00-14	E-Ring
26 532 08 75-90	Hinge Rod
27 532 08 75-89	Torsion Spring
28 532 08 75-93	Housing Bracket Assembly
29 532 85 07-78	Discharge Guard
30 532 85 08-45	Hubcap
31 532 08 39-23	Locknut 3/8-16
32 532 08 54-36	Screw, 1/4-20 x 1-3/4
33 532 80 03-33	Wheel & Tire Assembly 8.00 x 2.00
34 532 14 27-48	Shoulder Bolt 3/8-16
35 532 06 23-35	Belleville Washer 1/2
36 532 12 50-61	Axle Arm Assembly
37 532 13 28-00	Selector Knob

KEY PART NO. NO.	DESCRIPTION
38 532 21 25-06	Selector Spring
40 532 08 49-20	Spacer
41 532 14 00-59	Wheel Adjusting Bracket (Left)
42 532 14 00-58	Wheel Adjusting Bracket (Right)
43 532 14 04-66	Handle Bracket Assembly (Left)
44 532 14 04-65	Handle Bracket Assembly(Right)
45 532 14 69-17	Lawn Mower Housing
46 532 05 92-89	Washer
47 532 05 51-87	Self Tapping Screw 5/16-18x3/4
48 532 75 15-92	Locknut 3/8-16
49 532 05 34-90	Locknut 1/4-20
52 532 12 50-78	Washer
53 532 13 46-12	Debris Shield
54 532 85 09-98	Hex Head Thread Rolling Screw 3/8-16 x 1
55 532 85 10-84	Hex Head Screw 3/8-24 x1-3/8 Grades
56 532 85 02-63	Washer,Lock Helical 3/8
57 532 85 10-74	Hardened Washer
58 532 14 11-14	22" Blade
59 532 85 15-14	Blade Adapter
61 532 14 89-02	Front Baffle
66 532 08 45-96	Engine Pulley
67 532 08 76-77	Hi-Pro Key #HP505
70 - - - - -	* Engine - Briggs & Stratton Model No.12F202
71 532 05 97-08	Set Screw
72 873 51 04-00	Keps Locknut 114-20
73 532 05 34-90	Hex Locknut 1/4-20
- - 532 12 53-81	Rear Baffle (Not Shown)

B

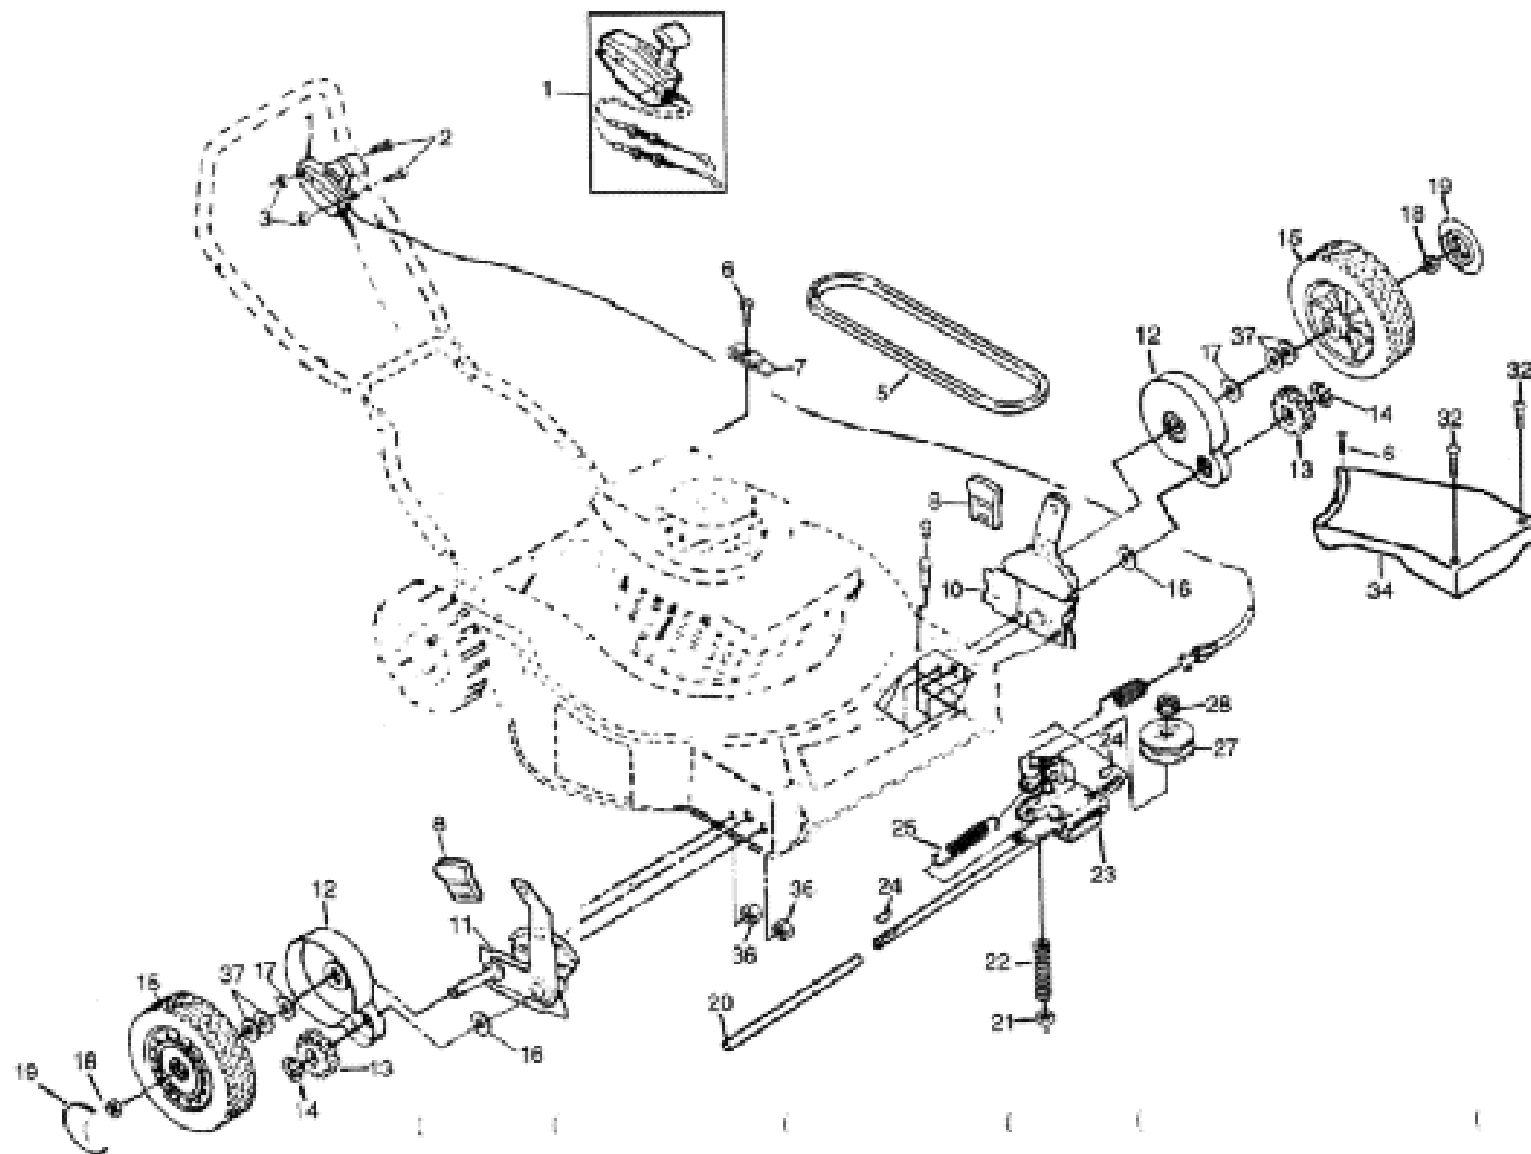




KEY PART NO. NO.	DESCRIPTION
1 532 14 21-03	Dual Head Cable Control Assembly
2 532 14 49-29	Hex Washer Hd Screw 1/4-20 x 2-1/8
3 532 06 36-01	Locknut
5 532 13 70-78	V-Belt
6 532 75 00-97	Hex Washer Head Screw #10-24x1/2
7 532 08 79-30	Clip Guide (Housing)
8 532 13 28-00	Selector Knob
9 532 70 08-75	Hex Head Bolt 1/4-20 x 2-3/4
10 532 14 87-61	Wheel Adjuster Assembly (Left)
11 532 14 87-60	Wheel Adjuster Assembly (Right)
12 532 08 80-80	Dust Cover
13 532 13 70-54	Pinion
14 812 00 00-58	E-Ring
15 532 14 22-04	Wheel & Tire Assembly 8.00 x 2.00
16 532 08 81-18	Felt Washer
17 532 06 77-25	Washer

KEY PART NO. NO.	DESCRIPTION
18 532 08 39-23	Locknut
19 532 85 08-45	Hubcap
20 532 08 60-12	Drive Shaft Cover
21 53 20 63-601	Locknut
22 53 21 37-090	Spring
23 53 20 48-367	Gear Case Assembly
24 53 28 50-848	Hi-Pro Key
25 53 20 75-192	Spring
27 53 21 32-010	Drive Pulley
28 53 21 32-010	Flanged Locknut
32 53 20 87-866	Pan HeadTappingScrew#10-24x2-3/4
34 53 27 00-422	Drive Cover
36 53 20 63-601	Locknut
37 532 05 71-43	Spring Wave Washer



GEAR CASE ASSEMBLY PART NUMBER 532702511

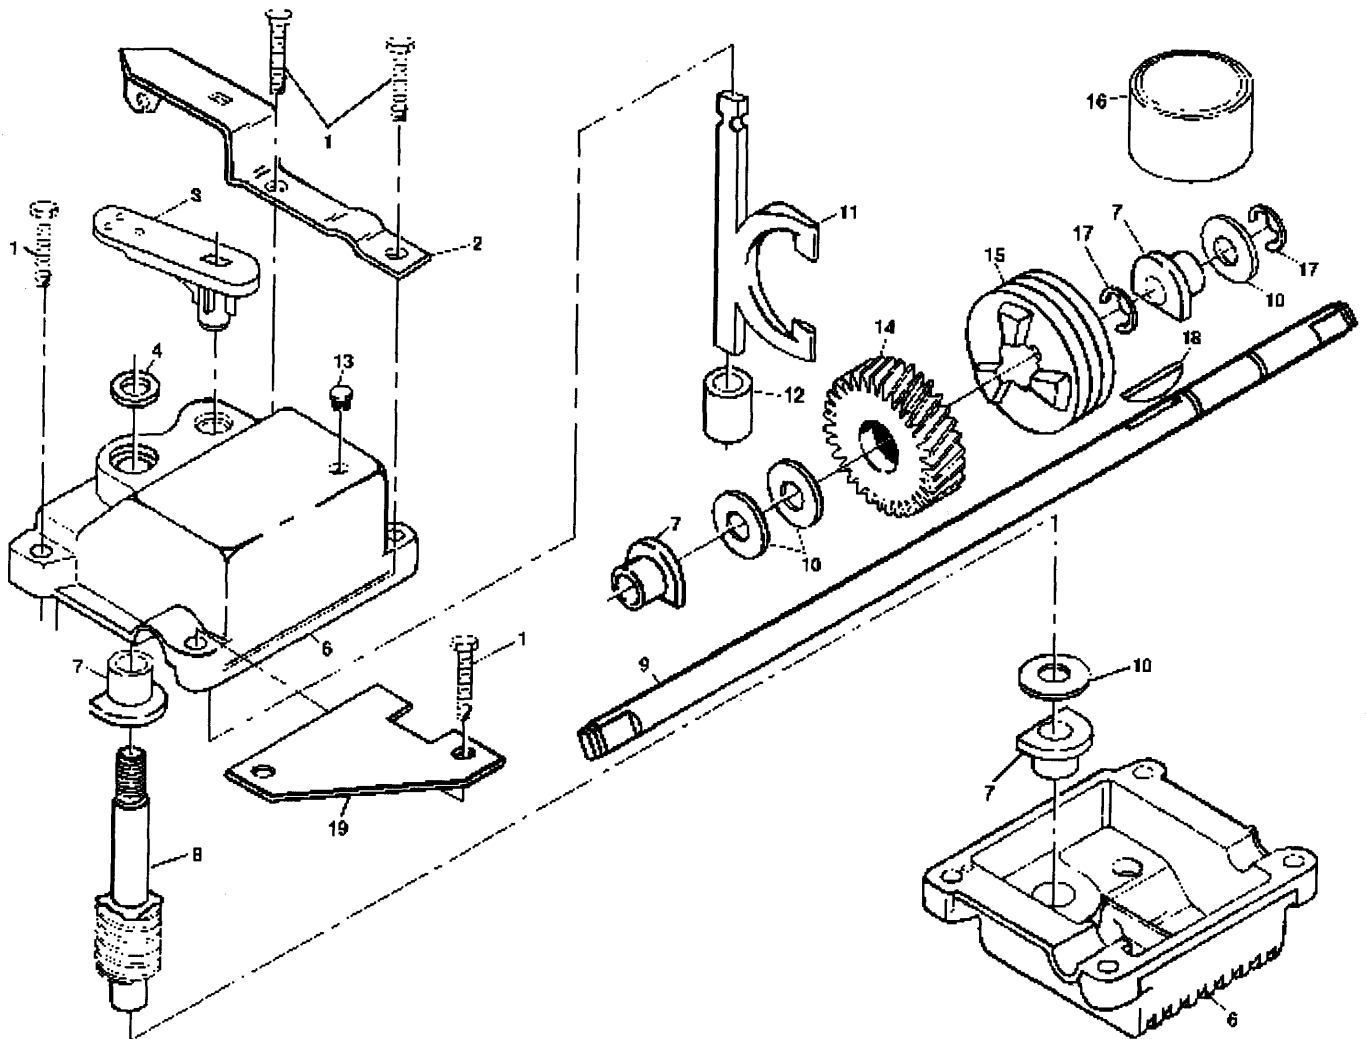

KEY PART

NO.	NO.	DESCRIPTION
1	817 49 04-16	Tapping Screw 1/4-20 x 1-1/4
2	532 14 02-69	Engagement Bracket
3	532 13 70-53	Shifter
4	532 05 70-72	Seal
5	532 04 83-73	Gear Case Halves Kit (Includes Key Nos. 4, 5, and 7)
6	532 07 78-81	Bearing
7	532 13 14-81	Worm Shaft
8	532 75 04-36	Drive Shaft
9	532 05 70-79	Hardened Washer
10	532 13 14-84	Clutch Yoke
11	532 70 03-43	Bushing
12	532 08 64-47	Plug

KEY PART

NO.	NO.	DESCRIPTION
14	532 13 38-04	Helical Gear
15	532 75 04-36	Clutch Jaw
16	532 75 03-69	Grease
17	812 00 00-03	E-Ring
18	532 85 08-48	Hi-Pro Key
19	532 12 54-41	Spring Bracket
20	532 06 56-92	Woodruff Key #3
21	532 08 36-80	Worm Gear

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4mm

MODEL NUMBER J55

PART NUMBER	SQUARE	NOTE	PART NUMBER	SQUARE	NOTE	PART NUMBER	SQUARE	NOTE	PART NUMBER	SQUARE	NOTE
532 03 69-53	A		532 13 38-04	C							
532 04 83-67	B	N	532 13 46-12	A							
532 04 83-73	C		532 13 63-76	A							
532 05 17-93	A		532 13 70-53	C							
532 05 34-90	A	N	532 13 70-54	B	N						
532 05 51-87	A		532 13 70-78	B	N						
532 05 70-72	C		532 13 70-90	B							
532 05 70-79	C		532 13 88-71	A							
532 05 71-43	AB		532 14 00-58	A							
532 05 73-88	C		532 14 00-59	A							
532 05 92-89	A		532 14 02-69	C							
532 05 97-08	A		532 14 04-65	A							
532 05 99-35	A	N	532 14 04-66	A							
532 06 23-35	A		532 14 05-40	A	N						
532 06 36-01	AB		532 14 11-14	A	N						
532 06 56-92	BC		532 14 20-88	B							
532 06 64-26	A		532 14 21-03	B							
532 06 77-25	B	N	532 14 22-04	B	N						
532 07 45-07	B		532 14 27-48	A	N						
532 07 51-92	B		532 14 49-29	B	N						
532 07 64-01	B		532 14 69-17	A	N						
532 07 78-81	C		532 14 87-60	B	N						
532 08 36-32	B		532 14 87-61	B	N						
532 08 36-59	C		532 14 89-02	A	N						
532 08 36-80	C		532 21 31-46	A							
532 08 36-91	B		532 70 03-43	C							
532 08 37-00	B		532 70 04-17	A							
532 08 38-16	A		532 70 04-22	B							
532 08 39-23	AB		532 70 08-75	B	N						
532 08 45-96	A		532 70 27-10	C							
532 08 49-20	A		532 75 00-97	B							
532 08 49-21	A		532 75 03-55	C							
532 08 54-36	A	N	532 75 03-69	C							
532 08 56-92	B		532 75 04-30	C							
532 08 57-23	A		532 75 04-36	C							
532 08 60-12	B		532 75 15-92	A							
532 08 64-47	C		532 80 03-33	A							
532 08 75-89	A		532 80 05-47	A							
532 08 75-90	A		532 80 08-88	B							
532 08 75-93	A		532 80 08-89	B							
532 08 76-77	A		532 85 02-63	A							
532 08 78-66	B		532 85 07-24	A							
532 08 79-30	B		532 85 07-78	A							
532 08 80-80	B	N	532 85 08-44	B							
532 08 81-18	B	N	532 85 08-45	A							
532 08 83-14	C		532 85 08-46	B							
532 08 83-48	A		532 85 08-48	C							
532 10 73-39	A		532 85 09-73	A							
532 12 50-61	A		532 85 09-98	A							
532 12 50-66	A	N	532 85 10-74	A							
532 12 50-78	A		532 85 10-84	A							
532 12 52-07	A		532 85 15-14	A							
532 12 52-59	A		734 11 52-01	A							
532 12 52-93	A		734 11 63-01	A							
532 12 52-94	A		812 00 00-03	BC							
532 12 53-81	A		812 00 00-14	A							
532 12 54-40	C		812 00 00-58	B	N						
532 12 54-41	C		817 02 10-08	AB							
532 12 54-42	A		817 49 04-16	C							
532 12 54-48	A		873 51 04-00	A							
532 12 54-49	A		873 68 04-00	ABC							
532 13 10-94	A		873 68 06-00	A							
532 13 14-81	C		874 76 04-12	B							
532 13 14-82	B		874 76 04-28	AC							
532 13 14-84	C		874 76 04-44	A							
532 13 19-59	A		874 76 06-44	A							
532 13 20-01	A		874 78 04-44	B							
532 13 20-10	B		874 78 05-12	A							
532 13 22-31	A										
532 13 28-00	AB										
532 13 29-84	B										

N-New part

Neues teil

Nouvelle piece

Nueva pieza

Ny detalj