


Brush

For 4140 G/H

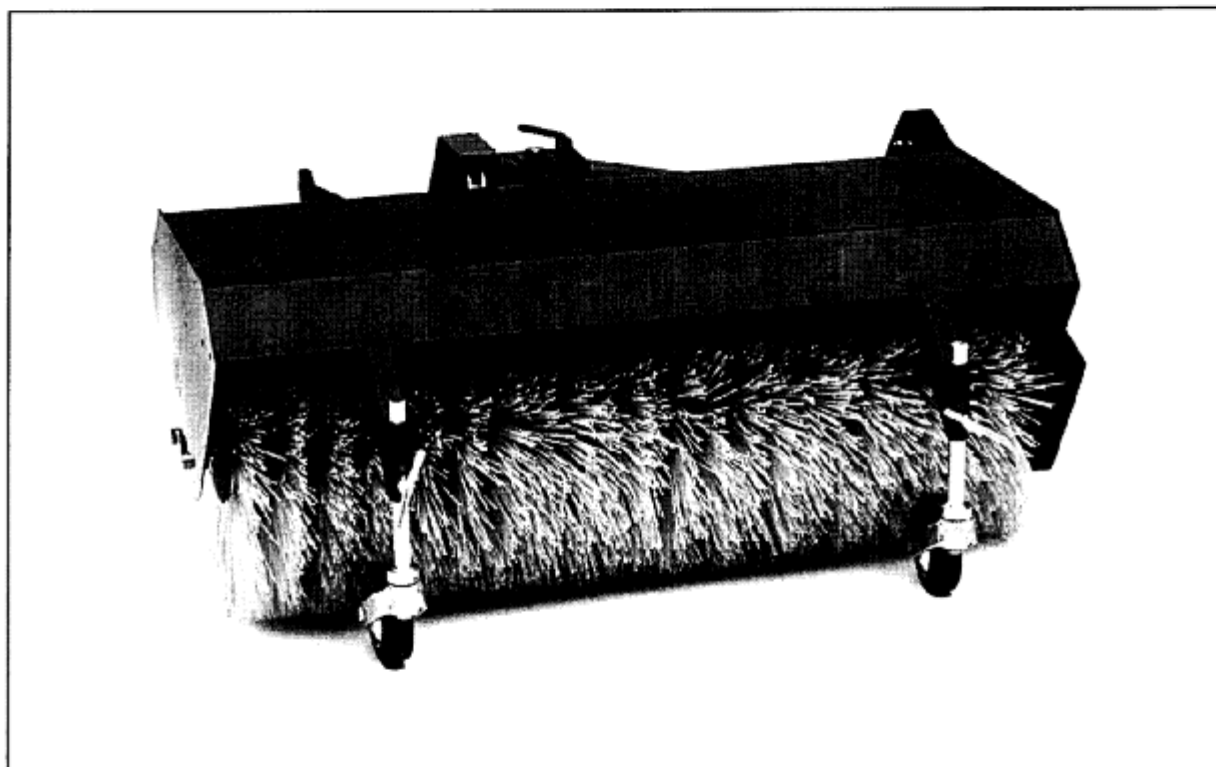

1.1995

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos


Reservdelar

Part no.	Pos.	Part name	Part no.	Pos.	Part name
531 00 51-50	1	Frame	531 00 51-92	51	Shaft
531 00 51-51	2	Weidment	531 00 51-93	52	Weldment, Lift
531 00 51-52	3	Roller Shaft	531 00 51-94	53	Pulley
531 00 51-53	4	Brush Ring	531 00 51-95	54	Housing, Drive Shaft
531 00 51-54	5	Collar, Plastic	734 11 72-01	55	Washer
531 00 51-55	6	Flange	531 00 51-96	56	Collar
531 00 51-56	7	Bearing, Flange	531 00 51-97	57	Collar
531 00 51-57	8	Chain Tightener	738 21 04-04	58	Bearing
531 00 51-58	9	Chain Wheel	531 00 51-98	59	Circlip
531 00 51-59	10	Collar	531 00 51-99	60	Pulley
735 31 22-01	11	Circlip	531 00 52-01	61	Pulley
531 00 51-60	12	Chain Wheel	531 00 52-02	62	Guide, Belt
531 00 51-61	13	Drive Shaft	531 00 52-03	63	Spring
531 00 51-62	14	Key	531 00 52-04	64	Tightener, Belt
531 00 51-63	15	Frame	531 00 52-05	65	Arm
531 00 51-64	16	Belt Guard	531 00 52-06	66	Control Rod
531 00 51-65	17	Chain Guard	531 00 52-07	67	Nut, Lock
531 00 51-66	18	Pulley	531 00 52-08	68	Weldment, Lift
531 00 51-67	19	Support Shaft, wheel	531 00 52-09	69	V-Belt
531 00 51-68	20	Pulley	531 00 52-10	70	V-Belt
531 00 51-69	21	Bushing, Plastic	531 00 52-11	71	Rubber Hose
531 00 51-70	22	Weldment	531 00 52-12	72	Screw
531 00 51-71	23	Pin, Split	725 24 47-71	73	Screw
531 00 51-72	24	Support Wheel	725 25 36-71	74	Screw
531 00 51-73	25	Guard, Support Wheel	725 24 49-51	75	Screw
531 00 51-74	26	Drive Chain	725 24 53-71	76	Screw
531 00 51-75	27	Pulley	725 24 51-71	77	Screw
531 00 51-76	28	Circlip	732 25 22-01	78	Nut, Lock
738 21 09-04	29	Bearing	725 25 42-71	79	Screw
531 00 51-77	30	Screw	531 00 52-13	80	Pin, Spring
531 00 51-78	31	Pin	531 00 52-14	81	Pin, Split
531 00 51-79	32	Universal Joint	734 11 63-01	82	Washer
531 00 51-80	33	Guard, Drive Shaft	531 00 52-15	83	Collar
531 00 51-81	34	Bearing	734 11 78-01	84	Washer
531 00 51-82	35	Clamp	725 25 01-71	85	Screw
531 00 51-83	36	Support	725 24 55-71	86	Screw
531 00 51-84	37	Frame	531 00 52-16	87	Pin, Spring
531 00 51-85	38	Mounting Plate	531 00 52-17	88	Pin Set
531 00 51-86	39	Collar	531 00 52-18	89	Nut, Lock
725 24 95-71	40	Screw	725 25 02-71	90	Screw
725 24 93-71	41	Screw	531 00 52-19	91	Washer
731 23 20-01	42	Nut	725 24 61-71	92	Screw
732 25 20-01	43	Nut, Lock	531 00 52-20	93	Key
725 25 04-78	44	Screw	531 00 52-21	94	Shaft
531 00 51-87	45	Screw, Special			
731 23 18-01	46	Nut			
531 00 51-88	47	Arm			
531 00 51-89	48	Arm			
531 00 51-90	49	Collar			
531 00 51-91	50	Screw			


A

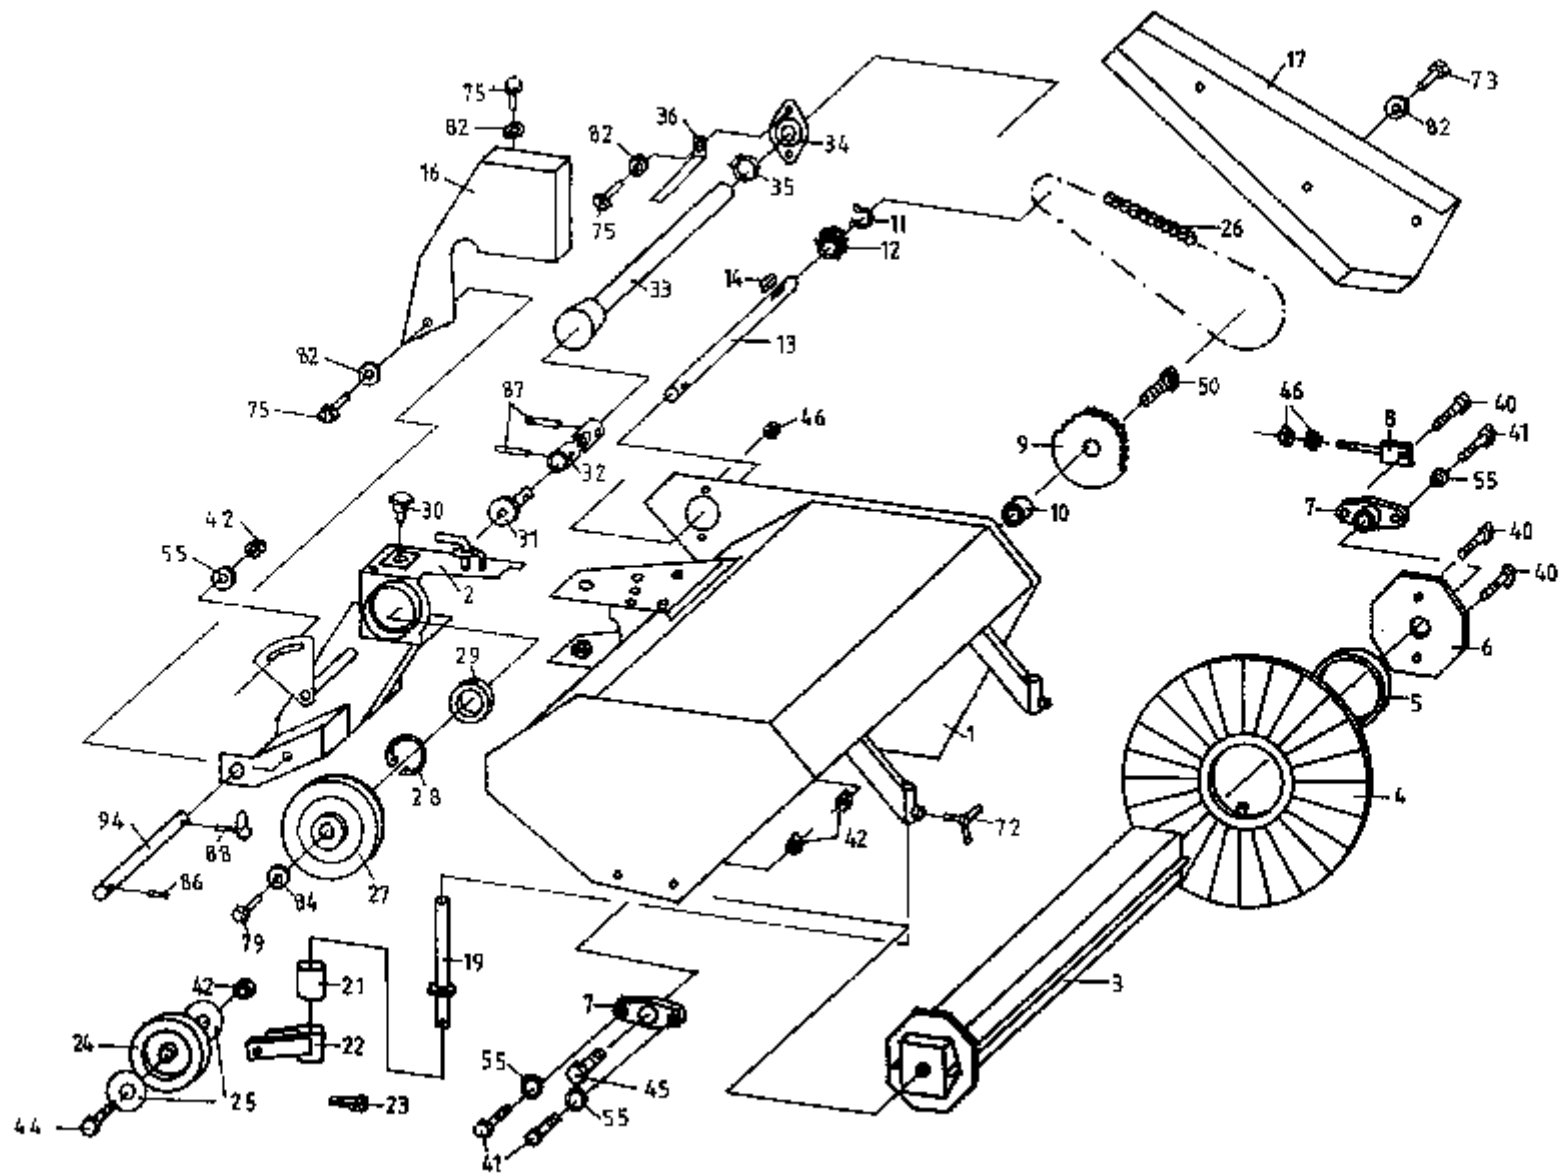


B

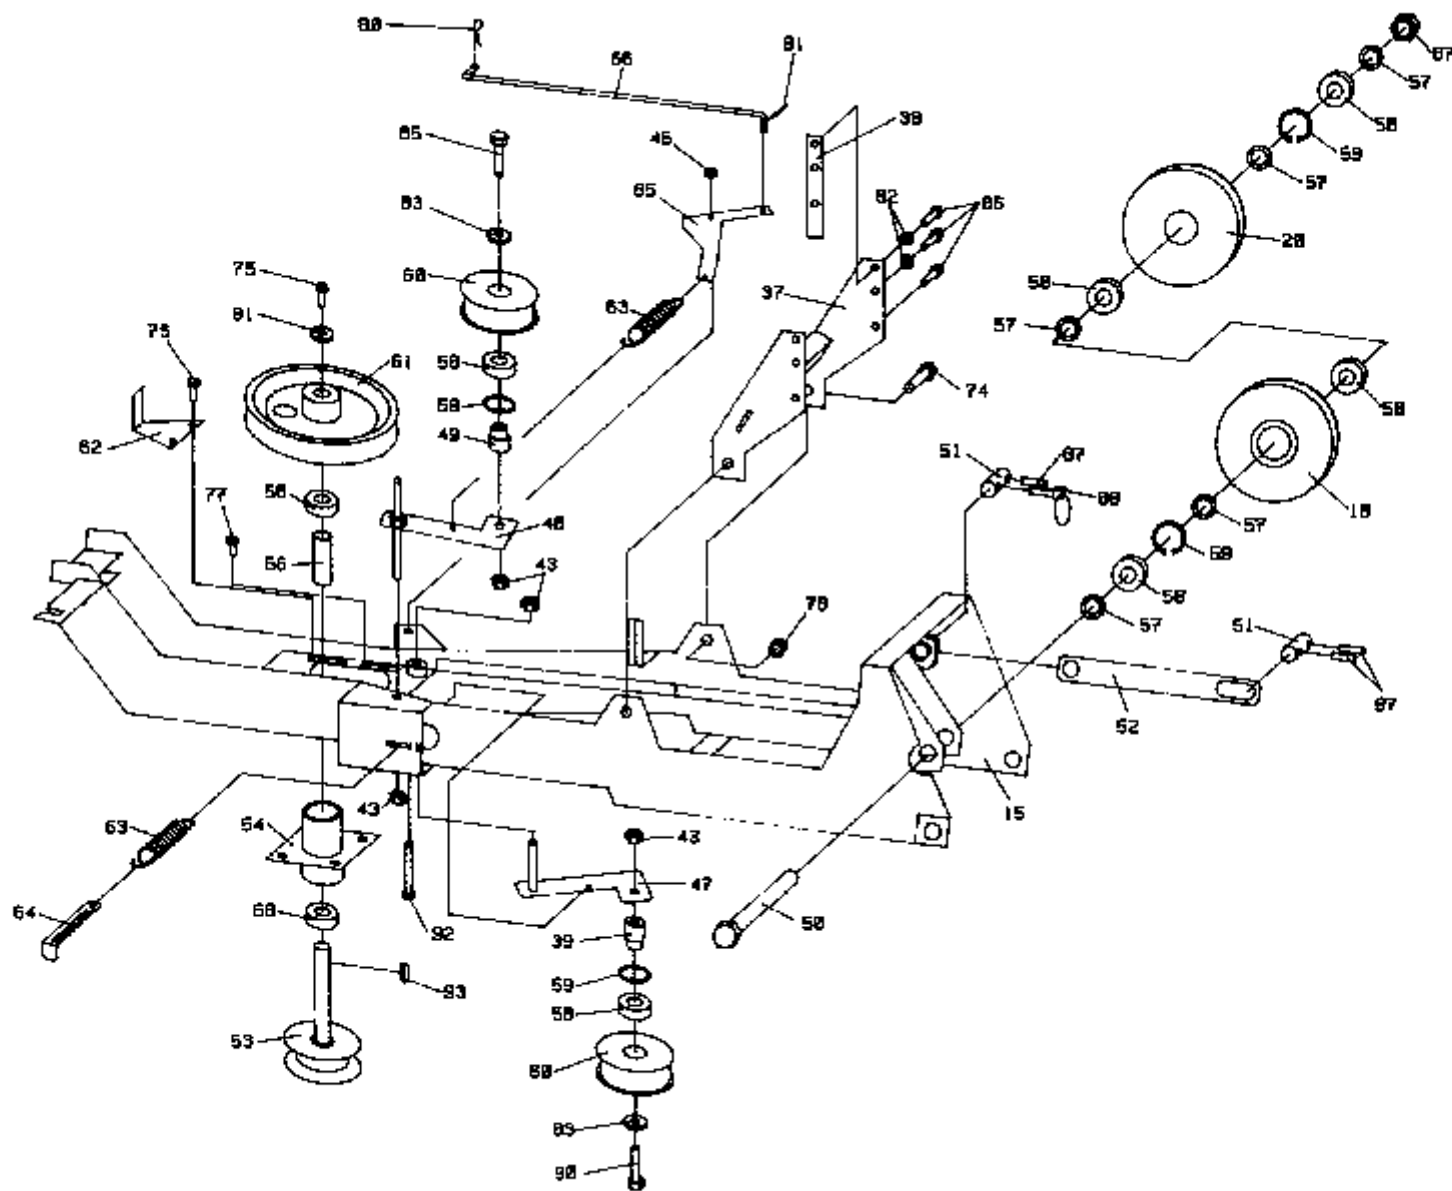

C

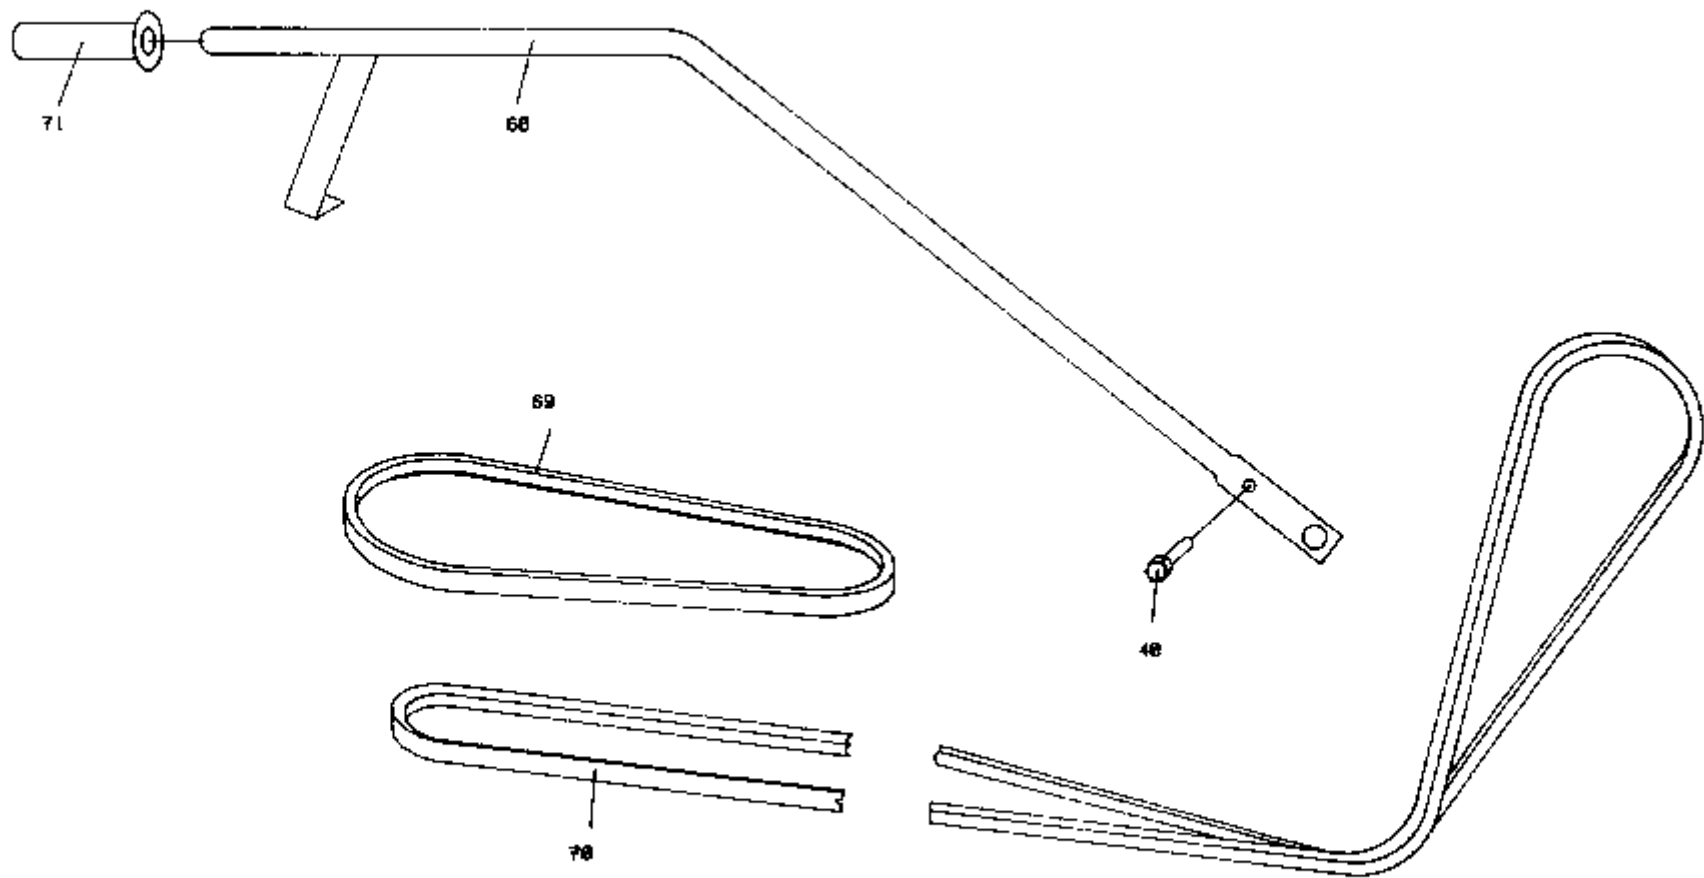

D

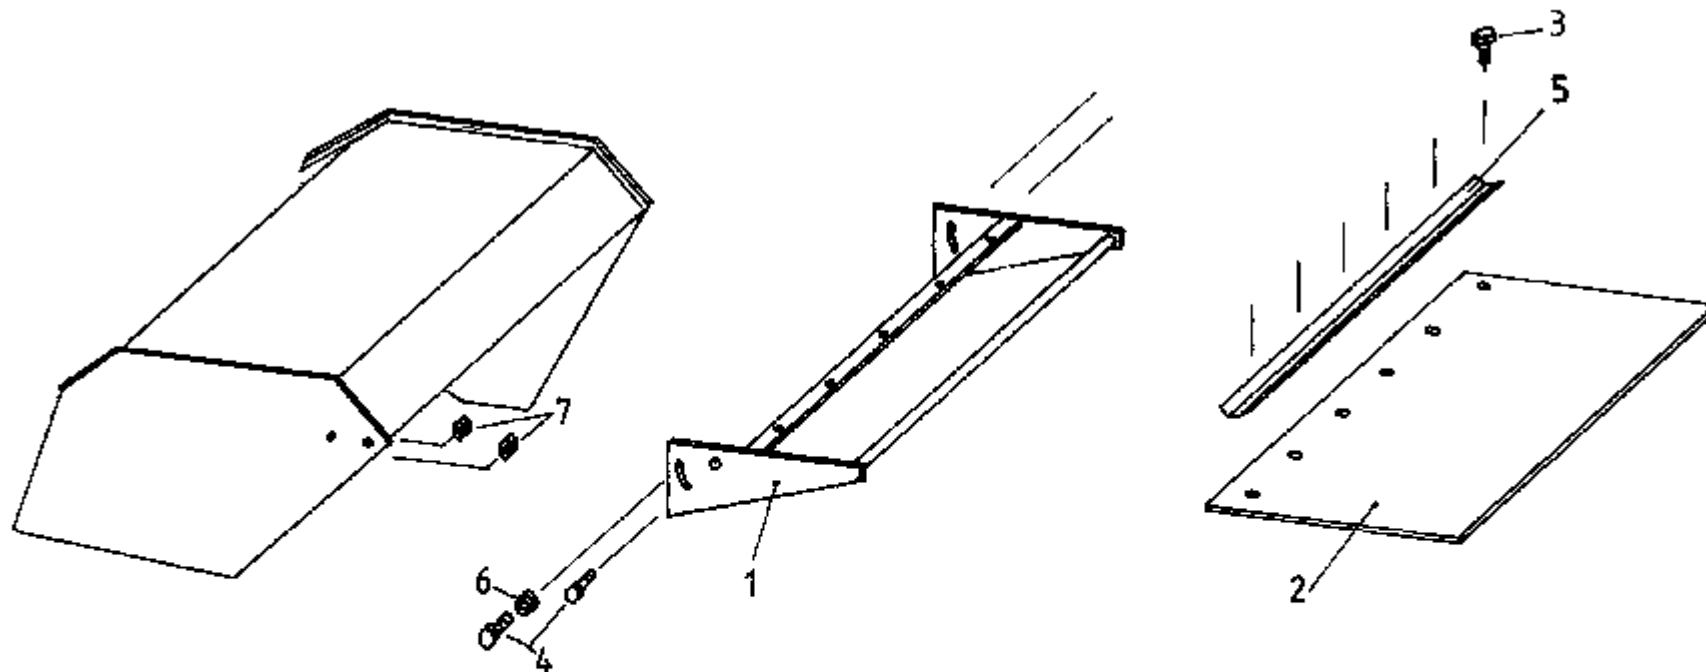

531 00 52-26	1	Frame
531 00 52-27	2	Rubber
531 00 52-28	3	Screw
725 24 49-51	4	Screw
531 00 52-29	5	Plate
734 11 63-01	6	Washer
732 21 18-01	7	Nut. Lock