


LTH 140

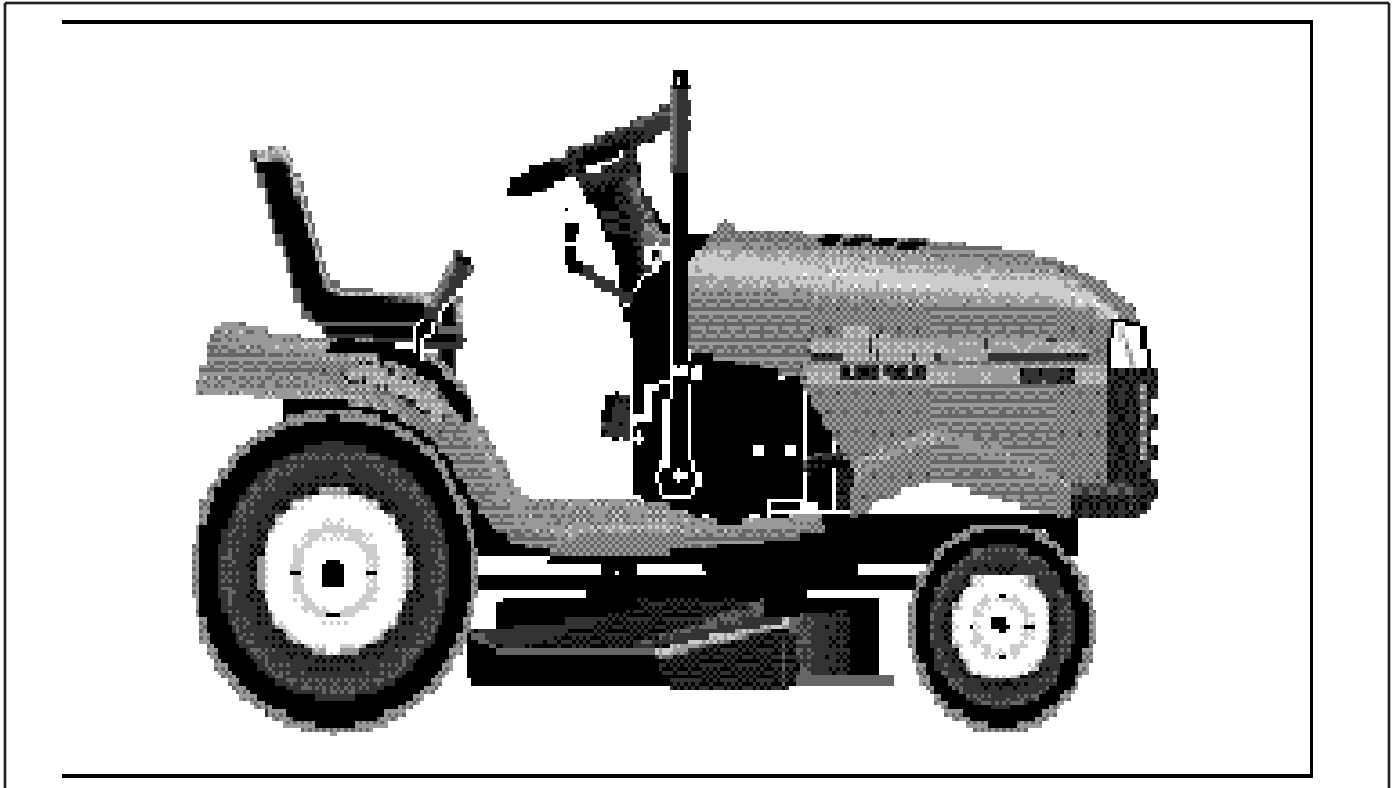


5.1998
PARTS LISTING

954001192A

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. 954001192A

ELECTRICAL

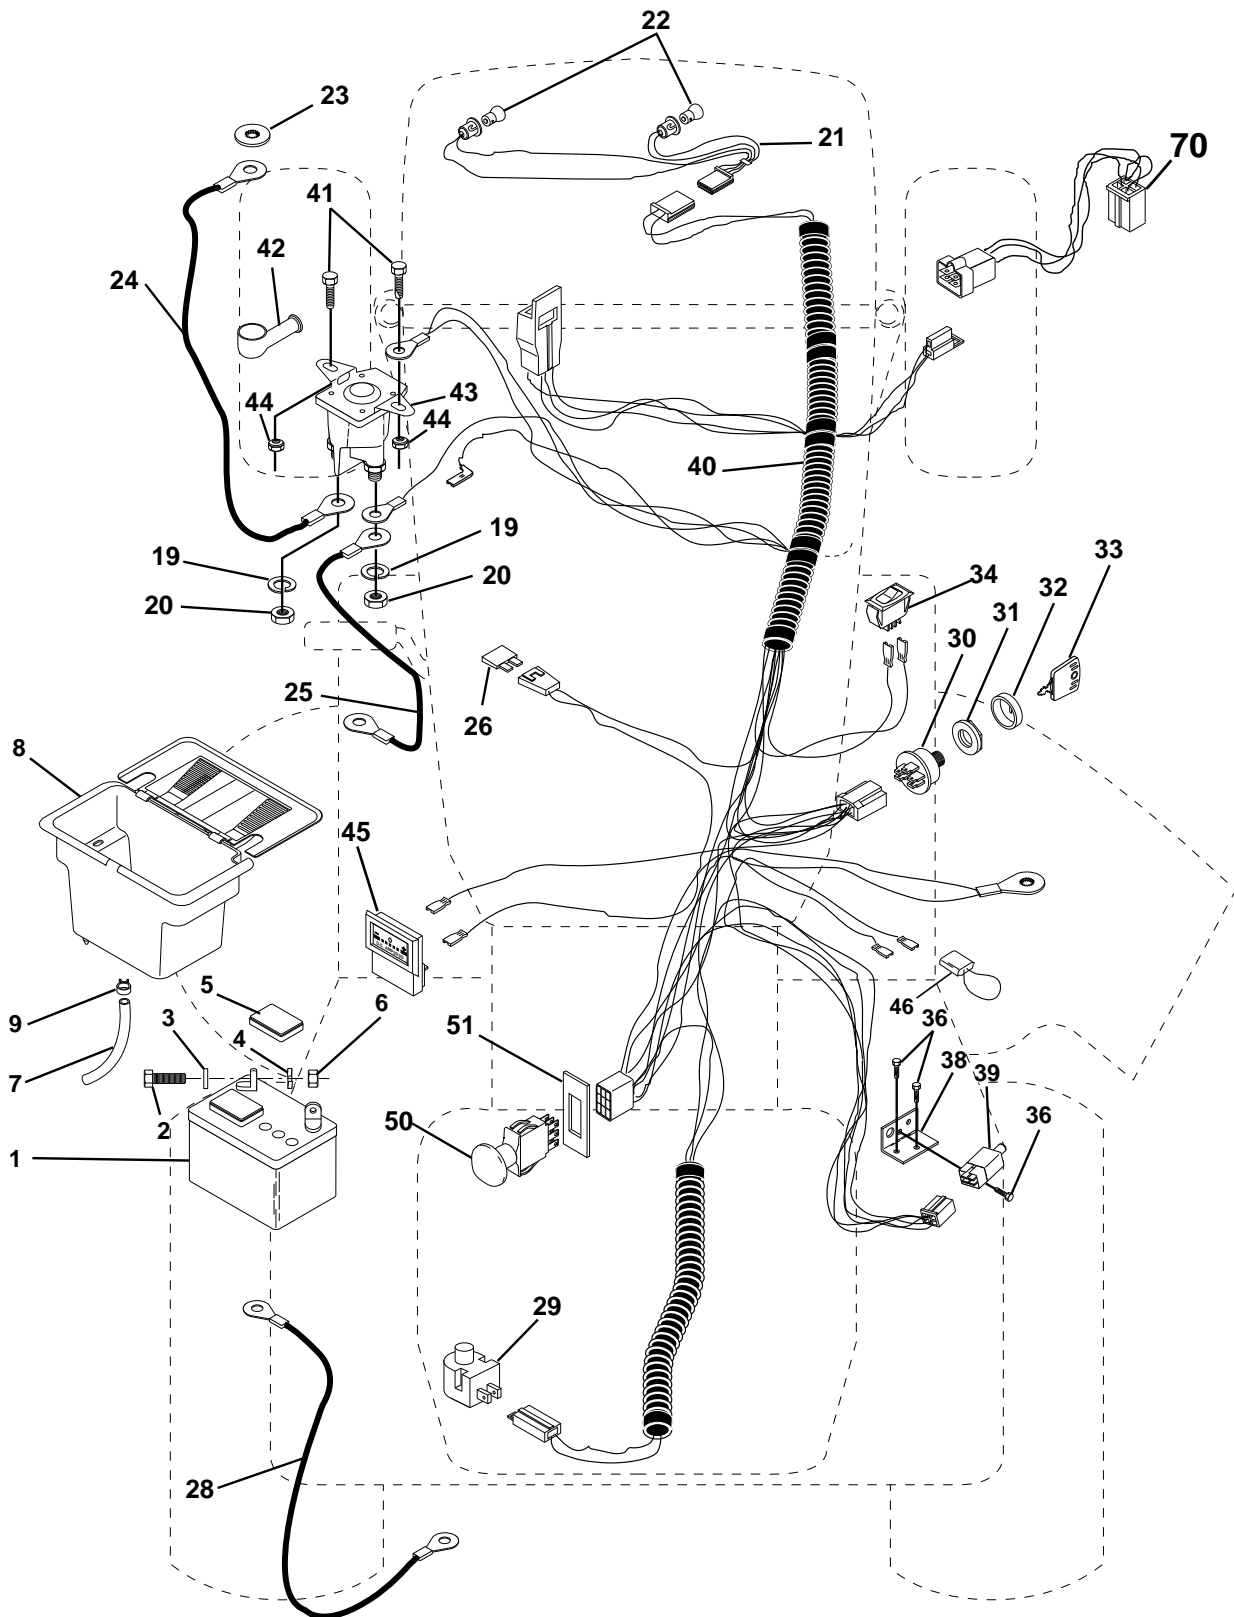

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. 954001192A

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532121537	Battery 12 Volt 30 Amp
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
3	819091016	Washer 9/32 X 5/8 X 16 Ga
4	810040400	Washer Lock Hvy Helical 1/4
5	532121264	Caps Battery 20/25/30 Amp
6	873220400	Nut Fin Hex 1/4-20 Unc
7	532109238	Tube Plastic 12"
8	532129965	Case Battery
9	532109596	Clamp Hose Olive
19	810090400	Washer Lock 1/4
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532136850	Harness Socket Light
22	532004152	Bulb, Light # 1156
23	811150400	Washer, Lock Int. Tooth 1/4
24	532124770	Cable Battery 6ga 22" red
25	532124964	Cable Battery 6ga 39" Red
26	532108824	Fuse 30 Amp Auto Green
28	532124773	Cable Ground 6ga 12"black
29	532121305	Switch Plunger Nc Gray
30	532144921	Switch Ign 3 pos
31	532140400	Nut Ignition
32	532141226	Cover Sw Key
33	532140401	Key Ign Molded Generic
34	532110712	Switch Light Blk Blk Red
35	532108236	Bracket Switch Clutch
36	817021008	Screw Hex Tapping # 10-24 X 1/2
39	532109553	Switch Interlock Clutch
40	532140421	Harness Ign Kohl Fend HI Amm
41	871110408	Bolt Fin Hex 1/4-20uncx1/2 Gr5
42	532131563	Cover Terminal Red
43	532138406	Solenoid
44	873640400	Nut Keps Hex 1/4-20 Unc
45	532122822	Ammeter Rectangular
46	532141940	Protection Wire Loop
50	532140404	Switich PTO 3 pdt deltg
51	532140405	Ring Retainer PTO
70	532140426	Harness Engine Koh. cmd I .15AR

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO.954001192A

CHASSIS AND ENCLOSURES

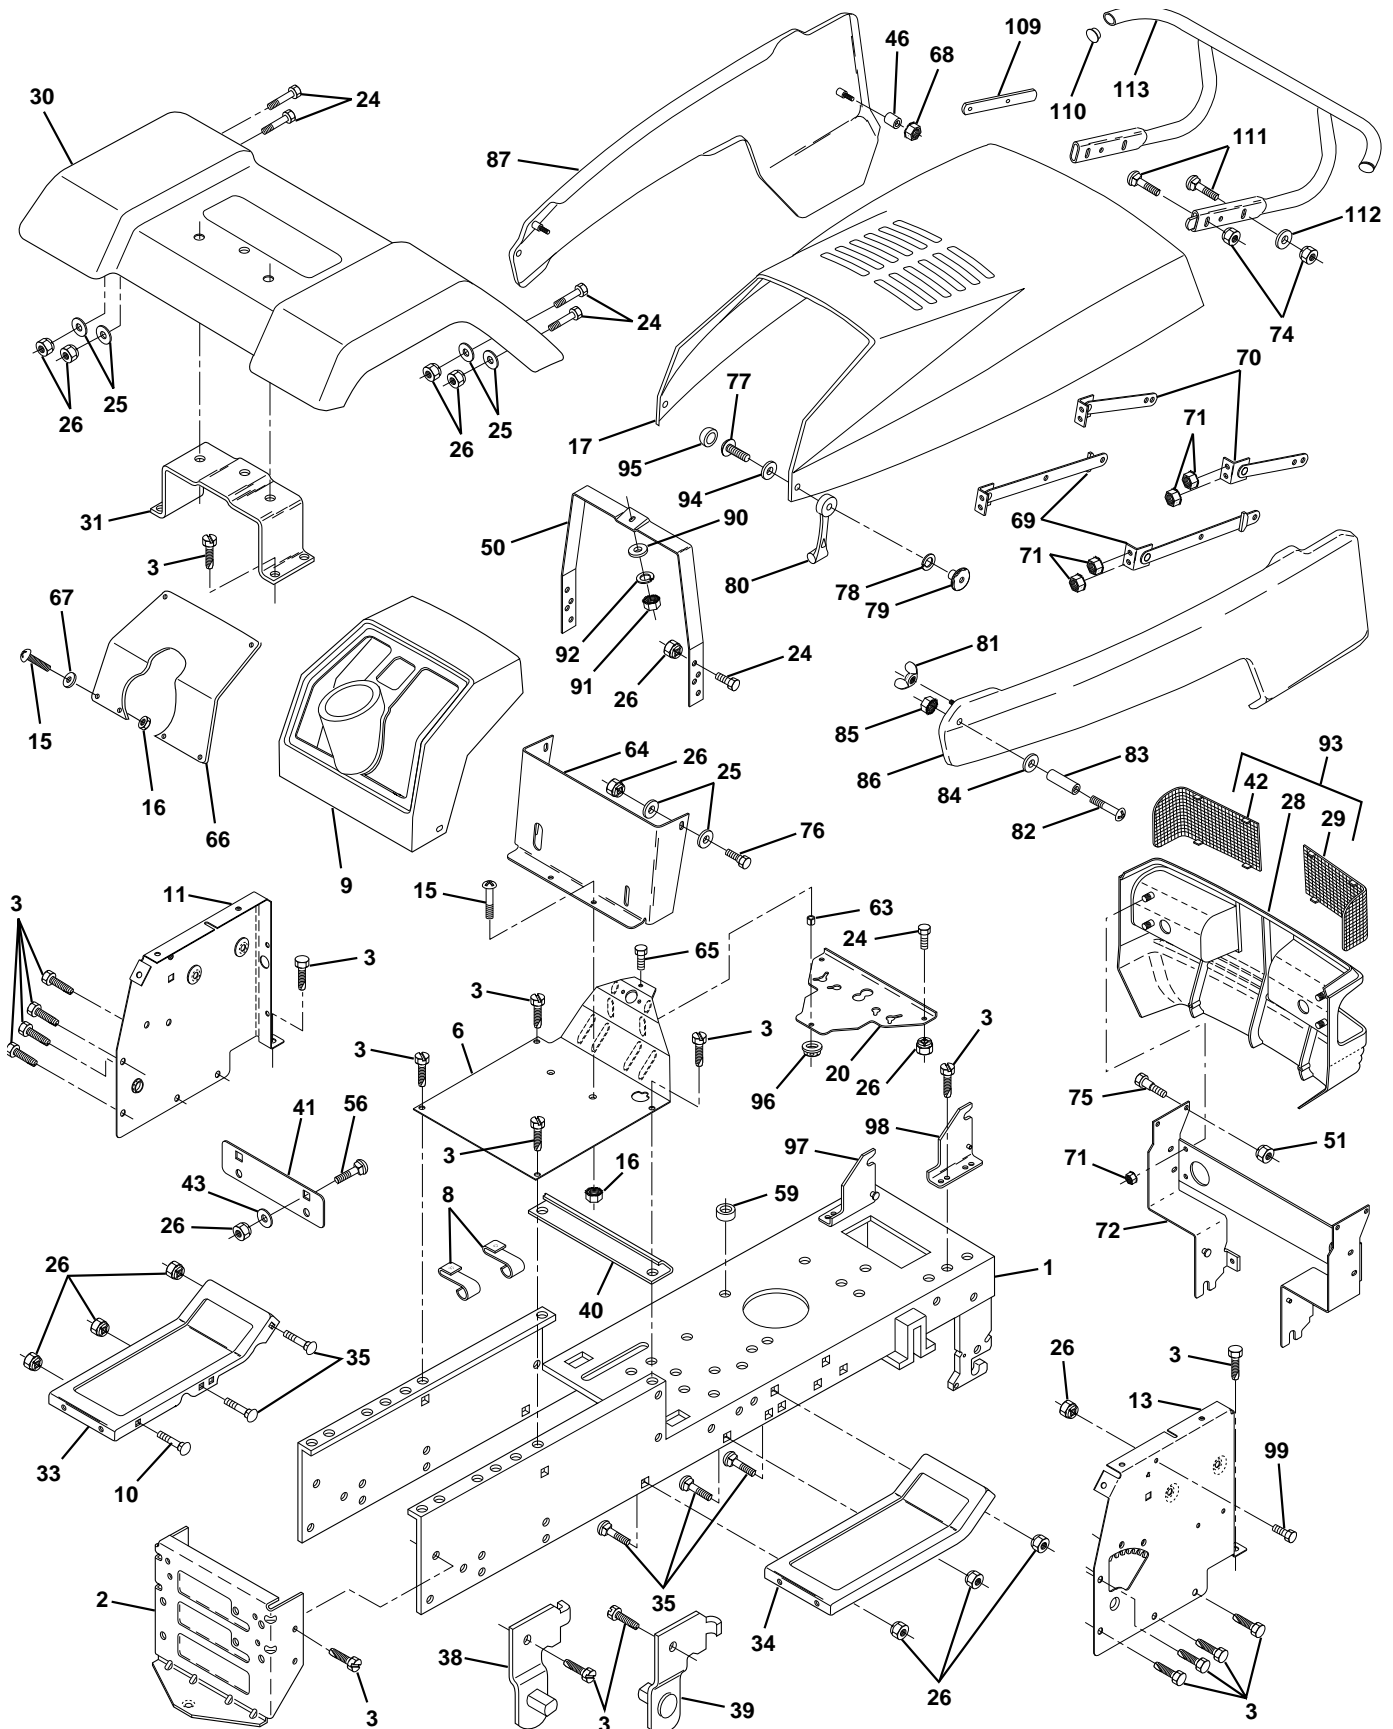

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. 954001192A

CHASSIS AND ENCLOSURES


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	532140341 Chassis 11 ga	69	532106784 Strap Assembly, Hinge, Rear
2	532140356 Drawbar	70	532104618 Strap Assembly, Hinge, Front
3	817490612 Screw, Thd., Roll. 3/8-16 x 3/4	71	873640400 Nut Keps Blk Hex 1/4-20 UNC
6	532125453 Saddle	72	532126025 Support Assembly, Grille
8	532126471 Clip Insulator .406 Mtg. Hole	74	873680600 Nut Crownlock 3/8-16 UNC
9	532140452 Dashboard	75	532123481 Bolt, Shoulder 1/4-20 UNC
10	872140608 Bolt, Carriage 3/8-16 UNC x 1	76	874780620 Bolt, Hex, Fin. 3/8-16 UNC x 1-1/4
11	532136967 Dash Panel, LH	77	874191008 Screw, Machine, Cross Pan Head #10-24 x 1/2
13	532136970 Dash Panel, RH	78	810071000 Washer, Lock #10
15	874180512 Screw, Machine 5/16-18 UNC x 3/4	79	532125004 Nut, Weld
16	873510500 Nut, Hex, Keps 5/16-18 UNC	80	532109808 Latch, Chute
17	532125454 Hood	81	532123198 Wing Nut, Plastic 1/4-20
20	532140181 Plate, Battery Support	82	874981020 Screw, Machine, Cross Pan Head #10-24 x 1-1/4
24	874780616 Bolt Fin Hex 3/8-16 x 1 Gr.5	83	532007206 Spacer, Split #10 x 3/4
25	819131312 Washer 13/32 x 13/16 x 12 Gauge	84	819070818 Washer 7/32 x 1/2 x 18 Gauge
26	873800600 Nut Lock Hex w/ins 3/8-16 UNC	85	873731000 Nut, Hex, Keps #10-24 UNC
28	532127325 Grille	86	532138886 Side Panel, RH
29	532124251 Lens, Headlight, RH, Smoked	87	532125393 Side Panel, LH
30	532143050 Fender	90	819091216 Washer 9/32 x 3/4 x 16 Gauge
31	532139976 Bracket Fender	91	873220400 Nut, Hex, Fin. 1/4-20 UNC
33	532124899 Footrest, LH	92	810040400 Washer, Lock, Hvy Helical 1/4
34	532124914 Footrest, RH	93	532127321 Grill Assembly
35	872110606 Bolt, Carriage 3/8-16 x 3/4	94	532110357 Washer, Cap
38	532139886 Pivot Bracket Assembly, Rear, LH	95	532110356 Cap, Black
39	532139887 Pivot Bracket Assembly, Rear, RH	96	873800500 Nut Lock Hex w/ins 5/16-18 UNC
40	532139977 Spacer Fender LT	97	532110853 Pivot Bracket Assembly, LH
41	532139978 Plate Extention Fender	98	532110852 Pivot Bracket Assembly, RH
42	532124250 Lens, Headlight, LH, Smoked	99	874760616 Bolt, Hex, Fin. 3/8-16 UNC x 1
43	819171416 Washer 17/32 x 7/8 x 16 Ga	109	532141461 Bracket Extension Bumper
46	532127316 Retainer	110	532143679 Plug Plastic
50	532124130 Support, Dash	111	872140610 Bolt Carriage 3/8-16 x 1-1/4
51	873800400 Nut Lock w/insert 1/4-20 UNC	112	819131316 Washer 13/32 x 13/16 x 16 Ga
56	872140606 Bolt rdhd sqnk 3/8-16 x 3/4	113	532141460 Bumper Asm
59	532110436 Bushing Snap Split	---	532005479 Plug, Button
63	532121236 Space Split	---	532125085 Plug Dash
64	532104783 Dash, Lower	---	532121794 Cover Access
65	874760532 Bolt, Hex, Fin. 5/16-18 UNC x 2		
66	532143049 Plate, Dash		
67	819111116 Washer 11/32 x 11/16 x 16 Gauge		
68	873510400 Nut, Hex, Keps 1/4-20 UNC		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

DRIVE

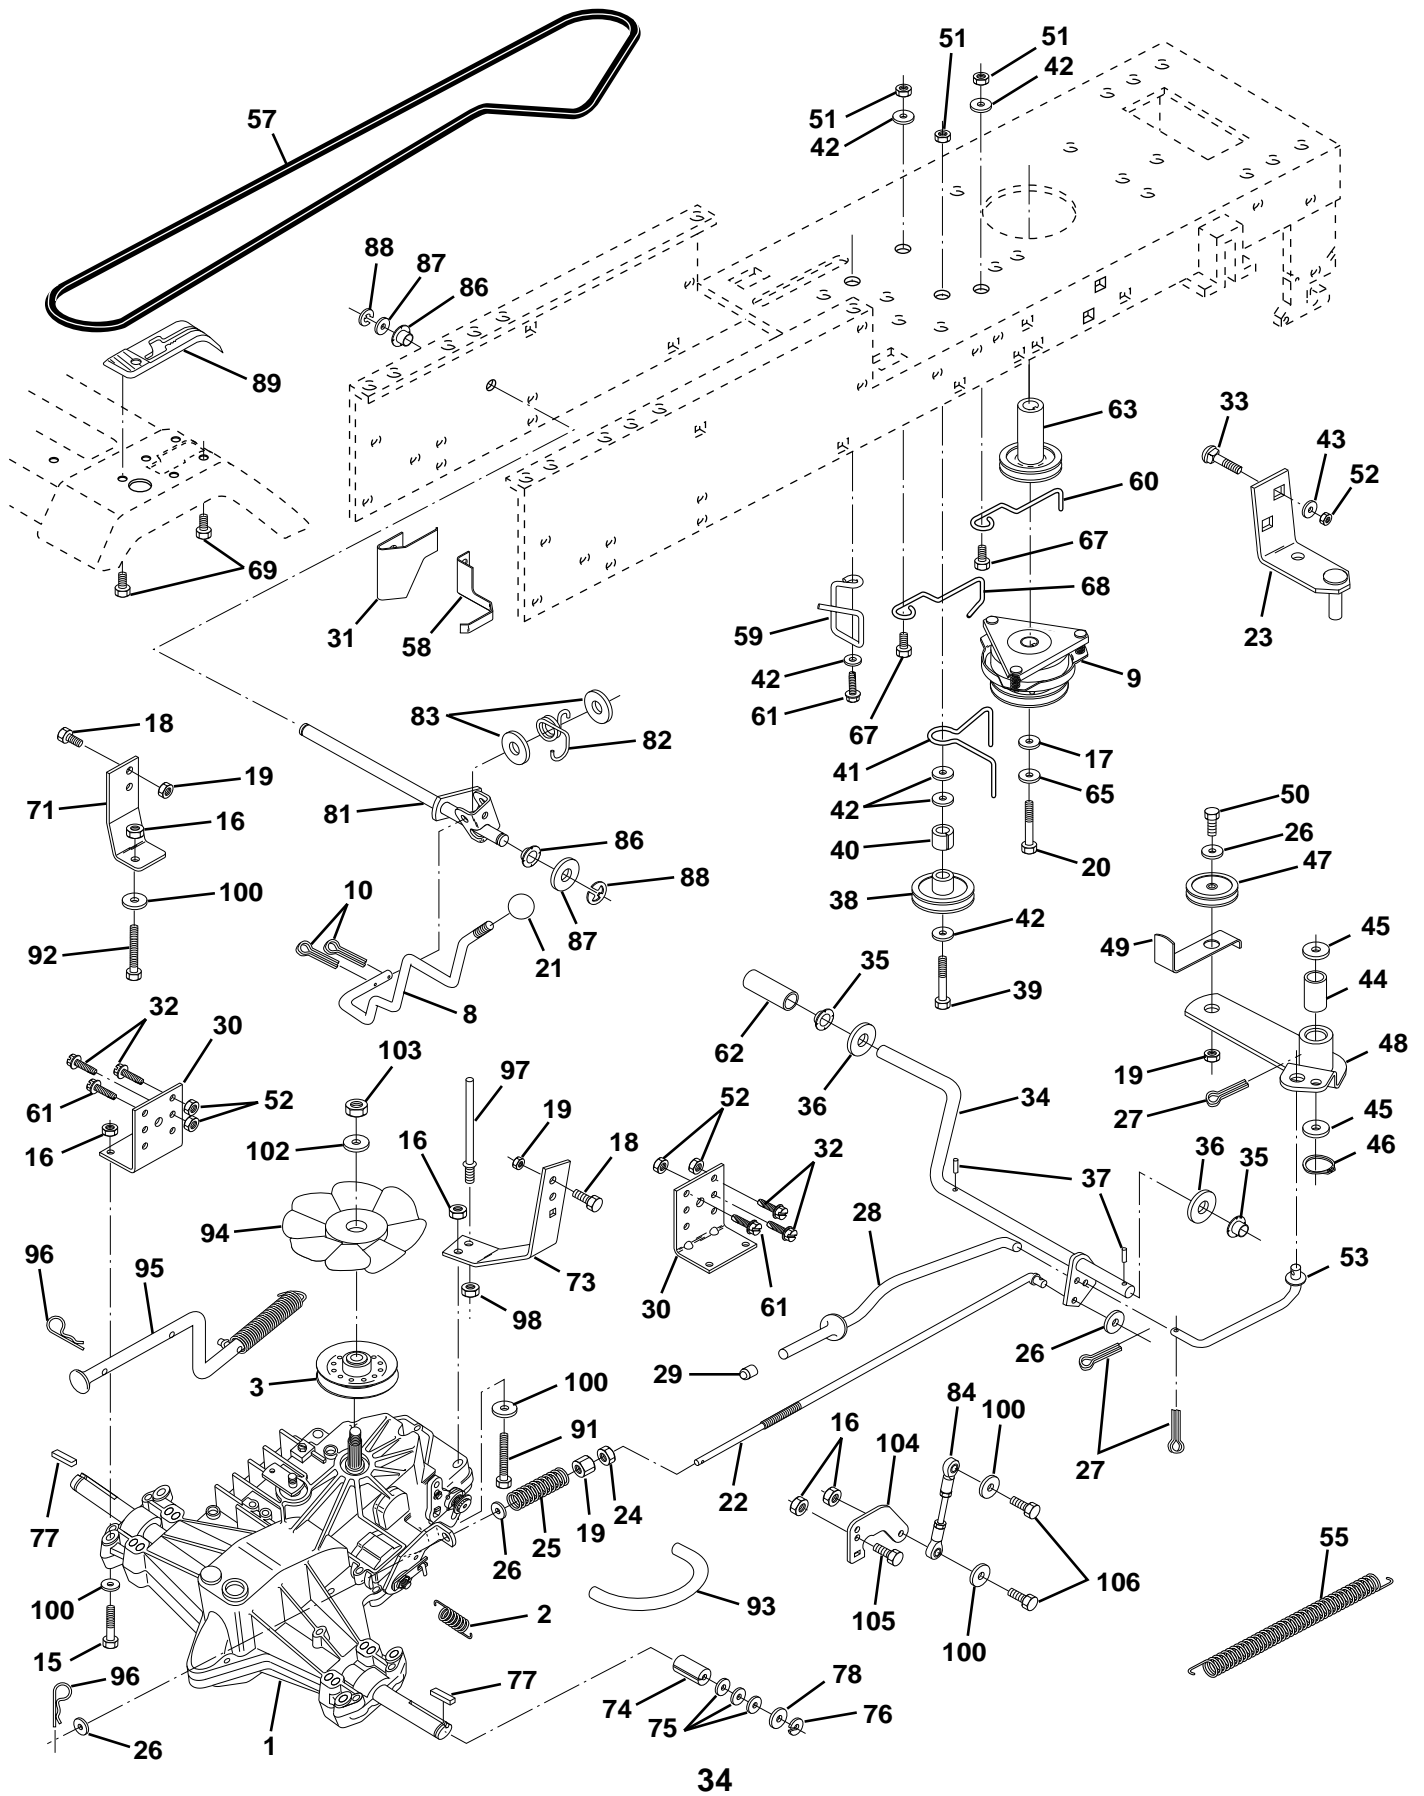

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

DRIVE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532144436	Transaxle Assembly	58	532140470	Keeper Belt Lh Hydro 0750.18/20"
2	532142431	Spring, Return, Brake	59	532140312	Keeper, Center Span
3	532143995	Pulley, Transaxle	60	532121218	Keeper Belt Engine
8	532141003	Rod Shift Hydro LT	61	817490612	Screw Thdrol. 3/8-16 x 3/4 Ty. TT
9	532137140	Clutch Elect 105 Ft/Lb	62	532123533	Cover, Pedal
10	876020416	Pin Cotter 1/8 x 1 CAD	63	532140189	Pulley, Engine
15	874780544	Bolt Fin Hex 5/16-18 Unc	65	810040700	Washer
16	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc P	67	874760616	Bolt
17	532126197	Washer 1-1/2 OD x 15/32 ID x .250	68	532105730	Keeper Belt Engine
18	874780616	Bolt Fin Hex 3/8-16 Unc x 1 Gr.5	69	532142432	Screw
19	873800600	Nut Lock Hex W/Wsh 3/8-16 Unc	71	532140158	Strap Torque Lh Hydro 18/20" T
20	532125120	Bolt, Hex	73	532140157	Strap Torque Rh Hydro 18/20" T
21	532140845	Knob, Deluxe 1/2-13	74	532121199	Spacer Split .80 x 1.70 Cad 13 UNC
22	532140217	Rod, Brake Hydro	75	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
23	532137141	Bracket Asm Mtg Cl	76	812000001	E-Ring
24	873350600	Nut	77	532123583	Key, Square
25	532106888	Spring, Brake Rod	78	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
26	819131316	Washer	81	532140154	Shaft Asm. Cross Hydro 20" Tires
27	876020412	Pin Cotter 1/8 x 3/4 CAD.	82	532123782	Spring Torsion T/A
28	532133261	Rod, Parking Brake	83	819171216	Washer 17/32 x 3/4 x 16 Ga.
29	532071673	Cap, Parking Brake	84	532140548	Rod, Tie Hydro 20" Tires
30	532130807	Bracket, Transaxle	86	532071208	Bushing Rod Strig. 629/632 ID
31	532127275	Keeper Belt Lh	87	819212016	Washer 21/32 x 1-1/4 x 16 Ga.
32	874760512	Bolt Hex Hd 5/16-18 Unc x 3/4	88	812000008	Ring Klip #5304-62
33	872140506	Bolt Carriage 5/16-18 x 3/4	89	532139988	Console, Shift
34	532122424	Shaft, Foot Pedal	91	874780536	Bolt Fin Hex 5/16-18 x 2-1/4
35	532120183	Bearing, Nylon	92	874780524	Bolt Fin Hex 5/16-18 Unc x 1-1/2
36	819211616	Washer	94	532140462	Fan, Hydro 7"
37	532124963	Pin, Roll	93	532142564	Line Fuel Hydro 4"
38	532123674	Pulley, Idler, Flat	95	532144643	Control Asm Bypass Hydro
39	874760644	Bolt	96	532124788	Retainer Spring 1" Zinc/Cad
40	532124965	Spacer Split	97	532140469	Keeper Belt Rh Hydro 0750.18/20"
41	532109070	Keeper, Belt Retainer	98	873510600	Nut Keps Hex 3/8-16 Unc
42	819131312	Washer 13/32 x 13/16 x 12 Gauge	100	819111216	Washer 11/32 x 3/4 x 16 Ga.
43	819111012	Washer 11/31 x 5/8 x 12 Ga.	102	532141322	Washer Belleville .501D x 1.50D
44	532105706	Bearing, Nylon	103	532050831	Nut Nylon Insert 1/2-20 Unf
45	532110812	Washer, Hardened	104	532140156	Arm, Control Hydro
46	812000039	Ring, Klip	105	871070516	Screw Cap Hex 5/16 x 18 x 1
47	532127783	Pulley, Idler, V-Groove	106	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
48	532123789	Bellcrank Assembly			
49	532123205	Retainer, Belt			
50	874760624	Bolt			
51	873680600	Nut			
52	873680500	Nut Crownlock 5/16-18 UNC			
53	532105710	Link, Clutch			
55	532105709	Spring, Return, Clutch			
57	532140294	V-Belt, Ground Drive			

NOTE All component dimensions given in U. S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

ENGINE

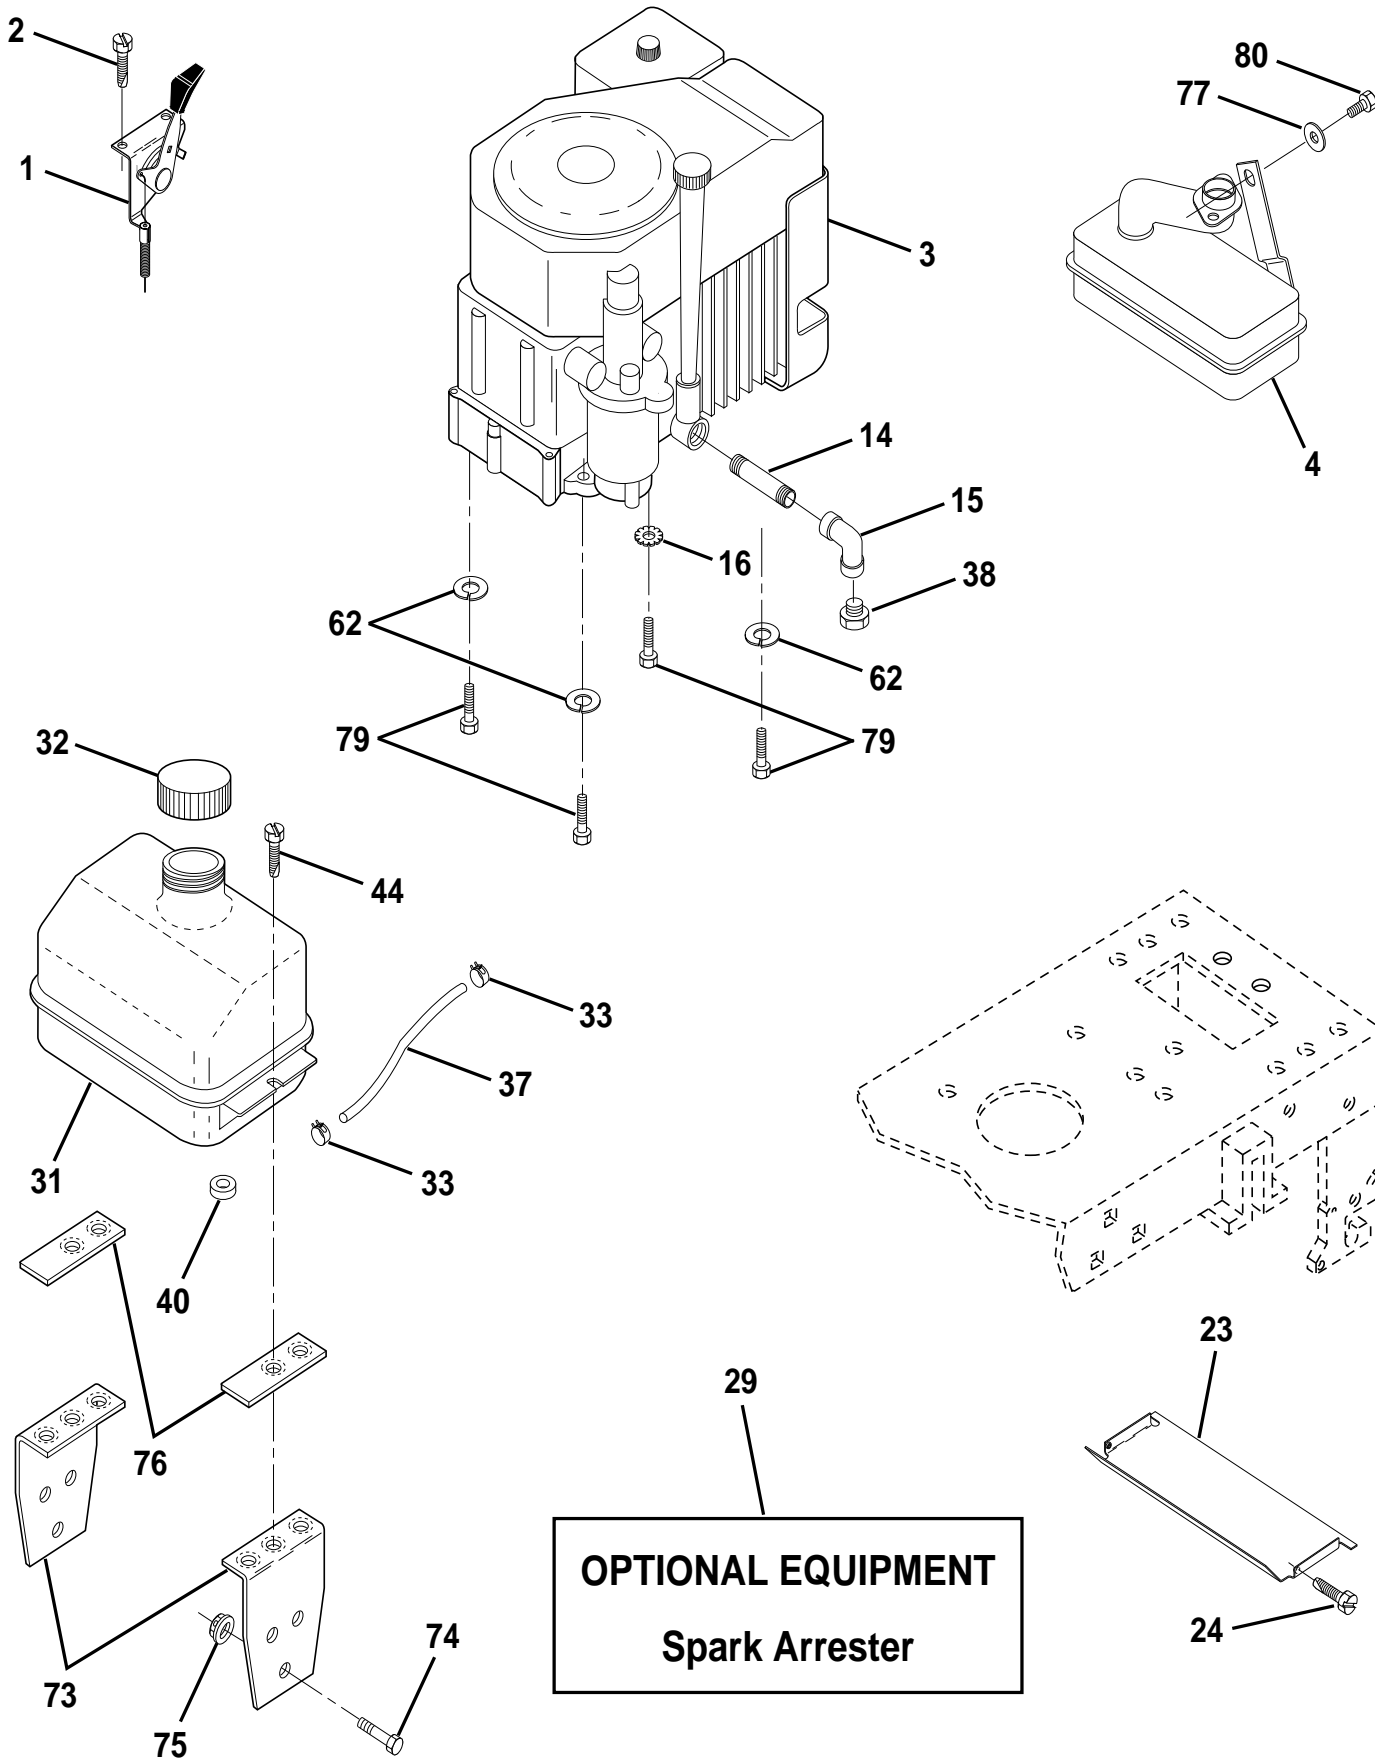

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

ENGINE


KEY PART NO. NO.	DESCRIPTION
1 532132753	Control Th/ch
2 817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3 -----	Engine Kohl 14 HP Model No. PS1456
4 532137350	Muffler LT Kohler
14 813280328	Nipple Pipe 3/8 Npt X 3-1/2"
15 813200300	Elbow Std 90° 3/8-18 Npt
21 532110436	Bushing Snap Split
23 532128953	Shield Heat Browning
24 817021008	Screw Hex Thd Cut #10-24unc X 1/2
29 532137180	Kit Spark Arrestor
31 532109202	Fuel Tank Front 1 25
32 532140527	Cap Asm Fuel W/sym Vented
33 532123487	Hose Clamp
37 532101335	Fuel Line
38 -----	Plug Oil Drain (Order from Engine Mfg.)
40 532110436	Bushing Snap Split
44 817490612	Screw Hexwash Thdrol 3/8-16x3/4 Ty-tt
45 -----	Bolt, Hex (Order from Engine Mfg.)
62 810040500	Washer Lock Hvy Hlcl Spr 5/16
63 811050500	Washer Lock Ext Tooth 5/16
73 532128229	Bracket Support Tank Fuel
74 874780616	Bolt, Hex 3/8-16unc X 1
75 873800600	Nut Lock Hex w/ins 3/8-16 UNC
76 532128230	Strap Support Fuel Tank
77 819101216	Washer, Flat
79 532125398	Bolt Hex
80 874760508	Bolt, Fin Hex 5/16-18 X 5/8

NOTE: All component dimensions given in U. S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

STEERING ASSEMBLY

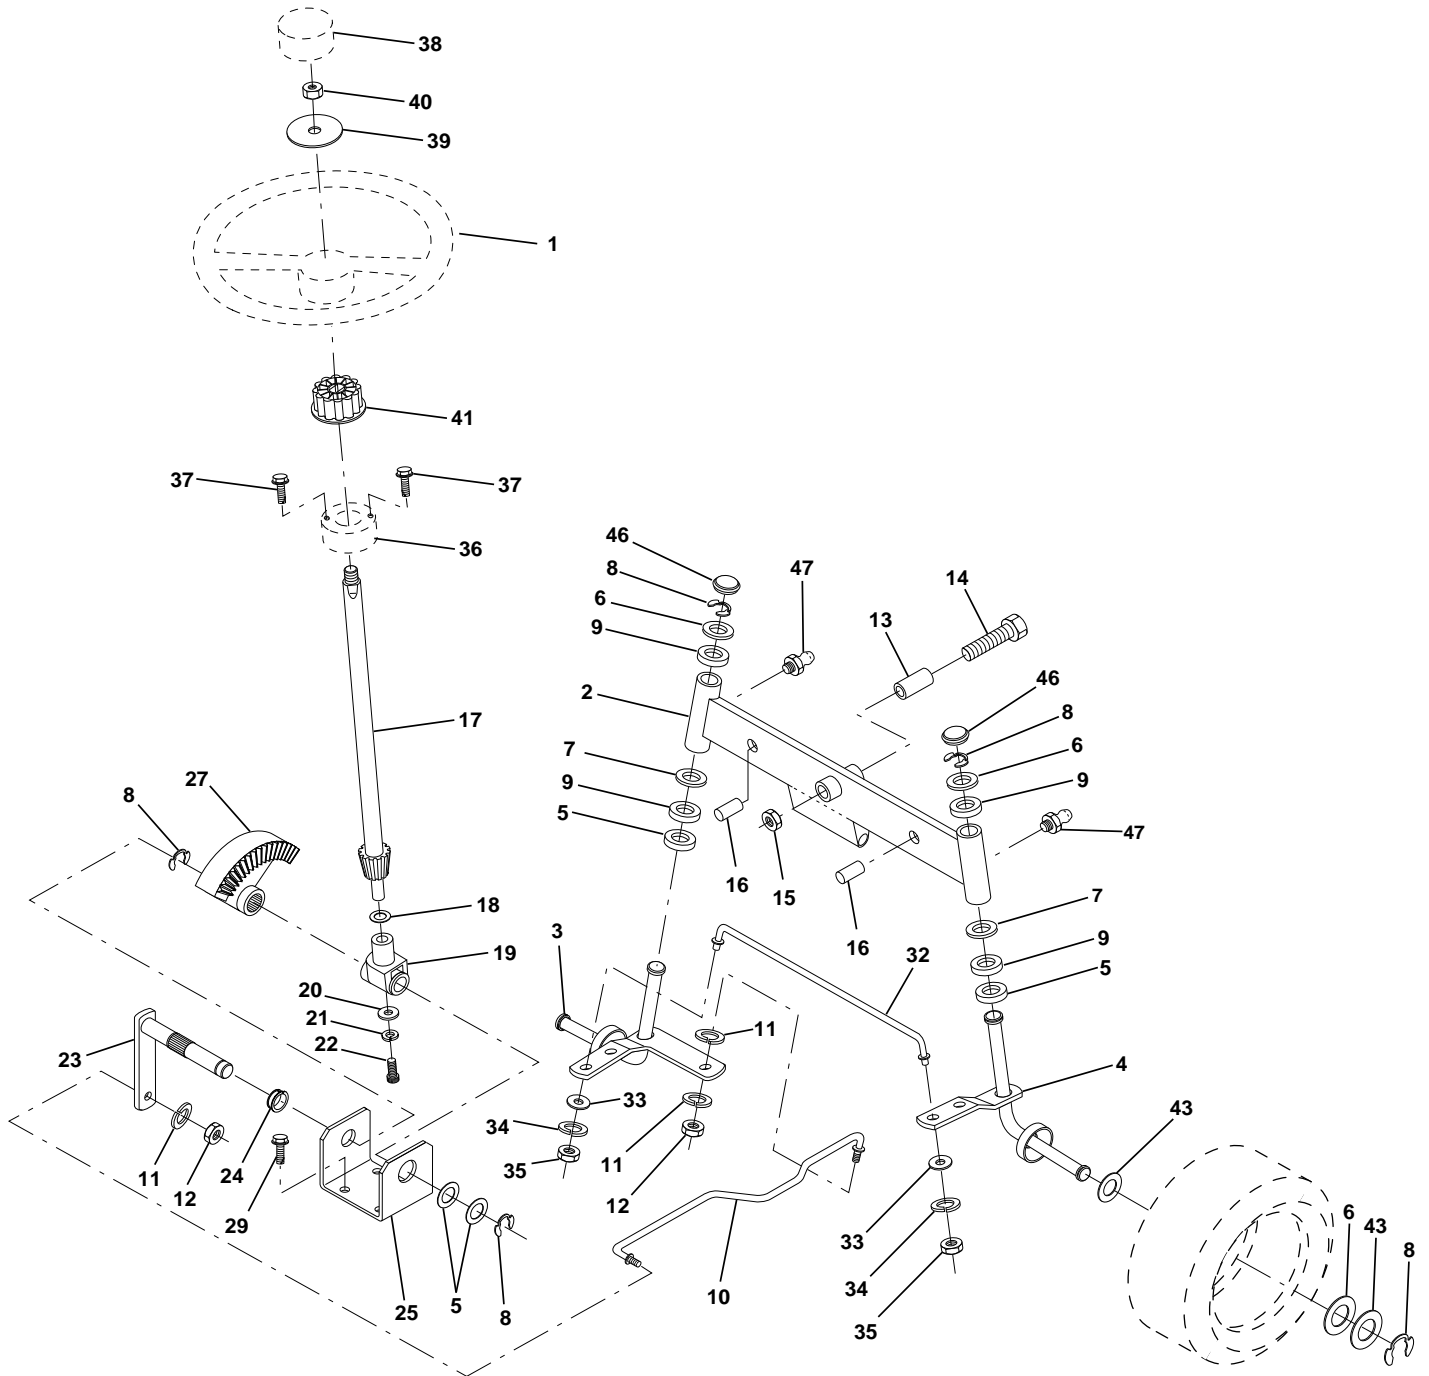

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

STEERING ASSEMBLY


KEY PART NO. NO.	DESCRIPTION
1 532124415	Wheel Steering
2 532142033	Axle Asm Fr LT W/gzks 38/42
3 532135227	Spindle Asm LH
4 532135228	Spingle Asm RH
5 532124931	Bearing Race Thrust Harden
6 532121748	Washer 25/32 X 1-5/8 X 16 Ga
7 819272016	Washer 27/32 X 1-1/4 X 16 Ga
8 812000029	Ring Klip #t5304-75
9 532124937	Bearing Col Strg
10 532130468	Link Drag Sol Ball Jt
11 810040600	Washer Lock Hvy Hlcl Spr 3/8
12 873610600	Nut Fin 3/8-24 Unf
13 532110438	Spacer Bearing Axle Front
14 874011056	Bolt Hex 5/8-11 Unc X 3-1/2
15 873901000	Nut Lock Flange 5/8-11 Unc
16 532132624	Pin Axle 5/8 X 1 55/1 54 Lg
17 532128758	Shaft Asm Strg 18 31x3/4
18 532057079	Washer Thrust 515x 750x 033
19 532124035	Suport Shaft
20 532126684	Washer Shim 1/4 X 5/8 X 062
21 810040400	Washer Lock Hvy Helical 1/4
22 871070410	Screw Hex Socket 1/4-20 X 5/8
23 532127501	Shaft Asm Pittman
24 532109816	Nyliner Snap In
25 532124036	Bracket Steering
27 532136874	Gear Sector
29 817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
32 532130467	Rod Tie Wire Form
33 819111216	Washer 11/32 x 12/16 x 16 Ga.
34 810040500	Washer, Lock, Hvy Hlcl Spr 5/16
35 873810500	Locknut 5/16-24 Unf
36 532124720	Bushing Link Drag
37 817431008	Screw Slftp #10-16 X 1/2 Ty-b
38 532124416	Insert Cap Strg Wh Aut
39 532100712	Washer 53 X 2 25 X 160
40 873940800	Nut Hex Jam Taplock 1/2-20 Unf
41 532100711	Adapter Wheel Strg
43 532121749	Washer 25/32 X 1 1/4 X 16 Ja
46 532121232	Cap Spindle Fr Top
47 532124836	Fitting Grease

NOTE: All component dimensions given in U. s. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (H954001192A)

SEAT ASSEMBLY

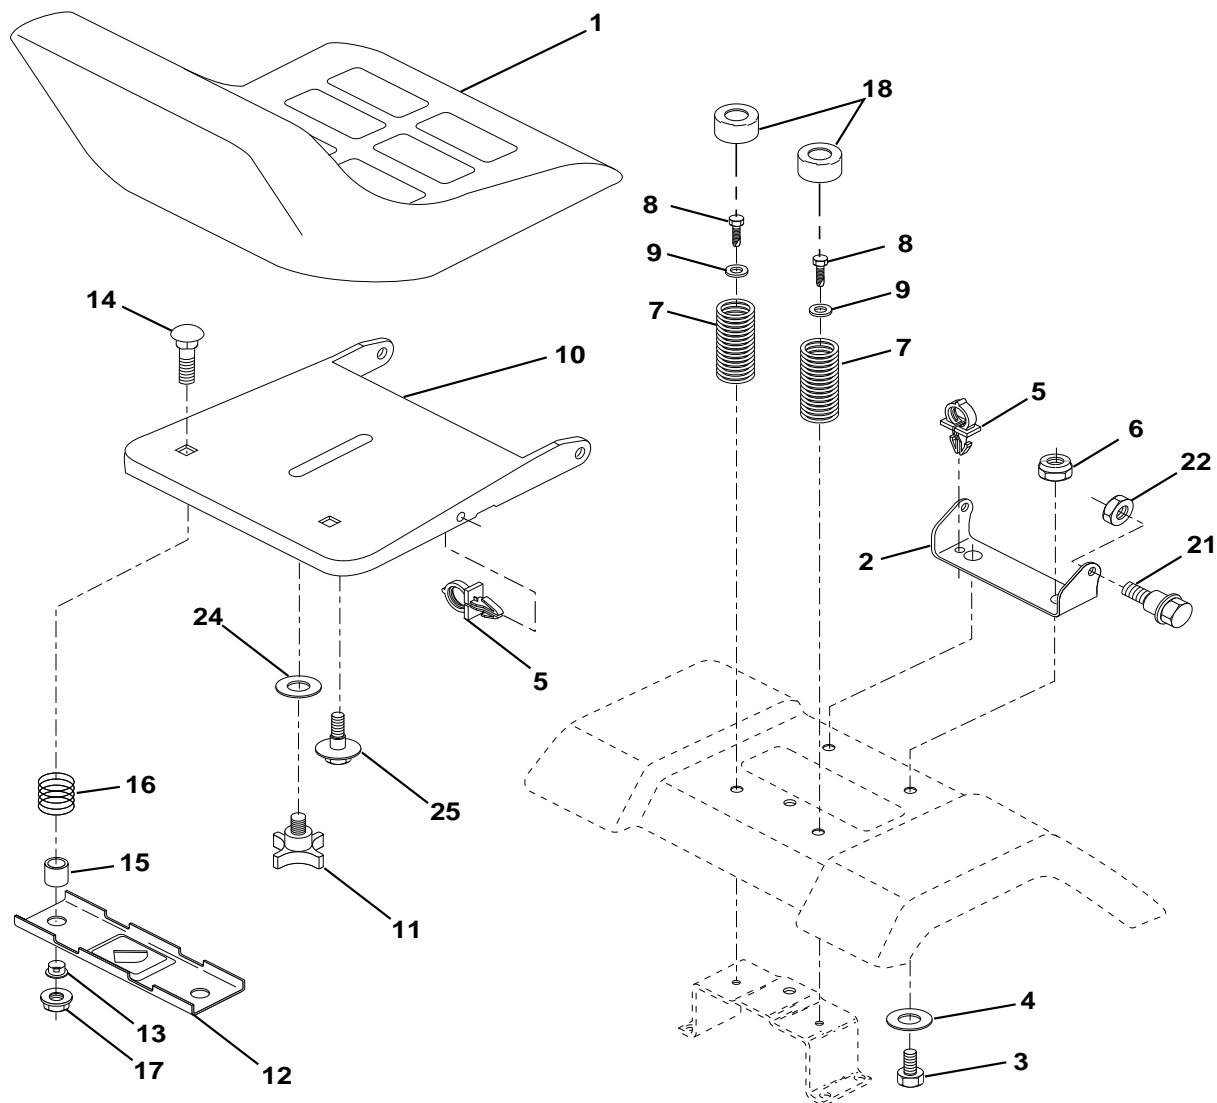

KEY NO.	PART NO.	DESCRIPTION
1	532124185	Seat
2	532140551	Bracket Pivot Seat
3	874760616	Bolt, Hex 3/8-16unc x 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push in Hinged
6	873800600	Nut, Crownlock 3/8-16 Unc
7	532124181	Spring Seat Cprsn
8	817490616	Screw Hwsh Thdrol 3/8-16x1
9	819131614	Washer 13/32 X 1 X 14 Ga
10	532140552	Pan Seat
11	532120068	Knob Seat 1/2-13unc
12	532121246	Bracket Mounting Switch


KEY NO.	PART NO.	DESCRIPTION
13	532121248	Bushing Snap
14	872050411	Bolt 1/4-20x1-3/8
15	532134300	Spacer Split
16	532121250	Spring Cprsn
17	532123976	Locknut 1/4 Gr. 5
18	532124238	Cap Spring Seat
21	532139888	Bolt, Shoulder 5/16-18 Unc
22	873800500	Nut, Lock Hex w/ins 5/16-18 UNC
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga
25	532127018	Bolt, Shoulder 5/16-18 X 62

NOTE All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

DECALS

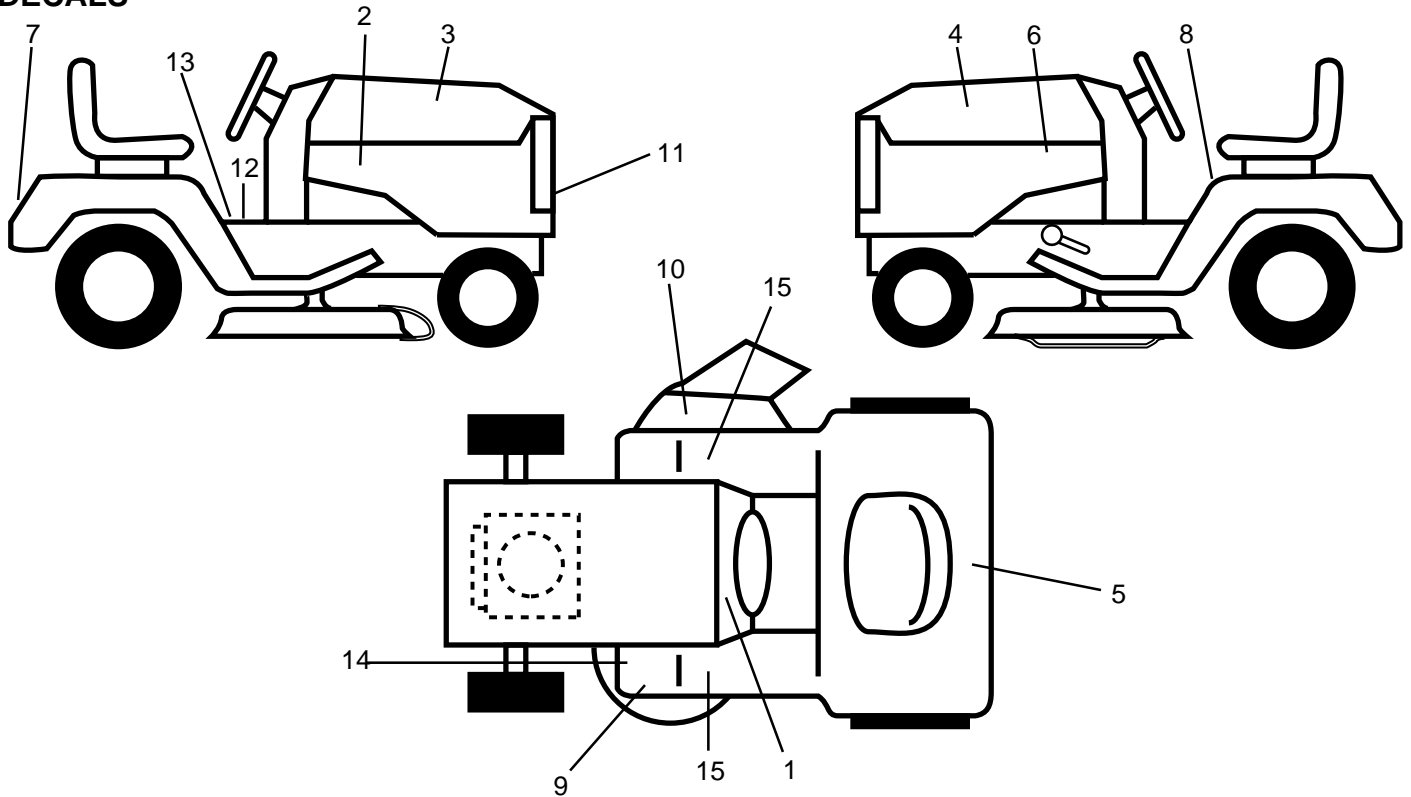


KEY NO.	PART NO.	DESCRIPTION
1	532138956	Decal Instruction Dash Eng/fr
2	532140863	Decal Ins Hood RH LTH140 Hydro
3	532140728	Decal Hood RH Husq
4	532140729	Decal Hood LH Husq
5	532121549	Decal Caution Battery Fr/ger
6	532140865	Decal Ins Hood LH LTH140 Hydro
7	532131582	Decal Fender Husqvarna
8	532133795	Decal Caution Fender Eng/fr
9	532101892	Decal Clutch/brake Eng/fr
10	532137259	Decal Warning MULT-LANGUAGE
11	532125989	Decal Grille Husqvarna "h" logo
12	532142337	Decal Sdl Cold Start Hyd. e/f
13	532140837	Decal Brake Parking Saddle

KEY NO.	PART NO.	DESCRIPTION
14	532136832	Decal VBelt Sch. 38" and 42" LT
15	532108256	Pad Footrest Rbr Sq Generic
-	532138311	Decal Lift Handle(Lift Handle)
-	532142341	Decal D-Bar Control Mnt. Hyd. Lt
-	532145459	Manual Owner's English
-	532145460	Manual Owner's French

Available accessories not included with tractor:

- LC06 Tire Chains
- LBD48 48" Snow blade
- CE42 42" Bagger
- LC05 33 lb. Weights (pairs)
- LSB42 42" Snow Thrower
- MK420 Mulching Kit

WHEELS & TIRES

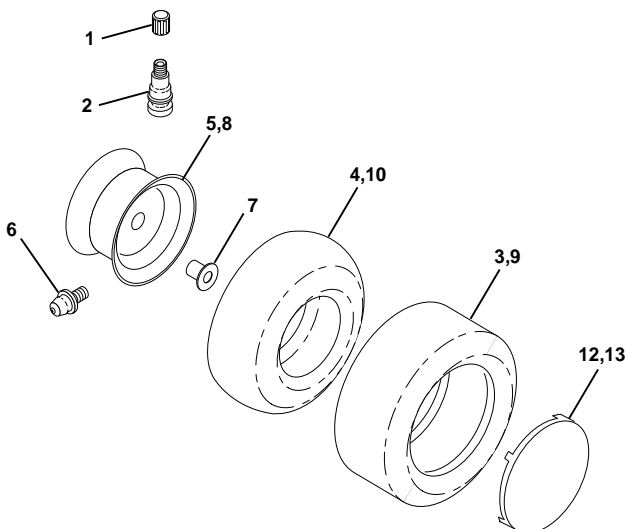


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 6 0 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532141446	Rim Asm Front 6"
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532141447	Rim Asm 8" rear White Service
9	532122082	Tire R Ts 20x10 -8C Service
10	532124926	Tube Rear (Service Item Only)
12	532124577	Cover Wheel 6" white
13	532124578	Cover Wheel 8" white

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

42" MOWER

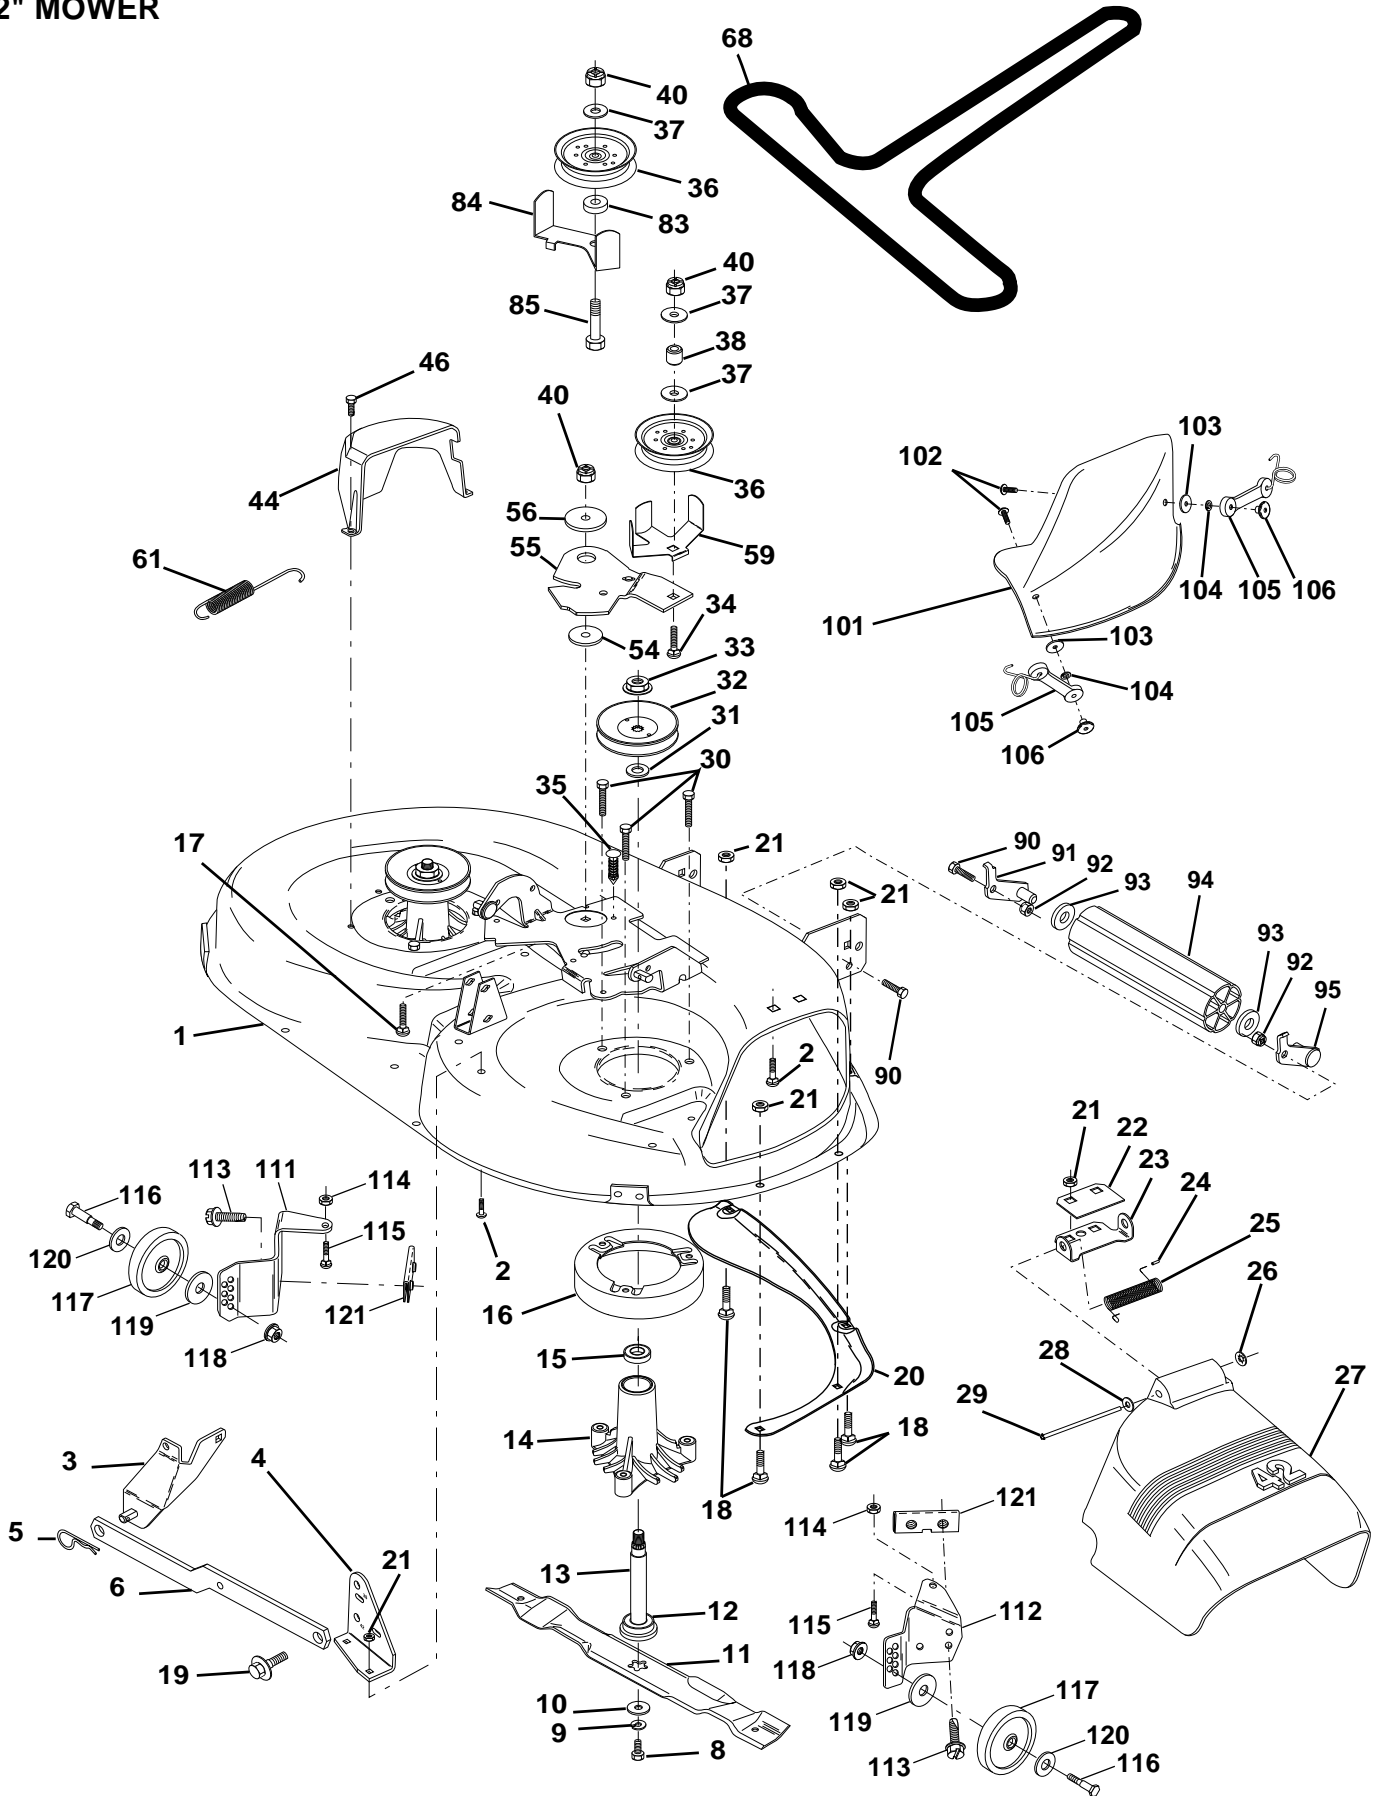

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

42" MOWER


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532144393	Deck Asm MWR 42"weldment	55 532140084	Arm Idler 42"mower LT/YT
2 872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	56 532122052	Spacer Retainer Pm Mower
3 532138017	Bracket Asm Fr Sway Bar 38/42	59 532141043	Guard, Belt
4 532138440	Bracket Asm Deck 42"sway Bar	61 532131950	Spring Ext. Elect
5 532124670	Retainer Spring	68 532144200	V-Belt Mower 42"
6 532130832	Arm Suspension Rear	83 532120958	Washer Sintered
8 532850857	Bolt 3/8-24x1 25 Gr8 Patched	84 532144394	Keeper Belt Idler Fixed
9 810030600	Washer Lock Hvy 3/8 Unplated	85 872140620	Bolt Carriage 3/8 - 16 x 2-1/2 Gr.5
10 532140296	Washer Hard Blade Mower Vented	90 874760616	Bolt Fin Hex 3/8-16unc X 1
11 532134149	Blade Mower Mulching 42"	91 532132274	Bracket Asm Noseroller LH
12 532129895	Bearing Ball #6204 (Mandrel)	92 873800600	Nut Lock 3/8-16 Unc
13 532137645	Shaft Asm W/lower Bearing	93 819171416	Washer 17/32 X 7/8 X 16 Ga
14 532128774	Housing Mandrel Vented(machd)	94 532132264	Roller Nose 38 & 42
15 532110485	Bearing Ball Mandrel	95 532132273	Bracket Asm Noseroller RH
16 532140329	Stripper Mower Vented	101 532136420	Cover Mulching 42" Blk
17 872110610	Bolt Rdhd Sqnk 3/8-16 X 2	102 871161010	Screw
18 872140505	Bolt Carr 5/16-18 X 5/8	103 810071000	Washer Lock #10
19 532132827	Bolt Shoulder	104 819061216	Washer #10
20 532136888	Baffle Vortex 42	105 532130758	Latch Asm Bagger
21 873680500	Nut Crown Lock 5/16-18 UNC	106 532125004	Nut Weld .327/.304 #10-24
22 532134753	Stiffener Bracket 42"deck	111 532140353	Bracket Wheel Gauge Lh 42" Deck
23 532131267	Bracket Deflector Mower 42"	112 532132262	Bracket Gauge Wheel Rh 42" Deck
24 532105304	Cap Sleeve 80x 112 Blk Mower	113 817490512	Screw Thdrol 5/16 - 18 x 3/4 Tyt
25 532123713	Spring Torsion Deflector 2 52	114 873510500	Nut Keps 5/16 - 18 UNC
26 532110452	Nut Push Phos & Oil	115 872110504	Bolt Carriage 5/16 - Unc x 1/2
27 532130968	Shield Deflector Mower 42" Blk	116 532137644	Bolt Shld "A" 2.41 "B" 1.66
28 819111016	Washer 11/32 X 5/8 X 16 Ga	117 532105455	Wheel Gauge blk. 4.93
29 532131491	Rod Hinge 42"6 75 Wlg	118 873930600	Nut Centerlock 3/8 - 16 UNC
30 532138776	Screw Thdrol Hex Hd Zinc Mwr.	119 819121414	Washer 3/8 x 7/8 x 14 Ga.
31 532129963	Washer Spacer Mower Vented	120 819171512	Washer 17/32 x 15/16 x 12 Ga.
32 532129861	Pulley Mandrel 42"	121 532143723	Bracket
33 532137266	Nut 9/16top Lock Flng Cntr	-- 532145452	Deck Serv 42" Elec Vent (Standard Deck - Order Nose Roller, Gauge Wheel and Mulcher Plate components separately Key Nos. 90-95, 101-106 and 111-121)
34 872110622	Bolt Rdhd 3/8-16uncx2-3/4 Gr5		
35 532133835	Fastner Christmas Tree		
36 532131494	Pulley Idler Flat 3 060		
37 819131316	Washer 13/32 X 13/16 X 16 Ga		
38 532132823	Spacer Spring Stop Idler	-- 532130794	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)
40 873680600	Nut Crownlock 3/8-16 Unc		
44 532140088	Guard Mandrel LH Black		
46 532137729	Screw Thdrol 1/4-20x5/8		
54 532133943	Washer Hardened		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

MOWER LIFT ASSEMBLY

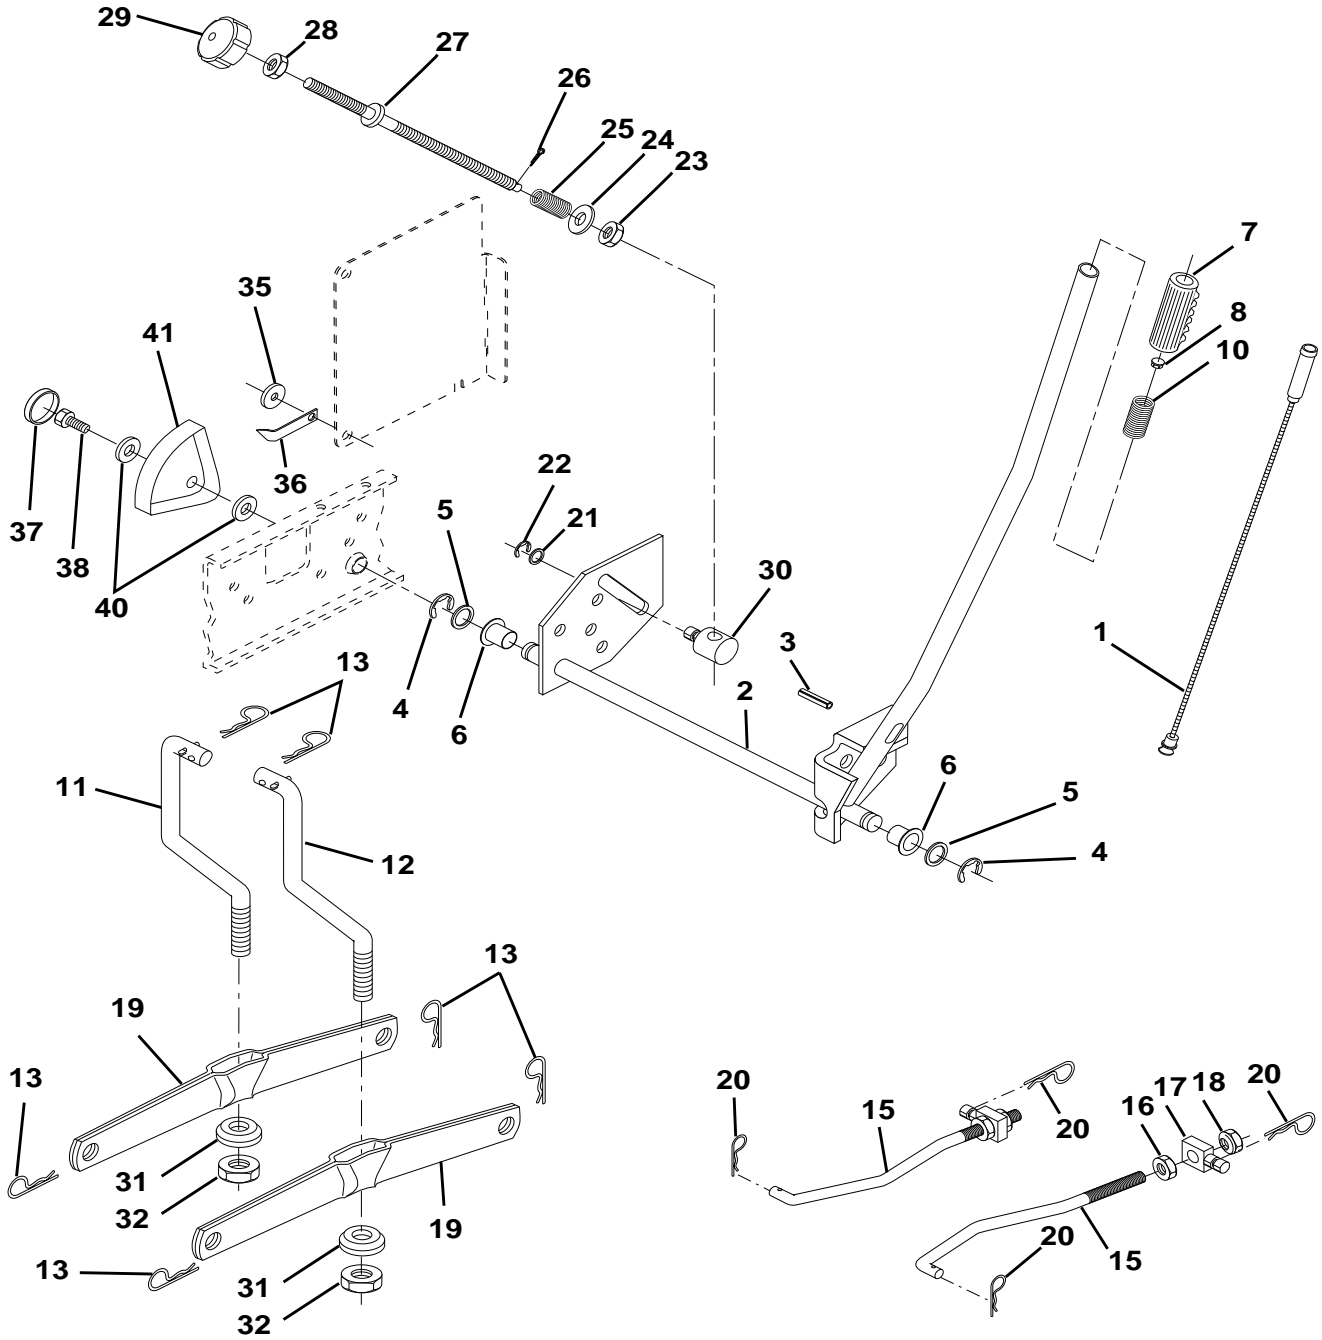

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

MOWER LIFT ASSEMBLY


KEY PART NO.	PART NO.	DESCRIPTION
1	532136971	Wire Asm Inner W/plunger 17 32
2	532136968	Shaft Asm Lift 93 RH
3	532138284	Pin Groove 1 500 Zinc
4	812000002	E Ring #5133-62
5	819211621	Washer 21/32 X 1 X 21 Ga
6	532120183	Bearing Nylon Blk 629 Id
7	532125631	Grip Handle Fluted Blk
8	532124526	Button Plunger Black
10	532122512	Spring Cprsn 3 750 Oiled
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532127218	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock W/wsh 1/2-13unc
19	532139868	Arm Suspension Rear
20	532124660	Retainer Spring
21	819151216	Washer 15/32 X 3/4 X 16 Ga
22	812000037	Ring Klip #t5304-37
23	532110807	Nut Special
24	819131016	Washer 13/32 X 5/8 X 16 Ga
25	532124874	Spring 2-1/8"
26	876020308	Pin Cotter 3/32 X 1/2
27	532110729	Rod Adj Lift Zinc 9 00 Wrk Lg
28	873350600	Nut Hex Jam 3/8-16 Unc
29	532138057	Knob Inf 3/8-16 Unc Blk W/sym
30	532110810	Trunnion Dp Stop Dbl Thds PLT
31	532140302	Bearing pvt. Lift Sphencal
32	873810600	3/8-24 Nylock Nut
35	532120529	Washer Nylon .44 x .75 x 032
36	532138346	Pointer pnt height ind.
37	532123935	Plug hole Blk 1.485/1.515 Dia
38	817490512	Screw Thdrol 5/16-18 x 3/4 Tyt
40	819112410	Washer 11/32 x 1-1/2 10 Ga
41	532123934	Scale Ind. Hieght Black

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

HYDRO-GEAR TRANSAXLE - MODEL NO. 310-0750

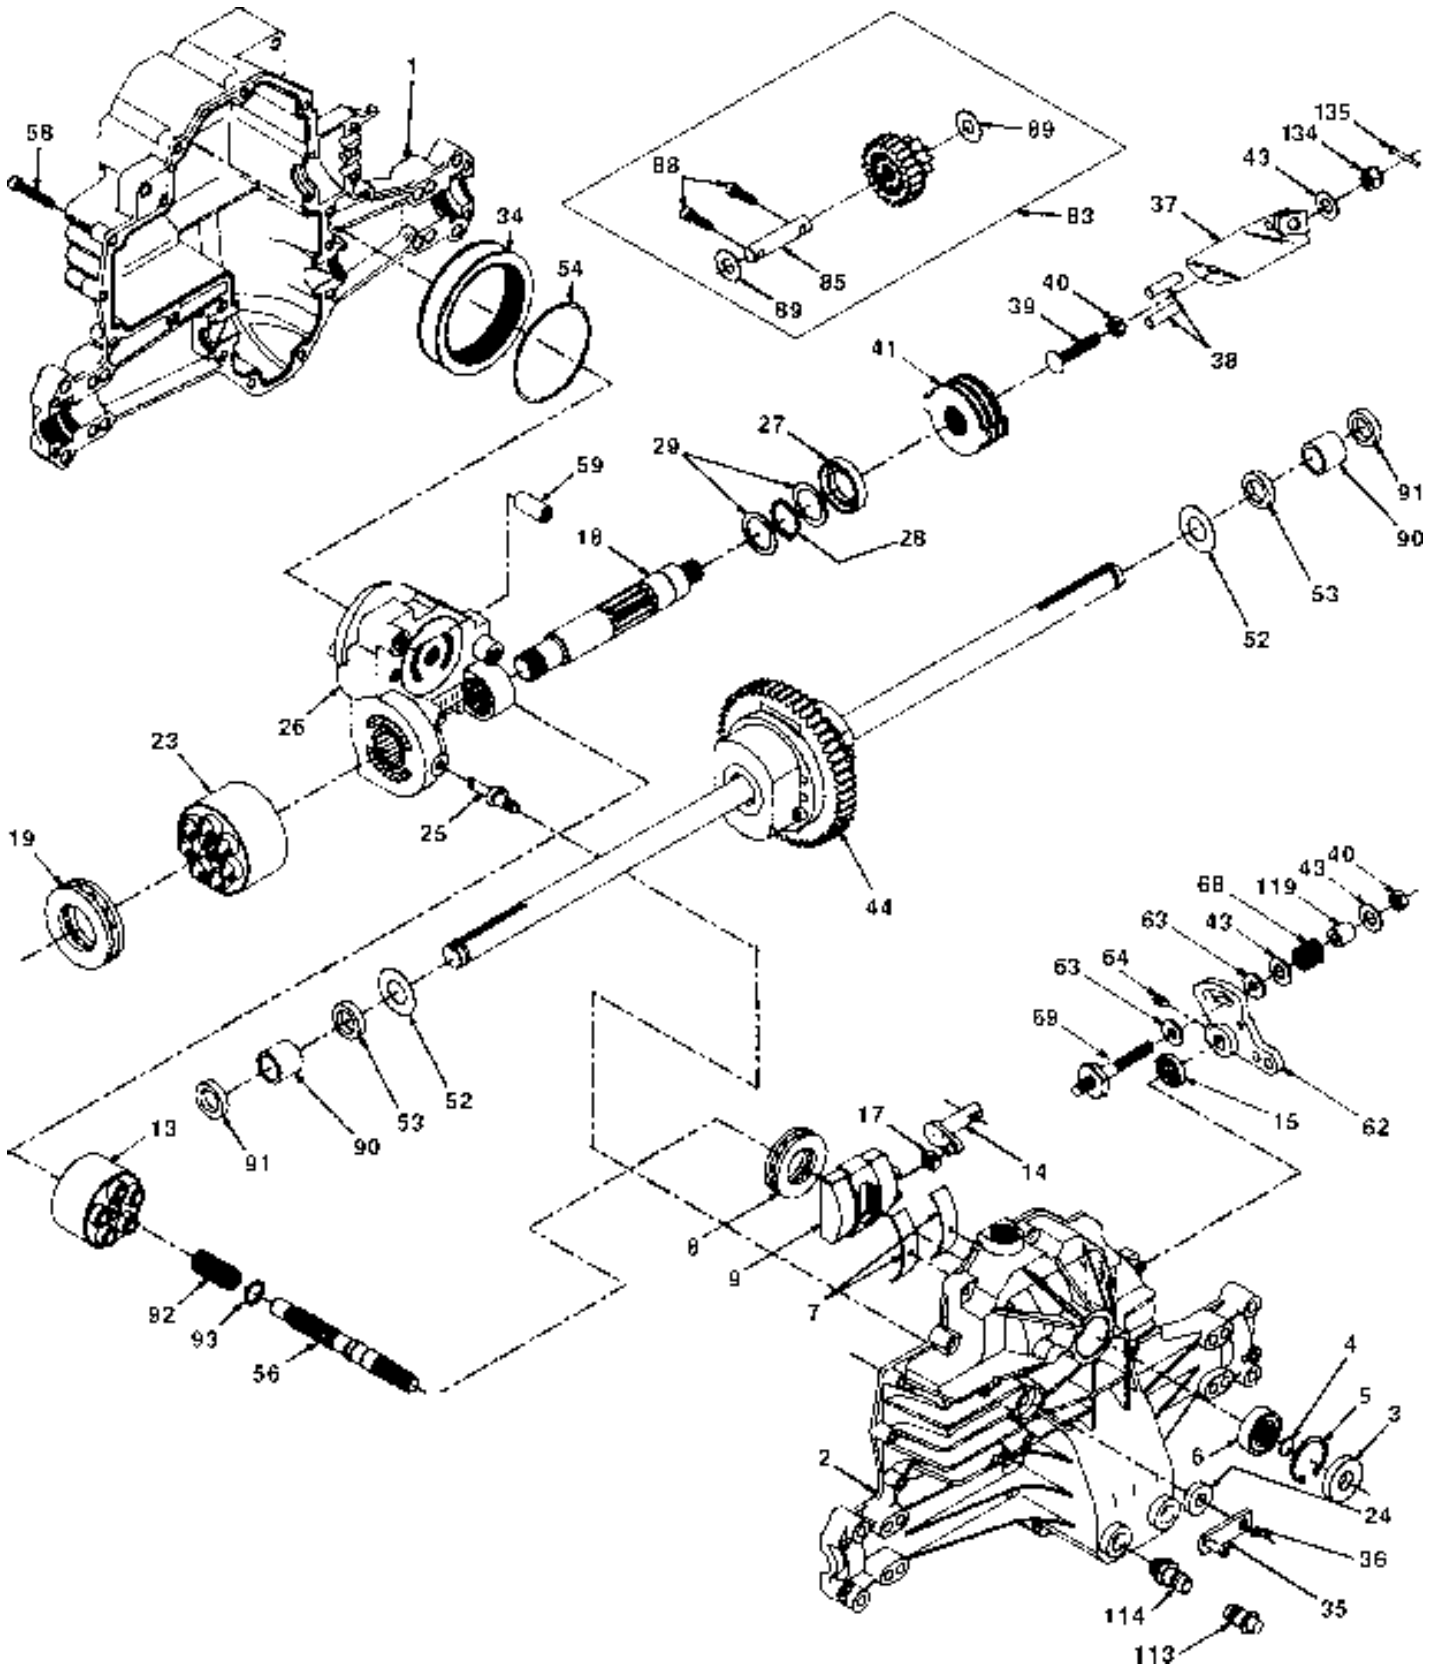

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (954001192A)

HYDRO-GEAR TRANSAXLE - MODEL NO. 310-0750

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION		
1	532142930	Housing, Lower	43	532142884	Washer 7/16 x 7/8 x .060
2	532142931	Assembly, Upper Housing	44	532142959	Differential Assembly
3	532142932	Seal, Lip	52	532142960	Washer 3/4 x 1.5 x .03
4	532142928	Ring, Wire Retaining	53	532142961	Seal .75 x 1.25 x .250
5	532142933	Ring, Retaining	54	532142962	O-Ring .103 x 2.987 ID
6	532142934	Bearing, Shaft Ball	56	532142963	Shaft, Input
7	532142935	Bearing, Cradle	58	532142964	Bolt 1/4-20 x 1.38
8	532142936	Bearing, Thrust 30 x 52 x 13	59	532142965	Pin .5 OD x .43 ID x .750
9	532142937	Swashplate, Variable	62	532142966	Arm, Control
13	532142938	Block, Cylinder Assembly	63	532142967	Puck, Dampener
14	532142939	Arm, Trunnion	64	532142920	Set Screw
15	532142940	Seal, Lip	68	532142969	Spring
17	532142941	Guide, Slot	69	532144610	Stud 5/16-24
18	532142942	Shaft, Motor	83	532142971	Jack Shaft Assembly
19	532142943	Bearing, Thrust 42 x 68 x 16	85	532142972	Jack Shaft
23	532142944	Block, Cylinder Assembly	88	532142973	Capscrew
24	532142945	Seal, Lip 10 x 25 x 7	89	532142974	Washer
25	532142946	Actuator, Bypass	90	532142975	Sleeve Bearing
26	532142947	Center Section Assembly Kit	91	532142976	Seal, Wiper
27	532142948	Seal, Lip 26 x 42 x 8	92	532142977	Spring, Block
28	532142949	Ring, Retaining	93	532142978	Washer, Block Thrust
29	532142950	Washer 26 x 35 x 1	113	532142917	Cap, Vent Assembly
34	532142951	Oil Filter Element	114	532142918	Fitting, O-Ring Assembly
35	532142952	Arm, Bypass	119	532142980	Spacer
36	532142953	Ring, Retaining	134	532144607	Nut, Castle 5/16-24
37	532142954	Arm, Actuating	135	532144608	Pin, Cotter
38	532142955	Pin, Actuating			
39	532142956	Bolt 5/16-24 x 1-3/4			
40	532142957	Locknut, Hex 5/16-24 UNJC			
41	532142958	Brake Rotor/Stator Kit			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm