

# Husky Jet



**1.1998**

**Spare parts**


**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**

**Repuestos**

**Reservdelar**

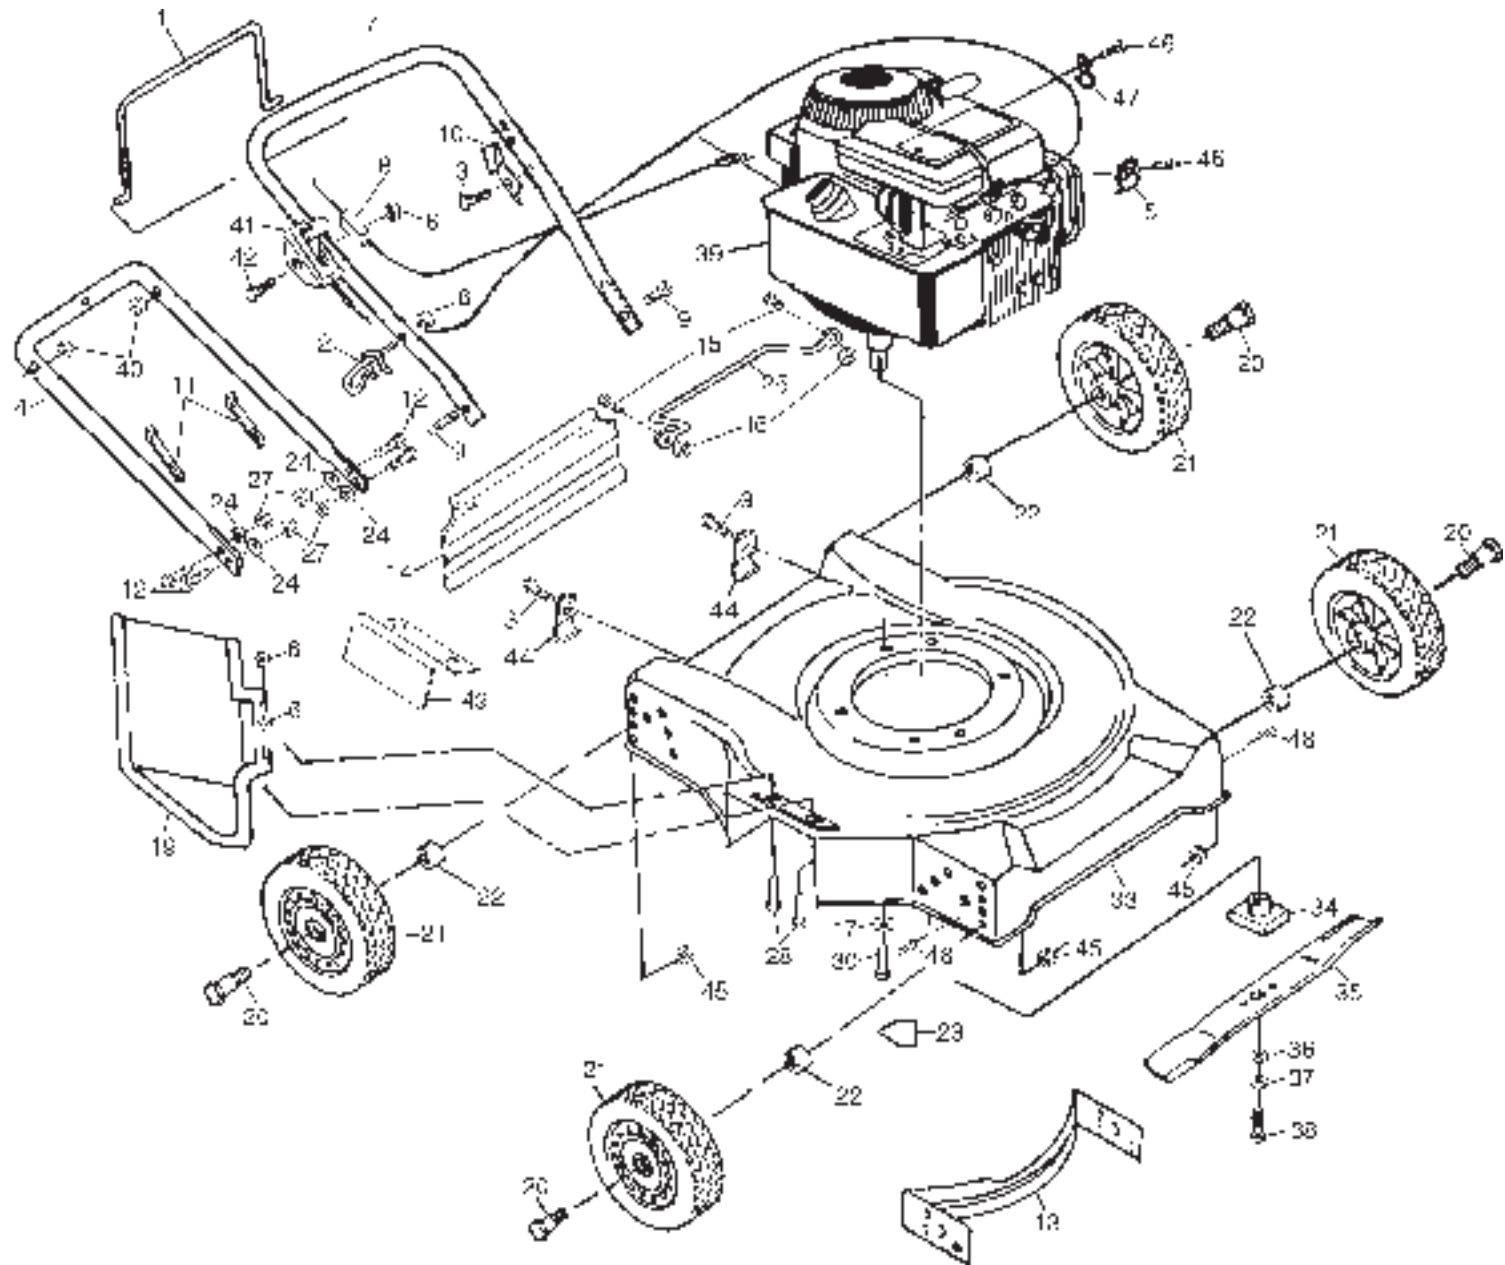

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532086902	Control Bar	27	532132010	Flange Locknut 3/8-16
2	532132001	Rope Guide	28	874760412	Hex Head Bolt 1/4-20 x 3/4
3	532750097	Hex Washer Head Self-tapping Screw #10-24 x 1/2	30	532150406	Hex Head Thread Rolling Screw 3/8-16 x 1
4	532125463	Lower Handle	33	532162226	Housing Kit
5	532213146	*Cable Clamp (Engine)	34	532850977	Blade Adapter
6	532063601	Locknut 1/4-20	35	531006063	Blade 20"
7	532125464	Upper Handle	36	532851074	Washer (Hardened)
8	532851809	Engine Zone Control Cable	37	532850263	Helical Lock Washer
9	874350424	Hex Head Bolt 1/4-20 x 1-1/2	38	532851084	Hex Head Machine Screw 3/8-24 x 1-3/8 Gr. 8
10	532125162	Up-Stop Bracket	39	-----	*Engine, Briggs & Stratton
11	532066426	Wire Tie			Model No. 9D902
12	532137009	Hex Head Bolt 3/8-16 x 1	40	532132004	Hex Nut 1/4-20
13	532141519	Front Baffle	41	532131922	Throttle Cable STD
14	532140541	Rear Skirt	42	532144929	Hex Washer Hd Screw 1/4-20 x 2.12
15	532085825	Screw	44	532125207	Skirt Bracket
16	532069180	Nut	45	532751592	Locknut 5/8- 16
17	532125078	Engine Washer	46	532083816	Screw, #10 x 5/8
19	532752052	Discharge Guard	47	532087930	Cable Clip, Throttle
20	532067609	Shoulder Bolt	48	532128416	Pop Rivet
21	532800060	Wheel Assembly 7.00 x 1.50	49	532162234	Deflector Bracket
22	532136624	Spacer Washer	--	532163073	Operator's Manual (Scand.)
23	532145494	Danger Decal	--	532163074	Operator's Manual (Euro.)
24	532055611	Washer	--	532141520	Rear Baffle (Not Shown)
25	532154147	Foot Guard			

\* These parts must be purchased through an authorized Briggs & Stratton dealer.