



SPARE PARTS LIST

 
BRUSHCUTTERS/CLEARING SAWS

326 RX, 2006-04


X Accessories
Zubehöre
Accessoires
Acessorios
Tillbehör

Olja Luftfilter
Oil Airfilter
Öl Luftfilter
Aceite Filtro Air
Huile Filtera aire


531 00 92-48

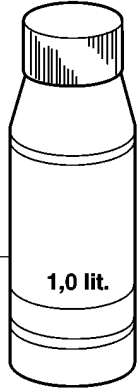


1,0 lit.

 


502 28 59-01

 


501 60 02-03

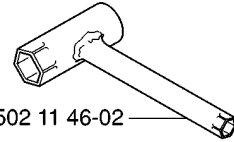 


502 11 46-02

 

502 21 58-01

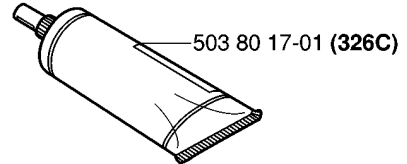 


503 80 17-01 (326C)

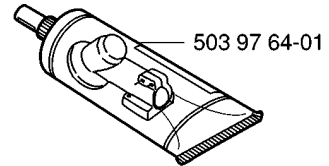 


503 97 64-01

 
compl 537 35 36-01

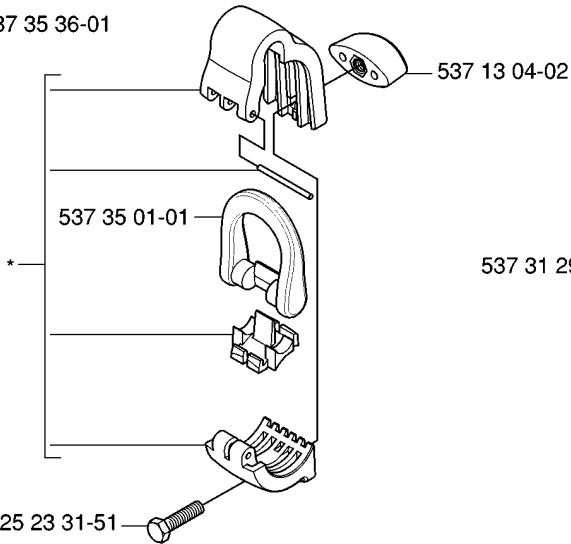


537 31 29-01 (200-275 mm)

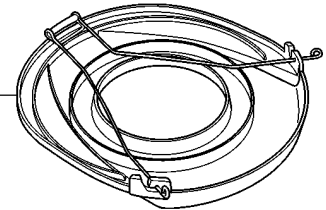 

 compl 537 21 63-01
compl 537 21 63-02 (USA)

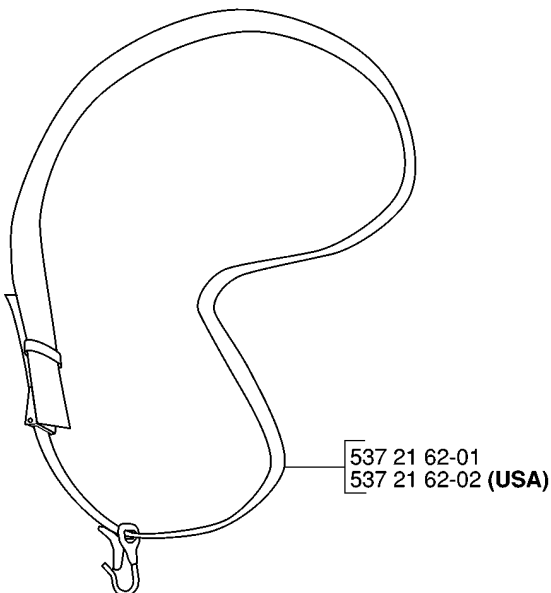

537 21 62-01
537 21 62-02 (USA)

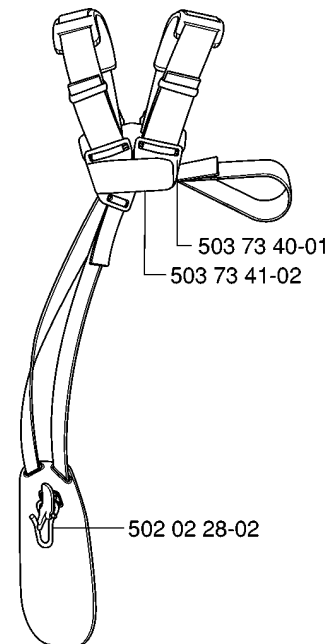 

503 73 40-01
503 73 41-02

502 02 28-02


ACCESSORIES

326 RX, 2006-04


Part No	Description	Remark	QTY KIT
501 60 02-03	SCREWDRIVER		1
502 02 28-02	WELT HOOK		1
502 11 46-02	SOCKET WRENCH		1
502 21 58-01	L-NYCKEL		1
502 28 59-01	STOP		1
503 73 40-01	FRONT PIECE		1
503 73 41-02	FRONT PIECE		1
503 80 17-01	GREASE	326C	1
503 97 64-01	GREASE		1
531 00 92-48	FILTER OIL		1
537 13 04-02	KNOB		1
537 21 62-01	HARNESS		1
537 21 62-02	HARNESS	USA	1
537 21 63-01	HARNESS		1
537 21 63-02	HARNESS	USA	1
537 31 29-01	TRANSPORT GUARD	200-275 MM	1
537 35 01-01	LOOP		1
537 35 36-01	LOOP		1
725 23 31-51	SCREW		1

**U Accessories
Zubehöre
Accessoires
Accesorios
Tillbehör**

 
***compl 537 29 95-01
323R
326Rx**

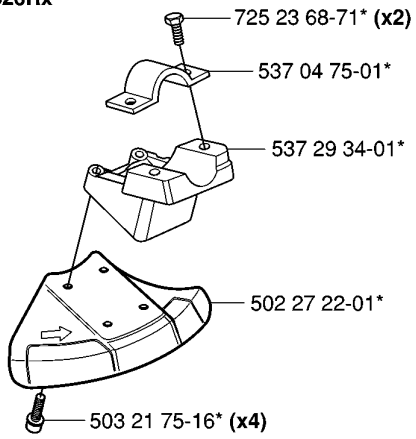


***compl 537 02 61-01
326C**

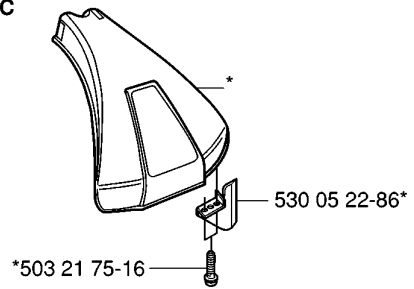 

***compl 503 93 42-02
323R
326Rx**

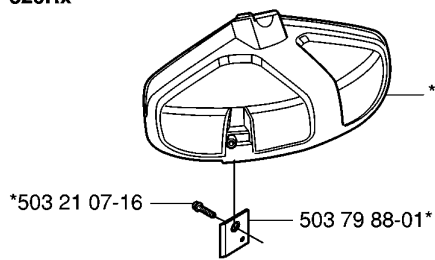 

 ***compl 503 97 71-01
323L
326L
326Lx
326LDx**

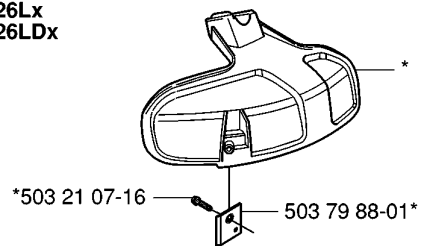


ACCESSORIES

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
502 27 22-01	SAW BLADE GUARD		1
503 21 07-16	SCREW IHSCCT		1
503 21 07-16	SCREW IHSCCT		1
503 21 75-16	SCREW IHSCFT		4
503 21 75-16	SCREW IHSCFT		1
503 79 88-01	BLADE		1
503 79 88-01	BLADE		1
503 93 42-02	COMBI GUARD	323R 326RX	1
503 97 71-01	TRIMMER GUARD	323L 326L 326LX 326LDX	1
530 05 22-86	LINE LIMITER		1
537 02 61-01	TRIMMER GUARD	326C	1
537 04 75-01	CLAMP		1
537 29 34-01	ADAPTER		1
537 29 95-01	SAW BLADE GUARD	323R 326RX	1
725 23 68-71	SCREW EHHM		2

 A *compl 537 19 92-02

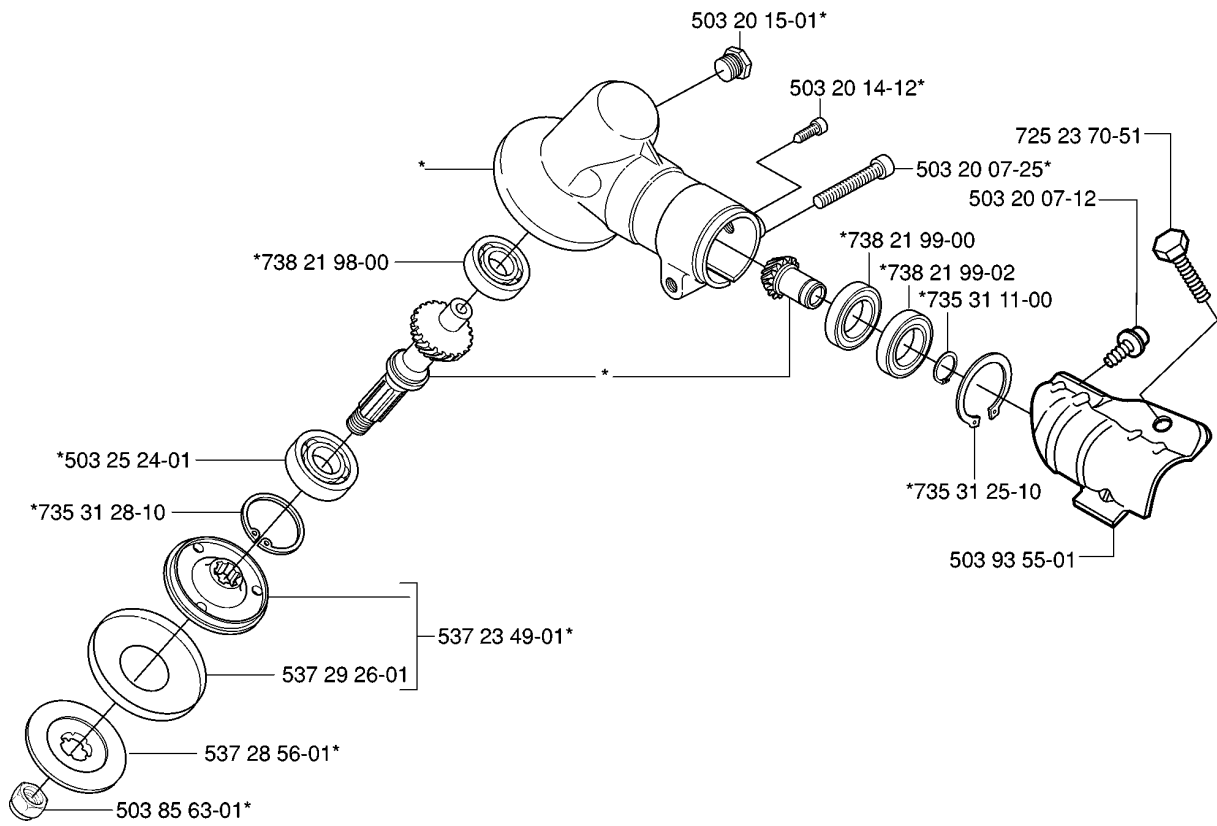


BEVEL GEAR

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 20 07-12	SCREW IHSCFM		1
503 20 07-25	SCREW IHSCFM		1
503 20 14-12	SCREW IHSCFMO		1
503 20 15-01	SCREW IHHM		1
503 25 24-01	BALL BEARING		1
503 85 63-01	NUT		1
503 93 55-01	CLAMP.GUARD		1
537 19 92-02	BEVEL GEAR ASSY		1
537 23 49-01	DRIVER ASSY		1
537 28 56-01	SUPPORT FLANGE		1
537 29 26-01	CUP		1
725 23 70-51	SCREW		1
735 31 11-00	CIRCLIP		1
735 31 25-10	CIRCLIP		1
735 31 28-10	CIRCLIP		1
738 21 98-00	BALL BEARING		1
738 21 99-00	BALL BEARING		1
738 21 99-02	BALL BEARING		1

CARBURETOR (only option for US)

 Hualong HQ-2

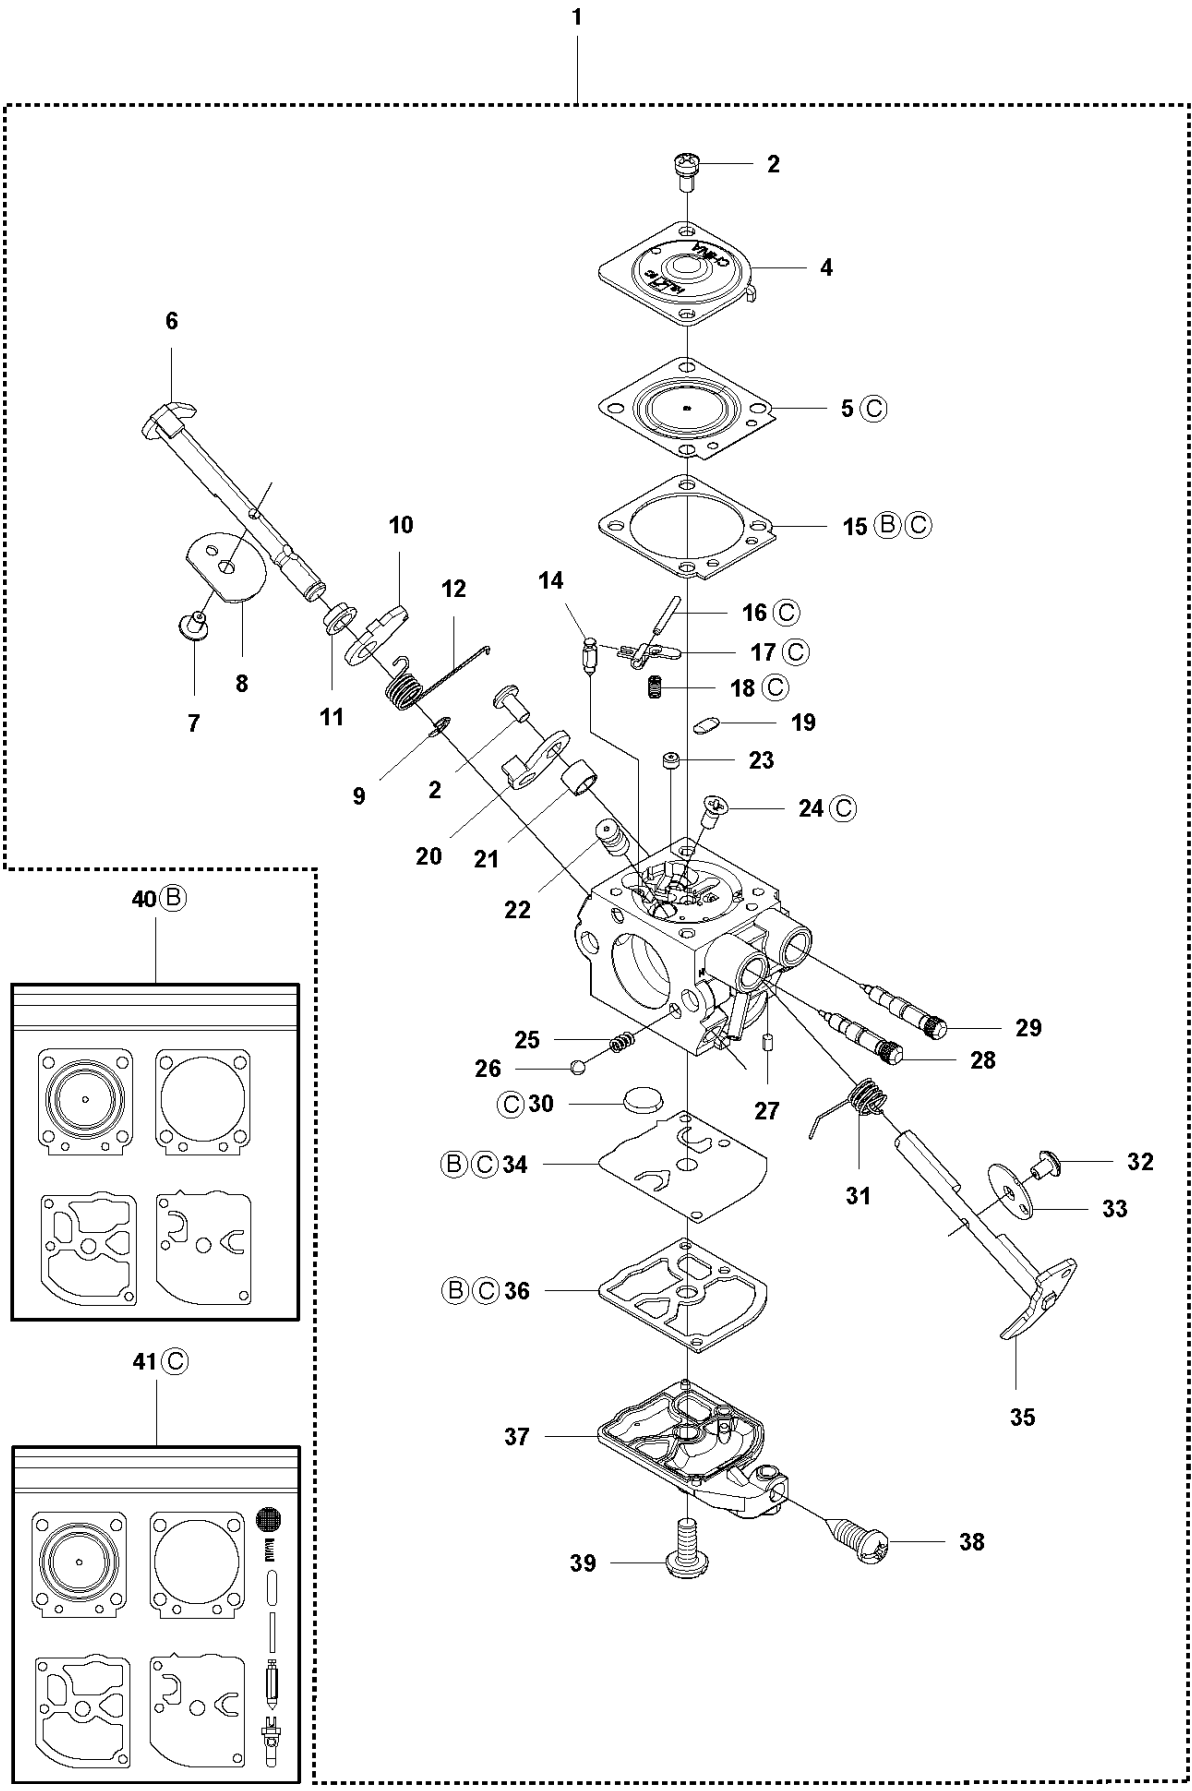


CARBURETOR

326 RX, 2006-04

Ref	Part No	Description	Remark	QTY	KIT
1	576 01 98-01	CARBURETTOR	Hualong HQ-2, only option for US	1	
2	576 02 42-01	SCREW		2	1
4	576 02 36-01	COVER		1	1
5	576 02 24-01	DIAPHRAGM ASSY		1	1
6	576 02 30-01	SHAFT ASSY		1	1
7	576 02 41-01	SCREW		1	1
8	576 02 32-01	CHOKE		1	1
9	576 02 48-01	E-CLIP		1	1
10	576 02 31-01	LEVER		1	1
11	576 02 35-01	BUSHING		1	1
12	576 02 33-01	SPRING		1	1
14	576 02 01-01	VALVE		1	1
15	576 02 37-01	GASKET		1	1
16	576 02 03-01	PIN		1	1
17	576 02 04-01	LEVER		1	1
18	576 02 05-01	SPRING		1	1
19	576 02 06-01	PLUG		1	1
20	576 02 28-01	LEVER		1	1
21	576 02 29-01	BUSHING		1	1
22	576 02 07-01	MAIN NOZZLE		1	1
23	576 02 08-01	CHECK VALVE		1	1
24	576 02 43-01	SCREW		1	1
25	576 02 34-01	SPRING		1	1
26	576 02 47-01	BALL		1	1
27	576 02 23-01	BAR		1	1
28	576 02 10-01	NEEDLE		1	1
29	576 02 11-01	NEEDLE		1	1
30	576 02 15-01	SCREEN		1	1
31	576 02 27-01	SPRING		1	1
32	576 02 40-01	SCREW		1	1
33	576 02 26-01	THROTTLE		1	1
34	576 02 39-01	DIAPHRAGM PUMP		1	1
35	576 02 25-01	SHAFT ASSY		1	1
36	576 02 38-01	GASKET		1	1
37	576 02 20-01	COVER		1	1
38	576 02 22-01	SCREW		1	1
39	576 02 44-01	SCREW		1	1
40	581 74 35-01	GASKET KIT		1	1
41	581 74 37-01	REPAIR KIT		1	1

 K

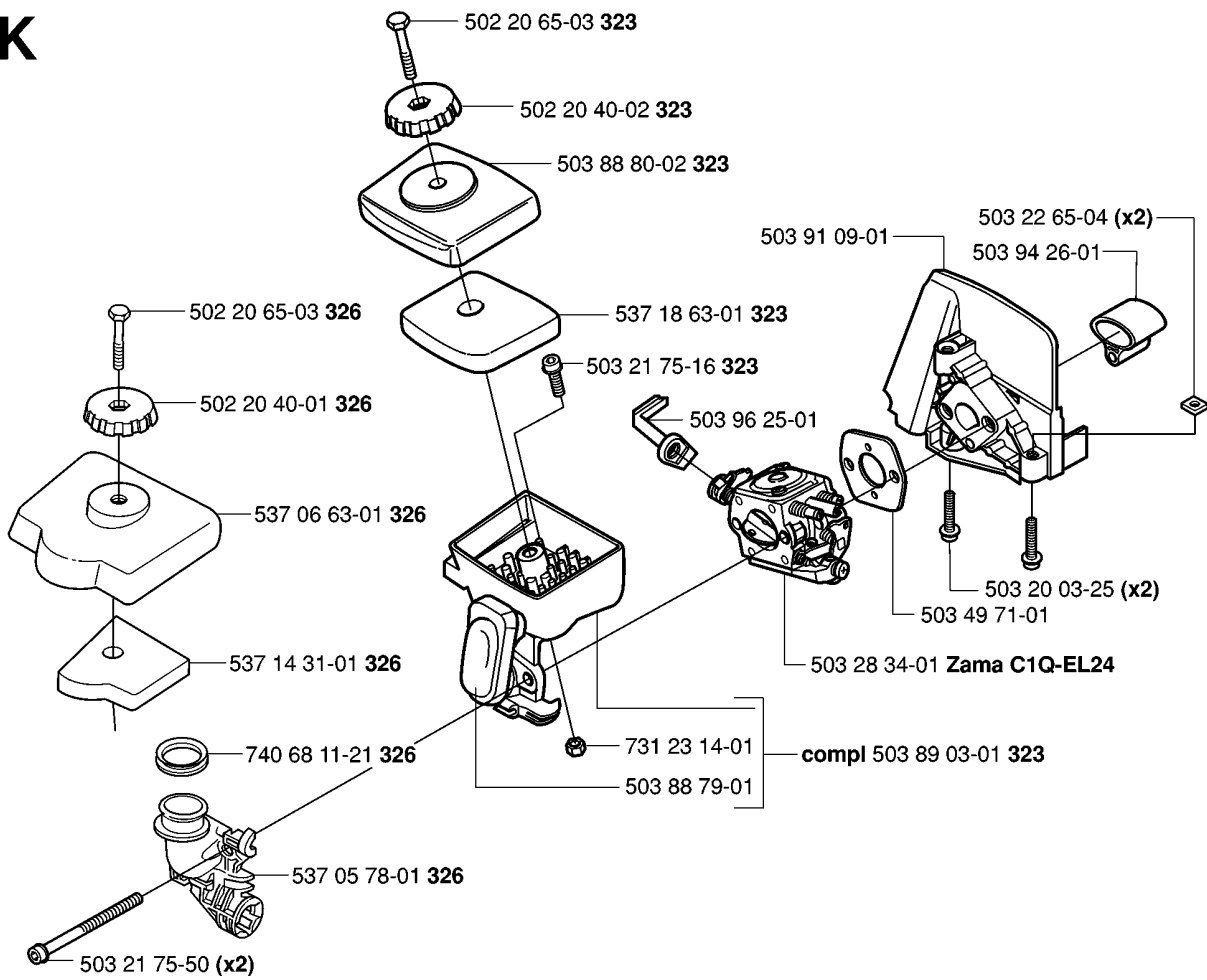


CARBURETOR & AIR FILTER

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
502 20 40-01	KNOB	326	1
502 20 40-02	KNOB	323	1
502 20 65-03	SCREW EHHM	326	1
502 20 65-03	SCREW EHHM	323	1
503 20 03-25	SCREW IHSCFM		2
503 21 75-16	SCREW IHSCFT	323	1
503 21 75-50	SCREW IHSCFT		2
503 22 65-04	SQUARE NUT		2
503 28 34-01	CARBURETTOR	ZAMA C1Q-EL24	1
503 49 71-01	GASKET		1
503 88 79-01	HUB CAP		1
503 88 80-02	FILTER COVER	323	1
503 89 03-01	FILTERBLOCK ASSY	323	1
503 91 09-01	INSULATION WALL		1
503 94 26-01	INLET PIPE		1
503 96 25-01	CHOKE CONTROL		1
537 05 78-01	BRACKET	326	1
537 06 63-01	FILTER COVER	326	1
537 14 31-01	AIR FILTER ASSY	326	1
537 18 63-01	AIR FILTER	323	1
731 23 14-01	HEXAGON NUT		1
740 68 11-21	V-RING	326	1

V compl 503 28 34-01 Zama C1Q-EL24
(Not for US)

 Zama C1Q-EL24

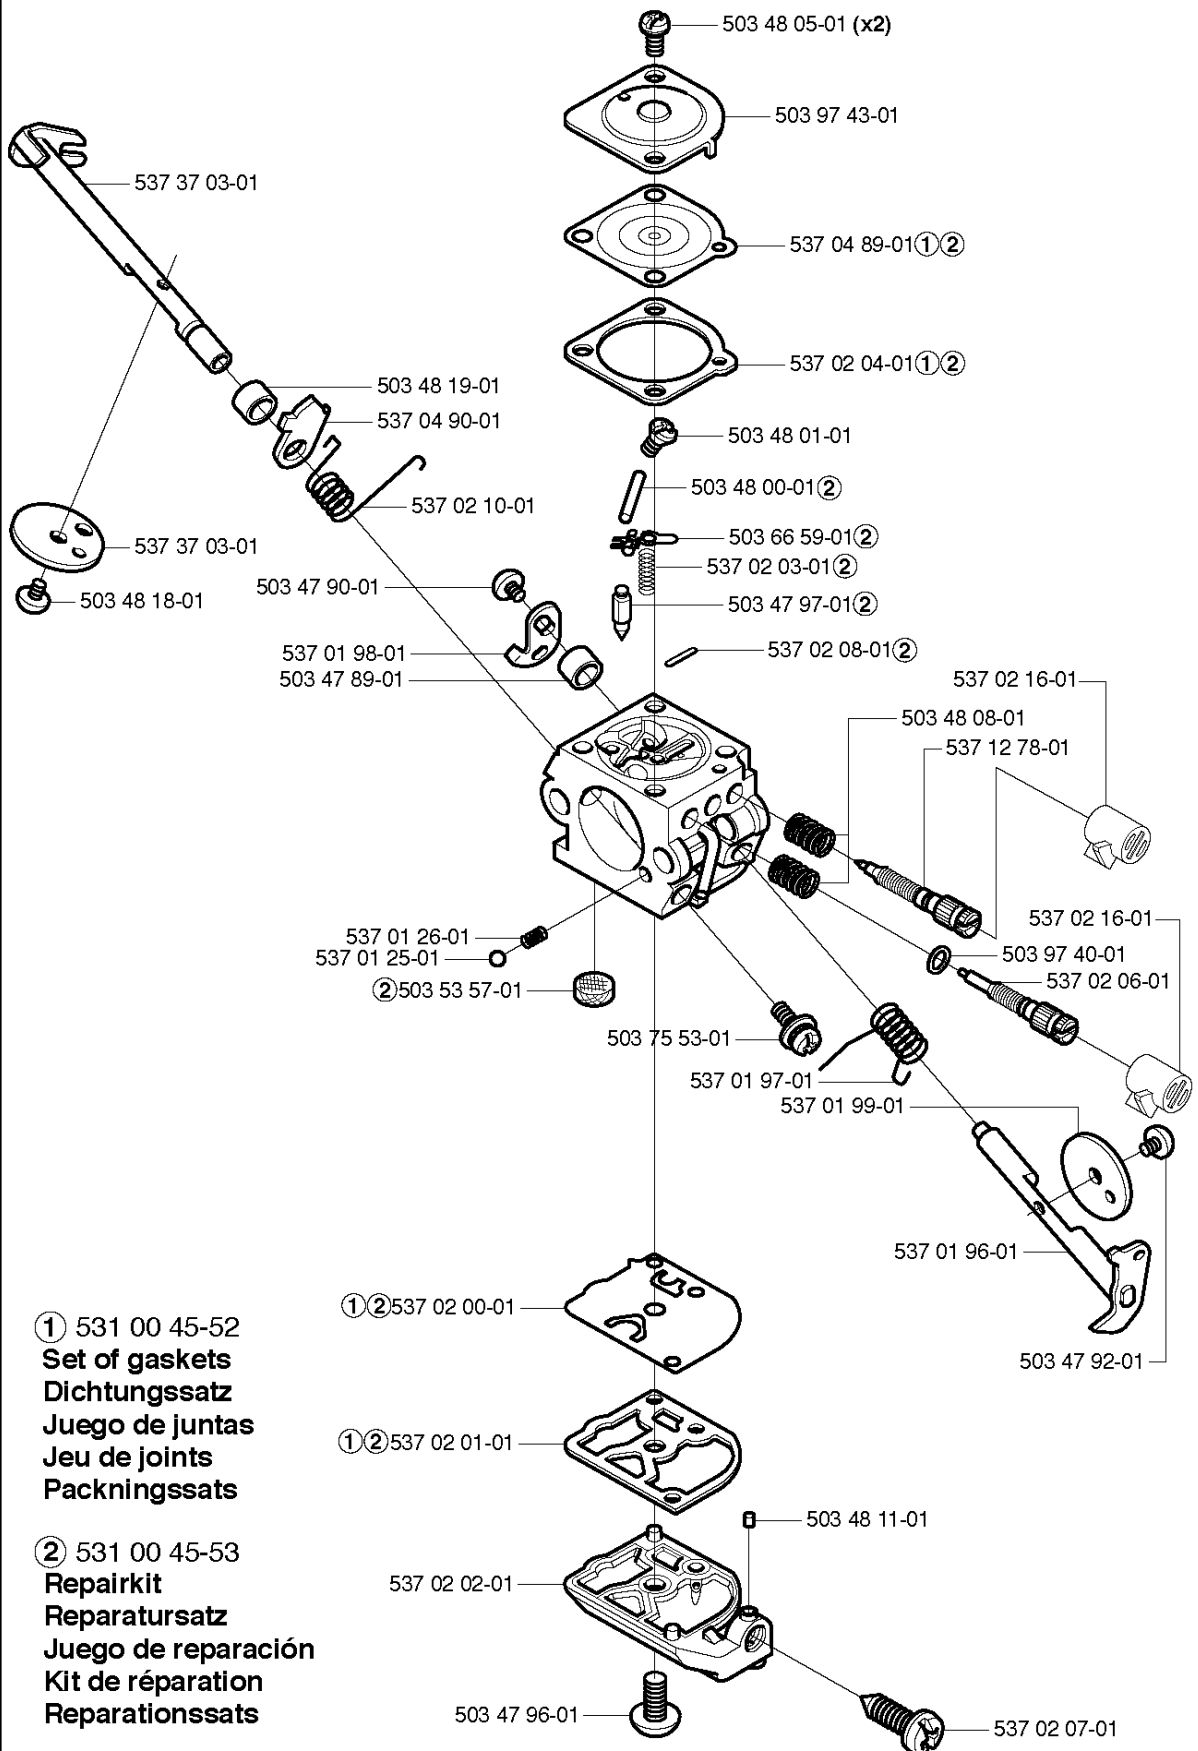


Part No	Description	Remark	QTY KIT
503 28 34-01	CARBURETTOR	ZAMA C1Q-EL24	1
503 47 89-01	COLLAR		1
503 47 90-01	SCREW		1
503 47 92-01	SCREW		1
503 47 96-01	SCREW		1
503 47 97-01	VALVE	531 00 45-53 REPAIRKIT	1
503 48 00-01	PIN RETAINING SCREW	531 00 45-53 REPAIRKIT	1
503 48 01-01	SCREW		1
503 48 05-01	SCREW		2
503 48 08-01	SPRING		1
503 48 11-01	PIECE		1
503 48 18-01	SCREW		1
503 48 19-01	COLLAR		1
503 53 57-01	STRAINER	531 00 45-53 REPAIRKIT	1
503 66 59-01	LEVER	531 00 45-53 REPAIRKIT	1
503 75 53-01	SCREW		1
503 97 40-01	WASHER		1
503 97 43-01	COVER		1
531 00 45-52	GASKET KIT		1
531 00 45-53	SET		1
537 01 25-01	BALL		1
537 01 26-01	SPRING		1
537 01 96-01	SHAFT ASSY		1
537 01 97-01	SPRING		1
537 01 98-01	LEVER		1
537 01 99-01	VALVE		1
537 02 00-01	DIAPHRAGM PUMP	531 00 45-52 SET OF GASKETS 531 00 45-53 REPAIRKIT	1
537 02 01-01	GASKET	531 00 45-52 SET OF GASKETS 531 00 45-53 REPAIRKIT	1
537 02 02-01	COVER		1
537 02 03-01	SPRING	531 00 45-53 REPAIRKIT	1
537 02 04-01	GASKET	531 00 45-52 SET OF GASKETS 531 00 45-53 REPAIRKIT	1
537 02 06-01	SCREW		1
537 02 07-01	SCREW		1
537 02 08-01	PLUG	531 00 45-53 REPAIRKIT	1
537 02 10-01	SPRING		1
537 02 16-01	LIMITER CAP		1
537 02 16-01	LIMITER CAP		1
537 04 89-01	DIAPHRAGM	531 00 45-52 SET OF GASKETS 531 00 45-53 REPAIRKIT	1
537 04 90-01	LEVER		1
537 12 78-01	SCREW		1
537 37 03-01	VALVE		1
537 37 03-01	VALVE		1

S

323

 *compl 537 04 11-02
**compl 537 04 12-03
***compl 537 30 96-01

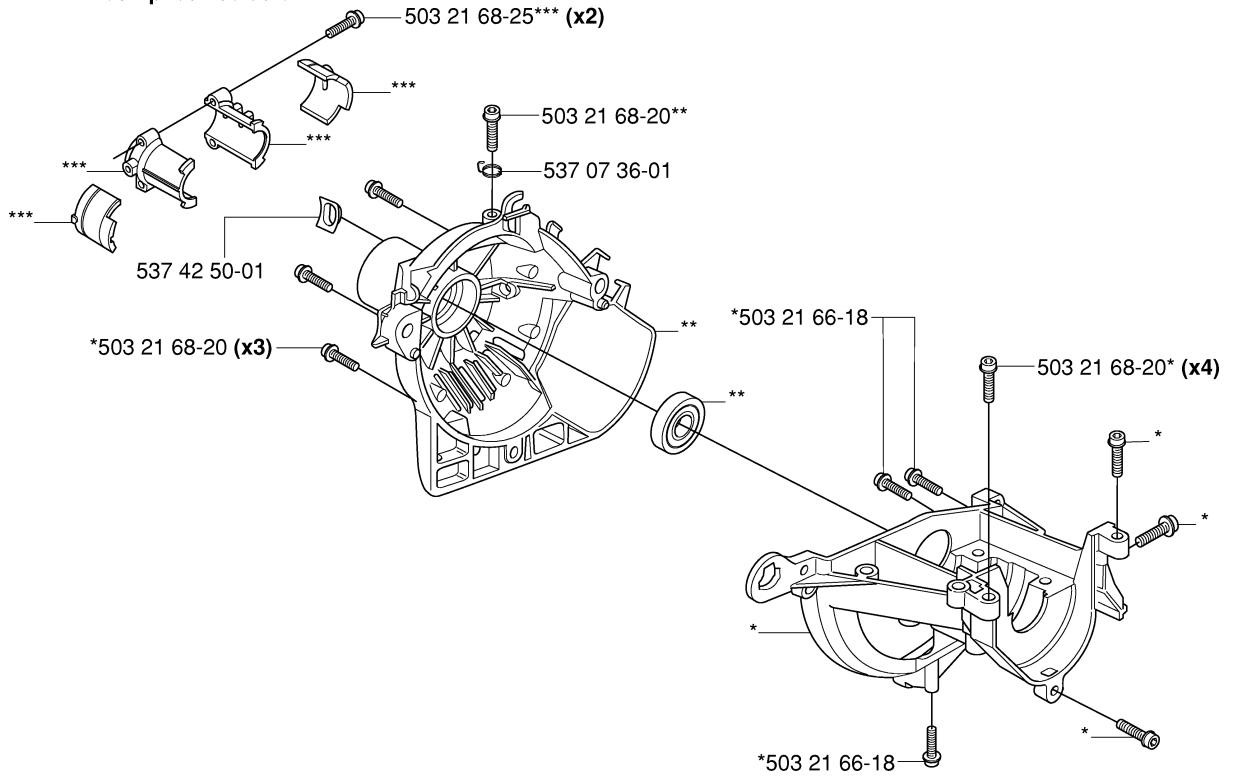

CRANKCASE

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 66-18	SCREW IHSCCT		1
503 21 66-18	SCREW IHSCCT		1
503 21 68-20	SCREW IHSCFT		3
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		4
503 21 68-25	SCREW IHSCFT		2
537 04 11-02	CRANKCASE		1
537 04 12-03	CLUTCH COVER		1
537 04 12-05	CLUTCH COVER		1
537 06 68-01	INSERT CRANKCASE		1
537 06 69-01	GASKET CRANKCASE		1
537 07 36-01	SPRING		1
537 08 52-01	CRANKCASE	326	1
537 08 85-01	GASKET		1
537 30 96-01	COMPRESSION SLEEVE		1
537 42 50-01	PROTECTIVE PLATE		1

 
Q

326

***compl** 537 08 52-01

****compl** 537 04 12-05

*****compl** 537 30 96-01

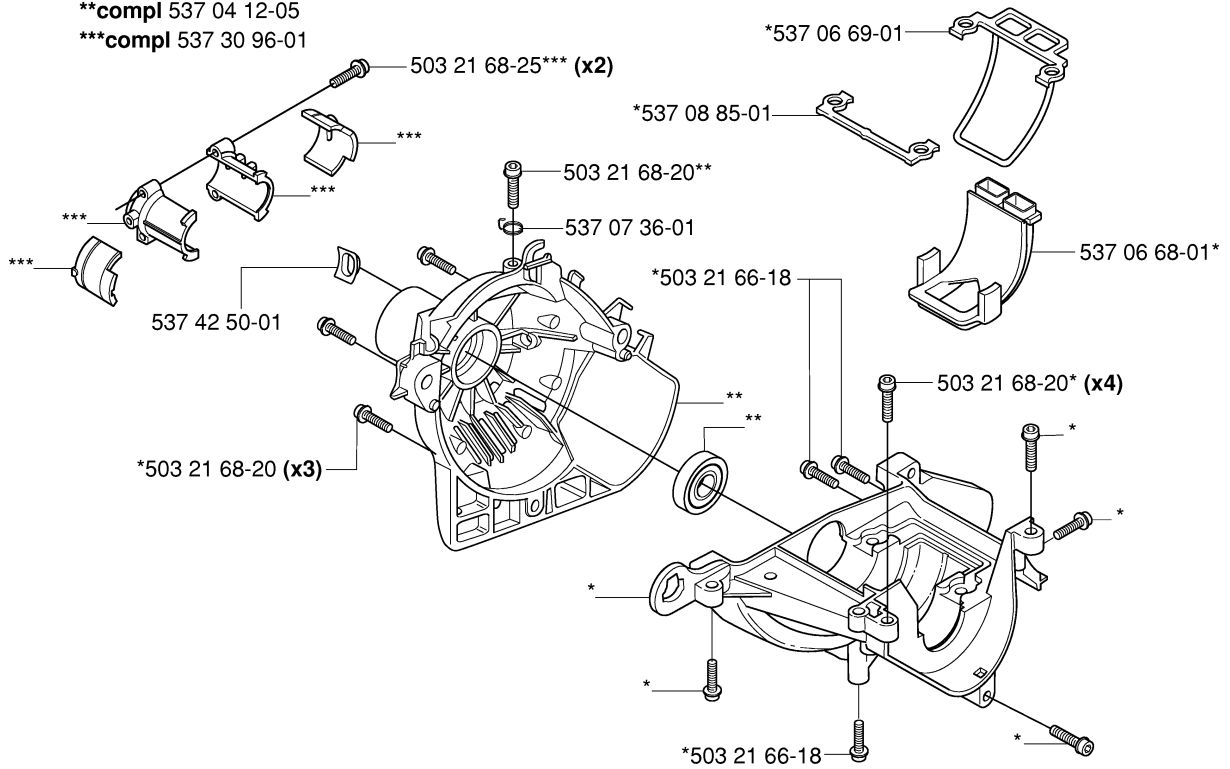


CRANKCASE

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 66-18	SCREW IHSCCT		1
503 21 66-18	SCREW IHSCCT		1
503 21 68-20	SCREW IHSCFT		3
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		4
503 21 68-25	SCREW IHSCFT		2
537 04 12-05	CLUTCH COVER		1
537 06 68-01	INSERT CRANKCASE		1
537 06 69-01	GASKET CRANKCASE		1
537 07 36-01	SPRING		1
537 08 52-01	CRANKCASE	326	1
537 08 85-01	GASKET		1
537 30 96-01	COMPRESSION SLEEVE		1
537 42 50-01	PROTECTIVE PLATE		1

 T *compl 503 85 24-74 (326)
**compl 503 85 24-75 (323)

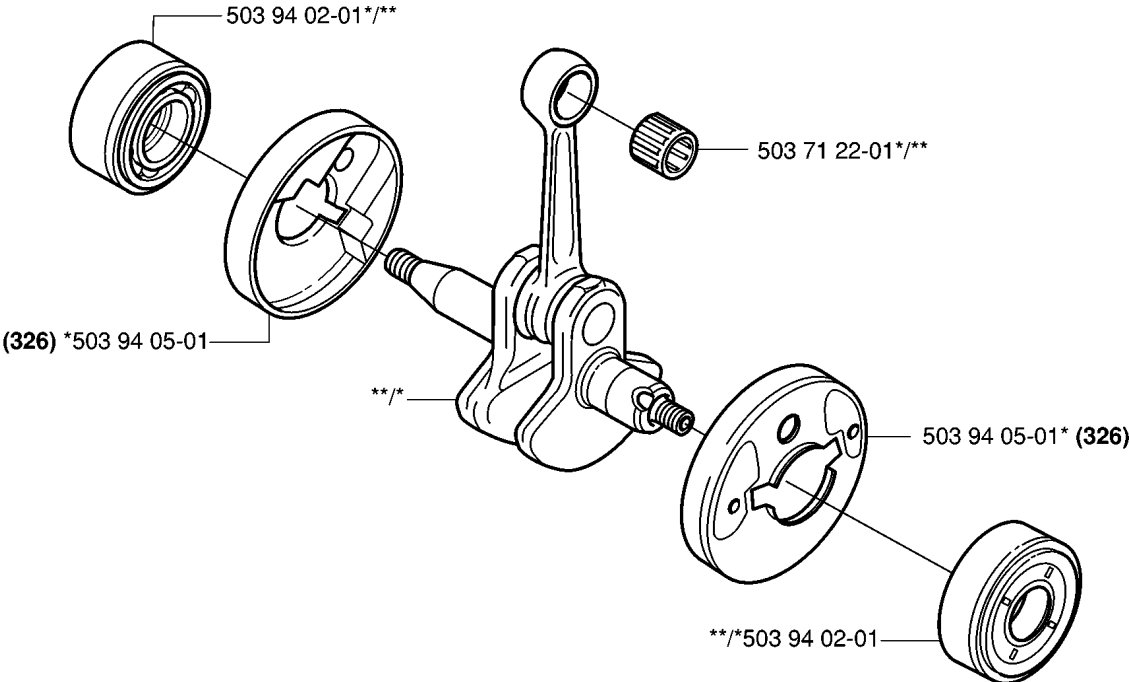


CRANKSHAFT

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 71 22-01	BEARING		1
503 85 24-74	CRANKSHAFT ASSY	326	1
503 85 24-75	CRANKSHAFT ASSY	323	1
503 94 02-01	BEARING CAGE		1
503 94 02-01	BEARING CAGE		1
503 94 05-01	CUP	326	1
503 94 05-01	CUP	326	1

 J 326C, L, Lx, LDx, RX, RJx

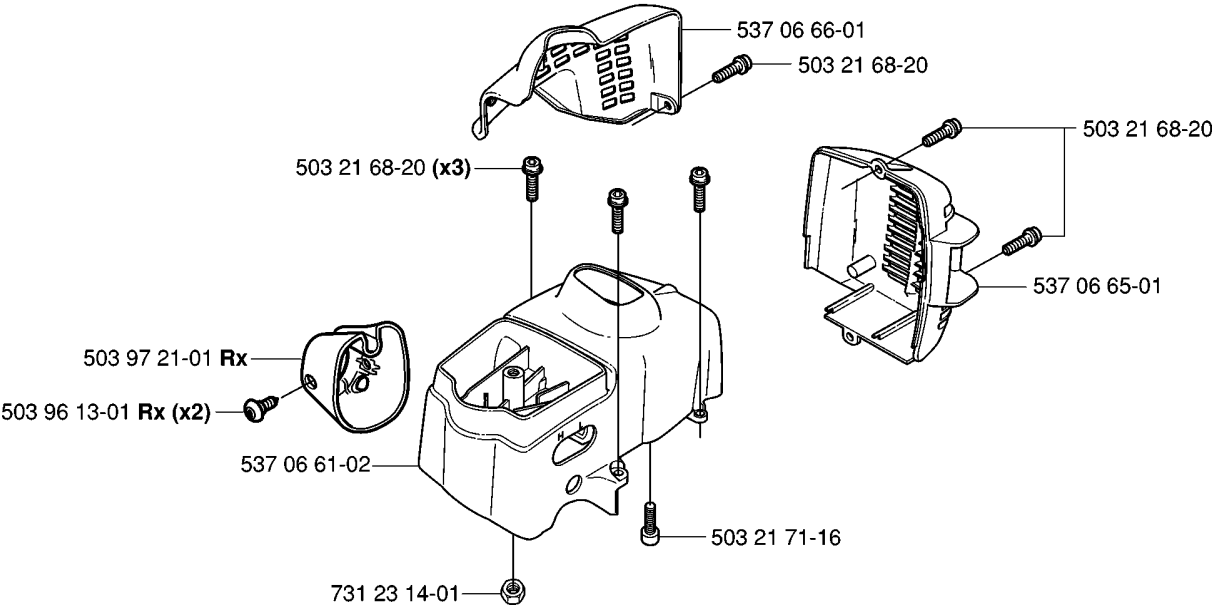


CYLINDER COVER

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 68-20	SCREW IHSCFT	326C, L, LX, LDX, RX, RJX 3	
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		1
503 21 71-16	SCREW IHSCFT		1
503 96 13-01	SCREW	RX	2
503 97 21-01	COVER	RX	1
537 06 61-02	CYLINDER COVER		1
537 06 65-01	HEAT PROTECTOR		1
537 06 66-01	ARM PROTECTION		1
731 23 14-01	HEXAGON NUT		1

 H 323L, R

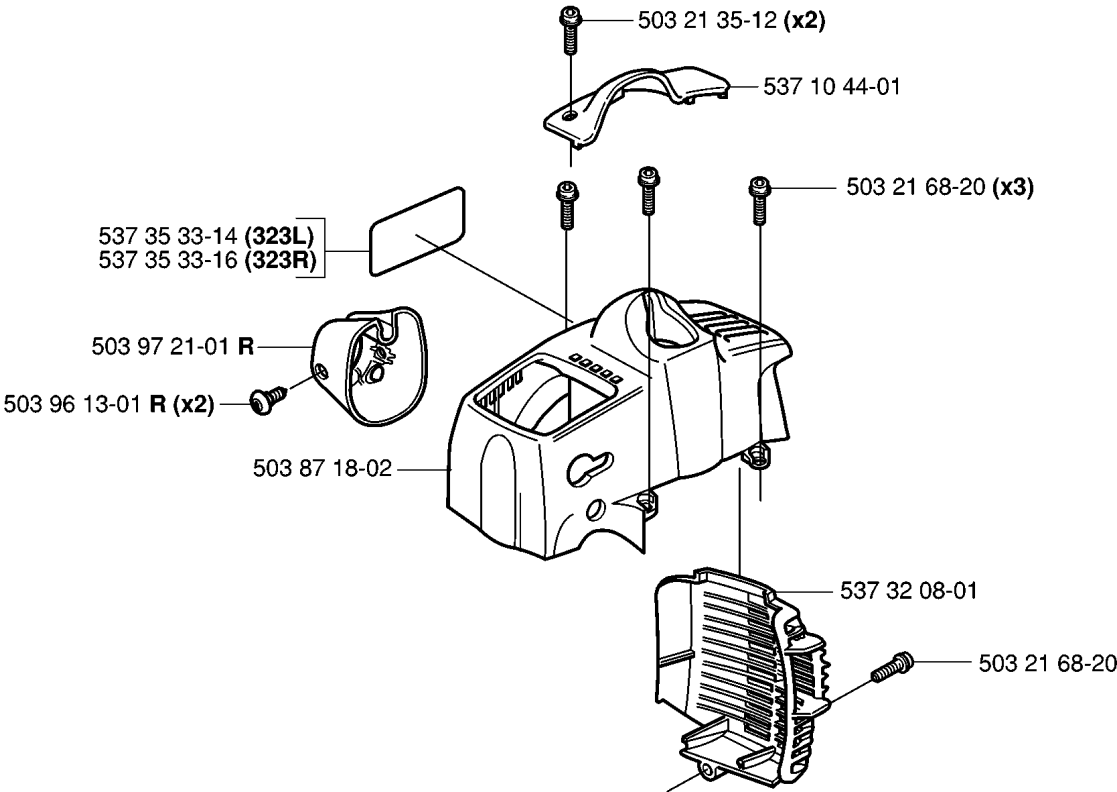


CYLINDER COVER

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 35-12	SCREW CCRPANT		2
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		3
503 87 18-02	CYLINDER COVER		1
503 96 13-01	SCREW	R	2
503 97 21-01	COVER	R	1
537 10 44-01	ARM PROTECTION		1
537 32 08-01	HEAT PROTECTOR		1
537 35 33-14	LABEL	323L	1
537 35 33-16	LABEL	323R	1

 P 326
*compl 537 08 51-02

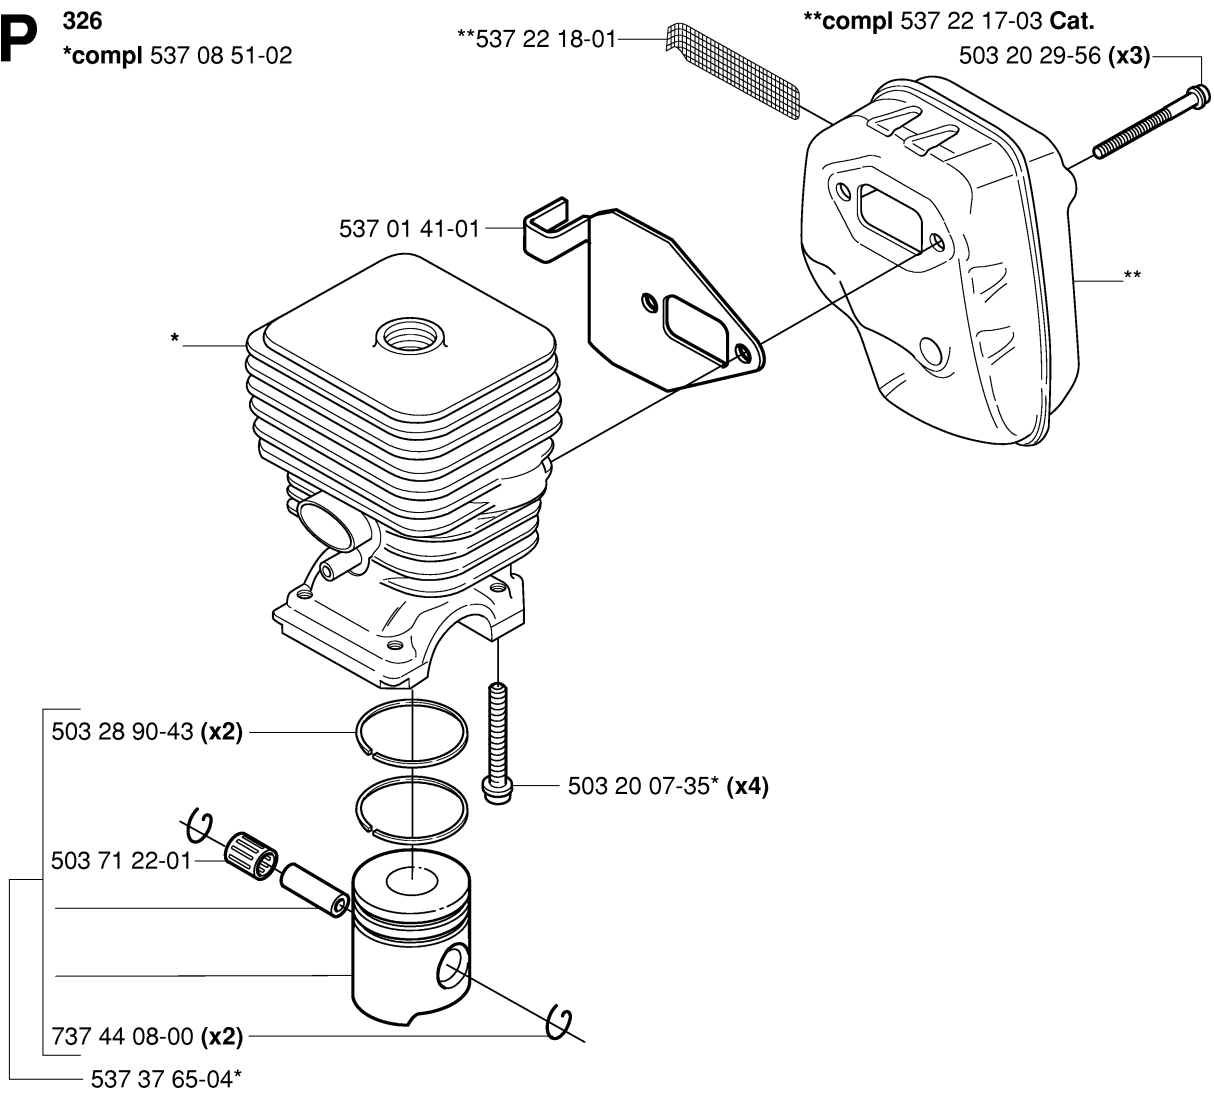


CYLINDER, PISTON & MUFFLER

326 RX, 2006-04

Ref	Part No	Description	Remark	QTY KIT
503 20 07-35	503 20 07-35	SCREW IHSCFM		1
503 20 29-56	503 20 29-56	SCREW IHSCFM		1
537 03 20-08	537 03 20-08	CYLINDER	323	1
503 28 90-43	503 28 90-43	PISTON RING		2
737 44 08-00	737 44 08-00	CIRCLIP		2
503 71 22-01	503 71 22-01	BEARING		1
537 08 51-02	503 20 29-56	SCREW IHSCFM		1
537 37 65-04	537 37 65-04	PISTON		1
537 22 17-03	537 22 17-03	MUFFLER ASSY		1
725 53 37-55	725 53 37-55	SCREW IHSCM		4
537 01 41-01	537 01 41-01	GASKET		1
537 22 18-01	537 22 18-01	SPARK ARRESTER SCREEN		1
503 20 29-50	503 20 29-50	SCREW IHSCFM		2
503 87 17-01	503 87 17-01	SPARK ARRESTER SCREEN	CAT.	1
537 03 94-05	537 03 94-05	MUFFLER ASSY	CAT.	1

 R 323
*compl 537 03 20-08

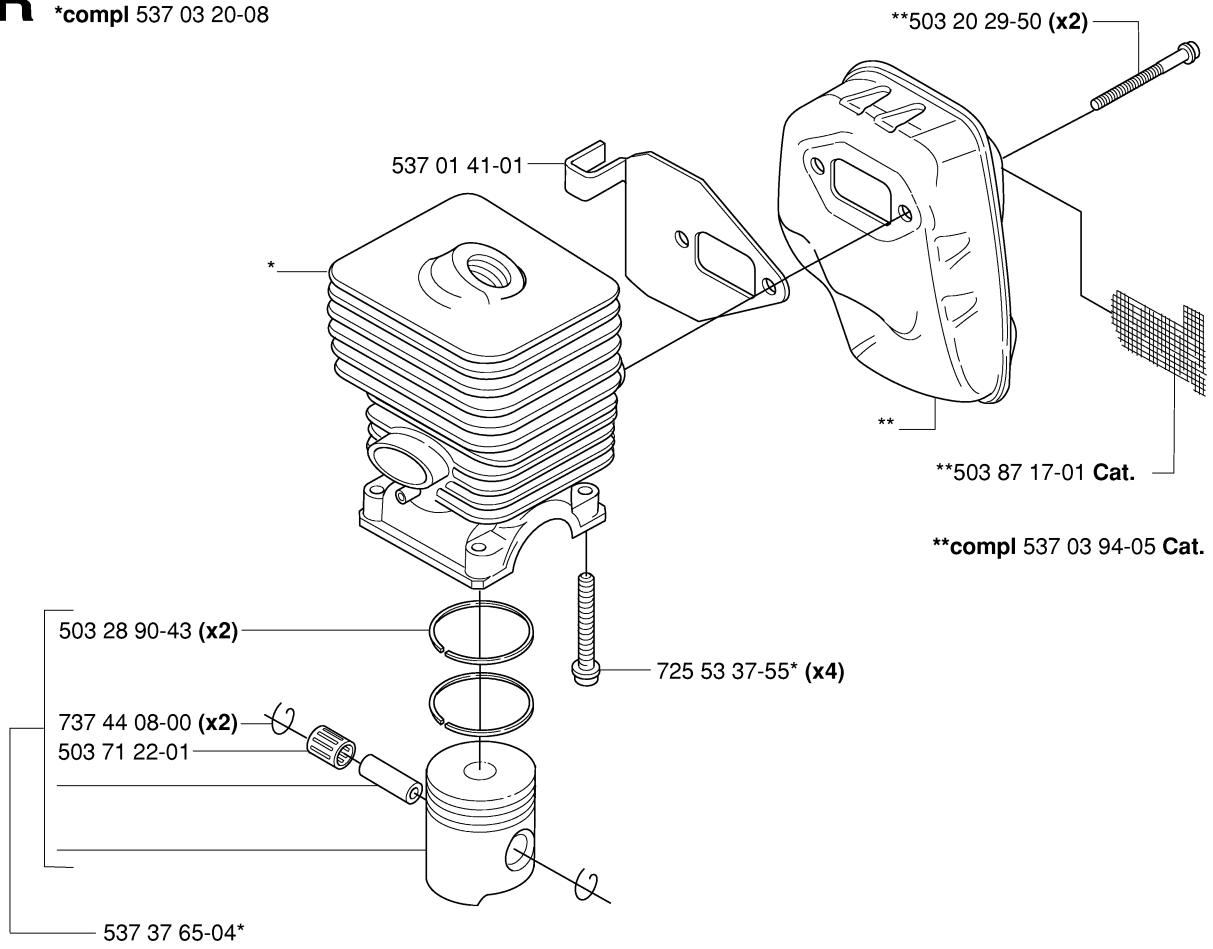


CYLINDER, PISTON & MUFFLER

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 20 07-35	SCREW IHSCFM		4
503 20 29-50	SCREW IHSCFM		1
503 20 29-56	SCREW IHSCFM		3
503 28 90-43	PISTON RING		2
503 71 22-01	BEARING		1
503 87 17-01	SPARK ARRESTER SCREEN		1
537 01 41-01	GASKET		1
537 03 20-08	CYLINDER		1
537 03 94-05	MUFFLER ASSY		1
537 08 51-02	PISTON	326	1
537 22 17-03	MUFFLER ASSY	CAT.	1
537 22 18-01	SPARK ARRESTER SCREEN		1
537 37 65-04	PISTON		1
725 53 37-55	SCREW IHSCM		1
737 44 08-00	CIRCLIP		2

 
M *compl 537 06 86-02

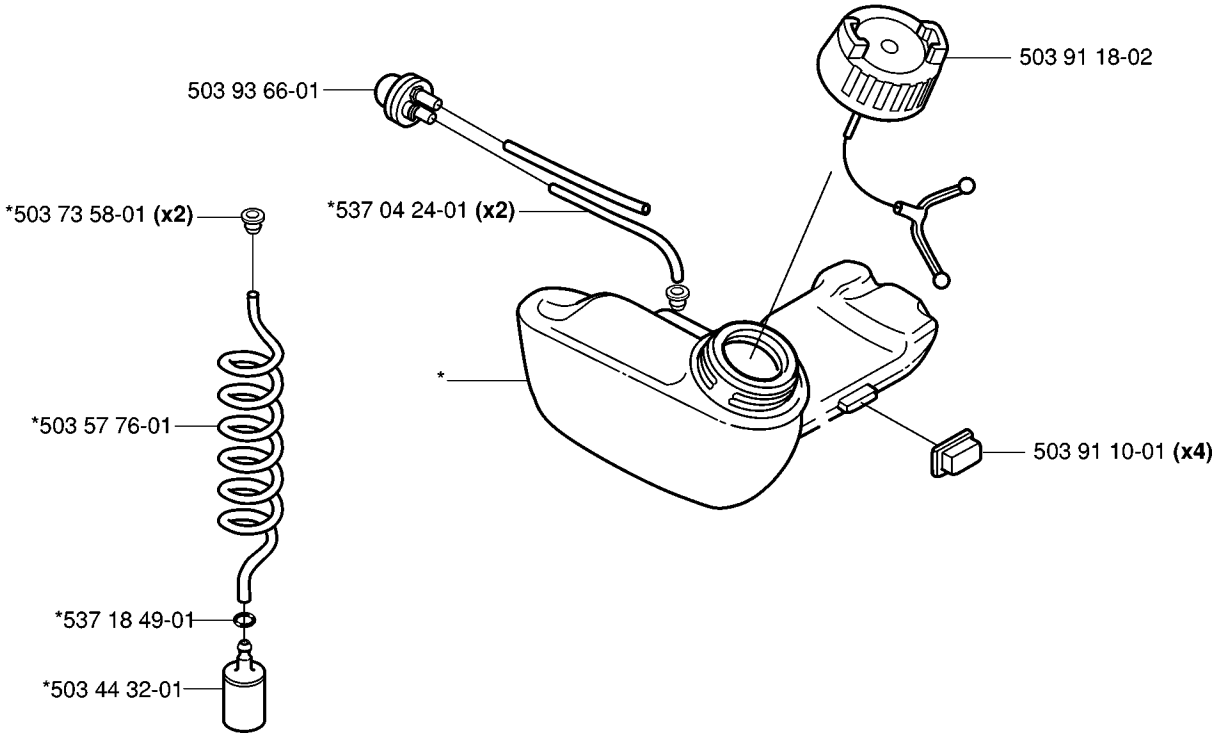

FUEL TANK

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 44 32-01	FILTER		1
503 57 76-01	FUEL HOSE		1
503 73 58-01	BUSHING		2
503 91 10-01	SUSPENSION		4
503 91 18-02	TANK CAP		1
503 93 66-01	PRIMER HOUSING		1
537 04 24-01	FUEL HOSE		2
537 06 86-02	FUEL TANK		1
537 18 49-01	O-RING		1

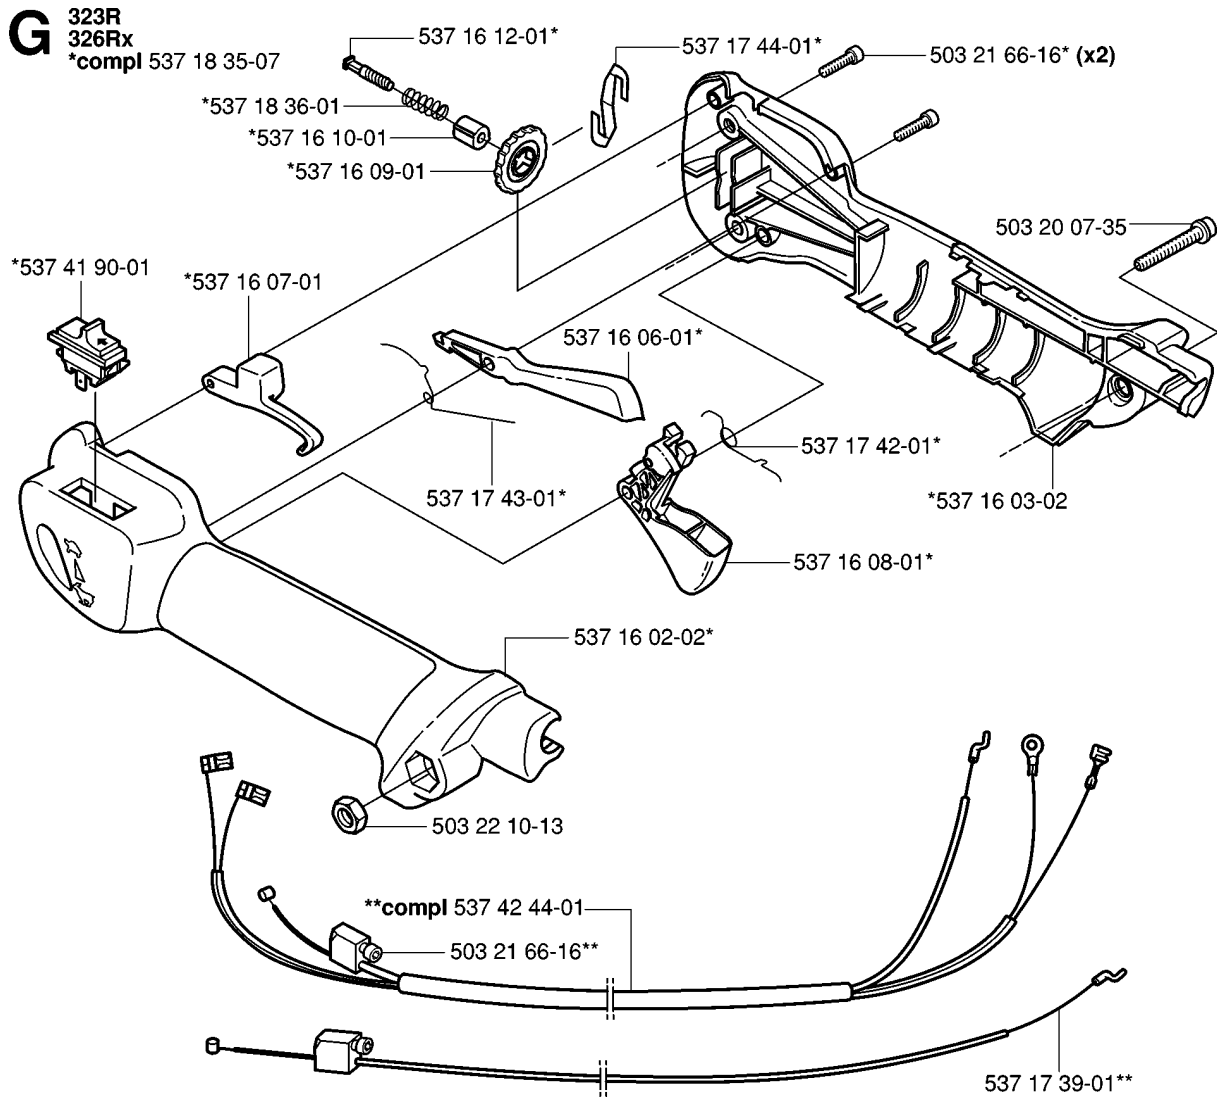 


HANDLE & CONTROLS

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 20 07-35	SCREW IHSCFM		1
503 21 66-16	SCREW IHSCT		1
503 21 66-16	SCREW IHSCT		2
503 22 10-13	HEXAGON NUT		1
537 16 02-02	HANDLE HALF	Replaced by 537 18 35-07 HANDLE SYSTEM cpl	1
537 16 02-09	HANDLE HALF	Without hole for Steering wheel assy	1
537 16 03-02	HANDLE HALF		1
537 16 06-01	THROTTLE LOCKOUT		1
537 16 07-01	STARTER THROTTLE LOC		1
537 16 08-01	THROTTLE TRIGGER		1
537 16 09-01	STEERING WHEEL	Does not fit with HANDLE HALF 537 16 02-09	1
537 16 10-01	HUB	Does not fit with HANDLE HALF 537 16 02-09	1
537 16 12-01	SCREW	Does not fit with HANDLE HALF 537 16 02-09	1
537 17 39-01	THROTTLE WIRE ASSY		1
537 17 42-01	SPRING THROTTLE TRIG		1
537 17 43-01	SPRING		1
537 17 44-01	SPRING	Does not fit with HANDLE HALF 537 16 02-09	1
537 18 35-07	HANDLE SYSTEM	323R 326RX	1
537 18 36-01	SPRING	Does not fit with HANDLE HALF 537 16 02-09	1
537 41 90-01	SWITCH		1
537 42 44-01	WIRING ASSY		1

 Y Duo Balance
*compl 537 27 57-01
*compl 537 27 57-03 US

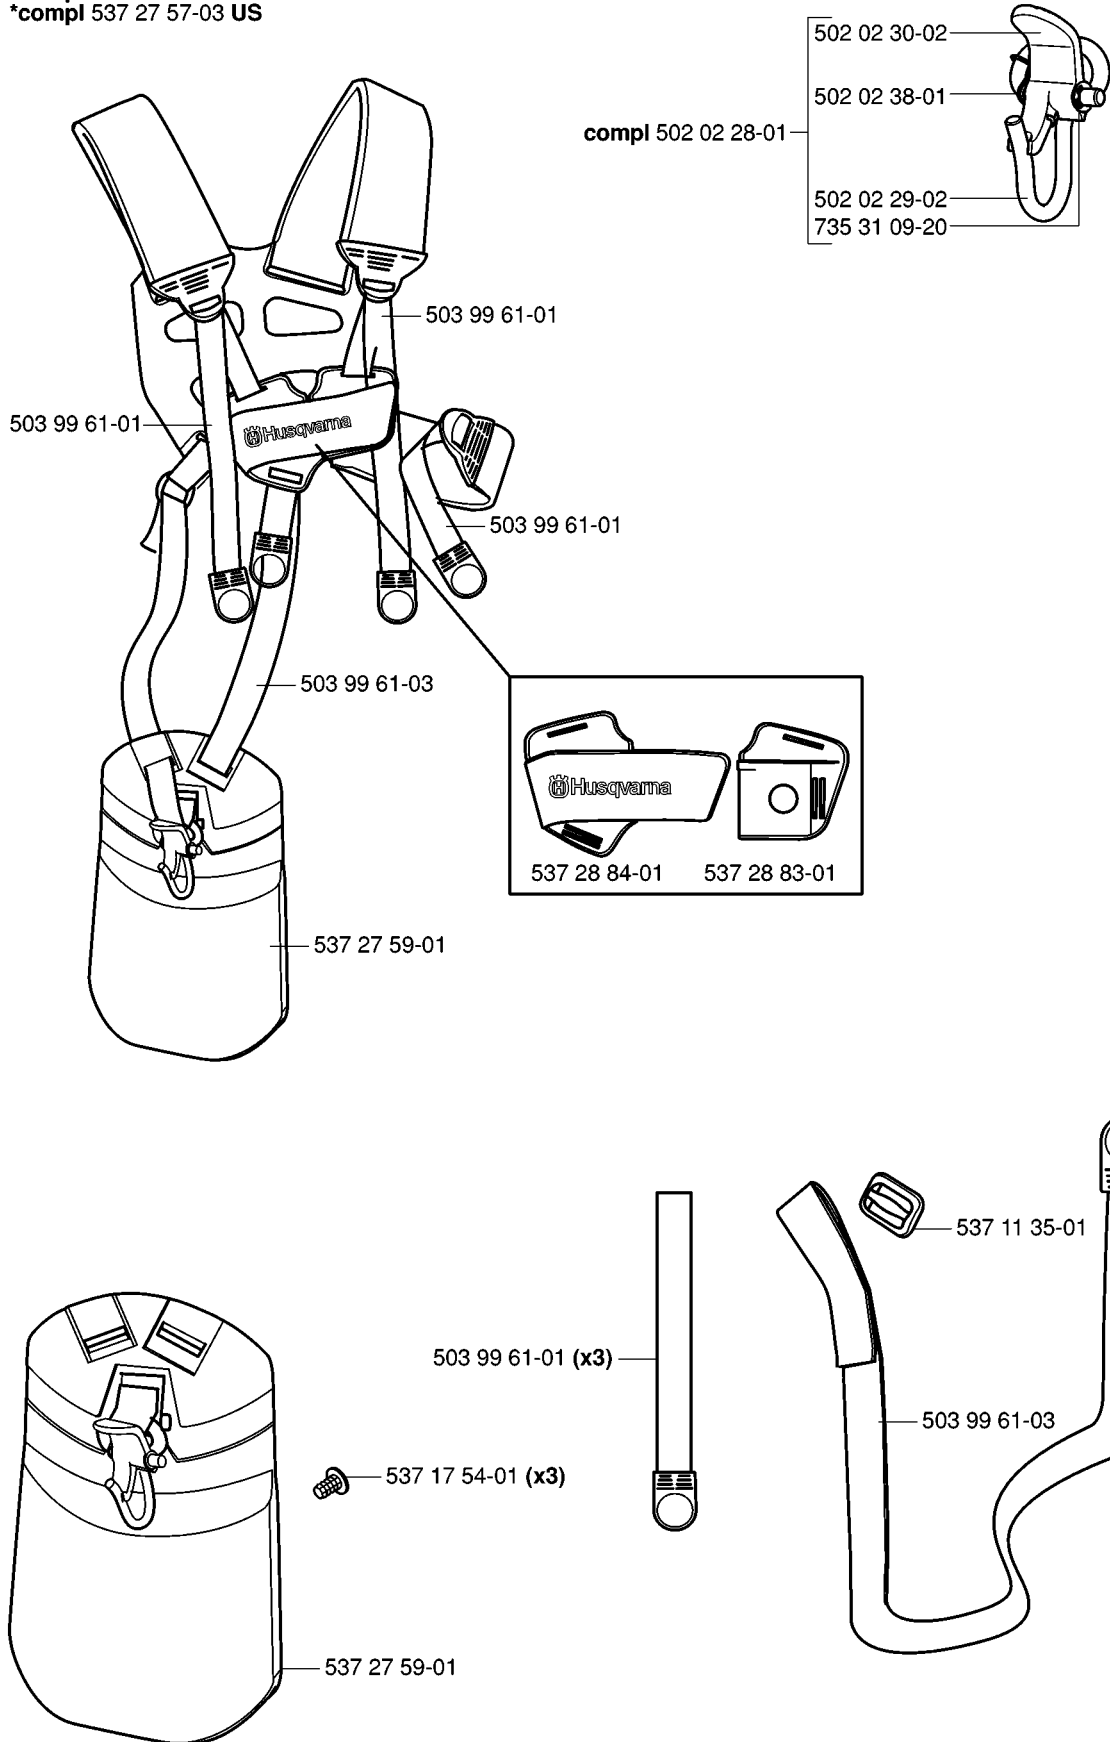


HARNESS

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
502 02 28-01	HARNESS		1
502 02 29-02	HARNESS		1
502 02 30-02	HARNESS		1
502 02 38-01	HARNESS		1
503 99 61-01	HARNESS		1
503 99 61-01	HARNESS		3
503 99 61-01	HARNESS		1
503 99 61-01	HARNESS		1
503 99 61-03	BAND		1
503 99 61-03	BAND		1
537 11 35-01	RETAINER		1
537 17 54-01	HARNESS		3
537 27 57-01	HARNESS	DUO BALANCE	1
537 27 57-03	HARNESS	US	1
537 27 59-01	HIP PAD		1
537 27 59-01	HIP PAD		1
537 28 83-01	FRONT PIECE		1
537 28 84-01	FRONT PIECE		1
735 31 09-20	HARNESS		1

N *compl 537 41 87-01

 **compl 537 06 33-02 (326)


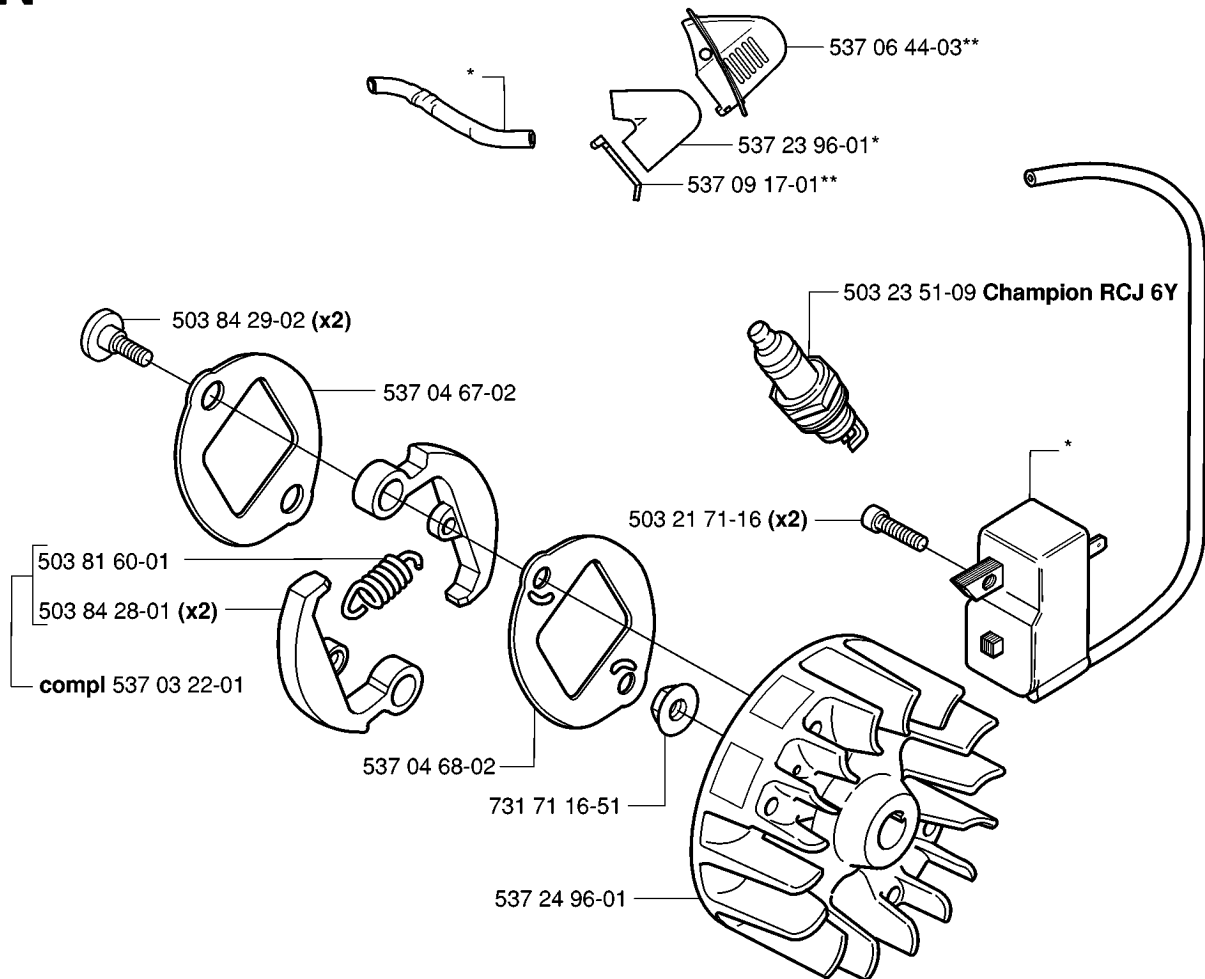


IGNITION SYSTEM

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 71-16	SCREW IHSCT		2
503 23 51-09	SPARK PLUG	CHAMPION RCJ 6Y	1
503 81 60-01	CLUTCH SPRING		1
503 84 28-01	CLUTCH SHOE		2
503 84 29-02	SCREW		2
537 03 22-01	CLUTCH ASSY		1
537 04 67-02	WASHER		1
537 04 68-02	WASHER		1
537 06 33-02	COVER	326	1
537 06 44-03	COVER		1
537 09 17-01	SECURING PLATE		1
537 23 96-01	SPARK PLUG CAP		1
537 24 96-01	FLYWHEEL		1
537 41 87-01	ELECTRONIC MODULE		1
731 71 16-51	HEXAGON NUT FLANGE		1

  D 326LDx
*compl 537 07 99-01

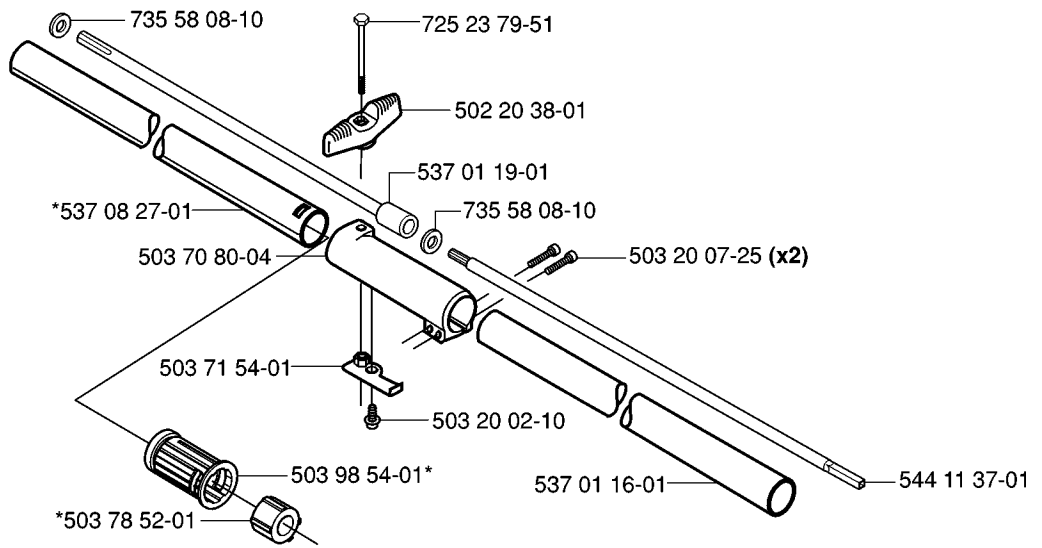

537 29 48-01



503 79 56-01


SHAFT

326 RX, 2006-04



Part No	Description	Remark	QTY KIT
502 20 38-01	KNOB		1
503 20 02-10	SCREW IHSCFM		1
503 20 07-25	SCREW IHSCFM		2
503 70 80-04	COMPRESSION SLEEVE		1
503 71 54-01	LOCKING PLATE		1
503 78 52-01	SUPPORTING BEARING		1
503 79 56-01	LABEL		1
503 98 54-01	BEARING CAGE		1
537 01 16-01	TUBE		1
537 01 19-01	DRIVE SHAFT		1
537 07 99-01	TUBE	326LDX	1
537 08 27-01	TUBE		1
537 29 48-01	LABEL		1
544 11 37-01	DRIVE SHAFT ASSY		1
725 23 79-51	SCREW EHHM		1
735 58 08-10	LOCKWASHER		1
735 58 08-10	LOCKWASHER		1

E 323R
326Rx
*compl 503 72 43-09

 326Rx

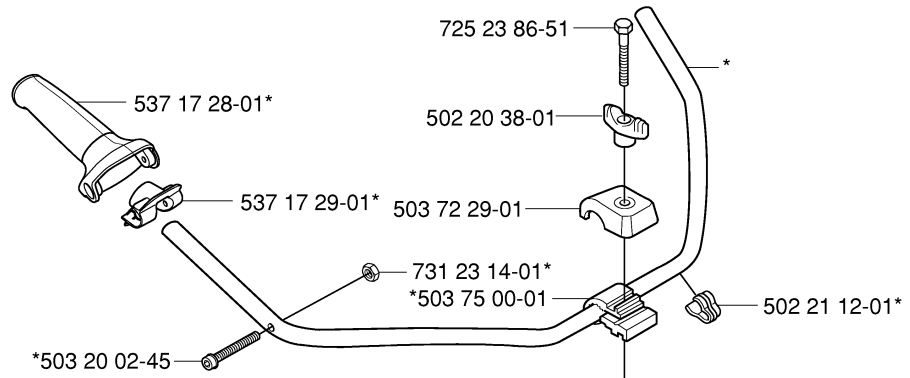

323R

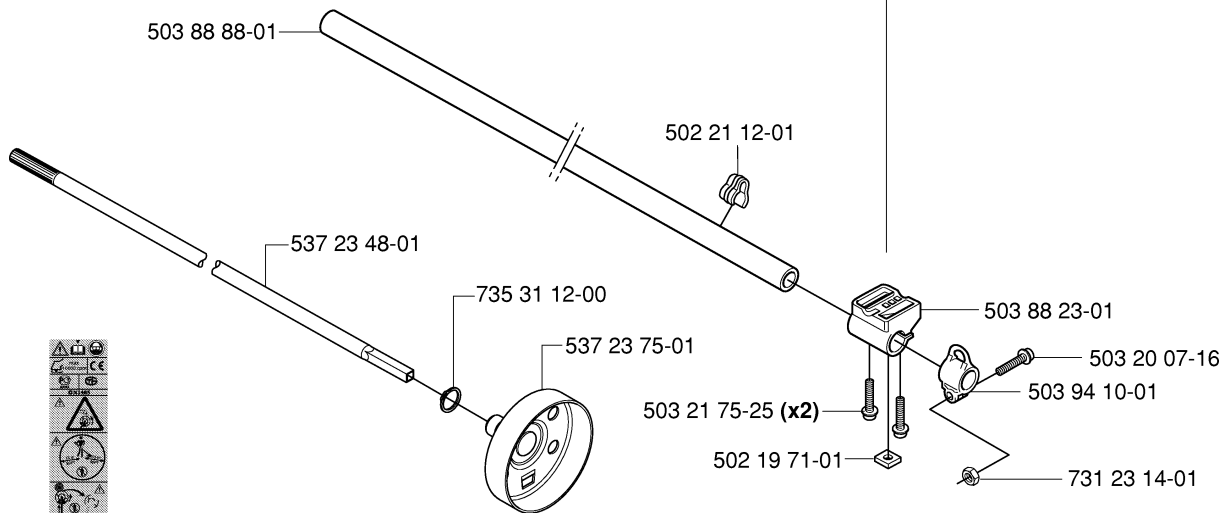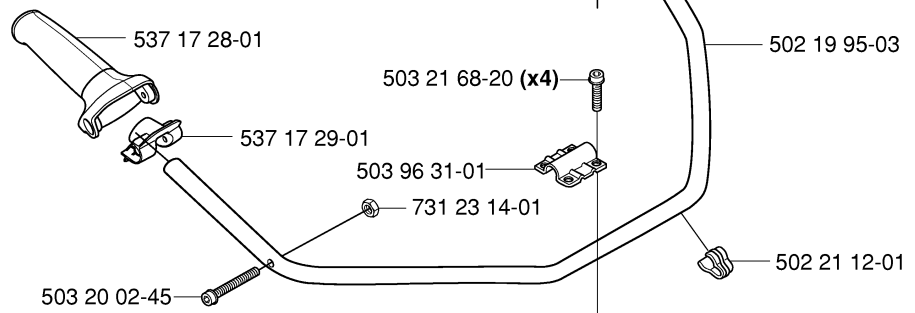  


537 29 48-01

SHAFT & HANDLE

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
502 19 71-01	SQUARE NUT		1
502 19 95-03	HANDLEBAR		1
502 20 38-01	KNOB		1
502 21 12-01	STAPLE		1
502 21 12-01	STAPLE		1
502 21 12-01	STAPLE		1
503 20 02-45	SCREW IHSCFM		1
503 20 02-45	SCREW IHSCFM		1
503 20 07-16	SCREW IHSCFM		1
503 21 68-20	SCREW IHSCFT		4
503 21 75-25	SCREW IHSCFT		2
503 72 29-01	COVER		1
503 72 43-09	HANDLEBAR	323R 326RX	1
503 75 00-01	HANDLEBAR BRACKET		1
503 88 23-01	BRACKET		1
503 88 88-01	TUBE		1
503 94 10-01	HOOK		1
503 96 31-01	BRACKET		1
537 17 28-01	HANDLE		1
537 17 28-01	HANDLE		1
537 17 29-01	COVER		1
537 17 29-01	COVER		1
537 23 48-01	DRIVE SHAFT		1
537 23 75-01	CLUTCH DRUM ASSY		1
537 29 48-01	LABEL		1
725 23 86-51	SCREW EHHM		1
731 23 14-01	HEXAGON NUT		1
731 23 14-01	HEXAGON NUT		1
731 23 14-01	HEXAGON NUT		1
735 31 12-00	CIRCLIP		1

 C 323L
326L, Lx
326RJx


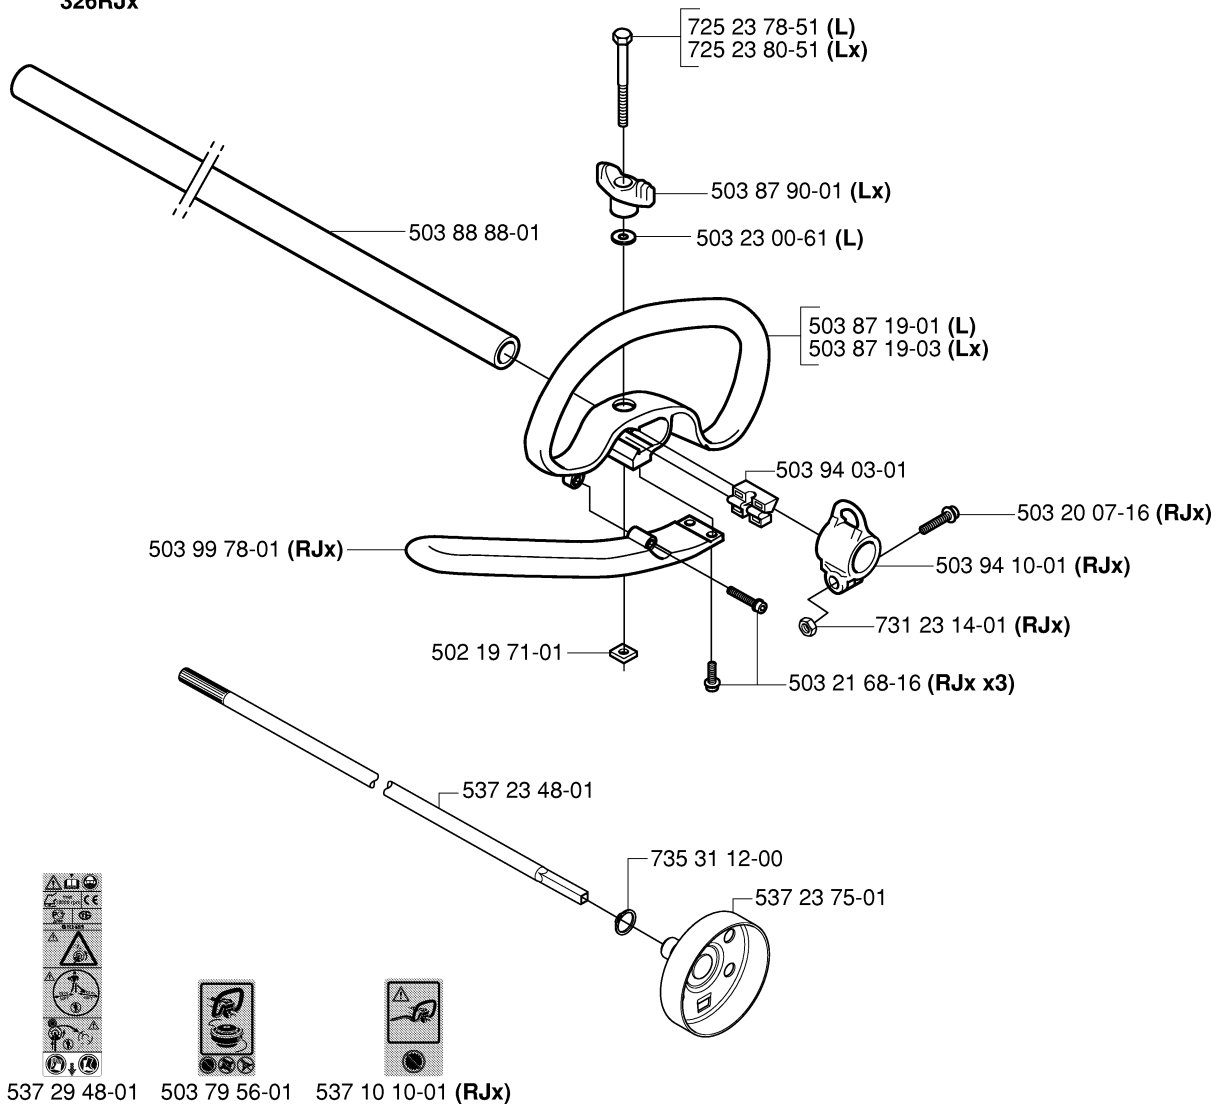


SHAFT & HANDLE

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
502 19 71-01	SQUARE NUT		1
503 20 07-16	SCREW IHSCFM	RJX	1
503 21 68-16	SCREW IHSCF	RJX	3
503 23 00-61	WASHER	L	1
503 79 56-01	LABEL		1
503 87 19-01	HANDLE.LOOP	L	1
503 87 19-03	HANDLE	LX	1
503 87 90-01	KNOB	LX	1
503 88 88-01	TUBE		1
503 94 03-01	DISTANCE		1
503 94 10-01	HOOK	RJX	1
503 99 78-01	HANDLE	RJX	1
537 10 10-01	LABEL	RJX	1
537 23 48-01	DRIVE SHAFT		1
537 23 75-01	CLUTCH DRUM ASSY		1
537 29 48-01	LABEL	323L 326L, LX 326RJX	1
725 23 78-51	SCREW EHHM	L	1
725 23 80-51	SCREW EHHM	LX	1
731 23 14-01	HEXAGON NUT	RJX	1
735 31 12-00	CIRCLIP		1

  
B 326C

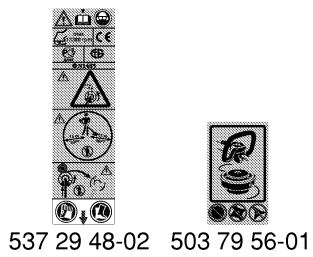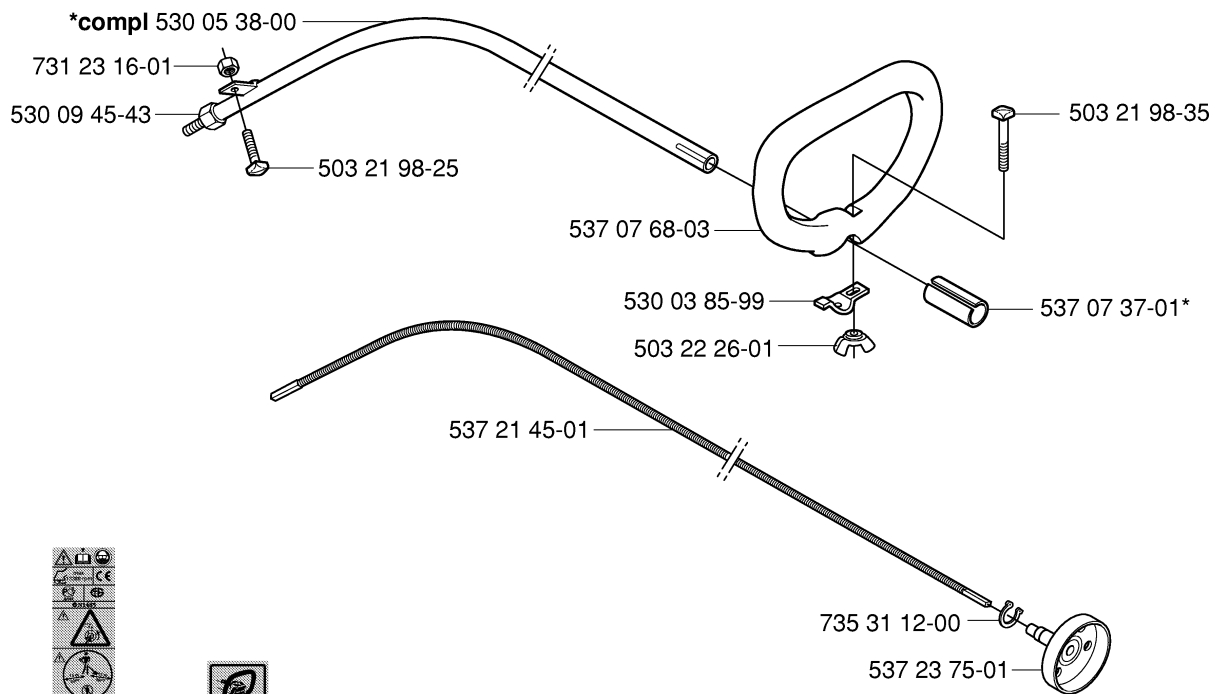

SHAFT & HANDLE

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 98-25	SCREW		1
503 21 98-35	SCREW		1
503 22 26-01	NUT		1
503 79 56-01	LABEL		1
530 03 85-99	BRACKET		1
530 05 38-00	SHAFT		1
530 09 45-43	DRIVER		1
537 07 37-01	SPACING TUBE		1
537 07 68-03	HANDLE		1
537 21 45-01	DRIVE SHAFT		1
537 23 75-01	CLUTCH DRUM ASSY		1
537 29 48-02	LABEL	326C	1
731 23 16-01	HEXAGON NUT		1
735 31 12-00	CIRCLIP		1

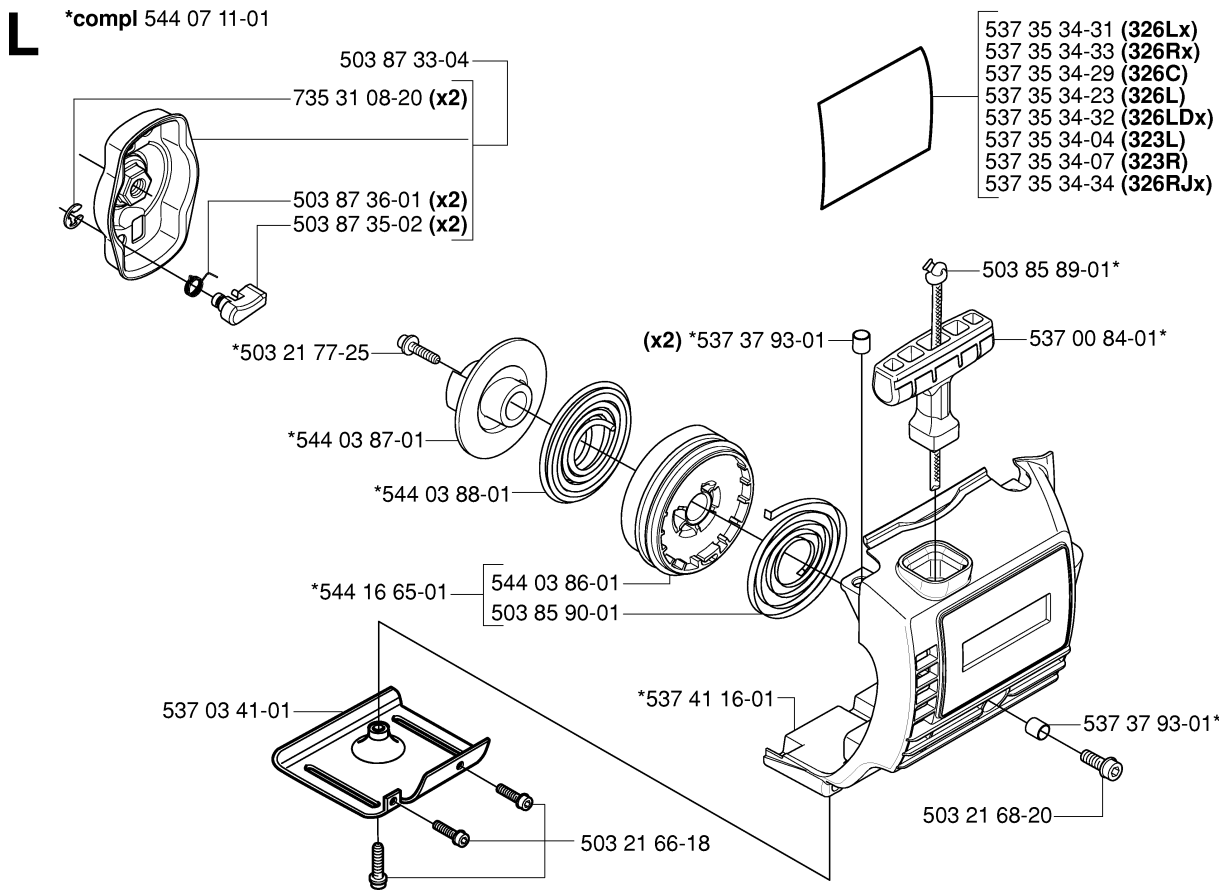 

STARTER

326 RX, 2006-04

Part No	Description	Remark	QTY KIT
503 21 66-18	SCREW IHSC T		1
503 21 68-20	SCREW IHSC FT		1
503 21 77-25	SCREW IHSC T		1
503 85 89-01	STARTER CORD		1
503 85 90-01	RECOIL SPRING		1
503 87 33-04	STARTER PAWL BRIDGE		1
503 87 35-02	STARTER PAWL		2
503 87 36-01	SPRING		2
537 00 84-01	STARTER HANDLE		1
537 03 41-01	PROTECTIVE PLATE		1
537 35 34-04	LABEL	323L	1
537 35 34-07	LABEL	323R	1
537 35 34-23	LABEL	326L	1
537 35 34-29	LABEL	326C	1
537 35 34-31	LABEL	326LX	1
537 35 34-32	LABEL	326LDX	1
537 35 34-33	LABEL	326RX	1
537 35 34-34	LABEL	326RJX	1
537 37 93-01	SPACING SLEEVE		1
537 37 93-01	SPACING SLEEVE		2
537 41 16-01	STARTER HOUSING		1
544 03 86-01	STARTER PULLEY		1
544 03 87-01	DRIVER		1
544 03 88-01	SPRING		1
544 07 11-01	STARTER ASSY		1
544 16 65-01	STARTER PULLEY ASSY		1
735 31 08-20	E-CLIP		2