

G

D

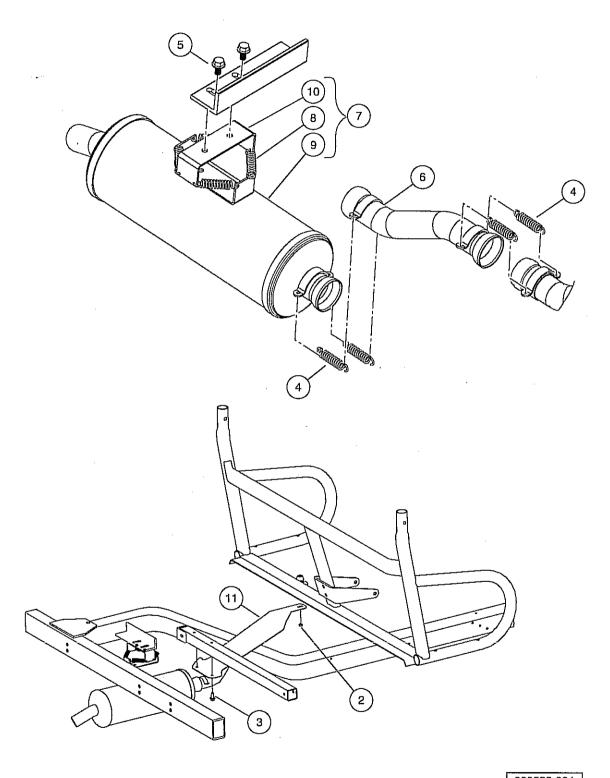


#### **EXHAUST SYSTEM**

TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Exhaust, AWD (includes items 2 through 11)	1
2	603 00 05-58	Locknut, M6-1.00 Nylon Insert	1
3	603 00 35-59	M8-1.25x20 Taptite	2
4	603 00 09-60	Spring, Exhaust	4
5	603 00 13-15	Bolt Flanged Head, M8 X1.25x 16 with Loctite	2
6	531 30 83-88	Pipe, Exhaust, Int, Offset	1
7		1 '	
	603 00 29-47	Asm, Muffler, AWD Homologation (includes items 8 through 10)	'
8	603 00 09-60	Spring, Exhaust	4
9	N/A	Muffler	1
10	N/A	Bracket, Muffler	1
11	531 30 71-35	Shield, Exhaust, Clearance	1
		·	
			]
•	1		
	i	1	

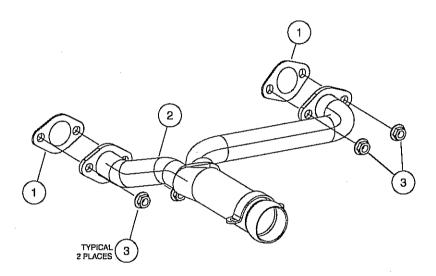

#### **EXHAUST HEADER – KAWASAKI GAS**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3	603 00 39-56 603 00 38-41 603 00 05-12	1 2 3 4 Gasket, Exhaust Header, Fh680d Header, Exhaust, Gas, Fh680d Nut Flg, M8 X 1.25 Serrated	
	·		
÷			
	ļ		

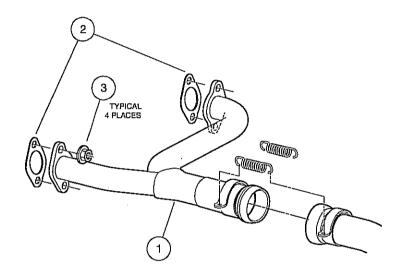

#### **EXHAUST HEADER – HONDA GAS**


ITEM	PART NO.	DESCRIPTION	QTY
1 2 3	603 00 09-61 603 00 36-00 603 00 05-12	1 2 3 4 Header, Exhaust, Gas	1 2 4

11

G

#### **DIESEL VEHICLE**

D

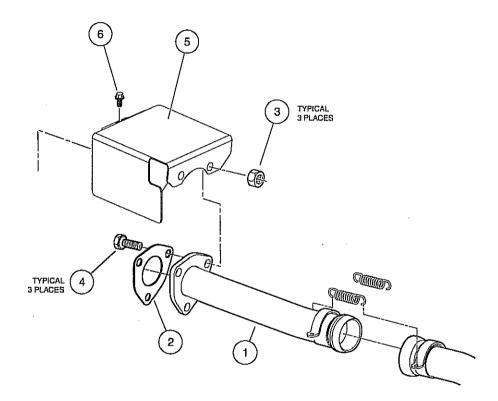


#### **EXHAUST PIPES – DIESEL VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6	603 00 09-58 603 00 09-96 603 00 35-92 603 00 13-16 603 00 13-24 603 00 17-53	1 2 3 4  Pipe, Exhaust Diesel Main	1 1 3 3 1 1

D

G


D

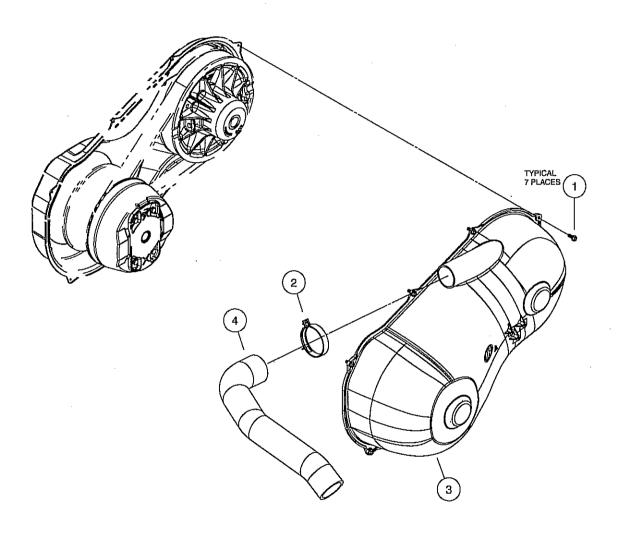

## **CLUTCH COVER (STANDARD)**


ITEM	PART NO.	DESCRIPTION	QTY	
1 2 3 4	603 00 08-74 603 00 09-76 603 00 09-83 603 00 11-57	1 2 3 4 Screw, M6 X 16 Tt Hx FI Hd Clamp, Hose, Ctb 64mm Cover, CVT Outer Hose, Outlet, Cover, CVT	1	
			·	
				-

D

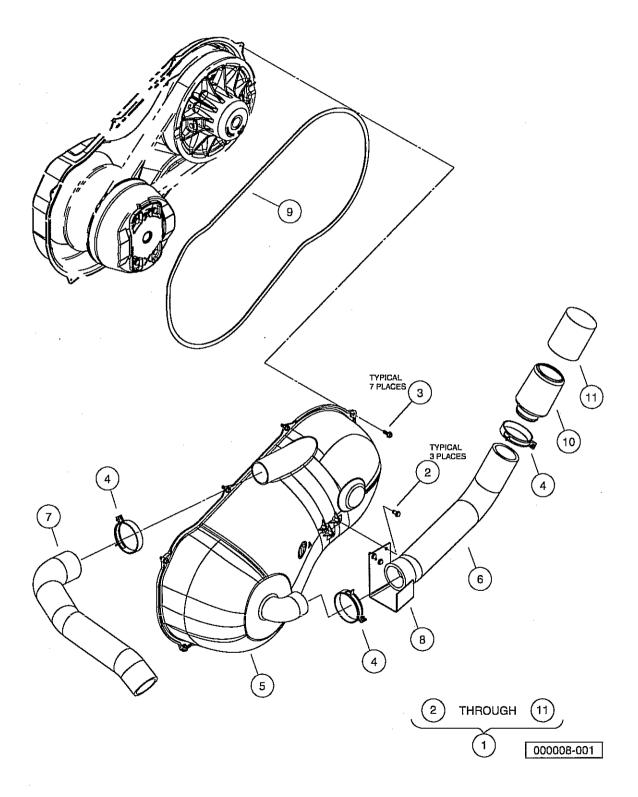


#### **CLUTCH COVER (SEALED)**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10	531 30 07-38 603 00 36-01 603 00 08-74 603 00 09-76 603 00 09-83 603 00 11-56 603 00 11-57 603 00 11-58 603 00 11-59 603 00 12-91 603 00 13-23	1 2 3 4  Kit, Sealed CVT Cover (includes items 2 through 11) Screw, 1/4-15 X .50 Hi-lo Hex Screw, M6 X 16 Tt Hx FI Hd Clamp, Hose, Ctb 64mm Cover, CVT Outer Hose, Inlet, Cover, CVT Hose, Outlet, Cover, CVT Bracket, Inlet, Cover, CVT Gasket, Cover, CVT Cap, Inlet, Cover, CVT Filter, Inlet, Cover, CVT	1 3 7 3 1 1 1 1

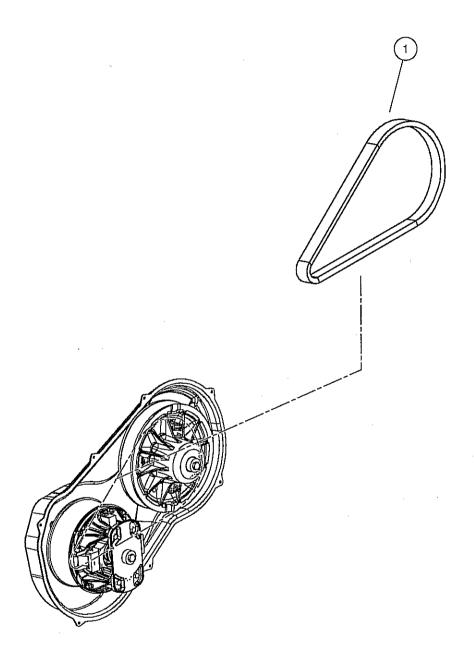


#### **DRIVE BELT**

ITEM	PART NO.	DESCRIPTION	QTY
1	603 00 09-18	1 2 3 4 Belt, Drive	1

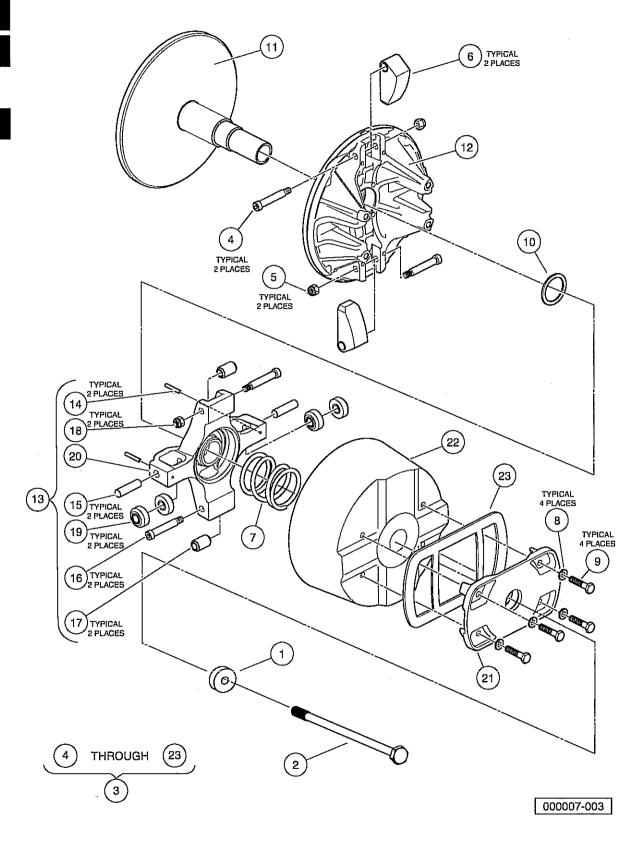


#### **DRIVE CLUTCH - HONDA GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 09-38	Washer, Stepped	1
2	603 00 11-64	Bolt, M10x1.25x200 Loctite	1
3	603 00 09-82	Clutch, 4x4, Gas, W/cover (includes items 4 through 23)	1
4	603 00 16-11	Screw, Shider Hex, .312 X 1.75	2
5	603 00 16-13	Nut, Lock Hex, 1/14-20, Flexic	2
6	603 00 16-15	Sub Assy, Wt Clutch, Gas	2
7	603 00 16-16	Spring, Compression, Primary	1
8	603 00 16-17	Washer, Lock, H-Spring, 1/4	4
9	603 00 16-18	Screw, Cap, Hex Hd, 1/4 X 1.25	4
10	603 00 16-19	Shim, 1.63 X 1.33	A/R
11	N/A	Subassembly, Drive Clutch	1
12	N/A	Subassembly, Moveable, Drive Clutch	1
13	N/A	Spider Subassembly (Gasoline) (includes items 14 through 20)	1
14	603 00 16-08	Pin, Spring Slotted, 1.25 X 1.0	2
15	603 00 16-09	Pin, Dowel, .375 X 1.50	2
16	603 00 16-11	Screw, Shider Hex, .312 X 1.75	1
17	603 00 36-02	Sub Assy, Roller Weight	2
18	603 00 16-13	Nut, Lock Hex, 1/14-20, Flexic	3
19	603 00 16-20	Roller, Torque, Gas	
20	N/A	Spider, Drive Clutch	1
21	N/A	Cover, Drive Clutch	1
22	531 30 81-40	Cover, Clutch, 4x4	1
23	531 30 81-39	Gasket, Cover, Clutch, 4x4	1
			:
			•
			:
	1		
	1		
	1	·	
	I	l .	1

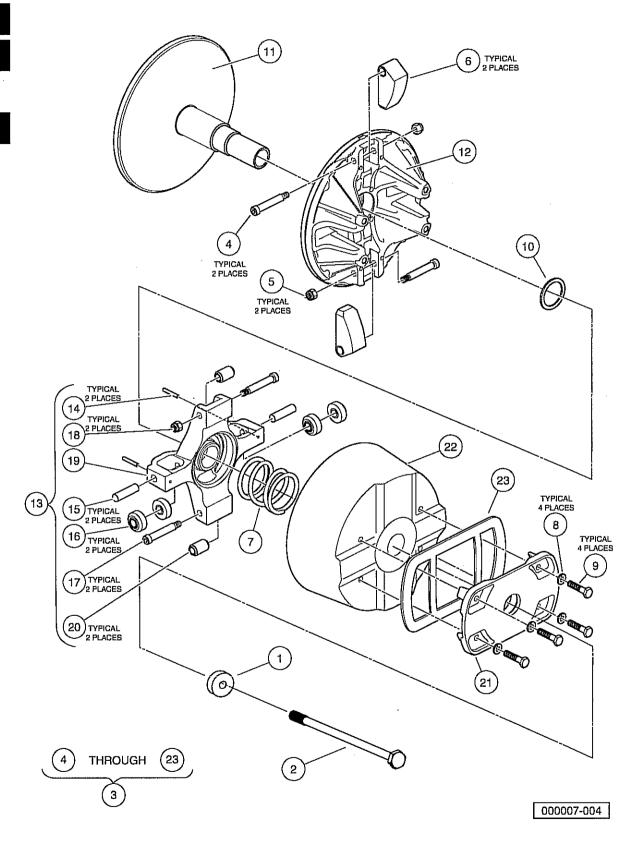

#### **DRIVE CLUTCH - DIESEL VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 09-38	Washer, Stepped	1
2	603 00 12-94	Bolt, M10 X 1.5 X 160	1
3	603 00 30-09	Clutch, 4x4, Diesel, W/cover (includes items 4 through 23)	;
4	603 00 16-11	Screw, Shider Hex, .312 X 1.75	2
5	603 00 16-13	Nut, Lock Hex, 1/14-20, Flexic	2
6	603 00 16-13	Sub Assy, Wt Clutch, Diesel	
7	603 00 16-16		
8	603 00 16-17	Spring, Compression, Primary	1 4
9	603 00 16-17	Washer, Lock, H-Spring, 1/4	1
-		Screw, Cap, Hex Hd, 1/4 X 1.25	4
10	603 00 16-19	Shim, 1.63 X 1.33	A/R
11	N/A	Subassembly, Drive Clutch	1
12	N/A	Subassembly, Moveable, Drive Clutch	
13	N/A	Subassembly, Spider Utility, Diesel (includes items 14 through 20)	
14	603 00 16-08	Pin, Spring Slotted, 1.25 X 1.0	2
15	603 00 16-09	Pin, Dowel, .375 X 1.50	2
16	603 00 16-10	Roller, Torque, Diesel	
17	603 00 16-11	Screw, Shider Hex, .312 X 1.75	2
18	603 00 16-13	Nut, Lock Hex, 1/14-20, Flexic	2
19	N/A	Spider, Drive Clutch	1
20	603 00 16-12	Sub Assy, Roller Weight	2
21	N/A	Cover, Drive Clutch	1
22	531 30 81-40	Cover, Clutch, 4x4	1
23	531 30 81-39	Gasket, Cover, Clutch, 4x4	1

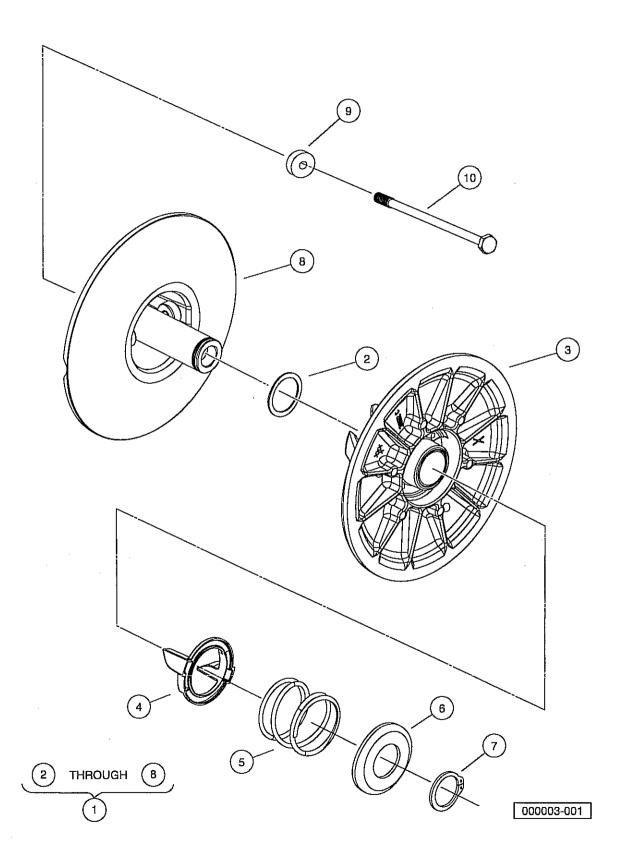

Page 12-12 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles Illustrated Parts List

#### **DRIVEN CLUTCH**


ITEM	PART NO.	DESCRIPTION	(
1 2 3 4 5 6 7 8 9	603 00 09-06 603 00 16-35 N/A 603 00 16-36 603 00 16-37 603 00 16-38 603 00 16-39 N/A 603 00 09-39 603 00 11-69	1 2 3 4  CVT, Secondary (includes items 2 through 8)  Washer, Thrust, 1.53 X 1.92  Sheave, Driven Clutch  Retainer, Spring, Inner  Spring, Compression, Secondary  Retainer, Spring, Outer  Ring, Retaining, External  Driven Clutch Base Sheave  Washer, Stepped  Bolt, M10 X 1.5 X 100 Loctite	

13

# **DRIVETRAIN COMPONENTS**


G

D

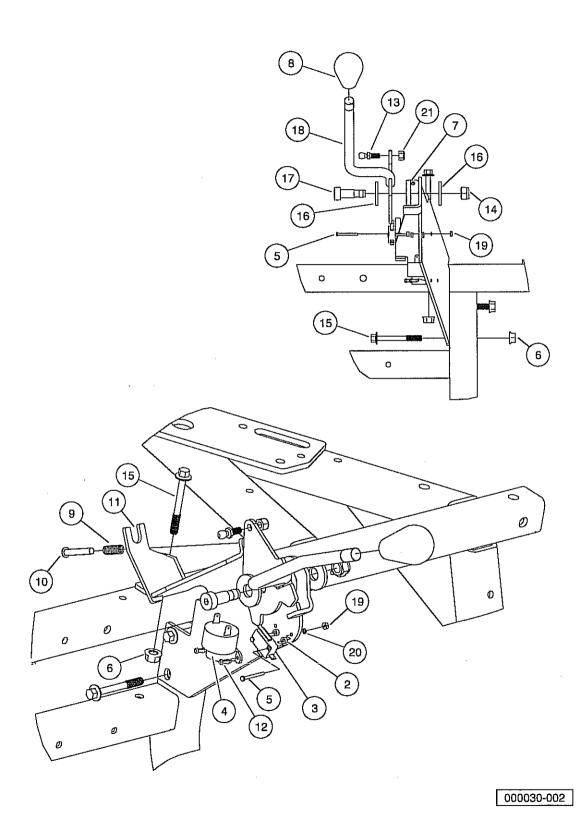


## FORWARD/REVERSE SHIFTER ASSEMBLY

TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 35-61	Asm, FNR (includes items 2 through 21)	1
2	603 00 02-34	Washer, #4 Nylon Flat	2
3	603 00 02-36	Switch, Limit	1
4	603 00 03-71	Buzzer, Reverse (9-48 VDC)	1
5	603 00 03-76	Screw, #4-40 X 1.125 Hx Hd Mch	2
6	603 00 12-98	Nut,m8,all Metal Lock	3
7	603 00 09-23	Bushing, FNR	1
8	603 00 09-24	Knob, FNR	1
9	N/A	Spring, Stop, Pedal	1
10	N/A	Bolt, Stop, Pedal	1
11	N/A	Weldment, FNR Shifter Bracket	1
12	N/A	Rîvet, Micro Tuflok	2
13	603 00 12-88	Stud, Ball, .346 Dia	1
14	603 00 12-95	Locknut, M10x1.5 Nylon Insert	1
15	603 00 13-06	Bolt Flanged Head, M8 X 1.25 X 65	3
16	603 00 15-99	Washer, M12 Hard Regular	2
17	603 00 16-00	Shoulder Bolt,m12 X 20 M10 Thd	1
18	603 00 35-60	Weldment, FNR Shifter	1
19	603 00 00-86	Nut, #4-40 Hex Machine	2
20	603 00 00-87	Lockwasher, #4 Helical Split	2
21	603 00 00-94	Locknut, 1/4-28 Nylon Insert	1
	,		

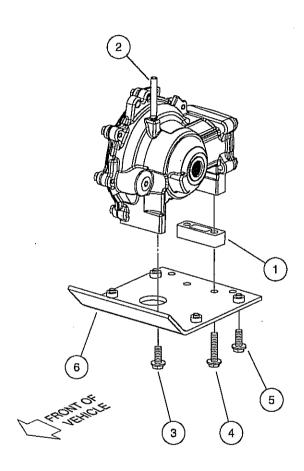


#### FRONT DIFFERENTIAL MOUNTING PLATE

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6	603 00 09-36 603 00 11-12 603 00 11-71 603 00 11-72 603 00 16-69 603 00 35-62	1 2 3 4 Spacer Block, Diff	1 1 2 2 4

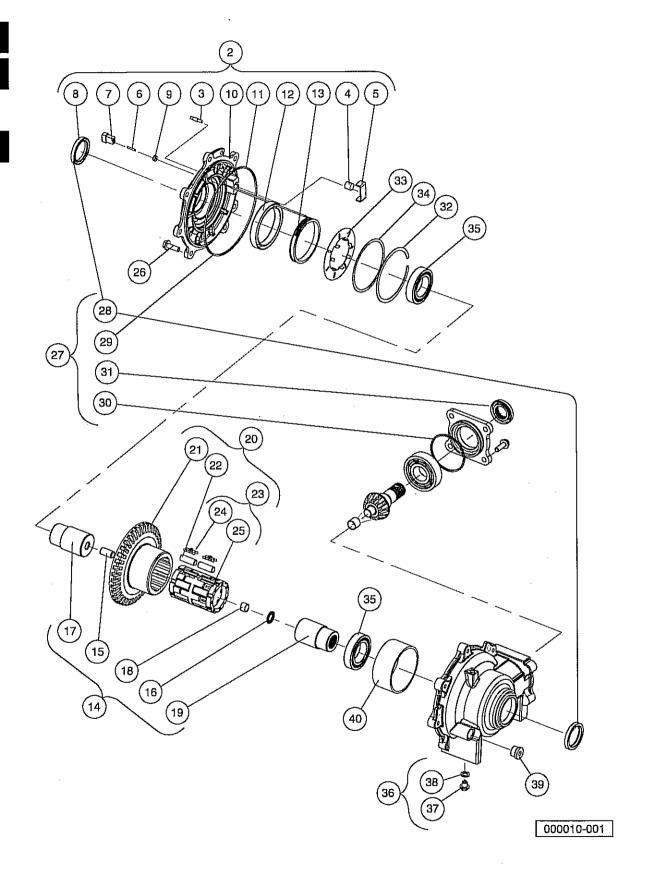

## FRONT DIFFERENTIAL (OUTPUT COMPONENTS)

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	<del> </del>
1	603 00 09-13	Differential, Front * (includes items 2 through 40)	1
2	603 00 10-26	Kit, Assy, Output Cover Plate (includes items 3 through 13)	
3	603 00 10-34	Set Screw, #10-24 UNC-3A with Patch	'1
4	603 00 10-35	Thrust Button	
5	603 00 10-36	Thrust Plate	
6	N/A	Mate-N-Lock Pin	2
7	N/A	Mate-N-Lock Housing	1
8	N/A	Oil Seal	
9	N/A	Grommet	1
10	N/A	Plate, Output Cover	
11	N/A	O-Ring	'1
12	N/A	Coil, Pocket Insert	1
13	N/A	Coil with Press-Fit Bobbin	1
14	603 00 10-27	Kit, Assy, Race Output Hub (includes items 15 through 19)	
15	603 00 10-27	Pin, Dowel	1
16	603 00 10-38	Bearing, Needle	1
17	N/A	Race/Output Hub, Male	1
18	N/A	Bushing, PermiGlide	1
19	N/A	Race/Output Hub, Fernale	
20	603 00 10-28	Kit, Assy, Clutch (includes items 21 through 23)	1
21	603 00 10-40	Clutch Hsg/Ring Gear, Machined	1
22	603 00 10-40	Kit, Roller (contains 14 rollers)	1
23	603 00 10-42	Kit, Assy, Roll Cage (includes items 24 and 25)	1
24	N/A	Kit, H-Clip Spring (contains 14 clips)	1
25	N/A	Roll Cage, Plastic	
26	603 00 10-29	Kit, Bolt (contains 7 bolts)	1
27	603 00 10-29	Kit, Minor Repair (includes items 28 through 31)	1
28	N/A	Oil Seal	1
29	N/A	O-Ring	1
30	N/A	O-Ring	1
31	N/A		1
32	603 00 10-31	Oil Seal, Triple-Lipped	1
33	603 00 10-31	Retaining, Ring Internal	1
34	603 00 10-32	Plate, Armature	1
35	603 00 10-37	Regring Rall	1
36	603 00 10-37	Bearing, Ball	12
30 37	N/A		1
38	N/A	Plug, Oil Drain	1
39	603 00 10-45	Plug, Oil Fill	1
40	N/A	Bushing, Self-Lubricating, 80 x 85 x 20	1
		* Note: This assembly also contains components listed on the following two pages.	·

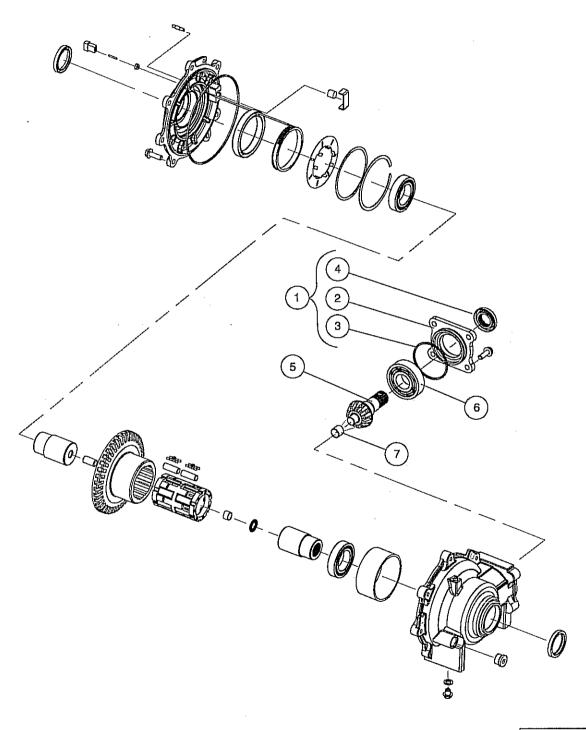


## FRONT DIFFERENTIAL (INPUT COMPONENTS)

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6 7	603 00 10-44 603 00 10-48 N/A N/A 603 00 10-46 603 00 10-47 603 00 35-63	1 2 3 4  Kit, Assy, Input Cover Plate (includes items 2 through 4)  Cover, Input, Machined  O-Ring  Oil Seal, Triple-Lipped  Shaft, Pinion, Machined  Bearing, Ball  Bushing, Plain 16 ld X 15 Wide	1 1 1 1 1
		Note: This page contains a list of components internal to the front differential. See the previous pages for other front differential components.	
	:		

13


G

D

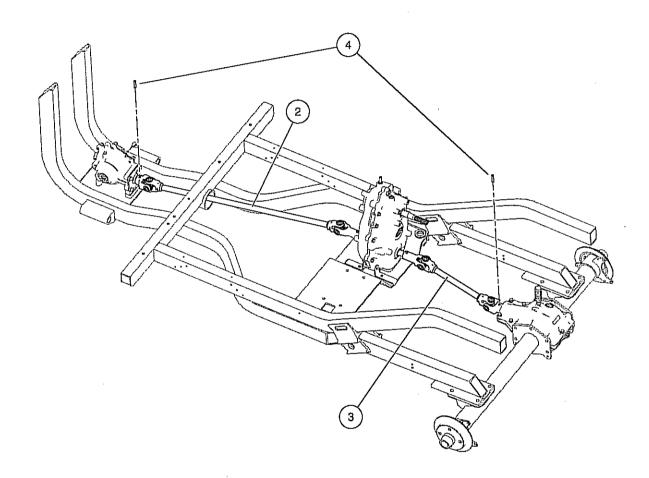

#### PROP SHAFTS

ITEM	PART NO.	DESCRIPTION	QTY
1 2	N/A 603 00 09-12	1 2 3 4 Inst, Prop Shafts, Awd (includes items 2 through 4)	1
3 4	603 00 09-15 603 00 04-36	Prop Shaft, Rear Pin, Spring, 5/16 X 1-1/2 Hd	1
•	003 00 04-30	Till, Opining, of to X 1-1/2 fld	2
	·	·	
	:		
		·	

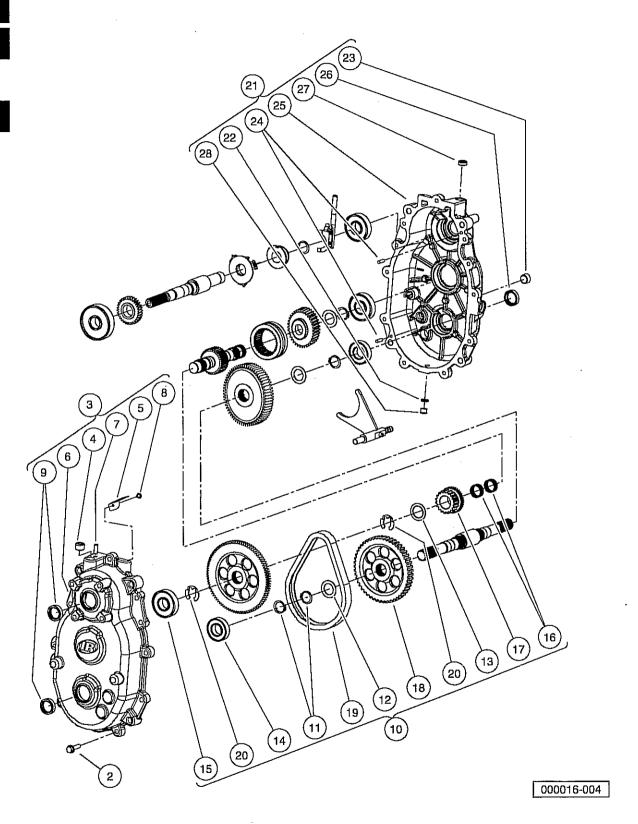


#### **TRANSMISSION – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 35-66	Transmission, Parallel Shaft (includes items 2 through 21)	1
2	603 00 16-22	Bolt, M8	11
3	603 00 17-80	Asm, Gear Case, Rear (includes items 4 through 9)	1
4	603 00 16-28	Plug, Square-Socket, 1/2-14	1
5	603 00 16-43	Oil, Deflector	1
6	N/A	Gearcase, Rear	1
7	603 00 16-53	Vent, Trans	1
8	603 00 16-54	Screw, Self-Tapping #10-24 x 0.375	1
9	603 00 16-55	Seal, Triple-Lipped	2
10	603 00 17-87	Kit, Reverse Gear Repair (includes items 11 through 20)	1
11	603 00 16-42	Ring, Retaining, Basic External	2
12	603 00 16-45	Washer, Thrust, 1.007x1.542x0.062	1
13	603 00 16-47	Washer, 26.231 x 39.167 x 1.575	
14	603 00 16-48	Bearing, Ball	
15	603 00 16-49	Bearing, Ball	1
16	603 00 16-51	Bearing, Needle	2
17	N/A	Sprocket, 19-Tooth	1
18	N/A	Sprocket, 51-Tooth	1
19	N/A	Chain, Transmission	1
20	603 00 16-58	Ring, Retaining, E-Ring	2
21	603 00 35-70	Asm, Case, Gear, Front (includes items 22 through 28)	1
22	603 00 16-24	Washer, 0.625 x 0.382 x 0.060	1
23	603 00 16-28	Plug, Square-Socket, 1/2-14	1
24	603 00 16-41	Pin, Dowel, 6x20	2
25	N/A	Gearcase, Front	1
26	603 00 16-55	Seal, Triple-Lipped	1
27	603 00 16-81	Seal, Dual-Lip	1
28	603 00 35-69	Plug, 3/4-16	1
20	000 00 00-00	1 lug, 017-10	'
		,	
		•	
			ļ
			ŀ
	Ī	I	I


G

D

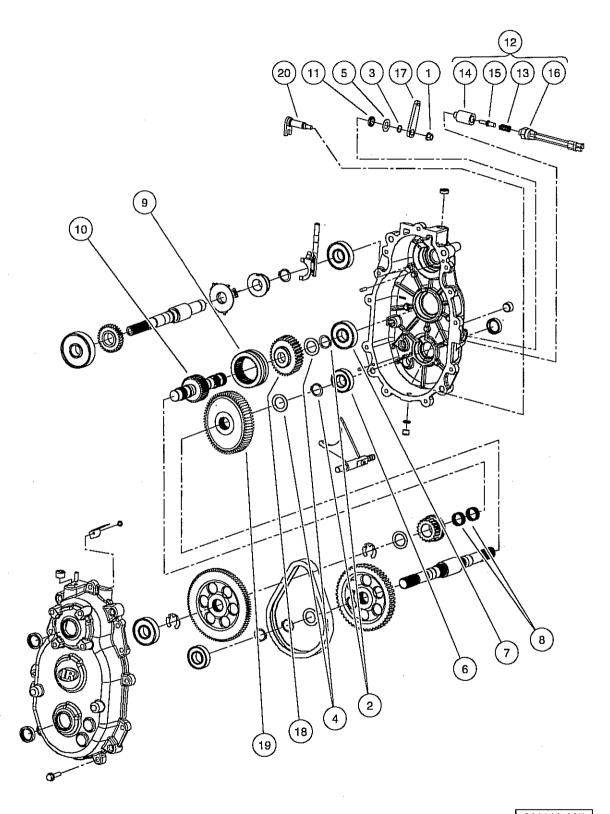

# TRANSMISSION - GASOLINE VEHICLES, CONTINUED


3 00 16-40 3 00 16-42 3 00 16-44 3 00 16-45 3 00 16-46 3 00 16-48	1 2 3 4  Nut, Lock Hex, Nylon, 5/16	1 2 1
3 00 16-42 3 00 16-44 3 00 16-45 3 00 16-46	Ring, Retaining, Basic External	2
3 00 16-42 3 00 16-44 3 00 16-45 3 00 16-46	Ring, Retaining, Basic External	2
3 00 16-44 3 00 16-45 3 00 16-46	Ring, Retaining, External 9/16	
3 00 16-45 3 00 16-46		
3 00 16-46	11201101] 1111201 11001 A110 12A01002 11111111111	2
	Washer, Flat, 0.58x1.08x0.05	1
U UU IU-7U	Bearing, Ball	1
3 00 16-49	Bearing, Ball	1
3 00 16-49		1
	Bearing, Needle	2
		1
		1
1		1
N/A		1
N/A		1
N/A	Bullet, Detent	1
N/A	Switch, Indicator, Pollak	1
3 00 35-71	Bellcrank, Alum	1
3 00 35-72	Gear, 35t, Spur	1
N/A		1
N/A		1
	N/A N/A N/A 3 00 35-71 3 00 35-72 N/A	Shaft, Intermediate   Seal, Dual-Lipped   Seal, Dual-Lipped   Stit, Neutral Switch Repair (includes items 13 through 16)   Spring, 0.484 x 0.34 x 1.076   Spring, 0.484 x 0.34 x 1.076   Suide, Detent Bullet   Bullet, Detent   Switch, Indicator, Pollak   Sou 35-71   Sellcrank, Alum   Sou 35-72   Gear, 35t, Spur   N/A   Gear, 65t Spur   Seal, Dual-Lipped   Gear, Seal, Dual-Lipped   Seal, Seal, Dual-Lipped   Seal, County 16   Seal, County 16

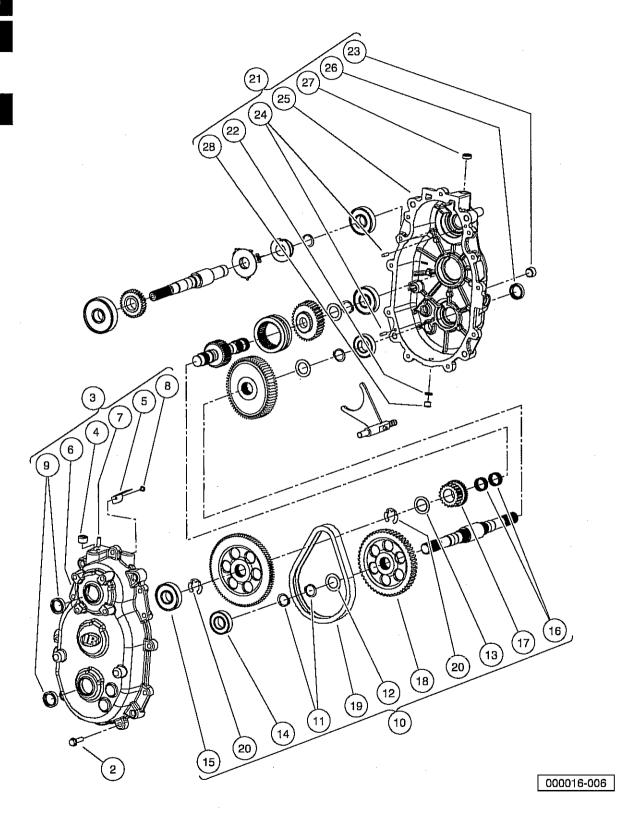

### **TRANSMISSION – DIESEL VEHICLES**


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	531 30 74-40	Trans, Parallel Shaft, Diesel (includes items 2 through 21)	1
2	603 00 16-22	Bolt, M8	11
3	603 00 17-80	Asm, Gear Case, Rear (includes items 4 through 9)	1
4	603 00 16-28	Plug, Square-Socket, 1/2-14	1
5	603 00 16-43	Oil, Deflector	
6	N/A	Gearcase, Rear	1
7	603 00 16-53	Vent, Trans	1
8	603 00 16-54	Screw, Self-Tapping #10-24 x 0.375	1
9	603 00 16-55	Seal, Triple-Lipped	2
10	603 00 17-87	Kit, Reverse Gear Repair (includes items 11 through 20)	1
11	603 00 16-42	Ring, Retaining, Basic External	2
12	603 00 16-45	Washer, Thrust, 1.007x1.542x0.062	1
13	603 00 16-47	Washer, 26.231 x 39.167 x 1.575	1
14	603 00 16-48	Bearing, Ball	1
15	603 00 16-49	Bearing, Ball	1
16	603 00 16-51	Bearing, Needle	2
17	N/A	Sprocket, 19-Tooth	1
18	N/A	Sprocket, 51-Tooth	1
19	N/A	Chain, Transmission	1
20	603 00 16-58	Ring, Retaining, E-Ring	2
21	603 00 35-70	Asm, Case, Gear, Front (includes items 22 through 28)	1 1
22	603 00 16-24	Washer, 0.625 x 0.382 x 0.060	1 1
23	603 00 16-28	Plug, Square-Socket, 1/2-14	1
24	603 00 16-41	Pin, Dowel, 6x20	2
25	N/A	Gearcase, Front	1
26	603 00 16-55	Seal, Triple-Lipped	1
27 .	603 00 16-81	Seal, Dual-Lip	1
28	603 00 35-69	Plug, 3/4-16	1
			1
			ļ

\_\_\_\_

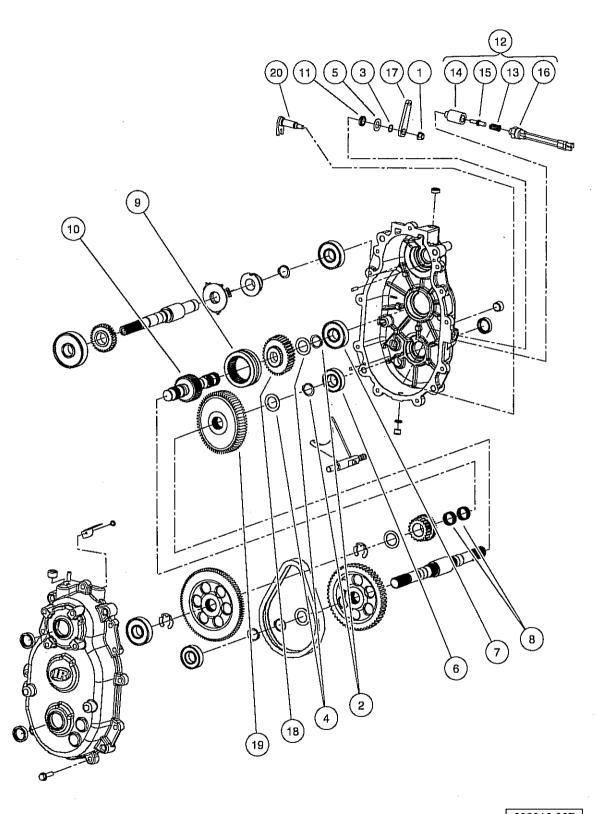

# TRANSMISSION – DIESEL VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 16-40	Nut, Lock Hex, Nylon, 5/16	1
2	603 00 16-42	Ring, Retaining, Basic External	2
3	603 00 16-44	Ring, Retaining, External 9/16	1
4	603 00 16-45	Washer, Thrust, 1.007x1.542x0.062	2
5	603 00 16-46	Washer, Flat, 0.58x1.08x0.05	1
6	603 00 16-48	Bearing, Bail	i
7	603 00 16-49	Bearing, Ball	1
8	603 00 16-51	Bearing, Needle	2
9	603 00 28-26	Dog, Engagement	1
10	603 00 28-36	Shaft, Intermediate	1
11	N/A	Seal, Dual-Lipped	1 1
12	603 00 17-86	Kit, Neutral Switch Repair (includes items 13 through 16)	1
13	N/A	Spring, 0.484 x 0.34 x 1.076	1 1
14	N/A	Guide, Detent Bullet	1
15	N/A	Bullet, Detent	1
16	N/A	Switch, Indicator, Pollak	
17	603 00 35-71	Bellcrank, Alum	
18	603 00 35-71	Gear, 35t, Spur	1
19	N/A		
20	N/A N/A	Gear, 65t Spur	1
20	IN/A	Shaft, Shift	1
	İ		
		•	
			•

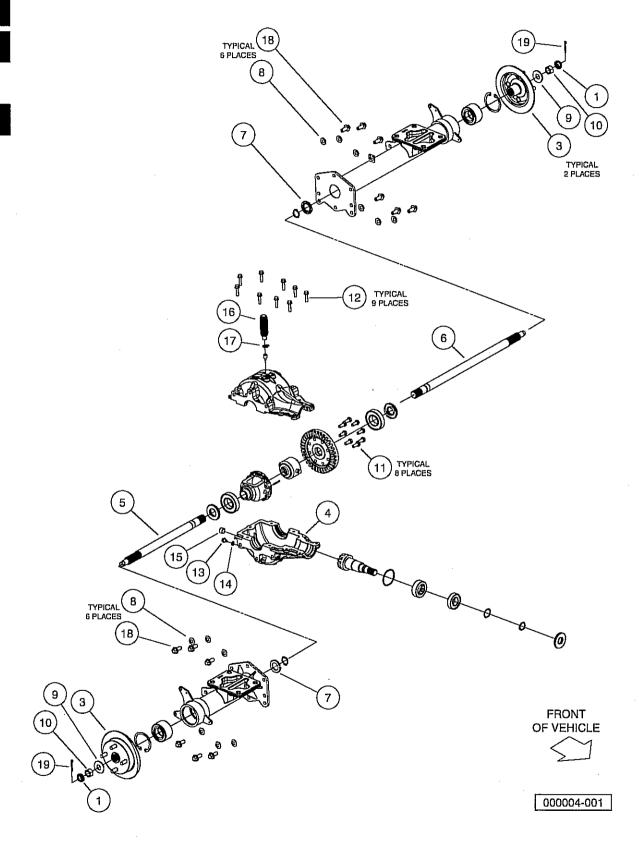


Page 13-20 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles Illustrated Parts List

#### **REAR DIFFERENTIAL**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 09-55	Axle, Rear, Guard Mounts (includes items 2 through 19)	1
2	603 00 08-67	Locking Cap, Nut	2
3	603 00 09-26	Assy, Rotor, Brake, Rear	2
4	603 00 10-72	Gearcase, Lower, Machined	1
5	603 00 11-16	Axle, RH	1
6	603 00 11-17	Axle, LH	1
7	603 00 15-90	Washer, 51 mm x 30 mm x 4 mm	2
8	603 00 15-91	Washer, Belleville	12
9	603 00 15-92	Washer, Belleville	2
10	603 00 15-93	Nut, Hex M20	2
11	603 00 16-21	Balt, M10	8
12	603 00 16-22	Bolt, M8	9
13	603 00 16-23	Plug, 3/8-16	1
14	603 00 16-24	Washer, 0.625 x 0.382 x 0.060	1
15	603 00 16-28	Plug, Square-Socket, 1/2-14	1
16	603 00 16-29	Bellows, Vent, Upper Housing	1
17	603 00 16-30	Clamp, Hose, Dw-9.5	1
18	603 00 16-32	Bolt, Hex Flange, M12 x 1.75 x 30	12
19	603 00 16-33	Pin, Cotter	2
	,		
		·	
			}
	İ	I	



D

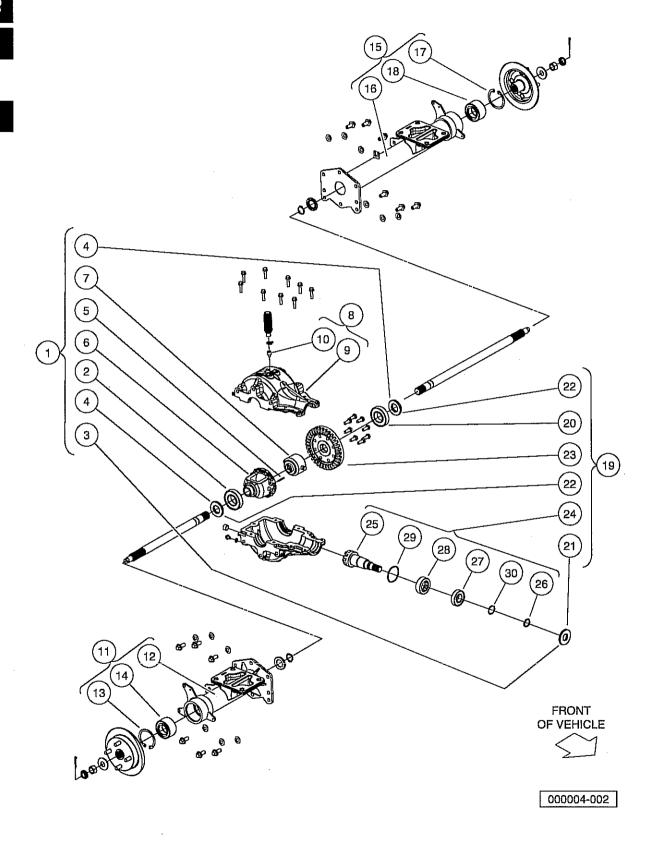


# **REAR DIFFERENTIAL, CONTINUED**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 36-03	Assembly, Differential and Carrier (includes items 2 through 7)	1
2	603 00 11-22	Bearing, Ball	1
3	603 00 11-24	Seal, Dual-Lip 25x 62x 7tc	1
4	603 00 11-25	Seal, Dual-Lip 30x 62x 8tc	2
5	603 00 35-73	Pin, Dowel 4 mm x 35 mm	1
6	603 00 35-74	Housing, Differential, Mach	1
7	603 00 35-75	Asm, Locker, Nongrease/spacers	1
8	603 00 17-88	Asm, Gearcase, Upper (includes items 9 and 10)	1
9	N/A	Gearcase, Upper, Machined	1
10	603 00 16-26	Vent, Top, Upper Housing	1
11	603 00 17-89	Asm, Axle Tube, RH (includes items 12 through 14)	1
12	N/A	Tube, Axle, Right-Hand	1
13	603 00 11-18	Ring, Retaining, Internal	1
14	603 00 11-23	Bearing	1
15	603 00 17-90	Asm, Axle Tube, LH (includes items 16 through 18)	1
16	N/A	Tube, Axle, Left-Hand	1
17	603 00 11-18	Ring, Retaining, Internal	1
18	603 00 11-23	Bearing	1
19	603 00 17-91	Kit, Rear Axle Gear Repair (includes items 20 through 24)	1
20	603 00 11-22	Bearing, Ball	1
21	603 00 11-24	Seal, Dual-Lip 25x 62x 7tc	1
22	603 00 11-25	Seal, Dual-Lip 30x 62x 8tc	2
23	N/A	Gear, Ring, 33-Tooth	1
24	N/A	Asm, Pinion W/ Bearings (includes items 25 through 30)	1
25	N/A	Pinion, I0t Machined	1
26	603 00 11-19	Ring, Retaining, External	1
27	603 00 11-20	Bearing, Ball	1
28	603 00 11-21	Bearing, Needle, Drawn Shell	1
29	603 00 16-25	Washer, 2.625 x 2.367 x 0.060	1
30	603 00 16-31	Shim, 1.5 x 1.189 x 0.008	1
	1	l i	1


# RADIATOR AND COOLANT SYSTEM - DIESEL VEHICLES

D

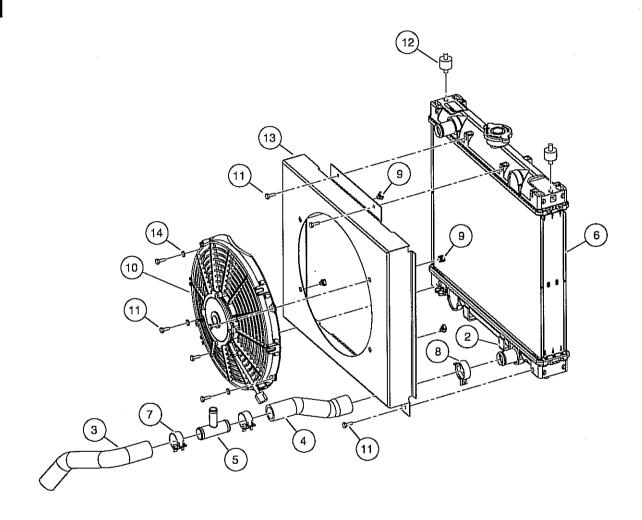


#### **RADIATOR**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Asm, Radiator (includes items 2 through 14)	1
2	603 00 02-29	Tape, Vinyl Foam 1/8" x 3/4"	A/R
3	603 00 09-29	Hose, Coolant Lower Pipe	1
4	603 00 09-30	Hose, Coolant Lower Rad	-
5	603 00 09-34		
	1	Tee, Coolant Fill	1
6	603 00 09-64	Exchanger, Engine Coolant	1
7	603 00 09-73	Clamp, Hose, Ctb 35mm	2
8	603 00 09-74	Clamp, Hose, Ctb 38mm	1
9	603 00 09-77	Nut, Self Retaining	4
10	603 00 10-21	Fan, Cooling 12 In Elect	1
11	603 00 11-67	Bolt, M6 X 1 X 16 Loctite	8
12	603 00 16-01	Isolator, Twin-Stud	2
13	603 00 11-85	Shroud, Radiator Fan	1
14	603 00 04-42	Washer, M6	4
• •	000 00 01 12		7
		•	
		·	
		·	
		·	
	1		
	1		
	1		
	1		
	1		
	]		
	I	1	

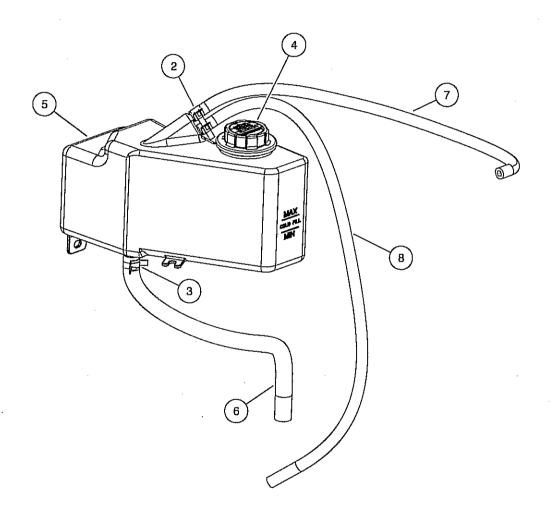


#### **COOLANT EXPANSION TANK**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6 7 8	N/A 603 00 09-70 603 00 09-71 603 00 10-02 531 30 81-76 603 00 35-76 603 00 35-77 603 00 35-78	1 2 3 4  Asm, Coolant Bottle (includes items 2 through 8)  Clamp, Hose, CTB 15mm  Clamp, Hose, CTB 22mm  Cap, Radiator  Bottle, Coolant  Hose, Cut, 5/8, 725  Hose, Cut, Coolant, 775  Hose, Cut, Coolant, 1100	2 1 1 1 1 1 1 1
	:		
		,	
	· .		

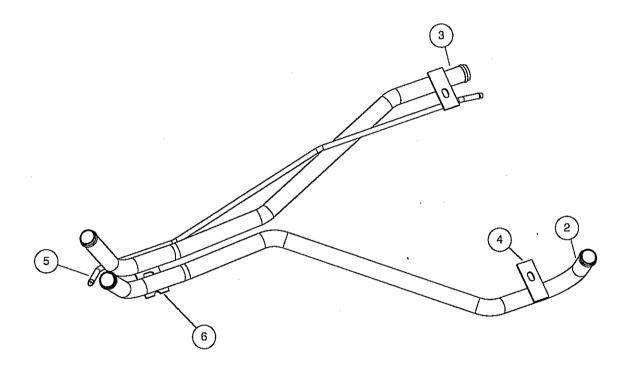


#### **COOLANT PIPES AND HOSES**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5	N/A 603 00 35-79 603 00 35-80 603 00 35-81 603 00 35-82 603 00 35-83	1 2 3 4  Weldment, Group, Coolant Pipe (includes items 2 through 6)  Pipe, Coolant Upper  Pipe, Coolant Lower  Tab, Rear Mntg, Coolant Pipe  Pipe, Vent, Coolant  Tab, Cooling Pipe Mount	1 1 2 1
	,		

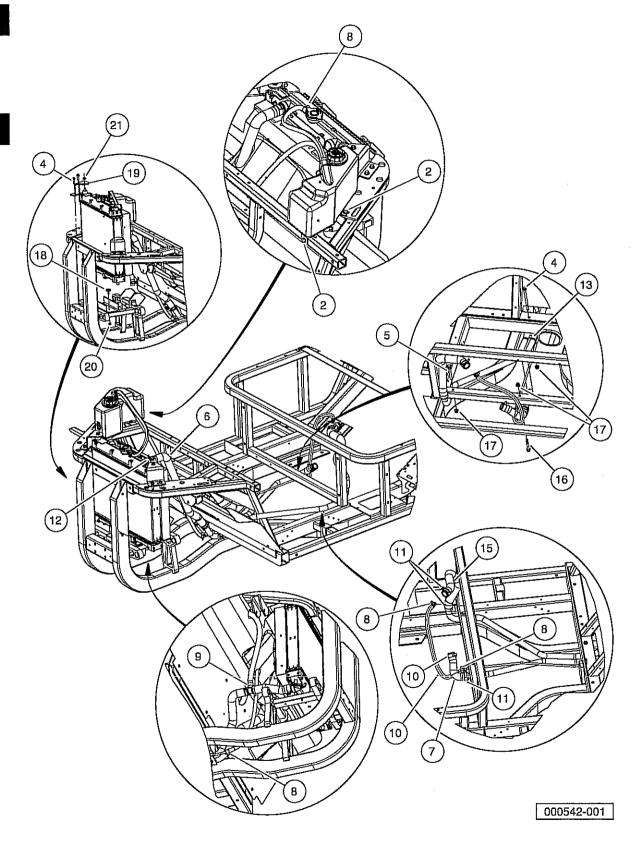

# **COOLING SYSTEM CLAMPS, HOSES, AND HARDWARE**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	·
1	N/A	Instl, Cooling Sys, Diesel (includes items 2 through 21)	1
2	603 00 02-20	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	603 00 35-84	Bolt-hex FI, M8 X 1.25 X 135	1
4	603 00 08-69	Screw, M8X1.25X30, Hex	4
5	603 00 35-85	M8-1.25 X 80 Sems	1
6	603 00 09-27	Hose, Coolant Upper Rad	1
7	603 00 09-28	Hose, Coolant Lower Eng	1
8	603 00 09-70	Clamp, Hose, CTB 15mm	4
9	603 00 09-71	Clamp, Hose, CTB 22mm	1
10	603 00 09-72	Clamp, Hose, Ctb 30mm	1
11	603 00 09-73	Clamp, Hose, Ctb 35mm	5
12	603 00 09-74	Clamp, Hose, Ctb 38mm	1
13	603 00 10-03	Clamp, Bar	1
14	603 00 10-16	Hose, Vent Tube To Eng, Coolnt	1
15	603 00 11-55	Hose, Coolant, Return, Engine	1
16	603 00 13-06	Bolt Flanged Head, M8 X 1.25 X 65	1
17	603 00 13-08	Lock Nut, Fig M8 X 1.25 Nylon	3
18	603 00 35-86	Bumper, 19mm Stud	2
19	603 00 35-87	Bracket, Radiator Support	2
20	603 00 35-88	Nut Flg, M6 X 1 Serrated	2
21	603 00 05-12	Nut Flg, M8 X 1.25 Serrated	2

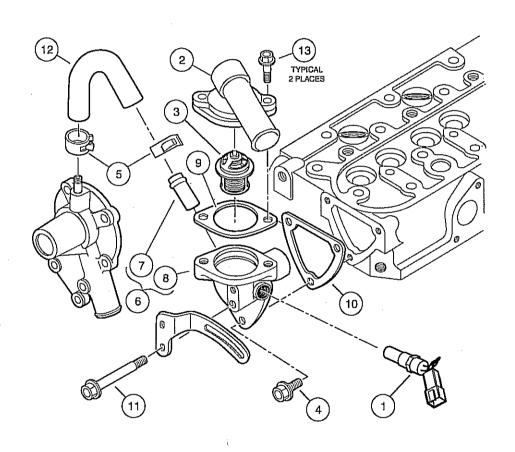


FRONT OF VEHICLE

#### WATER FLANGE AND THERMOSTAT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	603 00 09-63	Sensor, Coolant Temp	1
2	603 00 13-41	Cover, Thermostat	1
3	603 00 13-42	Assy, Thermostat	1
4	603 00 13-43	Bolt, M6 X 1 X 20	2
5	603 00 13-50	Band, Pipe	2
6	603 00 13-51	Flange, Water (includes items 7 and 8)	1
7	603 00 18-28	Pipe, Water Return, D722	1
8	N/A	Flange, Water	1
9	603 00 13-53	Gasket, Thermostat	1
10	603 00 14-60	Gasket, Water Flange	1
11	603 00 17-47	Bolt, Alt, D722, Stay Lower	1
12	603 00 17-48	Pipe, Water Return, D722	1
13	603 00 17-49	Bolt, D722, Thermostat Cover	2
		·	
		•	
1			
1		•	
	}		
-			
İ			
		·	
1		·	1
		·	

14


D

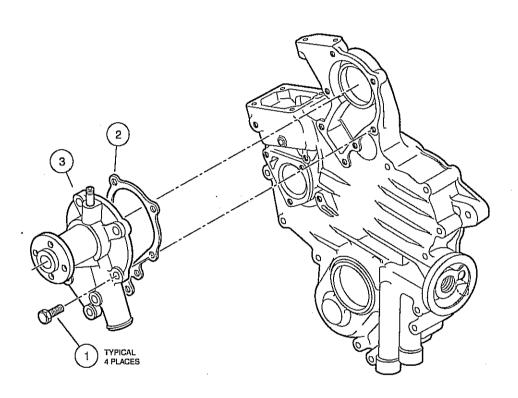



#### **WATER PUMP**

ITEM	PART NO.	DESCRIPTION	QTY
1 2 3	603 00 12-67 603 00 13-49 603 00 17-50	1 2 3 4 Bolt, M6 X 1 X 22	1
			į.
•			

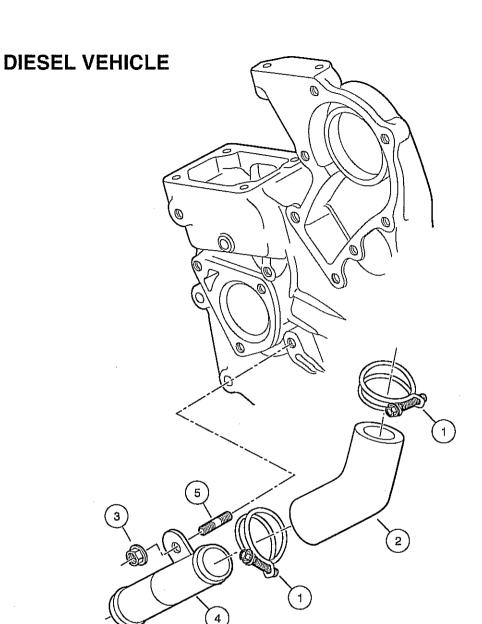



#### **BLOCK COOLANT PIPE**

ITEM	PART NO.	DESCRIPTION	QTY	14
1 2 3 4 5	603 00 13-44 603 00 13-45 603 00 13-46 603 00 13-47 603 00 13-48	1 2 3 4  Band, Pipe, with Nut	1	D

.


# MAINTENANCE AND SERVICE TOOLS

15

G

Ш


D

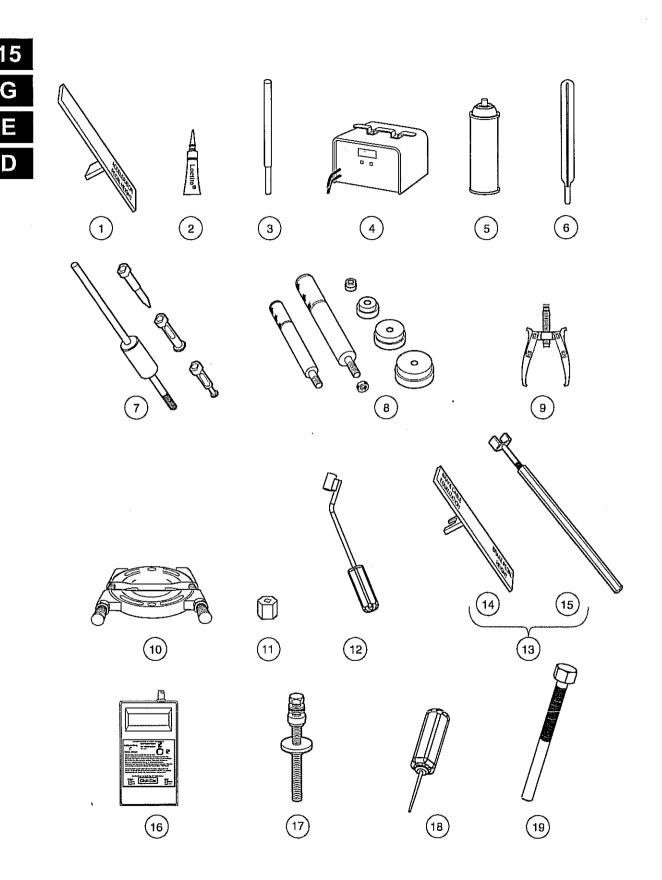

Page 15-2 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles

#### **MAINTENANCE AND SERVICE TOOLS**


		MAIN LIANGE AND SERV		`		
ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				
		The following tool list includes all tools available from Husqvarna for				
		maintenance and service procedures for gasoline, electric, and/or				
		diesel vehicles, both past and present models. Be sure to carefully				
		examine the tool list for applicability to your vehicle before ordering.				
1	603 00 18-32	Accelerator Pedal Adjustment Tool		1	1	
2	603 00 18-33	Adhesive, Guide Ring, 3-Gram Tube			1	ļ
3	603 00 18-34	Arbor		1		
4	603 00 18-35	Battery Discharge Machine, 36/48 Volt	:	-	1	
5	603 00 00-03	Battery Terminal Protector Spray		1	1	
6	603 00 18-37	Battery Thermometer	1	1	1	
7	603 00 18-38	Bearing and Oil Seal Remover Assembly	1	1	1	
8	603 00 18-39	Bearing Driver Set		1	1	İ
9	603 00 18-40	Bearing Puller	1	1	1	
10	603 00 18-41	Bearing Puller Wedge Attachment	1	1	1	
11	603 00 18-42	Brake Adjustment Tool (used only on vehicles with				
		manually adjusted mechanical brakes)		1	1	İ
12	603 00 18-43	Brake Cable Release Tool		1	1	İ
13	603 00 18-44	Brake Pedal Adjustment Tool Kit (includes items 14 and 15)			1	İ
14	****	Brake Pedal Adjustment Tool			1	
15 16		Brake Pedal Tension Tool			1	İ
17	603 00 18-46 603 00 18-47	Calibration Test Module			1	
18	603 00 18-48			1		l
19	603 00 18-49	Charger Bezel Tool Clutch Removal Tool (for 4x4 vehicles)			1 1	ĺ
		Please refer to the maintenance and service manual for proper tool application.				
	****	Special order item available upon request		,		
					·	

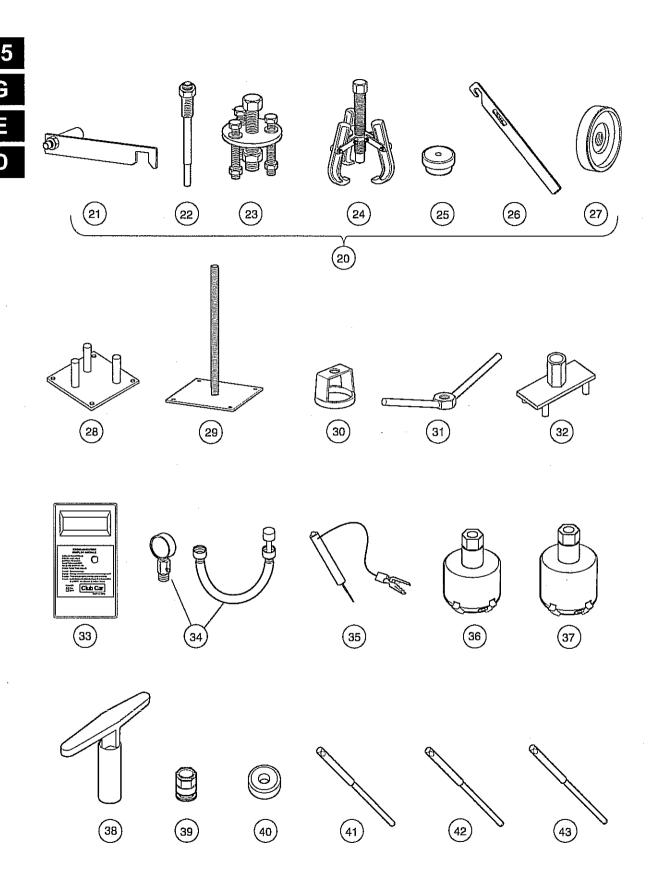

Page 15-4 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles

# MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				
20	603 00 18-50	Clutch Tool Kit (includes items 21 - 27)		1		
21	603 00 18-51	Clutch Alignment Tool (for pre-unitized transaxle		'		
		vehicles built prior to 1997 model year).		1		
22	603 00 18-52	Drive Clutch Puller (for Kawasaki engines only)		1		
23	603 00 18-53	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	603 00 18-54	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	603 00 18-55	Driven Clutch Puller Plug (for Kawasaki engines only)		1		l
26	603 00 18-56	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		l
27	603 00 18-57	Press Weldment (for Kawasaki engines only)		1		l
28	603 00 18-58	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)			1	1
29	603 00 18-60	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	603 00 18-61	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		İ
31	603 00 18-62	Driven Clutch Spring Compression Nut (for use with items 29				
		and 30) (for 4x4 vehicles)	1 1	1		ł
32	603 00 18-59	Drive Clutch Spider Removal Tool				
	600 00 40 00	(for 4x4 vehicles)	1	1		
33	603 00 18-63	Communication Display Module			1	
34	603 00 18-64	Compression Gauge and Adapter		1		
35	603 00 18-67	Continuity Tester		1	1	
36	603 00 29-35	Cutter, Valve Seat, #122	,	1		ĺ
37	603 00 29-36	Cutter, Valve Seat #115		1		Į
38	603 00 29-38	Wrench, T, #505		1		ĺ
39	603 00 29-38	Adapter, T-Wrench		1		
40	603 00 18-75	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	603 00 29-39	Pilot, 6.6 MM	ŀ	1		ı
42	603 00 29-40	Pilot, 6.62 MM		1		l
43	603 00 29-41	Pilot, 6.65 MM  Please refer to the maintenance and service manual		1		
		for proper tool application.				
				•		
		·				
						İ
						:
						İ

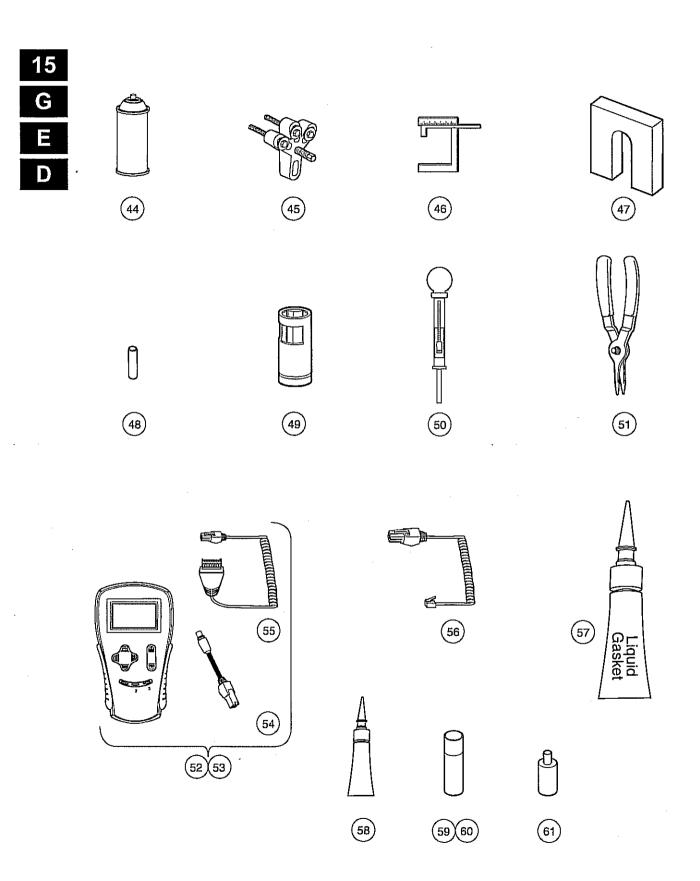

Page 15-6 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles

# MAINTENANCE AND SERVICE TOOLS, CONTINUED


1 2 3 4   Dry Moly Lubricant   1   1   1   1   1   1   1   1   1	ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
44			1 2 3 4			
45	44	603 00 00-01		4	4	1
Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)   1					1 1	'
47       603 00 18-86       Gear Yoke       1	i	1			'	
47         603 00 18-86         Gear Yoke         1         2         1         2         1				ŀ	1	
48	47	603 00 18-86		I	1	1
49	48	603 00 18-87			1	
50	49	1	·		•	1
51	50	603 00 18-90		1	1	1
52   603 00 26-87   IQ Display Module (IQDM) Kit (for electric vehicles only) (includes items 54 and 55)   IQ Display Module (IQDM-P) Kit (for electric vehicles only) (includes items 54 and 55)   IQ Display Module (IQDM-P) Kit (for electric vehicles only) (includes items 54 and 55)   IQDM Series 56   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 1 Cable (replacement)   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 3 Cable (IQDM Series 3 Cable (IQDM Series 3 Cable (IQDM Series 1 Cable (replacement)   IQDM Series 2 Cable   IQDM Series 3 Cable (IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 3 Cable (IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 1 Cable (replacement)   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 3 Cable (IQDM Series 2 Cable   IQDM Series 2 Cable   IQDM Series 3 Cable (IQDM Series 3 Cable (IQDM Series 2 Cable   IQDM Series 3 Cable (I	51	603 00 18-92		1	1	1
(includes items 54 and 55) IQ Display Module (IQDM-P) Kit (for electric vehicles only) (includes items 54 and 55) IQ Display Module (IQDM-P) Kit (for electric vehicles only) (includes items 54 and 55)  Adaptor, Cable IQDM Series 2 Cable IQDM Series 1 Cable (replacement) Liquid Gasket (transaxle case) IQDM Series 1 Cable (replacement) Liquid Gasket (transaxle case) IQDM Series 1 Cable (replacement) Iquid Gasket (transaxle case) Iquid Gasket (transaxle c	52	603 00 26-87				1
(includes items 54 and 55)						
54       603 00 18-94       Adaptor, Cable         55       603 00 18-95       IQDM Series 2 Cable         56       603 00 18-96       IQDM Series 1 Cable (replacement)         57       603 00 06-07       Liquid Gasket (transaxle case)       1         58       603 00 29-92       Moly-Teflon Lubricant (4-oz. (113-gram) tube)       1         59       603 00 33-70       Paint, Touch-Up - Beige       1         59       603 00 33-71       Paint, Touch-Up - Black       1         59       603 00 33-72       Paint, Touch-Up - Burgundy       1         59       603 00 33-73       Paint, Touch-Up - Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up - Dark Grey       1         59       603 00 33-75       Paint, Touch-Up - Dark Green       1       1         59       603 00 33-76       Paint, Touch-Up - Gray       1       1         59       603 00 33-77       Paint, Touch-Up - Red       1       1         59       603 00 33-78       Paint, Touch-Up - Royal Blue (Pacific Blue)       1         59       603 00 33-80       Paint, Touch-Up - White       1       1         60       603 00 33-80       Paint, Precedent Underbody - Gray       1       1<	53	603 00 33-69	IQ Display Module (IQDM-P) Kit (for electric vehicles only)			1
55         603 00 18-95         IQDM Series 2 Cable           56         603 00 18-96         IQDM Series 1 Cable (replacement)           57         603 00 06-07         Liquid Gasket (transaxle case)         1           58         603 00 29-92         Moly-Teflon Lubricant (4-oz. (113-gram) tube)         1           59         603 00 33-70         Paint, Touch-Up - Beige         1           59         603 00 33-71         Paint, Touch-Up - Burgundy         1           59         603 00 33-72         Paint, Touch-Up - Classic Blue (Navy)         1           59         603 00 33-73         Paint, Touch-Up - Dark Gray         1           59         603 00 33-74         Paint, Touch-Up - Dark Green         1           59         603 00 33-75         Paint, Touch-Up - Bergundy         1           59         603 00 33-76         Paint, Touch-Up - Bergundy         1           59         603 00 33-77         Paint, Touch-Up - Red         1           59         603 00 33-78         Paint, Touch-Up - Red         1           59         603 00 33-78         Paint, Touch-Up - White         1           59         603 00 33-80         Paint, Touch-Up - White         1           60         603 00 33-80         Paint, Preced						
56       603 00 18-96       IQDM Series 1 Cable (replacement)       1         57       603 00 06-07       Liquid Gasket (transaxle case)       1         58       603 00 29-92       Moly-Teflon Lubricant (4-oz. (113-gram) tube)         59       603 00 33-70       Paint, Touch-Up - Beige       1         59       603 00 33-71       Paint, Touch-Up - Black       1         59       603 00 33-72       Paint, Touch-Up - Burgundy       1         59       603 00 33-73       Paint, Touch-Up - Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up - Dark Gray       1         59       603 00 33-75       Paint, Touch-Up - Dark Green       1       1         59       603 00 33-76       Paint, Touch-Up - Gray       1       1         59       603 00 33-77       Paint, Touch-Up - Royal Blue (Pacific Blue)       1       1         59       603 00 33-78       Paint, Touch-Up - Royal Blue (Pacific Blue)       1       1         59       603 00 33-79       Paint, Touch-Up - Royal Blue (Pacific Blue)       1       1         60       603 00 33-80       Paint, Precedent Underbody - Gray       1       1         60       603 00 33-81       Paint, Pen, Touch-Up, Precedent Underbody - Black	54	603 00 18-94				1
57         603 00 06-07         Liquid Gasket (transaxle case)         1         1           58         603 00 29-92         Moly-Teflon Lubricant (4-oz. (113-gram) tube)         1           59         603 00 33-70         Paint, Touch-Up - Beige         1           59         603 00 33-71         Paint, Touch-Up - Black         1           59         603 00 33-72         Paint, Touch-Up - Burgundy         1           59         603 00 33-73         Paint, Touch-Up - Classic Blue (Navy)         1           59         603 00 33-74         Paint, Touch-Up - Dark Gray         1           59         603 00 33-75         Paint, Touch-Up - Dark Green         1         1           59         603 00 33-76         Paint, Touch-Up - Gray         1         1           59         603 00 33-77         Paint, Touch-Up - Red         1         1           59         603 00 33-78         Paint, Touch-Up - Royal Blue (Pacific Blue)         1         1           59         603 00 33-78         Paint, Touch-Up - White         1         1           60         603 00 33-80         Paint, Touch-Up - White         1         1           60         603 00 33-80         Paint, Precedent Underbody - Gray         1         1	55	603 00 18-95				1
58       603 00 29-92       Moly-Teflon Lubricant (4-oz. (113-gram) tube)       1         59       603 00 33-70       Paint, Touch-Up — Beige       1         59       603 00 33-71       Paint, Touch-Up — Burgundy       1         59       603 00 33-72       Paint, Touch-Up — Classic Blue (Navy)       1         59       603 00 33-73       Paint, Touch-Up — Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up — Dark Gray       1         59       603 00 33-75       Paint, Touch-Up — Dark Green       1         59       603 00 33-76       Paint, Touch-Up — Gray       1         59       603 00 33-77       Paint, Touch-Up — Red       1         59       603 00 33-78       Paint, Touch-Up — Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up — White       1         60       603 00 33-80       Paint, Precedent Underbody — Gray       1         61       603 00 33-81       Paint, Precedent Underbody — Black       1         1       Paint Pen, Touch-Up, Precedent Underbody — Black       1	56	603 00 18-96				1
59       603 00 33-70       Paint, Touch-Up – Beige       1         59       603 00 33-71       Paint, Touch-Up – Black       1         59       603 00 33-72       Paint, Touch-Up – Burgundy       1         59       603 00 33-73       Paint, Touch-Up – Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up – Dark Gray       1         59       603 00 33-75       Paint, Touch-Up – Dark Green       1         59       603 00 33-76       Paint, Touch-Up – Gray       1         59       603 00 33-77       Paint, Touch-Up – Red       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up – White       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1	57	1	Liquid Gasket (transaxle case)	1	1	1
59       603 00 33-71       Paint, Touch-Up – Black       1         59       603 00 33-72       Paint, Touch-Up – Burgundy       1         59       603 00 33-73       Paint, Touch-Up – Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up – Dark Gray       1       1         59       603 00 33-75       Paint, Touch-Up – Dark Green       1       1         59       603 00 33-76       Paint, Touch-Up – Gray       1       1         59       603 00 33-77       Paint, Touch-Up – Red       1       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1       1         59       603 00 33-79       Paint, Touch-Up – White       1       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1       1         60       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1	58	603 00 29-92				1
59       603 00 33-72       Paint, Touch-Up – Burgundy       1         59       603 00 33-73       Paint, Touch-Up – Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up – Dark Gray       1         59       603 00 33-75       Paint, Touch-Up – Dark Green       1         59       603 00 33-76       Paint, Touch-Up – Gray       1         59       603 00 33-77       Paint, Touch-Up – Red       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up – White       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1	59	603 00 33-70			1	1
59       603 00 33-73       Paint, Touch-Up - Classic Blue (Navy)       1         59       603 00 33-74       Paint, Touch-Up - Dark Gray       1         59       603 00 33-75       Paint, Touch-Up - Dark Green       1         59       603 00 33-76       Paint, Touch-Up - Gray       1         59       603 00 33-77       Paint, Touch-Up - Red       1         59       603 00 33-78       Paint, Touch-Up - Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up - White       1         60       603 00 33-80       Paint, Precedent Underbody - Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody - Black       1	59	603 00 33-71			1	1
59       603 00 33-74       Paint, Touch-Up – Dark Gray       1       1         59       603 00 33-75       Paint, Touch-Up – Dark Green       1       1         59       603 00 33-76       Paint, Touch-Up – Gray       1       1         59       603 00 33-77       Paint, Touch-Up – Red       1       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up – White       1       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1	59	603 00 33-72	Paint, Touch-Up – Burgundy		1	1
59       603 00 33-75       Paint, Touch-Up – Dark Green       1       1         59       603 00 33-76       Paint, Touch-Up – Gray       1       1         59       603 00 33-77       Paint, Touch-Up – Red       1       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1       1         59       603 00 33-79       Paint, Touch-Up – White       1       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1       1         Please refer to the maintenance and service manual	59	603 00 33-73			1	1
59       603 00 33-76       Paint, Touch-Up – Gray       1       1         59       603 00 33-77       Paint, Touch-Up – Red       1       1         59       603 00 33-78       Paint, Touch-Up – Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up – White       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1         Please refer to the maintenance and service manual	59	603 00 33-74	Paint, Touch-Up – Dark Gray	1	1	1
59       603 00 33-77       Paint, Touch-Up - Red       1       1         59       603 00 33-78       Paint, Touch-Up - Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up - White       1         60       603 00 33-80       Paint, Precedent Underbody - Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody - Black       1         Please refer to the maintenance and service manual	59	603 00 33-75			1	1
59       603 00 33-78       Paint, Touch-Up - Royal Blue (Pacific Blue)       1         59       603 00 33-79       Paint, Touch-Up - White       1         60       603 00 33-80       Paint, Precedent Underbody - Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody - Black       1         1       1         Please refer to the maintenance and service manual	59	603 00 33-76			1	1
59       603 00 33-79       Paint, Touch-Up – White       1       1         60       603 00 33-80       Paint, Precedent Underbody – Gray       1         61       603 00 33-81       Paint Pen, Touch-Up, Precedent Underbody – Black       1         Please refer to the maintenance and service manual	59	603 00 33-77	Paint, Touch-Up – Red	1	1	1
60 603 00 33-80 Paint, Precedent Underbody – Gray		603 00 33-78			1	1
61 603 00 33-81 Paint Pen, Touch-Up, Precedent Underbody – Black		1			1	1
Please refer to the maintenance and service manual	1	1			1	1
	61	603 00 33-81	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1
			·	:		
for proper tool application.			Please refer to the maintenance and service manual			
	1					
			·			
			·			
						1
			•			
		1	·			

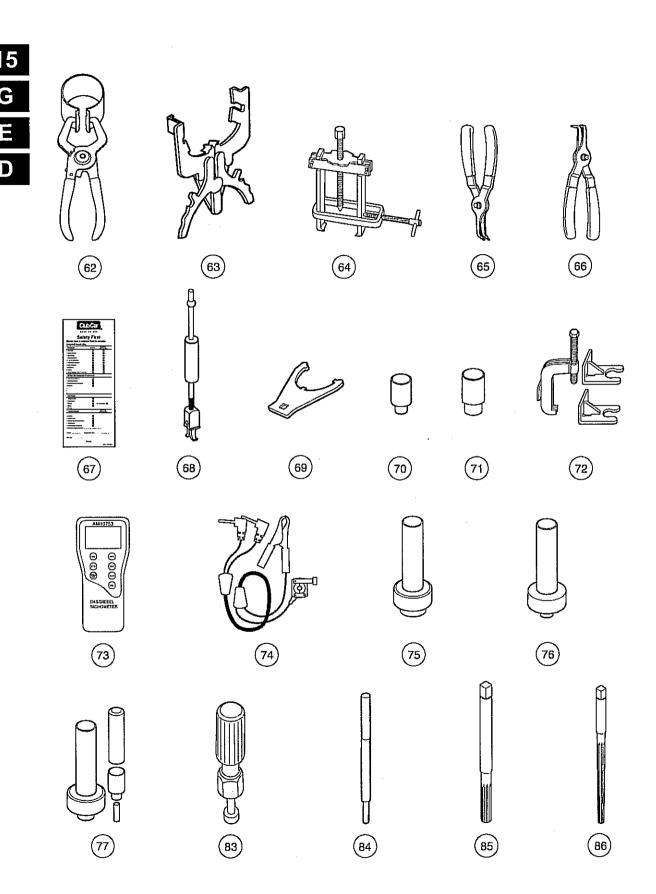

Page 15-8 2007 HUV4421G, HUV4421GXP, HUV4421D, and HUV4421DXP Gasoline and Diesel Vehicles

# MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY	
		1 2 3 4				
62	603 00 19-10	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)	-	1		
63	603 00 19-11	Piston Ring Pliers (for Kawasaki Engines)		1		
64	603 00 19-13	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	603 00 19-14	Retaining Ring Pliers, 45° External	1 1	1	1 1	
66	603 00 19-15	Retaining Ring Pliers, 90" Internal		1	1	
67	603 00 19-16	Safety First Card (50 per pack)		1	1 1	
68	603 00 19-17	Seal Puller		1	1 1	
69	603 00 19-18	Spanner Wrench (for coil over shock front suspension vehicles only)		1		
70	603 00 19-19	Steering Column Bearing Press Tool		1	1 1	
71	603 00 19-20	Steering Column Retaining Ring Tool		1	1	
72	603 00 19-21	Steering Wheel Puller Tool		1	1	
73	603 00 20-07	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	603 00 19-23	Tachometer Diesel Probe (for use with item 73)	1	-		
75	603 00 19-24	Transaxle Axle Seal Tool		1		
76	603 00 19-25	Transaxle Pinion Seal Tool		1		
77	603 00 19-26	Transmission Tool Kit		1		
78	603 00 00-05	Tune-Up Kit, All OHV (for Kawasaki Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	603 00 00-35	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	603 00 00-40	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	603 00 36-13	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)			1	
82	603 00 19-28	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
83	603 00 19-29	Valve Guide Driver				
		(for Honda GX620 Gasoline Engines)		1		
84	603 00 19-30	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
85	603 00 19-31	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		
	·					

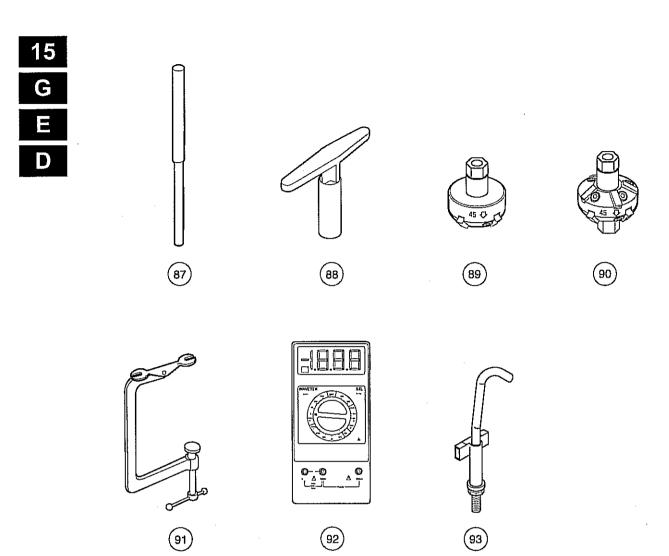

## MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	í
86 87 88 89 90 91	603 00 19-27 603 00 18-78 603 00 18-36 603 00 01-00 603 00 00-43 603 00 00-38 603 00 27-87	1 2 3 4  Valve Seat Cutter Guide	1	1 1 1 1 1 1	. 1	

Part Number and Page	531 30 83-98	1-31	603 00 01-67	5.5
Part Number and Page	531 30 84-04	1-11	603 00 01-68	
531 30 07-38 <i>12-</i> 5	531 30 84-05	1-11	603 00 01-69	
531 30 71-06 <i>4-15</i>	603 00 00-01	15-7	603 00 01-03	
531 30 71-07 <i>4-15</i>	603 00 00-02	6-27, 6-29		
531 30 71-09 <i>4-13</i>		15-3	603 00 01-72	
531 30 71-10 <i>4-15</i>	603 00 00-03		603 00 01-73	
531 30 71-13 <i>4-15</i>	603 00 00-05	15-9 10-3	603 00 01-74	10-7, 10-11
531 30 71-14 <i>4-15</i>	603 00 00-08		603 00 01-75	
531 30 71-25 <i>1-29</i>	603 00 00-10	10-31, 10-33, 10-35 2-3	603 00 01-84	·
531 30 71-35 <i>11-3</i>	603 00 00-33 603 00 00-34	2-3	603 00 01-85	• • •
531 30 71-36 <i>1-29</i>	603 00 00-35	2-3 15-9	603 00 02-20	14-9
531 30 71-46     1-29	603 00 00-35	10-19		1-41, 1-43, 4-7
531 30 73-75 <i>4-15</i>	603 00 00-38	15-11	603 00 02-24	•
531 30 74-12 1-19	603 00 00-38	7-7, 7-11	603 00 02-26	1-41
531 30 74-17     1-23, 1-29	603 00 00-39	15-9	603 00 02-29	=
531 30 74-39 <i>1-43</i>	603 00 00-40	9-11	603 00 02-32	1-41
531 30 74-40 <i>13-17</i>	603 00 00-41	10-9	603 00 02-34	13-3
531 30 74-41 <i>1-43</i>	603 00 00-42	15-11	603 00 02-36	13-3
<b>531 30 81-18</b> <i>1-23, 1-29</i>	603 00 00-51	10-7, 10-11	603 00 02-41 603 00 02-42	
531 30 81-20 <i>1-23</i> , <i>1-29</i>	603 00 00-54	1-25, 1-27, 1-41, 6-19, 6-21	603 00 02-42	
531 30 81-21	603 00 00-55	1-35	603 00 02-40	1-37
531 30 81-22 1-29	603 00 00-56	1-39	603 00 02-54	
531 30 81-23 1-23, 1-29	603 00 00-57	1-37	603 00 02-55	
531 30 81-24	603 00 00-58	1-25, 1-27	603 00 02-56	1-37
531 30 81-39 <i>12-9</i> , <i>12-11</i>	603 00 00-61		603 00 02-61	6-19, 6-21
531 30 81-40	603 00 00-63		603 00 02-63	1-37
531 30 81-68	603 00 00-64		603 00 02-64	
531 30 81-71	603 00 00-65	•	603 00 02-67	
531 30 81-72 <i>10-23</i> 531 30 81-75 <i>1-</i> 7	603 00 00-78	·	603 00 02-78	1-35
531 30 81-76	603 00 00-80	1-37	603 00 02-81	5-11
531 30 81-79	603 00 00-86	13-3	603 00 03-29	8-9, 10-15
531 30 82-44 1-21	603 00 00-87	13-3	603 00 03-39	8-7
531 30 82-50	603 00 00-89	1-41	603 00 03-65	1-39
531 30 82-51 <i>1-25</i>	603 00 00-91	1-43	603 00 03-66	6-23, 6-25
531 30 82-59 1-7	603 00 00-93	4-9, 4-13	603 00 03-71	13-3
531 30 82-72 <i>1-39</i>	603 00 00-94	13-3	603 00 03-76	13-3
531 30 82-87 4-9	603 00 00-95	1-37, 1-39, 5-11	603 00 03-79	1-11
531 30 82-88 <i>4-13</i>	603 00 00-96	1-37, 1-39	603 00 03-84	1-39
531 30 82-93 <i>1-27</i>	603 00 00-97	10-7, 10-11	603 00 03-85	1-39
531 30 83-36 2-3	603 00 01-00	15-11	603 00 04-34	1-39
531 30 83-42 2-3	603 00 01-06	1-39	603 00 04-36	13-11
531 30 83-43 2-3	603 00 01-07	1-37, 1-41	603 00 04-37	7-3, 8-3, 9-3
531 30 83-44 2-3	603 00 01-08	1-41	603 00 04-39	8-3
531 30 83-45 2-3	603 00 01-09	4-13	603 00 04-40	7-3, 8-3, 9-3
531 30 83-47 2-3	603 00 01-16	6-27, 6-29	603 00 04-41	7-3
531 30 83-75 <i>5-</i> 7	603 00 01-19	10-23, 10-25	603 00 04-42	14-3
531 30 83-76 6-9	603 00 01-23	3-3	603 00 04-43	7-15, 10-9
531 30 83-79 <i>1-</i> 7	603 00 01-25	1-23, 1-25, 1-27	603 00 04-45	10-27, 10-29
531 30 83-84 <i>4-</i> 7	603 00 01-30	4-13	603 00 04-46	7-13
531 30 83-86 6-25	603 00 01-35	•	603 00 04-48	1-11
531 30 83-88 <i>11-3</i>	603 00 01-36	1-37	603 00 04-49	
531 30 83-89 <i>5</i> -7	603 00 01-49	10-3	603 00 04-50	·
531 30 83-92 <i>1-</i> 7	603 00 01-57	7-3, 9-3	603 00 04-51	7-3, 9-3
531 30 83-97 <i>1-31</i>	603 00 01-61	6-23, 6-25	603 00 04-52	
	603 00 01-66	<i>5</i> -5	603 00 04-54	4-1, 4-77

000 00 04 57		000 00 00 40	4.44	000 00 00 40	
603 00 04-57		603 00 08-13		603 00 09-49	
603 00 04-62	3-5	603 00 08-14		603 00 09-50	10-7
603 00 04-65	10-3, 10-5, 10-9	603 00 08-16			10-11
603 00 04-66		603 00 08-66		603 00 09-52	
603 00 04-91			13-21	603 00 09-53	4-9
603 00 05-03	10-3, 10-5, 10-9		1-7, 1-11, 1-13, 1-17, 7-15,	603 00 09-55	
603 00 05-12	11-5, 11-7, 14-9	10-9, 14-9	<b></b> -	603 00 09-56	5-7
603 00 05-13	9-3	603 00 08-71		603 00 09-58	11-9
603 00 05-14	9-3	603 00 08-72		603 00 09-60	11-3
603 00 05-21	1-35, 1-37	603 00 08-73		603 00 09-61	11-7
603 00 05-49	5-5		4-9, 12-3, 12-5	603 00 09-63	14-11
603 00 05-50	<b>5-5</b>		1-25, 1-27, 5-3, 5-11	603 00 09-64	14-3
603 00 05-51	5-5	603 00 08-78	1-35	603 00 09-65	10-9
603 00 05-52	5-5	603 00 08-82	1 <del>-</del> 35	603 00 09-66	7-3, 9-3
603 00 05-53	5-5	603 00 08-85	7-15	603 00 09-68	10-5
603 00 05-58	1-25, 1-27, 4-9, 11-3	603 00 08-90	6-27, 6-29	603 00 09-69	10-9
603 00 05-73	1-41	603 00 08-91	5-7	603 00 09-70	14-5, 14-9
603 00 05-76	6-27, 6-29	603 00 08-92	5-3	603 00 09-71	14-5, 14-9
603 00 05-79	1-25, 1-27	603 00 08-94	5-9	603 00 09-72	14-9
603 00 06-07	15-7	603 00 08-95	5-11	603 00 09-73	14-3, 14-9
603 00 06-13	1-35	603 00 08-97	5-3	603 00 09-74	14-3, 14-9
603 00 06-16		603 00 08-98	4-3	603 00 09-75	•
603 00 06-25		603 00 09-06	12-13		10-31, 10-33, 10-35, 12-3,
603 00 06-31	6-23, 6-25	603 00 09-07	9-3	12-5	,,,,
603 00 06-32		603 00 09-08	7-3, 8-3, 9-3	603 00 09-77	14-3
603 00 06-33		603 00 09-09	7-3, 8-3, 9-3	603 00 09-82	12-9
603 00 06-36			7-15, 8-13	603 00 09-83	
603 00 06-82		603 00 09-12		603 00 09-84	9-3
603 00 06-84		603 00 09-13		603 00 09-85	9-3
603 00 06-89			13-11	603 00 09-86	7-3
603 00 06-95		603 00 09-18	12-7	603 00 09-92	
	·		6-25	603 00 09-93	
603 00 06-96	1-21		13-3	603 00 09-94	•
603 00 06-99	1-25		13-3	603 00 09-96	•
603 00 07-27		603 00 09-26	13-21		10-3, 10-5, 10-9
603 00 07-28		603 00 09-27	14-9	603 00 10-01	
603 00 07-36	·		14-9	603 00 10-02	
603 00 07-59		603 00 09-29	14-3	603 00 10-02	
603 00 07-60	<i>'</i>		14-3	603 00 10-05	14-9
603 00 07-61		603 00 09-30			10-9
603 00 07-66		603 00 09-31	10-33	603 00 10-06	10-9
603 00 07-73	1-25, 1-27	603 00 09-32	10-35	603 00 10-07	10-9
603 00 07-74	1-25, 1-27	603 00 09-33	10-31, 10-33, 10-35	603 00 10-08	10-9
603 00 07-77	-	603 00 09-34	14-3	603 00 10-09	10-9
603 00 07-80	1-19, 1-37		4-11	603 00 10-15	7-15, 10-9
603 00 07-81	1-37, 1-39	603 00 09-36	13-5	603 00 10-16	14-9
603 00 07-98	4-7, 4-11	603 00 09-37	7-3, 9-3	603 00 10-21	14-3
603 00 08-01	6-23, 6-25	603 00 09-38	12-9, 12-11	603 00 10-22	
603 00 08-02	1-41	603 00 09-39	12-13	603 00 10-26	13-7
603 00 08-03	1-41	603 00 09-40	10-19	603 00 10-27	13-7
603 00 08-04	1-41	603 00 09-41	5-13	603 00 10-28	13-7
603 00 08-05	1-41		10-31, 10-33, 10-35	603 00 10-29	13-7
603 00 08-06	1-41	603 00 09-44	5-13	603 00 10-30	13-7
603 00 08-07	1-41	603 00 09-45	4-5	603 00 10-31	13-7
603 00 08-08	1-41	603 00 09-46	4-5	603 00 10-32	13-7
603 00 08-09	1-41	603 00 09-47	4-7	603 00 10-33	13-7
603 00 08-11	3-3	603 00 09-48	4-7	603 00 10-34	13-7

603 00 10-35	13-7	603 00 11-27	1-39	603 00 12-07	9-5, 9-11
603 00 10-36	13-7	603 00 11-28	9-3	603 00 12-08	9-33
603 00 10-37	13-7	603 00 11-32	5-11	603 00 12-09	9-5
603 00 10-38	13-7	603 00 11-33	5-11	603 00 12-10	9-5
603 00 10-39	13-7	603 00 11-34	5-11	603 00 12-12	9-11, 9-51
603 00 10-40	13-7	603 00 11-37	1-25, 1-27	603 00 12-13	9-11
603 00 10-41	13-7	603 00 11-38	1-25, 1-27	603 00 12-14	9-11
603 00 10-42	13-7	603 00 11-41	4-9	603 00 12-15	9-11
603 00 10-43	13-7	603 00 11-42	7-15	603 00 12-16	9-11
603 00 10-44	13-9	603 00 11-43	4-9, 10-21, 10-23, 10-25	603 00 12-17	9-11
603 00 10-45	13-7	603 00 11-44		603 00 12-18	9-11
603 00 10-46	13-9	603 00 11-45	1-25, 1-27	603 00 12-19	9-11
603 00 10-47	13-9	603 00 11-46	4-11	603 00 12-20	
603 00 10-48	13-9	603 00 11-47	<i>5-13</i>	603 00 12-21	9-21
603 00 10-49	1-25, 1-27	603 00 11-48	5-13	603 00 12-22	9-27
603 00 10-50	6-27, 6-29	603 00 11-52		603 00 12-23	9-27
603 00 10-51	6-27	603 00 11-54	10-27, 10-29	603 00 12-24	
603 00 10-52		603 00 11-55		603 00 12-25	
	4-11, 10-27, 10-29	603 00 11-56		603 00 12-26	
603 00 10-56		603 00 11-57		603 00 12-27	
603 00 10-57		603 00 11-58	·	603 00 12-28	
603 00 10-62		603 00 11-59		603 00 12-29	
603 00 10-65		603 00 11-62		603 00 12-30	
603 00 10-66		603 00 11-63		603 00 12-31	•
603 00 10-67		603 00 11-64	i i	603 00 12-32	
	6-19, 6-21	603 00 11-65		603 00 12-33	
	6-29	603 00 11-66	•	603 00 12-34	
603 00 10-70		603 00 11-67		603 00 12-35	
603 00 10-72		603 00 11-68		603 00 12-36	
	1-25, 1-27		7-3, 9-3, 12-13	603 00 12-38	
603 00 10-94	10-21	603 00 11-70		603 00 12-38	
	7-15, 8-13	603 00 11-70		603 00 12-38	9-21 9-21
	7-15, 6-15 7-15	603 00 11-72		603 00 12-39	
	1-25, 1-27, 3-5	603 00 11-72		603 00 12-40	
603 00 11-02	3-5	603 00 11-75			
			•	603 00 12-42	
		603 00 11-76 603 00 11-77		603 00 12-43	
603 00 11-05	1			603 00 12-44	
603 00 11-06	3-5	603 00 11-78		603 00 12-45	
603 00 11-07		603 00 11-82 603 00 11-83	10-19	603 00 12-46	
	3-3		•	603 00 12-47	
603 00 11-11	7-3, 9-3	603 00 11-85		603 00 12-48	9-17
603 00 11-12	13-5	603 00 11-86	•	603 00 12-49	9-17, 9-51
603 00 11-13		603 00 11-87	10-11	603 00 12-50	
603 00 11-14	7-3	603 00 11-88	5-11	603 00 12-51	9-7
603 00 11-15	10-19	603 00 11-89	10-23, 10-25	603 00 12-52	9-7
603 00 11-16	13-21	603 00 11-91		603 00 12-53	9-7
603 00 11-17	13-21	603 00 11-93		603 00 12-54	9-7
603 00 11-18	13-23	603 00 11-98		603 00 12-55	
603 00 11-19	13-23	603 00 11-99		603 00 12-56	·=
603 00 11-20	13-23	603 00 12-00	9-5	603 00 12-57	9-23
603 00 11-21	13-23	603 00 12-01	9-5	603 00 12-58	9-23
603 00 11-22	13-23	603 00 12-02	· ·	603 00 12-59	9-23
603 00 11-23	5-7, 13-23	603 00 12-03	9-5	603 00 12-60	9-23
603 00 11-24	13-23	603 00 12-04	9-5	603 00 12-61	9-23
603 00 11-25	13-23	603 00 12-05	9-5	603 00 12-62	
603 00 11-26	0-17	603 00 12-06	9-5, 9-9	603 00 12-63	9-19, 9-51

603 00 12-64	9-19	603 00 13-23	12-5	603 00 13-85	9-35
603 00 12-65	9-19	603 00 13-24	11-9	603 00 13-87	9-35
603 00 12-66	9-19	603 00 13-27	1-39	603 00 13-88	9-35
603 00 12-67	9-19, 14-13	603 00 13-28	9-23	603 00 13-89	9-35
603 00 12-68	9-23	603 00 13-29	9-23	603 00 13-90	9-35
603 00 12-69	9-23	603 00 13-30	9-23	603 00 13-91	9-35
603 00 12-70	9-23	603 00 13-31	9-23	603 00 13-92	9-39
603 00 12-71	9-23	603 00 13-32	9-23	603 00 13-93	9-39
603 00 12-72	9-23	603 00 13-33	9-23, 9-51	603 00 13-94	9-39
603 00 12-73	9-23	603 00 13-34	9-23	603 00 13-95	9-39
603 00 12-74	9-19	603 00 13-35	9-33	603 00 13-96	9-39
603 00 12-75	9-23	603 00 13-36	9-23	603 00 13-97	9-39
603 00 12-76	9-23	603 00 13-37	9-23	603 00 13-98	9-39
603 00 12-77	9-23	603 00 13-38	9-23	603 00 13-99	9-39
603 00 12-78	9-19	603 00 13-39	-	603 00 14-00	9-39
603 00 12-79	9-19	603 00 13-40	9-23, 9-53	603 00 14-01	9-39
603 00 12-80	9-19	603 00 13-41	14-11	603 00 14-02	9-39
603 00 12-81	9-19	603 00 13-42	14-11	603 00 14-03	9-39
603 00 12-82	9-23	603 00 13-43	9-5, 9-33, 14-11	603 00 14-04	9-39
603 00 12-83	9-23	603 00 13-44	14-15	603 00 14-05	9-39
603 00 12-84	9-23	603 00 13-45	14-15	603 00 14-06	9-13, 9-51
603 00 12-85	9-23	603 00 13-46	14-15	603 00 14-07	9-13
603 00 12-86	1-37, 1-39	603 00 13-47	14-15	603 00 14-10	9-51
603 00 12-88	13-3	603 00 13-48	14-15	603 00 14-17	9-43
603 00 12-89	10-23, 10-25	603 00 13-49	9-51, 14-13	603 00 14-18	9-47
603 00 12-91	12-5	603 00 13-50	14-11	603 00 14-19	9-47, 9-51
603 00 12-92	5-7, 5-9, 5-11	603 00 13-51	14-11	603 00 14-20	9-47
603 00 12-94	12-11	603 00 13-53	9-51, 14-11	603 00 14-21	9-49
603 00 12-95	13-3	603 00 13-54	9-41	603 00 14-22	9-45
603 00 12-96	5-3	603 00 13-55	9-37	603 00 14-23	9-49
603 00 12-98	1-25, 1-27, 10-5, 13-3	603 00 13-56	9-37	603 00 14-24	9-49, 9-51
603 00 12-99	10-27	603 00 13-57	9-37	603 00 14-25	9-49
603 00 13-00	1-11, 1-31	603 00 13-58	9-37, 9-51	603 00 14-26	9-49
603 00 13-01	10-19	603 00 13-59	9-37	603 00 14-27	9-25
603 00 13-02	5-7	603 00 13-60	9-37	603 00 14-29	9-25
603 00 13-03	5-7	603 00 13-61	9-37	603 00 14-30	9-25
603 00 13-04	5-7	603 00 13-62	9-37, 9-51	603 00 14-31	9-25
603 00 13-05	4-11, 10-27, 10-29	603 00 13-63	9-37, 9-51	603 00 14-32	9-43
603 00 13-06	1-35, 4-11, 4-13, 4-15, 10-27,	603 00 13-64	9-37	603 00 14-33	9-43
10-29, 13-	3, 14-9	603 00 13-65	9-37	603 00 14-34	9-45
603 00 13-07	•	603 00 13-66	9-41	603 00 14-35	9-45
	1-35, 1-39, 4-7, 4-11, 4-13,	603 00 13-67	9-41	603 00 14-36	9-45
	5-11, 7-3, 7-15, 8-13, 9-3,	603 00 13-68	9-37	603 00 14-37	9-45
	1, 10-27, 10-29, 14-9	603 00 13-69	9-29, 9-37, 9-39, 9-51	603 00 14-38	9-45
603 00 13-09		603 00 13-70	9-29	603 00 14-39	9-45
603 00 13-10		603 00 13-71	9-29	603 00 14-40	9-45
603 00 13-11		603 00 13-72	9-29	603 00 14-41	9-45
603 00 13-12		603 00 13-75	9-41	603 00 14-42	9-45
603 00 13-13		603 00 13-76	9-41	603 00 14-43	9-45
603 00 13-15	10-31, 10-33, 10-35, 11-3	603 00 13-77	9-41	603 00 14-44	9-9
603 00 13-16	•	603 00 13-78	9-41	603 00 14-45	9-45
	7-3, 9-3, 10-31, 10-33, 10-35	603 00 13-79	9-41	603 00 14-46	9-45
603 00 13-19	10-17	603 00 13-81	9-29	603 00 14-47	9-45
603 00 13-20	10-17	603 00 13-82	9-29	603 00 14-48	9-45
603 00 13-21	10-17	603 00 13-83	9-35	603 00 14-49	9-45, 9-51
603 00 13-22	4-11	603 00 13-84	9-35	603 00 14-50	9-9

603 00 14-51	9-9	603 00 15-08	7-13	603 00 15-66	7-7
603 00 14-52	9-45	603 00 15-09	7-13	603 00 15-67	7-7
603 00 14-53	9-45	603 00 15-10	7-13	603 00 15-68	7-5, <i>7-</i> 7
603 00 14-54	9-9	603 00 15-11	7-13	603 00 15-69	7-5
603 00 14-55	9-9, 9-51	603 00 15-12	7-13	603 00 15-70	7-5
603 00 14-56	9-11, 9-37, 9-47	603 00 15-13	7-13	603 00 15-71	7-5
603 00 14-57	9-21	603 00 15-14	7-13	603 00 15-72	7-5
603 00 14-59	9-7, 9-51	603 00 15-15	7-13	603 00 15-73	7-5
603 00 14-60	9-51, 14-11	603 00 15-16	7-13	603 00 15-74	7-5
603 00 14-61	10-17	603 00 15-17	7-13	603 00 15-75	7-5
603 00 14-62	7-7 ·	603 00 15-18	7-13	603 00 15-76	7-5
603 00 14-63	10-17	603 00 15-19	7-13	603 00 15-77	7-5
603 00 14-64	10-17	603 00 15-20	7-13	603 00 15-78	7-5
603 00 14-65	10-17	603 00 15-21	7-13	603 00 15-79	7-5
603 00 14-66	10-17	603 00 15-22	7-13	603 00 15-80	7-5
603 00 14-67	10-17	603 00 15-23	7-13	603 00 15-81	7-5
603 00 14-68	10-17	603 00 15-24	7-13	603 00 15-82	7-7, 7-13
603 00 14-69	10-17	603 00 15-25	7-13	603 00 15-83	7-5
603 00 14-70	10-19	603 00 15-27	7-13	603 00 15-84	7-5
603 00 14-71	10-19	603 00 15-28	7-13	603 00 15-85	1-25, 1-27
603 00 14-72	10-19	603 00 15-29	7-13	603 00 15-86	1-15, 7-3, 9-3
603 00 14-73	10-19	603 00 15-30	7-13	603 00 15-87	7-15, 10-9
603 00 14-74	10-19	603 00 15-31	7-13	603 00 15-88	10-7
603 00 14-75	10-19	603 00 15-32	7-7, 7-13	603 00 15-89	1-31
603 00 14-76	10-19	603 00 15-33	7-11	603 00 15-90	13-21
603 00 14-77	10-19	603 00 15-34	7-11	603 00 15-91	13-21
603 00 14-78	10-19	603 00 15-35	7-11	603 00 15-92	13-21
603 00 14-79	10-19	603 00 15-36	7-11	603 00 15-93	13-21
603 00 14-80	10-19	603 00 15-37	7-11	603 00 15-97	5-13
603 00 14-81	10-19	603 00 15-38	7-11	603 00 15-99	5-13, 13-3
603 00 14-82	10-19	603 00 15-39	7-11	603 00 16-00	13-3
603 00 14-83	7-5, 10-19	603 00 15-40	7-11	603 00 16-01	14-3
603 00 14-84	7-11, 10-19	603 00 15-41	7-11	603 00 16-02	5-13
603 00 14-85	7-11, 10-19	603 00 15-42	7-11	603 00 16-03	5-5, 8-3
603 00 14-86	7-11, 10-19	603 00 15-43	7-11	603 00 16-05	4-9
603 00 14-87	7-9	603 00 15-44	7-11	603 00 16-06	5-9, 5-11
603 00 14-88	7-9	603 00 15-45	7-11	603 00 16-07	5-9, 5-11
603 00 14-89	7-9	603 00 15-46	7-11	603 00 16-08	12-9, 12-11
603 00 14-90	7-9	603 00 15-47	7-11	603 00 16-09	12-9, 12-11
603 00 14-91	7-9	603 00 15-48	7-11	603 00 16-10	12-11
603 00 14-92	7-9	603 00 15-49	7-11	603 00 16-11	12-9, 12-11
603 00 14-93	7-9	603 00 15-50	7-11	603 00 16-12	12-11
603 00 14-94	7-9	603 00 15-51	7-11	603 00 16-13	12-9, 12-11
603 00 14-95	7-9	603 00 15-52	7-11	603 00 16-14	12-11
603 00 14-96	7-9	603 00 15-53	7-11	603 00 16-15	12- <del>9</del>
603 00 14-97	7-9	603 00 15-54	7-11	603 00 16-16	12-9, 12-11
603 00 14-98	7-9	603 00 15-55	7-7	603 00 16-17	12-9, 12-11
603 00 14-99	7-9	603 00 15-56	7-7	603 00 16-18	12-9, 12-11
603 00 15-00	7-9	603 00 15-58	7-7, 7-13	603 00 16-19	12-9, 12-11
603 00 15-01	7-9	603 00 15-59	7-7	603 00 16-20	12-9
603 00 15-02	7-9	603 00 15-60	7-7	603 00 16-21	13-21
603 00 15-03	7-9	603 00 15-61	7-7	603 00 16-22	13-13, 13-17, 13-21
603 00 15-04	7-13	603 00 15-62	7-7	603 00 16-23	13-21
603 00 15-05	7-13	603 00 15-63	7-7	603 00 16-24	13-13, 13-17, 13-21
603 00 15-06	7-13	603 00 15-64	7-7	603 00 16-25	13-23
603 00 15-07	7-13	603 00 15-65	7-7	603 00 16-26	13-23

603 00 16-28	13-13, 13-17, 13-21	603 00 17-01	9-5	603 00 17-86	13-15, 13-19
603 00 16-29	13-21	603 00 17-02	9-5	603 00 17-87	13-13, 13-17
603 00 16-30	13-21	603 00 17-03	9-5	603 00 17-8B	13-23
603 00 16-31	13-23	603 00 17-04	9-5	603 00 17-89	13-23
603 00 16-32	13-21	603 00 17-05	9-9	603 00 17-90	13-23
603 00 16-33	13-21	603 00 17-06	9-9	603 00 17-91	13-23
603 00 16-35	12-13	603 00 17-07	9-9	603 00 17-92	1-41
603 00 16-36	12-13	603 00 17-08	9-9	603 00 18-10	9-11
603 00 16-37	12-13	603 00 17-09	9-9	603 00 18-13	9-13
603 00 16-38	12-13	603 00 17-11	9-11	603 00 18-14	9-21
603 00 16-39	12-13	603 00 17-12	9-11	603 00 18-15	9-31
603 00 16-40	13-15, 13-19	603 00 17-13	9-11	603 00 18-16	9-31
603 00 16-41	13-13, 13-17	603 00 17-15	9-15	603 00 18-17	9-31
603 00 16-42	13-13, 13-15, 13-17, 13-19	603 00 17-17	9-17	603 00 18-18	9-35
603 00 16-43	13-13, 13-17	603 00 17-18	9-19	603 00 18-19	9-33, 9-43
603 00 16-44	13-15, 13-19	603 00 17-19	9-23, 9-53	603 00 18-20	9-43
603 00 16-45	13-13, 13-15, 13-17, 13-19	603 00 17-20	9-23	603 00 18-21	9-33
603 00 16-46	13-15, 13-19	603 00 17-22	9-25	603 00 18-22	9-47
603 00 16-47	13-13, 13-17	603 00 17-23	9-27	603 00 18-23	9-13
603 00 16-48	13-13, 13-15, 13-17, 13-19	603 00 17-24	9-27	603 00 18-24	9-13
603 00 16-49	13-13, 13-15, 13-17, 13-19	603 00 17-25	9-29	603 00 18-25	9-13
603 00 16-51	13-13, 13-15, 13-17, 13-19	603 00 17-26	9-29	603 00 18-26	9-13
603 00 16-53	13-13, 13-17	603 00 17-28	9-29	603 00 18-27	9-13
603 00 16-54	13-13, 13-17	603 00 17-29	9-31	603 00 18-28	9-13, 14-11
603 00 16-55	13-13, 13-17	603 00 17-30	9-31	603 00 18-29	9-13
603 00 16-5B	13-13, 13-17	603 00 17-31	9-11, 9-51	603 00 18-30	9-13
603 00 16-61	9-5	603 00 17-32	9-37	603 00 18-31	9-13
603 00 16-62	9-9	603 00 17-33	9-37	603 00 18-32	15-3
603 00 16-63	9-33	603 00 17-34	9-39	603 00 18-33	15-3
603 00 16-64	9-37	603 00 17-35	9-39	603 00 18-34	15-3
603 00 16-67	7-15, 10-9	603 00 17-36	9-41	603 00 18-35	15-3
603 00 16-68	10-19	603 00 17-38	9-33	603 00 18-36	15-11
603 00 16-69	13-5	603 00 17-39	9-33	603 00 18-37	15-3
603 00 16-70	4-3, 4-5	603 00 17-40	9-33	603 00 18-38	15-3
603 00 16-73	1-15, 1-23, 1-25, 1-27, 1-31	603 00 17-41	9-33	603 00 18-39	<i>15-3</i>
603 00 16-80	10-9	603 00 17-42	9-33	603 00 18-40	15-3
603 00 16-81	13-13, 13-17	603 00 17-43	9-33	603 00 18-41	15-3
603 00 16-82	7-15	603 00 17-44	9-33	603 00 18-42	15-3
603 00 16-83	7-15, 8-13	603 00 17-46	9-5	603 00 18-43	15-3
603 00 16-84	5-7	603 00 17-47	14-11	603 00 18-44	15-3
603 00 16-85	7-11	603 00 17-48	14-11	603 00 18-46	15-3
603 00 16-86	7-11	603 00 17-49	14-11	603 00 18-47	15-3
603 00 16-87	7-11	603 00 17-50	14-13	603 00 18-48	15-3
603 00 16-88	10-17	603 00 17-51	9-33	603 00 18-49	15-3
603 00 16-89	10-17	603 00 17-52	9-49	603 00 18-50	15-5
603 00 16-90	7-9	603 00 17-53	9-49, 11-9	603 00 18-51	15- <b>5</b>
603 00 16-91	7-9	603 00 17-55	9-51	603 00 18-52	15-5
603 00 16-92	7-9	603 00 17-56	9-51	603 00 18-53	15-5
603 00 16-93	7-9	603 00 17-57	9-53	603 00 18-54	15-5
603 00 16-94	7-9	603 00 17-58	9-23, 9-53	603 00 18-55	15-5
603 00 16-95	7-13	603 00 17-59	1-11	603 00 18-56	15-5
603 00 16-96	7-13	603 00 17-60	1-23, 1-25, 1-27	603 00 18-57	15-5
603 00 16-97	10-19	603 00 17-62	9-5, 9-51	603 00 18-58	1 <b>5-</b> 5
603 00 16-98	10-31, 10-33, 10-35	603 00 17-63	5-13	603 00 18-59	15-5
603 00 16-99	10-31, 10-33, 10-35	603 00 17-78	7-5	603 00 18-60	15-5
603 00 17-00	9-5	603 00 17-80	13-13, 13-17	603 00 18-61	15-5

603 00 18-62	15-5	603 00 29-36	15-5			603 00 34-33	1-11
603 00 18-63	15-5	603 00 29-38	15-5			603 00 34-34	1-11
603 00 18-64	15-5	603 00 29-39	15-5			603 00 34-35	1-15
603 00 18-67	15-5	603 00 29-40	15-5			603 00 34-36	1-15
603 00 18-75	15-5	603 00 29-41	15-5			603 00 34-37	1-15
603 00 18-78	15-11	603 00 29-47	11-3			603 00 34-38	1-15
603 00 18-81	15-7	603 00 29-63	1-39, 5-5,	10-21,	10-23,	603 00 34-39	1-15
603 00 18-83	15-7	10-25				603 00 34-40	1-15
603 00 18-86	15-7	603 00 29-92	15-7			603 00 34-41	1-15
603 00 18-87	15-7	603 00 30-09	12-11			603 00 34-43	1-7, 1-9, 1-17
603 00 18-89	15-7	603 00 30-45	1-7			603 00 34-44	1-17
603 00 18-90	15-7	603 00 30-57	10-7, 10-11			603 00 34-45	1-1.7
603 00 18-92	15-7	603 00 33-38	1-3			603 00 34-46	1-17
603 00 18-94	15-7	603 00 33-52	1-33			603 00 34-47	1-17
603 00 18-95	15-7	603 00 33-53	1-33			603 00 34-48	1-17
603 00 18-96	15-7	603 00 33-59	1-15			603 00 34-49	1-17
603 00 19-10	15-9	603 00 33-69	15-7			603 00 34-50	1-17
603 00 19-11	15-9	603 00 33-70	15-7			603 00 34-51	1-17
603 00 19-13	15-9	603 00 33-71	15-7			603 00 34-52	1-19
603 00 19-14	15-9	603 00 33-72	15-7			603 00 34-53	1-21
603 00 19-15	15-9	603 00 33-73	15-7			603 00 34-54	1-23
603 00 19-16	15-9	603 00 33-74	15-7			603 00 34-56	1-23
603 00 19-17	15-9	603 00 33-75	15-7			603 00 34-57	1-23
603 00 19-18	<i>15-9</i>	603 00 33-76	15-7			603 00 34-58	1-23
603 00 19-19	15-9	603 00 33-77	15-7			603 00 34-59	1-23
603 00 19-20	15-9	603 00 33-78	15-7			603 00 34-61	1-23
603 00 19-21	15-9	603 00 33-79	15-7			603 00 34-64	1-25, 1-27
603 00 19-23	15-9	603 00 33-80	15-7			603 00 34-66	1-27
603 00 19-24	15-9	603 00 33-81	15-7			603 00 34-68	1-29
603 00 19-25	15-9	603 00 33-91	1-3			603 00 34-69	1-29
603 00 19-26	15-9	603 00 33-93	1-5			603 00 34-70	1-29
603 00 19-27	15-11	603 00 33-94	1-3, 1-5			603 00 34-71	1-29
603 00 19-28	15-9	603 00 33-95	1-3, 1-5			603 00 34-72	1-31
603 00 19-29	15-9	603 00 33-97	1-7			603 00 34-73	1-33
603 00 19-30	15-9	603 00 33-98	1-7			603 00 34-74	1-33
603 00 19-31	15-9	603 00 33-99	1-7			603 00 34-75	1-23, 1-25, 1-27, 1-33
603 00 19-33	7-15	603 00 34-00	1-7			603 00 34-78	1-43
603 00 19-34	7-7	603 00 34-01	1-7			603 00 34-79	1-43
603 00 20-07	15-9	603 00 34-02	1-7			603 00 34-80	1-43
603 00 22-62	1-19	603 00 34-03	1-7			603 00 34-81	1-43
603 00 25-28	10-7	603 00 34-06	1-9			603 00 34-82	3-3
603 00 26-55	1-37	603 00 34-07	1-9			603 00 34-83	3-3
603 00 26-87	15-7	603 00 34-10	1-9			603 00 34-84	3-3
603 00 27-63	1-35	603 00 34-11	1-9			603 00 34-85	3-3
603 00 27-65	1-37	603 00 34-15	1-9			603 00 34-86	3-5
603 00 27-70	3-3	603 00 34-16	1-9			603 00 34-89	3-7
603 00 27-86	1-35	603 00 34-19	1-9			603 00 34-90	3-7
603 00 27-87	15-11	603 00 34-20	1-9				3-7
603 00 28-00	9-29, 9-51	603 00 34-22	1-9				3-7
603 00 28-01	9-29	603 00 34-24	1-9			603 00 34-97	3-9
603 00 28-26	13-15, 13-19	603 00 34-25	1-9			603 00 34-98	3-9
603 00 28-36	13-15, 13-19	603 00 34-26	1-9			603 00 35-01	3-9
603 00 28-85	9-3	603 00 34-27	1-9			603 00 35-02	3-9
603 00 29-24	4-13	603 00 34-28	1-9			603 00 35-05	3-11
603 00 29-25	4-13	603 00 34-29	1-9			603 00 35-06	3-11
603 00 29-35	15-5	603 00 34-32	1-11		•	603 00 35-09	3-11

603 00 35-10	3-11	603 00 35-77	14-5	603 00 37-97	10-13
603 00 35-11	3-7, 3-9, 3-11, 3-13	603 00 35-78	14-5	603 00 37-98	10-13
603 00 35-12	3-7, 3-9, 3-11, 3-13	603 00 35-79	14-7	603 00 37-99	10-13
603 00 35-13	3-13	603 00 35-80	14-7	603 00 38-00	10-13
603 00 35-14	3-13	603 00 35-81	14-7	603 00 38-01	10-15
603 00 35-15	3-7, 3-9, 3-11, 3-13	603 00 35-82	14-7	603 00 38-02	10-15
603 00 35-16	3-7, 3-9, 3-11, 3-13	603 00 35-83	14-7	603 00 38-03	10-15
603 00 35-17	3-13	603 00 35-84	14-9	603 00 38-04	10-3
603 00 35-18	3-13	603 00 35-85	14-9	603 00 38-05	10-13
603 00 35-19	4-7	603 00 35-86	14-9	603 00 38-06	10-13
603 00 35-20	<i>4</i> -9	603 00 35-87	14-9	603 00 38-07	10-13
603 00 35-21	4-9	603 00 35-88	14-9	603 00 38-08	6-5
603 00 35-22	4-15	603 00 35-89	1-7	603 00 38-09	8-5, 8-11
603 00 35-23	4-15	603 00 35-90	1-9	603 00 38-10	8-7
603 00 35-24	4-15	603 00 35-91	1-31	603 00 38-11	8-7
603 00 35-25	4-15	603 00 35-92	7-3, 9-3, 11-9	603 00 38-12	8-7
603 00 35-26	4-15	603 00 35-93	7-7	603 00 38-13	8-7
603 00 35-28	5-3	603 00 35-94	7-15	603 00 38-14	8-7
603 00 35-29	5-5	603 00 35-95	9-11	603 00 38-15	8-7
603 00 35-32	5-7	603 00 35-96	9-29	603 00 38-16	8-5
603 00 35-33	<i>5</i> -7	603 00 35-97	9-31	603 00 38-17	8-5
603 00 35-34	5-7	603 00 35-98	9-33	603 00 38-18	B-15
603 00 35-35	<i>5</i> -7	603 00 35-99	10-29	603 00 38-19	8-9, 8-15
603 00 35-36	5-7	603 00 36-00	11-7	603 00 38-20	8-7, 8-9, 10-15
603 00 35-37	5-7	603 00 36-01	12-5	603 00 38-21	8-9
603 00 35-38	5-7	603 00 36-02	12-9	603 00 38-22	8-9
603 00 35-39	5-7	603 00 36-03	13-23	603 00 38-23	8-9
603 00 35-40	5-7	603 00 36-13	15-9	603 00 38-24	
603 00 35-41	<b>5-7</b>	603 00 36-17	1-7	603 00 38-25	8-9
603 00 35-42	5-7	603 00 37-70	8-7	603 00 38-26	8-9
603 00 35-43	5-7	603 00 37-71	8-7	603 00 38-27	8-9
603 00 35-44	5-7	603 00 37-72	10-13	603 00 38-28	8-9
603 00 35-47	· · · · · · · · · · · · · · · · · · ·	603 00 37-73	10-13	603 00 38-29	8-9
603 00 35-48	5-9, <i>5-11</i>	603 00 37-74	10-13	603 00 38-30	10-15
603 00 35-49	6-9	603 00 37-75	10-13	603 00 38-31	10-15
603 00 35-50	6-17	603 00 37-76	10-13	603 00 38-32	10-15
603 00 35-51	6-17	603 00 37-77	10-13	603 00 38-33	8-3
603 00 35-54	6-23, 6-25	603 00 37-78	10-13	603 00 38-34	10-27
603 00 35-55	'	603 00 37-79	10-13	603 00 38-35	6-13
603 00 35-56	6-25	603 00 37-80	10-13	603 00 38-36	10-21
603 00 35-57	7-3	603 00 37-81	10-13	603 00 38-37	10-21
603 00 35-58	10-23	603 00 37-82	10-13	603 00 38-38	10-21
603 00 35-59	1-11, 11-3	603 00 37-83	10-13	603 00 38-39	8-13
603 00 35-60	13-3	603 00 37-84	10-13	603 00 38-40	10-27, 10-29
603 00 35-61	13-3 12-5	603 00 37-85	10-13	603 00 38-41	11-5
603 00 35-62	13-5	603 00 37-86	10-13	603 00 38-42	8-3
603 00 35-63	13-9	603 00 37-87	10-13	603 00 38-43	8-13
603 00 35-66	13-13	603 00 37-88	10-13	603 00 38-44	8-13
603 00 35-69	13-13, 13-17	603 00 37-89	10-13	603 00 38-45	8-3
603 00 35-70	13-13, 13-17 13-15, 13-10	603 00 37-90 603 00 37-91	10-13 10-13	603 00 38-46	10-31 P-13
603 00 35-71	13-15, 13-19 13-15, 13-10	603 00 37-91	10-13 10-13	603 00 38-47	8-13 1-17
603 00 35-72 603 00 35-73	13-15, 13-19 13-23	603 00 37-92 603 00 37-93	10-13 10-13	603 00 38-48	
603 00 35-73	13-23 13-23	603 00 37-93	10-13 10-13	603 00 38-49	10-15 10-15
603 00 35-74	13-23 13-23	603 00 37-94	10-13 10-13	603 00 38-50 603 00 38-51	10-15 10-15
603 00 35-76	14-5	603 00 37-95	10-13	603 00 38-52	10-15 10-15
300 00 00-70	., .	300 00 01-30	10 10	202 00 00-02	10-10

603 00 38-53	10-15	603 00 39-09	8-17	603 00 39-65 8-9
603 00 38-54	8-9	603 00 39-10	8-17	603 00 39-66 10-13
603 00 38-55	8-9, 10 <b>-</b> 15	603 00 39-11	8-17	
603 00 38-56	8-9	603 00 39-12	8-17	A
603 00 38-57	8-9	603 00 39-13	8-19	A-arm 5-7
603 00 38-58	8-9	603 00 39-14	8-7	accelerator cable 10-23, 10-25
603 00 38-59	8-9	603 00 39-15	8-19	accelerator pedal 10-27, 10-29
603 00 38-60	8-9	603 00 39-16	8-19	accelerator pedal adjustment tool 15-3
603 00 38-61	8-7	603 00 39-17	8-19	accessory receptacle 6-23, 6-25
603 00 38-62	8-7	603 00 39-18	8-19	actuator 1-39
603 00 38-63	8-7	603 00 39-19	8-19	adapter
603 00 38-64	8-7	603 00 39-20	8-19	actuator 1-39
603 00 38-65	8-7	603 00 39-21	8-19	
603 00 38-66	8-7		8-19	cable (IQDM) 15-7 hose 7-15, 8-13
603 00 38-67		603 00 39-23		-
	8-5	603 00 39-24		intake, engine 10-19
	8-5	603 00 39-25		oil filter 7-15
	8-5	603 00 39-26		tube 7-15, 8-13, 10-9
	8-5	603 00 39-27		adhesive, guide ring 15-3
603 00 38-72			8-5, 8-9, 8-11, 8-15	adjuster
603 00 38-73		603 00 39-29		hydraulic brake 15-7
603 00 38-74		603 00 39-30		adjuster, forward/aft 1-25, 1-27
603 00 38-75		603 00 39-31		adjuster, slide 5-7
603 00 38-76		603 00 39-32		adjuster, slider 1-25, 1-27
603 00 38-76			4	air clean support 10-31, 10-33, 10-35
		603 00 39-33		air filter 10-31, 10-33, 10-35
603 00 38-78		603 00 39-34		air filter canister 10-31, 10-33, 10-35
603 00 38-79		603 00 39-35		air filter evacuator 10-31, 10-33, 10-35
603 00 38-80		603 00 39-36		alternator 9-33
	8-11	603 00 39-37		arbor 15-3
603 00 38-82		603 00 39-38		arm
603 00 38-83		603 00 39-39		A- <i>5-7</i>
	8-11	603 00 39-40		rocker 9-45
	8-11	603 00 39-41		valve rocker 7-11
	8-11	603 00 39-42		assembly
603 00 38-87		603 00 39-43		accelerator pedal 10-29
603 00 38-88		603 00 39-44		adjusting bolt 9-29
	B-11	603 00 39-45		alternator 9-33
	B-11	603 00 39-46		bearing case cover 9-19
603 00 38-91	8-17	603 00 39-47		brake line 4-9
	8-17	603 00 39-48	8-15	brake pedal 4-11, 4-15
603 00 38-93		603 00 39-49	8-15	brake rotor 4-9, 13-21
603 00 38-94		603 00 39-50	8-3	bucket seat 1-25
603 00 38-95		603 00 39-51	8-13	camshaft 7-13, 9-21
603 00 38-96		603 00 39-52	8-13	case, main bearing 9-19
603 00 38-97	8-17	603 00 39-53	8-13	connecting rod 7-13, 9-23
603 00 38-98	8-17	603 00 39-54	8-13	crankcase cover 7-9
603 00 38-99	8-17	603 00 39-55	8-3	cylinder head cover 9-13
603 00 39-00	8-17	603 00 39-56	11-5	differential and carrier 13-23
603 00 39-01	8-17	603 00 39-57	6-5, 6-9, 6-13	drain cock 9-5
603 00 39-02	8-17	603 00 39-58		filler cap 4-7
603,00 39-03	8-17	603 00 39-59	8-3	forward/reverse 13-3
603 00 39-04	8-17	603 00 39-60	8-3	fuel camshaft 9-27
603 00 39-05	8-17	603 00 39-61	8-3	fuel cap 10-11
603 00 39-06	8-17	603 00 39-62	8-11	fuel filter 10-9
603 00 39-07	8-17	603 00 39-63	10-21	fuel injection pump 9-35
603 00 39-08	8-17	603 00 39-64	8-7	fuel pump 10-19
				• · · · · · · · · · · · · · · · · · · ·

fuel tank vent 10-7, 10-11	barb, vent 10-3, 10-5, 10-9	continues 132 130
gear case 13-13, 13-17, 13-23	base, seat holder 1-25, 1-27	seat back 1-23, 1-29 seat belt 1-23, 1-29
governor 7-9	battery clamp 6-27, 6-29	seatbelt 1-25, 1-27
governor 7-5 governor fork 9-41	battery discharge machine 15-3	steering column 1-11
governor fork lever 9-41	battery terminal protector spray 15-3	transmission cable 7-3, 9-3
headlight harness 1-7	battery thermometer 15-3	transmission mounting 7-3, 9-3
hinge, tilt bed 1-37	battery, 12-volt 6-27, 6-29	brake adjustment tool 15-3
idle apparatus 9-29	bearing	brake cable 4-13
inner ball joint 5-5	ball (steering pinion) 5-5	brake cable release tool 15-3
intake manifold 9-47	lower pinion 5-5	brake caliper 4-3, 4-5
latch, tilt bed 1-37	needle 7-13, 13-7, 13-13, 13-15, 13-17,	brake fluid reservoir 4-7
muffler 13-5	13-19, 13-23	brake line 4-9
nozzle holder 9-39	radial ball 7-13	brake line, front 4-9
oil pump 9-17	bearing and oil seal remover 15-3	brake pad service kit 4-3, 4-5
oil pump cover 7-9	bearing case cover 9-19	brake pedal 4-11, 4-15
overflow pipe 9-39	bearing case, main 9-19	brake pedal adjustment tool 15-3
pinion 13-23	bearing driver set 15-3	brake pedal tension tool 15-3
piston ring 9-23, 9-53	bearing puller 15-3	brake return spring 4-13
reservoir, remote 4-7	bearing puller wedge 15-3	brake rotor 4-9, 13-21
rocker arm 9-45	bed, tilt 1-37	breather cover 9-13
speed plate 9-37	belicrank 4-15, 13-15, 13-19	breather shield 9-13
tailgate 1-41	bellows 5-5, 13-21	breather tube 9-13, 10-19
tether 1-41	belt, drive 12-7	breather valve 7-13, 9-13
thermostat 14-11	belt, V- 9-33	brushguard 1-3
tilt bed 1-37	bench seat back 1-23, 1-29	brushguard kit 1-3
tire 2-3	bench seat bottom 1-23	bucket seat 1-25, 1-27
valve, lifter 7-13	bench seat kit 1-29	buckle, seatbelt 1-31
valve, solenoid 10-17	block, differential spacer 13-5	bullet, detent 13-15, 13-19
water pump 14-13	block, engine 9-5	bumper 14-9
wire 6-27, 6-29, 10-7, 10-11	block, fuse 6-19, 6-21	bed 1-35, 1-39
assembly, sub-	bobbin, coil with press fit 13-7	rubber 1-41
front differential upright 5-7	body, fascia 1-7	bumper plate 1-5
gear case 13-13, 13-17	body, front cowl 1-9	bushing 1-39
moveable drive clutch 12-9, 12-11	bolt	A-arm 5-7
roller weight 12-9	adjusting 9-29	anti-sway bar 5-11
spider 12-9, 12-11	banjo <i>4-3</i> , <i>4-5</i>	flanged bronze 9-21
stationary 12-9, 12-11	drain plug 7-9	forward/reverse 13-3
swingarm 5-13	bottle, coolant 14-5	greaseless 4-11, 10-27, 10-29
weight clutch 12-9, 12-11	bracket	link <i>5-11</i>
axle 13-21	actuator 1-39	lower arm 5-7
axle tube 13-23	anti-sway bar 5-11	Permiglide 13-7
axle, rear, guard mounts 13-21	bed latch 1-35	piston pin 9-23, 9-53
	brake line 4-9	pivot, urethane 5-13
В	brake pedal 4-11	plain <i>13-</i> 9
ball	choke cable 10-19	return line 10-11
check 9-21	cover inlet 12-5	self-lubricating 13-7
crankshaft 9-23	draw latch 1-7	steel 1-37
governor 9-27	equalizer 4-13	teffon 5-13
injection pump 9-27	hood support 1-17	urethane 1-37
steel 7-9	hydraulic line 4-9, 5-9, 5-11	button, thrust 13-7
valve <i>9-11</i>	muffler 11-3	buzzer, reverse 13-3
ball joint 5-7, 10-23, 10-25	oil filter mount 7-15, 8-13	_
band, pipe 14-11, 14-15	park brake 4-15	С
banjo bolt 4-3, 4-5	park brake belicrank 4-15	cable
bar clamp 14-9	radiator support 14-9	accelerator 10-23, 10-25
bar, sway 5-11	rocker arm 9-45	bell crank 4-13, 4-15

brake <i>4-13</i>	clip, body trim 1-9	head 7-11
choke 10-23	clip, brake line 4-9, 10-21, 10-23, 10-25	head filler 7-11
IQDM 15-7	clip, breather tube 10-19	heat proof 9-49
main bell crank 4-13	clip, governor 7-9	input 13-9
transmission 10-23, 10-25	clip, piston pin 7-13	oil filter 7-9
cage, roll 13-7	clip, return pipe 9-39	oil pump 7-9
calibration test module 15-3	clip, tube 10-19	rocker switch hole 6-23, 6-25
caliper, brake 4-3, 4-5	clip, wire harness 10-19	thermostat 14-11
cam installation tool 15-3	clutch alignment tool 15-5	cover plate, output 13-7
camshaft 7-13, 9-21	clutch cover 12-9, 12-11	cover, dash storage 1-17
camshaft, fuel 9-27	clutch housing 13-7	cowl panel, driver-side 1-9
canister, air filter 10-31, 10-33, 10-35	clutch removal tool 15-3	cowl panel, passenger-side 1-9
cap	clutch tool kit 15-5	cowl, front body 1-9
air filter 10-31, 10-33, 10-35	clutch, diesel 12-11	crank 9-23
bolt assembly 9-29	clutch, gas 12-9	crankcase 7-9
connecting rod 7-13	coil	crankcase cover 7-9
filler 4-7	charge 7-7	crankshaft 7-13, 9-23
fuel 10-11	Ignition 7-7	C-type stop ring 5-5
fuel tank 10-7	pocket insert 13-7	cup holder 1-17
inlet 12-5	coil & shock absorber 5-9, 5-11	cup holder, seat 1-25, 1-27
noise suppressor 7-5, 7-7	coil with press-fit bobbin 13-7	cutter, valve seat 15-5, 15-11
oil filler 7-9	collar, alternator assembly 9-33	CVT 12-13
pressure 14-5	collar, crankshaft 9-23	CVT cover kit, sealed 12-5
rubber 5-7, 5-13	collar, idle gear 9-21	CVT cover kit, unsealed 12-3, 12-5
sealing 9-5, 9-9	collar, lever 9-37	cylinder head 7-11, 9-9
spark plug 7-5, 7-7	collet 9-45	cylinder head cover 9-13
speed control plate 9-37	column, steering 5-3	cylinder, master 4-7
steering wheel 5-3	communication display module 15-5	oymiaot, maatar
atauting milaar a a	commencement archief manage to a	
valve 9-45	compression nauge 15-5	D
valve 9-45	compression gauge 15-5 compressor, piston ring 15-9	D
cap, front corner 1-41	compressor, piston ring 15-9	dash 1-17
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9	compressor, piston ring 15-9 compressor, valve spring 15-11	dash 1-17 dash storage cover 1-17
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23	dash 1-17 dash storage cover 1-17 decal
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41	dash 1-17 dash storage cover 1-17 decal crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13 hose 10-3, 10-5, 10-9 p- (fuel filter) 7-3, 9-3, 10-9	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe mounting tab 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 corner cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13 clutch 12-9, 12-11	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5 deflector oil 13-13, 13-17
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13 hose 10-3, 10-5, 10-9	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe mounting tab 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13 clutch 12-9, 12-11 crankcase 7-9	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tailgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5 deflector oil 13-13, 13-17 diaphragm tube 10-19
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13 hose 10-3, 10-5, 10-9 p- (fuel filter) 7-3, 9-3, 10-9 plpe 9-39	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13 clutch 12-9, 12-11 crankcase 7-9 CVT 7-3, 9-3, 12-3, 12-5, 12-9, 12-11	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5 deflector oil 13-13, 13-17 diaphragm tube 10-19 diesel tachometer probe 15-9
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13 hose 10-3, 10-5, 10-9 p- (fuel filter) 7-3, 9-3, 10-9 pipe 9-39 wire 7-7, 7-13	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 comer cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13 clutch 12-9, 12-11 crankcase 7-9 CVT 7-3, 9-3, 12-3, 12-5, 12-9, 12-11 cylinder head 9-13	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5 deflector oil 13-13, 13-17 diaphragm tube 10-19 diesel tachometer probe 15-9 differential and carrier 13-23
cap, front corner 1-41 carburetor air vent tube 10-3, 10-5, 10-9 carburetor float level tool 15-7 carburetor, Honda 10-17 card, safety first 15-9 carrier, differential and 13-23 case gear 9-11, 13-13, 13-17, 13-21, 13-23 governor ball 9-27 main bearing 9-19 case cover, bearing 9-19 center console cover 1-25, 1-27 chain, transmission 13-13, 13-17 charge coil 7-7 charger bezel tool 15-3 choke cable 10-23 clamp bar 14-9 battery 6-27, 6-29 breather tube 9-13 hose 10-3, 10-5, 10-9 p- (fuel filter) 7-3, 9-3, 10-9 pipe 9-39 wire 7-7, 7-13 clevis pin 4-7, 4-11	compressor, piston ring 15-9 compressor, valve spring 15-11 connecting rod 7-13, 9-23 connector, relay 6-19, 6-21 continuity tester 15-5 coolant bottle 14-5 coolant exchanger 14-3 coolant fill tee 14-3 coolant lamp sensor 14-11 coolant pipe 14-7 coolant pipe mounting tab 14-7 coolant temperature indicator light 6-25 cooling fan 7-5, 14-3 cord, glow plug 9-39 corner cap 1-41 cotter, rue ring 5-13 cover 7-9 alternator assembly 9-33 bearing case 9-19 breather 7-13, 9-13 clutch 12-9, 12-11 crankcase 7-9 CVT 7-3, 9-3, 12-3, 12-5, 12-9, 12-11 cylinder head 9-13 electrical 6-19, 6-21	dash 1-17 dash storage cover 1-17 decal  crush area warning 3-3 driver/passenger 3-5 ground warning 3-5 hot manifold warning 3-5 hot surface warning 1-25, 1-27, 3-5 Husqvarna tallgate 1-41 HUV 3-7, 3-9, 3-11, 3-13 instrument panel warning 1-29 operating instructions 1-29, 3-5 operator warning 3-3 ROPS warning 3-3 rotating parts 3-3 rotating parts and hot manifold 3-5 rotating parts warning 3-3 trailer hitch 3-3 under 16 warning 3-3 vehicle loading 3-3 winch cable warning 3-5 deflector oil 13-13, 13-17 diaphragm tube 10-19 diesel tachometer probe 15-9

diode, engine stop 7-7	fitting, thread-forming grease 5-13	head cover nut 9-29, 9-37, 9-39, 9-51
dipstick, oil 7-9	flange, water 14-11	idle apparatus 9-29, 9-51
dowel pin 13-7	float set 10-17	intake manifold 7-11, 9-47, 9-51, 10-19
drag link 5-5	floor mat 1-21	liquid 15-7
drain cock 9-5	floor plate, bed 1-37	nozzle 9-39
drive belt 12-7	flywheel 7-7, 9-25	oil pump 9-17, 9-51
drive clutch fixed sheave tool 15-5	flywheel puller 15-7	sending unit 10-7, 10-11
drive clutch holder tool 15-5	FNR brush strip 1-17	thermostat 9-51, 14-11
drive clutch hub puller 15-5	FNR shifter bracket 7-3, 9-3	
· ·	·	water flange 9-51, 14-11
drive clutch puller 15-5	forward/reverse assembly 13-3	water pump 9-51, 14-13
drive clutch spider removal tool 15-5	Forward/Reverse shifter 13-3	gauge, compression 15-5
drive clutch, moveable 12-9, 12-11	frame, tilt bed 1-37	gauge, fuel 6-23, 6-25
drive shaft 13-11	front body cowl 1-9	gauge, oil 9-15
driven clutch base sheave 12-13	front brake line 4-9	gear
driven clutch cam puller 15-5	front gear case 13-13, 13-17	35t spur 13-15, 13-19
driven clutch puller plug 15-5	fuel camshaft 9-27	64t spur 13-15, 13-19
driven clutch spring compression base tool	fuel cap 10-11	cam <i>9-21</i>
15-5	fuel filter 10-3, 10-9, 10-19	case 9-11, 13-13, 13-17, 13-21, 13-23
driven clutch spring compression collar tool	fuel gauge sending unit 10-7, 10-11	crank 9-23
15-5	fuel gauge/hour meter 6-23, 6-25	idle 9-21
driven clutch spring compression nut tool	fuel injection pump 9-35	injection pump 9-27
15-5	fuel pickup tube 10-11	oil pump drive 9-17
dry moly lubricant 15-7	fuel pump 10-19	ring 9-25, 13-7, 13-23
	fuel system 10-9	gear case, front 13-13, 13-17
E	fuel tank (diesel) 10-11	gear ring engagement 13-15, 13-19
E-clip 4-13	fuel tank (gasoline) 10-7	gear yoke 15-7
elbow 10-11	•	_ ·
emblem, Husqvarna 1-7	fuel tank cap 10-7	glow plug 9-39
end, tie rod 5-5	fuel tank strap 10-3, 10-5, 10-9	glow plug cord 9-39
	fuel tank vent 10-7, 10-11	governor 7-9
engine block 9-5	fuel tank-diesel 10-11	governor fork lever 9-41
engine, diesel, Kubota D722 with closed breather 9-3	fuel tank-gas 10-7	governor lever 9-37
	fuel tube 10-19	governor shaft installation tool 15-7
engine, gasoline, Honda GX620 7-3	fuse	governor shield 11-3
equalizer 4-13	10-amp 6-19, 6-21	grid, screen 7-5
exchanger, engine coolant 14-3	25-amp 6-19, 6-21	grill <i>1-7</i>
exhaust header 11-7	30-amp 6-21	grip tape, accelerator pad 10-27, 10-29
exhaust installation 11-3	fuse block 6-19, 6-21	grip, tilt latch hand 1-37
exhaust pipe 11-3	·	grommet 10-7, 10-11, 10-19, 13-7
exhaust valve 7-11, 9-45	G	grommet tool 7-7
extension, spring latch 1-37		guard, brush 1-3
	gasket	guard, brush, kit 1-3
F	bearing case 9-19, 9-51	guard, splash 1-11
fan shroud 14-3	breather cover 7-13	_ , ,
fan, cooling 7-5, 14-3	carburetor 10-19	guide
fascia 1-7	carburetor adapter 10-19	accelerator cable 10-27, 10-29
fastener, push-in 6-19, 6-21	carburetor bowl 10-17	detent bullet 13-15, 13-19
fender, front 1-7	case cover 7-9	exhaust valve 9-9
·	control plate 9-37, 9-51	inlet valve 9-9
fender, left rear 1-43	cover 9-19, 9-51, 12-5, 12-9, 12-11	oil gauge 9-15
fender, rear 1-43	cylinder head 7-11, 9-9, 9-51	valve seat cutter 15-11
filler cap 4-7	cylinder head cover 7-11, 9-13	guide ring adhesive 15-3
filter	drain plug 9-7	
air 10-31, 10-33, 10-35	exhaust 9-51, 11-7, 11-9	Н
fuel 10-3, 10-9, 10-19	ex-manifold 9-49, 9-51	hair pin clip 1-41
inlet cover 12-5	fuel pump 9-5, 9-51	halfshaft 5-7
oil <i>7-15</i> , 9-7, 9-11	gearcase 9-11, 9-51	handle, park brake 4-15
filter, air, canister 10-31, 10-33, 10-35	head cover 9-51	•
	Head cover 2-01	handle, tilt steering 5-3

h 7.5	included in and burbles 7.2.02.02	labels western of Ad
hanger, engine 7-5	isolator ring and bushing 7-3, 8-3, 9-3	latch, spring 1-41
harness 1-39, 6-17	isolator, twin stud 14-3	latch, tilt bed 1-37
harness, headlight 1-7	•	lever
harness, wire 6-9, 6-17	J	engine stop 9-37
head, cylinder 7-11, 9-9	jet, main 10-17	fork 9-41
header, exhaust 11-7	joint	governor 9-37
headlamp 1-7	ball 5-7, 10-23, 10-25	lost motion 10-29
headlight harness 1-7	eye 9-35	speed control 9-37
heat seal 9-39	pipe 9-11	light
hinge plate 1-23, 1-25, 1-27	pipe 3 11	oil <i>6-23</i> , <i>6-25</i>
hinge, hood 1-9	K	light switch 6-23, 6-25
hinge, tilt bed 1-37		light, coolant temperature indicator 6-25
holder	keeper, push-close latch 1-17	limit switch 13-3
	key <i>8-7</i>	
FNR strip brush 1-17	feather 9-17, 9-21, 9-23, 9-27	line, brake reservoir 4-7
fork lever 9-41	woodruff 7-7, 7-13	link, drag 5-5
screen grid 7-5	key (pair) 6-23, 6-25	liquid gasket 15-7
holder, cup 1-17	key switch 6-23, 6-25	low oil warning light 6-23, 6-25
hood 1-9	key switch spacer 6-23, 6-25	lubricant, dry moly 15-7
hood latch 1-7	keyswitch nut 6-23, 6-25	lubricant, moly-tellon 15-7
hood prop 1-9	kick panel 1-43	
hook, engine 9-9	•	M
hose 14-5	kit	main jet 10-17
coolant 14-3, 14-5, 14-9	bench seat 1-29	manifold
fuel filter 10-5, 10-9	bolt 13-7	exhaust 9-49
fuel pump 10-9	brake pad service 4-3, 4-5	
fuel return 10-9	brake pedal adjustment tool 15-3	inlet 7-11, 10-19
inlet cover 12-5	clutch 13-7	intake 9-47
	complete bench seat 1-29	mat, floor 1-21
intake 10-31, 10-33, 10-35	cover plate, input 13-9	Mate-N-Lock housing 13-7
oil, remote 7-15	cover plate, output 13-7	Mate-N-Lock pin 13-7
outlet 12-3, 12-5	drain plug 13-7	meter, voit ohm 15-11
overflow 9-39	front skidplate hardware 1-15	module
vent 7-3, 9-3, 13-5, 14-9	front steel skidplate 1-15	calibration test 15-3
hour meter 6-23, 6-25	gasket 9-51	communication display 15-5
housing	H-clip spring 13-7	moly-teflon lubricant 15-7
clutch 13-7	IQ display module (IQDM) 15-7	motor
differential 13-23	neutral switch repair 13-15, 13-19	starter 7-7, 9-43
Mate-N-Lock 13-7	'	moveable drive clutch 12-9, 12-11
steering gear 5-5	nozzle holder 9-39	muffler 11-3, 13-5
hub, race/output 13-7	piston rebuild 9-53	manor 17-5, 15-5
hydraulic brake adjuster 15-7	race output hub 13-7	N
hydrometer 15-7	rear axle gear repair 13-23	
· <b>,</b> · · · · · · · · · · · · · · · · · · ·	repair, minor 13-7	nipple, remote oil 7-15
1	reverse gear repair 13-13, 13-17	nolse suppressor cap 7-5, 7-7
	roll cage 13-7	nongrease/spacers locker 13-23
idle apparatus 9-29	roller 13-7	nozzie holder 9-39
idle gear 9-21	ROPS 1-33	nozzie, main 10-17
ignition coil 7-7	tune-up 15-9	nut, keyswitch 6-23, 6-25
injection pump gear 9-27	knob, forward/reverse 13-3	
inlet valve 7-11, 9-45		0
insert, carburetor adapter 10-19	L	oil deflector 13-13, 13-17
instructions, bench seat 1-29	latch 1-17	oil dipstick 7-9
instructions, front skidplate 1-15		•
insulator, carburetor 10-19	latch bracket 1-7	oil filter 7-15, 9-7, 9-11
intake adapter, engine 10-19	latch keeper 1-17	oil filter adapter 7-15
intake manifold 9-47	latch plate, tilt bed 1-35	oil filter screen 7-9
Internal retaining ring pliers 15-7	latch, hood draw 1-7	oil pan 9-7
IQ display module (IQDM) 15-7	latch, slam 1-41	oil pressure switch 7-7, 9-5
and and the same that the transfer of the tran		

oil pump 9-17	cover, output 13-7	R
oil pump drive gear 9-17	electrical 6-19, 6-21	rack guide pressure spring 5-5
oil seal 7-9, 7-13, 9-11, 9-19, 13-7, 13-9	engine block 9-5	rack, steering 5-5
oil slinger 9-23	engine mounting 7-3, 9-3	radiator 14-3
oil warning light, low 6-23, 6-25	engine, left side 7-5	radiator pipe 14-7
O-ring 7-15, 9-5, 9-7, 9-9, 9-11, 9-13, 9-23,	floor, bed 1-37	reamer, valve guide 15-9
9-31, 9-37, 9-51, 13-7, 13-9	fuet/oil 7-15, 10-9	receiver, rear 5-13
overflow pipe 9-39	hinge 1-23, 1-25, 1-27	receptacle, accessory 6-23, 6-25
	latch 1-35	regulator, voltage 7-15
P	push rod guide 7-11	relay 6-19, 6-21
paint, touch-up 15-7	shroud 7-5, 9-25	relay connector 6-19, 6-21
pan	skid <i>1-13</i> , 1-15	remover, bearing and oil seal 15-3
center 1-25, 1-27	speed 9-37	reservoir, brake fluid 4-7
oil 9-7	speed control 9-37	
seat 1-25, 1-27	thrust 13-7	reservoir, remote 4-7 retainer
panel	plate, steering wheel center 1-29	
driver-side 1-43	pliers	spring (driven clutch) 12-13
driver-side cowl 1-9	Internal retaining ring 15-7	valve spring 7-11, 9-45
front kick 1-43	piston ring 15-9	retaining ring pliers 15-9
left 1-41	retaining ring 15-9	retractor, seat belt 1-31
passenger-side 1-43	plug 13-13, 13-17	reverse buzzer 13-3
passenger-side cowl 1-9	drain 9-7	ring
right <i>1-41</i>	driven clutch puller 15-5	piston 9-23, 9-53
panel, front 1-41	engine block 9-5, 9-9, 9-11, 13-21	snap 5-5
park brake pedal 4-15	expansion 9-5	ring gear 9-25, 13-7, 13-23
p-clamp (fuel filter) 7-3, 9-3, 10-9	gearcase 13-13, 13-17, 13-21	ring set, piston 7-13
pedal, accelerator 10-27, 10-29	glow 9-39	ring, C-type stop 5-5 rivet, blind push 1-11
pedal, brake 4-11, 4-15	hole 6-23, 6-25	rocker arm 9-45
pin, clevis 4-7, 4-11	oil drain 13-7	rocker arm pivot 7-11
pin, dowel 13-7	oil fill 13-7	rocker switch (lights) 6-23, 6-25
pin, Mate-N-Lock 13-7	oil filler 9-13	rod
pin, piston 7-13, 9-23, 9-53	spark 7-7, 7-11	connecting 7-13, 9-23
pinion 13-23	press weldment 15-5	crank crank rod 9-23
pinion, steering 5-5	prop rod 1-35	prop <i>1-35</i>
pipe	prop shaft 13-11	push 7-11, 9-21
breather 9-47	prop, hood 1-9	roll cage 13-7
coolant 14-7	protector spray, battery terminal 15-3	roller weight 12-9, 12-11
exhaust 11-3, 11-9	puller	roller, torque 12-9, 12-11
injection 9-39	bearing 15-3	ROPS
overflow 9-39	clutch 15-3	seat support 1-31
water 14-15	drive clutch 15-5	ROPS front base weldment 1-11
water return 9-13, 14-11	drive clutch hub 15-5	ROPS kit 1-33
pipe band 14-11, 14-15	driven clutch cam 15-5	ROPS support tube 1-33
pipe clamp 9-39	flywheel 15-7	ROPS top 1-33
pipe, coolant 14-7	seal 15-9	ROPS warning decal 3-3
piston 7-13, 9-23, 9-53	special use tool 15-9	rotator, valve 7-11
piston pin 7-13, 9-23, 9-53	pulley	rotor 8-11
piston ring 9-23, 9-53	fan drive 9-33	rotor, brake 4-9, 13-21
piston ring compressor 15-9	water pump 9-33	rotor, oil pump 7-9
piston ring pliers 15-9	pullrod, compression spring 10-27, 10-29	rubber bumper 1-41
piston ring set 7-13	bnub	
pivot, park brake spacer 4-15	fuel 10-19	S
pivot, rocker arm 7-11	fuel injection 9-35	
plate	oll 9-17	safety first card 15-9 screen grid 7-5
armature 13-7	water 14-13	screen gna 7-5 screen, oil filter 7-9
back 1-37, 1-39	push rod 7-11, 9-21	Sergen, on men 7*3

screw, valve clearance adjuster 15-9	skidplate hardware kit 1-15	stop solenoid 9-31
seal	skidplate kit 1-15	steel bushing 1-37
dual lip 13-13, 13-15, 13-17, 13-19,	slam latch 1-41	steering column 5-3
13-23	sleeve	steering column bearing press tool 15-9
heat 9-39	crankshaft 9-23	steering column bracket 1-11
oil 7-9, 7-13, 9-11, 9-19, 13-7, 13-9	governor 9-27	steering column retaining ring tool 15-9
steering pinion dust 5-5	link <i>5-11</i>	steering gear housing 5-5
triple lip 13-13, 13-17	lower arm 5-7	steering pinion dust seal 5-5
valve stem 7-11, 9-45, 9-51	upper suspension 5-7	steering rack 5-5
seal puller 15-9	slide adjuster 5-7	steering wheel 1-29, 5-3
seat	slide, adjuster 5-7	steering wheel puller tool 15-9
bucket 1-25, 1-27	slider, governor 7-9	stem, valve 2-3
valve 9-11	slinger, oil 9-23	stop solenoid stay 9-31
valve spring 7-11	snap ring 5-5	stopper, camshaft 9-21
seat back, bench 1-23, 1-29	solenoid, stop 9-31	stopper, fuel camshaft 9-27
seat belt retractor 1-31	spacer 1-15	strap, fuel tank 10-3, 10-5, 10-9
seat bottom 1-23, 1-29	engine 9-3	stringer, side 1-19
seat bottom, bench 1-23	key switch 6-23, 6-25	strip, FNR brush 1-17
seat bottom,bench 1-23	spacer block, differential 13-5	stud 9-3, 9-35, 9-49, 14-15
seat holder base 1-25, 1-27	spacer pivot, park brake 4-15	engine 7-7
seat support, ROPS 1-31	spanner wrench 15-9	idle adjustment 9-29
seat, bucket	spark plug 7-7, 7-11	self-clinching 1-41
bucket seat 1-27	spark plug cap 7-5, 7-7	support yoke (steering) 5-5
seatbelt buckle 1-31	speed plate 9-37	support, structural 1-17
sending unit, fuel gauge 10-7, 10-11	spider 12-9, 12-11	sway bar 5-11
sensor, coolant lamp 14-11	splash guard 1-11	swingarm 5-13
service kit, brake pad 4-3, 4-5	spray, battery terminal protector 15-3	switch
shaft	spring	indicator (transmission) 13-15, 13-19
CVT adapter 9-3 drive 13-11	brake return 4-13	key 6-23, 6-25
fork lever 9-41	choke spring 10-21	limit 13-3
governor arm 7-13	compression 12-9, 12-11, 12-13	oil pressure 7-7, 9-5
governor lever 9-37	continuity 10-19	switch, rocker, light 6-23, 6-25
idle gear 9-21	detent bullet 13-15, 13-19	T
intermediate 13-15, 13-19	exhaust 11-3	
pinion 13-9	governor 9-41	12-volt battery 6-27, 6-29
prop 13-11	governor idle 10-21	tab, coolant pipe mounting 14-7
rock arm 9-45	idle apparatus 9-29	tachometer 15-9
shift 13-15, 13-19	pedal 10-27, 10-29 pedal stop 10-27, 10-29, 13-3	tachometer probe, diesel 15-9
sheave, drive clutch base 12-13		tailgate 1-41
sheave, driven clutch 12-13	rack guide pressure 5-5 relief valve 7-9	tailgate angle 1-41
shield, breather 9-13	return 9-37	tank, fuel (diesel) 10-11
shield, exhaust 11-9	rocker arm 9-45	tank, fuel (gasoline) 10-7
shield, governor 11-3	start 9-9, 9-41	tape 1-19
shim 12-9, 12-11, 13-23	torsion 10-27, 10-29	tape, double-sided 1-23
shim, armature plate 13-7	valve 7-11, 9-11, 9-45	tape, grip, accelerator pad 10-27, 10-29
shim, injection pump 9-35	spring latch 1-41	tape, vinyl foam 1-37, 14-3
shim, latch plate 1-35	sprocket 13-13, 13-17	tappet 9-21
shock absorber 5-9, 5-11	start spring 9-41	tee, coolant fill 14-3
shock absorber, front 5-9, 5-11	starter 8-7	temperature indicator light, coolant 6-25
shroud 7-5	starter motor 7-7, 9-43	tester, continuity 15-5
head 7-5	stay	tether 1-41
steering column 5-3	alternator assembly 9-33	thermometer, battery 15-3
shroud, fan 14-3	cylinder head 9-9	thermostat 14-11
side stringer 1-19	fuel pump 10-19	thread-forming grease fitting 5-13
skid plate 1-13, 1-15	spring 9-11	thrust button 13-7
	-e	thrust plate 13-7

	,	
tie rod end 5-5	breather 9-13, 10-19	weldment, air cleaner support 10-31,
tie wrap 1-39, 4-9, 4-13, 5-5, 10-21, 10-23,	carburetor air vent 10-3, 10-5, 10-9	10-33 <b>,</b> 10-35
10-25	diaphragm 10-19	weldment, brake pedal 4-11
tilt bed 1-37	fuel 10-19	weldment, coolant pipe 14-7
tilt bed frame 1-37	fuel pickup 10-11	weldment, Forward/Reverse shifter 13-3
tilt latch hand grip 1-37	ROPS support 1-33	weldment, Forward/Reverse shifter
tire 2-3	tune-up kit 15-9	bracket 13-3
tire assembly, black 2-3	T-wrench tool 15-5	weldment, front dash
tire, mud 2-3	1-wrench tool 75-5	dash weldment 1-11
tool	U	weldment, lever, lost motion 10-29
accelerator pedal adjustment 15-3	U	weldment, receiver 5-13
•	upright 5-7	weldment, seat support, ROPS 1-31
belt tensioning, starter/generator 15-11	upright, front differential 5-7	weldment, swingarm 5-13
brake adjustment 15-3	urethane bushing 1-37	•
brake cable release 15-3		weldment, tilt bed frame 1-37
brake pedal adjustment 15-3	V	wheel 2-3
brake pedal tension 15-3	valve 10-31, 10-33, 10-35	wheel, steering 1-29, 5-3
cam installation 15-3	*	wire assembly 6-27, 6-29, 10-7, 10-11
carburetor float level 15-7	breather 7-13, 9-13	wire harness 1-39, 6-9, 6-17
charger bezel 15-3	exhaust 7-11, 9-45	wire harness, headlight 1-7
clutch alignment 15-5	fuel pickup tube 10-7	wrap, tie 1-39, 4-9, 4-13, 5-5, 10-21, 10-23,
cT-wrench 15-5	inlet 7-11, 9-45	10-25
drive clutch fixed sheave 15-5	lifter 7-13	wrench, spanner 15-9
drive clutch holder 15-5	rocker arm 7-11	
drive clutch spider removal 15-5	rotator 7-11	Υ
driven clutch spring compression base	seat 9-11	yoke, gear 15-7
15-5	solenoid 10-17	yoke, support (steering) 5-5
driven clutch spring compression collar	spring seat 7-11	yoke, support (steering) 5-5
15-5	valve clearance adjuster screw 15-9	
driven clutch spring compression nut	valve guide driver tool 15-9	
15-5	valve guide reamer 15-9	
governor shaft installation 15-7	valve seat cutter 15-5, 15-11	
<del>-</del>	· ·	
grommet 7-7	valve seat cutter guide 15-11	
puller, special use 15-9	valve seat cutter tool 15-5	
steering column bearing press 15-9	valve seat t-wrench 15-11	
steering column retaining ring 15-9	valve spring compressor 15-11	
steering wheel puller 15-9	valve stem 2-3	
transaxle axle seal 15-9	V-belt 9-33	
transaxle pinion seal 15-9	vent barb 10-3, 10-5, 10-9	
transmission 15-9	vent, housing, upper 13-23	
valve guide driver 15-9	vent, transmission 13-13, 13-17	
valve seat cutter 15-5	volt ohm meter 15-11	
tool kit, clutch 15-5	voltage regulator 7-15	
torque roller 12-9, 12-11		
touch-up paint 15-7	W	
track, prop rod 1-35		
transaxle axle seal tool 15-9	warning light, low oil 6-23, 6-25	
transaxle housing 13-23	water flange 14-11	
	water pump 14-13	
transaxle pinion seal tool 15-9	wedge, bearing puller 15-3	
transmission cable 10-23, 10-25	weight clutch 12-9, 12-11	
transmission cable bracket 7-3, 9-3	weldment	•
transmission chain 13-13, 13-17	press 15-5	
transmission tool 15-9	ROPS base front 1-11	
transmission, diesel parallel shaft 13-17	weldment, accelerator pedal 10-27, 10-29	
transmission, gasoline parallel shaft 13-13	weldment, accelerator pedal bracket 10-27,	
tube	10-29	
axle 13-23	weldment, actuator bracket 1-39	

#### **Your Comments Are Appreciated**

Please select your category:					
<ul><li>☐ Distributor/Dealer</li><li>☐ Individual Owner</li></ul>		Technician Golf Cours			
☐ Club Car Associate/Representative		Other:			
In order to help us better serve you, plea					_
	Poor	Fair	Average	Good	Excellent
1. Ease of Understanding					
2. Ease of Finding Information					
3. Clarity of Illustrations					
4. Index Usability		Ш	Ш		Ц
Comments/Suggestions					
<u> </u>		V			
					-
		***			

Please fax a copy of this page to (706) 228-2662.

Thank You!
Club Car Technical Publication Department

			•
		·	·

w





