



SPARE PARTS LIST

BRUSHCUTTERS/CLEARING SAWS

 
323 R, 2007-01

X Accessories


Zubehöre
Accessoires
Acessorios
Tillbehör

Olja Luftfilter
Oil Airfilter
Öl Luftfilter
Aceite Filtro Air
Huile Filtera aire


531 00 92-48

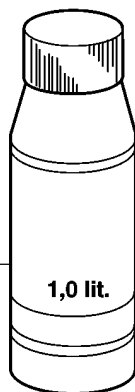


1,0 lit.

 


502 28 59-01

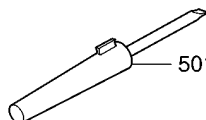 

501 60 02-03

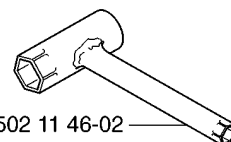 


502 11 46-02

 


502 21 58-01

 
compl 537 35 36-01

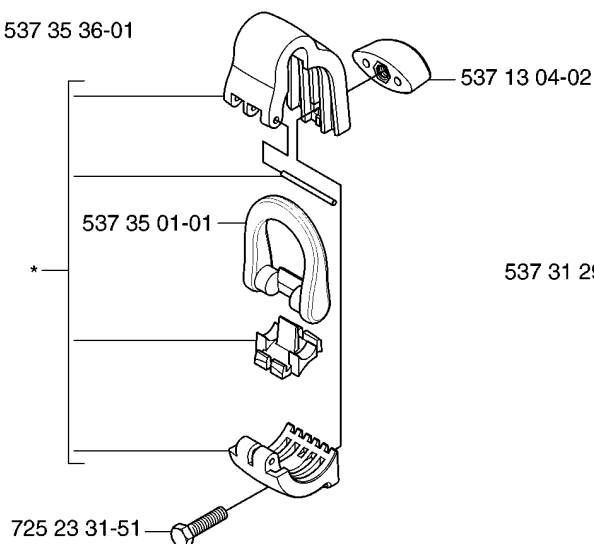


537 31 29-01 (200-275 mm)

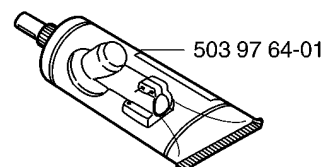 


503 97 64-01

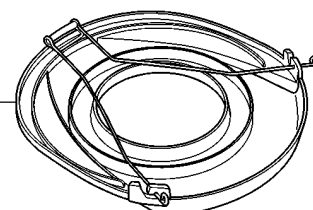 

 compl 537 21 63-01
compl 537 21 63-02 (USA)

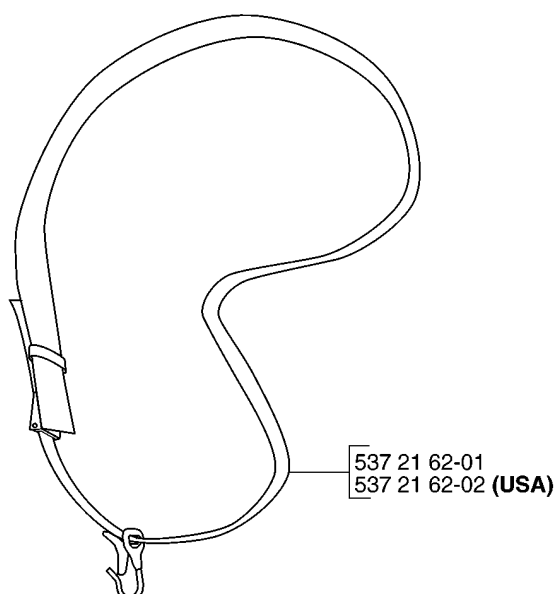

537 21 62-01
537 21 62-02 (USA)

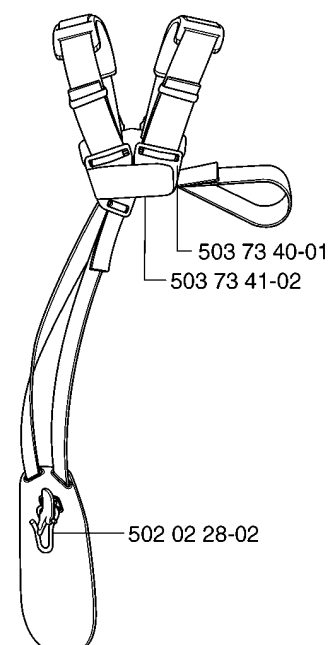 

503 73 40-01
503 73 41-02

502 02 28-02


ACCESSORIES

323 R, 2007-01


Part No	Description	Remark	QTY KIT
501 60 02-03	SCREWDRIVER		1
502 02 28-02	WELT HOOK		1
502 11 46-02	SOCKET WRENCH		1
502 21 58-01	L-NYCKEL		1
502 28 59-01	STOP		1
503 73 40-01	FRONT PIECE		1
503 73 41-02	FRONT PIECE		1
503 97 64-01	GREASE		1
531 00 92-48	FILTER OIL		1
537 13 04-02	KNOB		1
537 21 62-01	HARNESS		1
537 21 62-02	HARNESS		1
537 21 63-01	HARNESS		1
537 21 63-02	HARNESS		1
537 31 29-01	SAW BLADE GUARD		1
537 35 01-01	LOOP		1
537 35 36-01	LOOP		1
725 23 31-51	SCREW		1

U Accessories
Zubehöre
Accessoires
Accesorios
Tillbehör

 
*compl 537 29 95-01
323R
326Rx

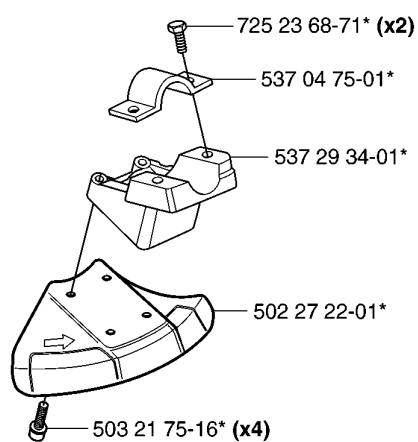

*compl 503 93 42-02
323R
326Rx

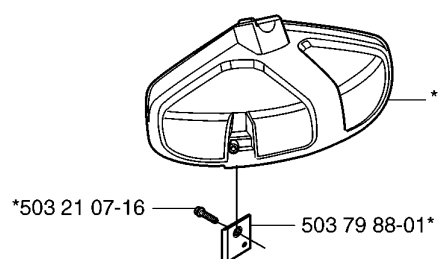 

 *compl 503 97 71-01
323L
326Lx
326LDx
326LS

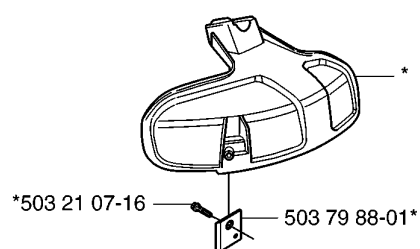


ACCESSORIES

323 R, 2007-01

Part No	Description	Remark	QTY KIT
502 27 22-01	SAW BLADE GUARD		1
503 21 07-16	SCREW IHSCT		1
503 21 07-16	SCREW IHSCT		1
503 21 75-16	SCREW IHSCFT		4
503 79 88-01	BLADE		1
503 79 88-01	BLADE		1
503 93 42-02	COMBI GUARD		1
503 97 71-01	TRIMMER GUARD		1
537 04 75-01	CLAMP		1
537 29 34-01	ADAPTER		1
537 29 95-01	SAW BLADE GUARD		1
725 23 68-71	SCREW EHHM		2

 
A *compl 537 19 92-02

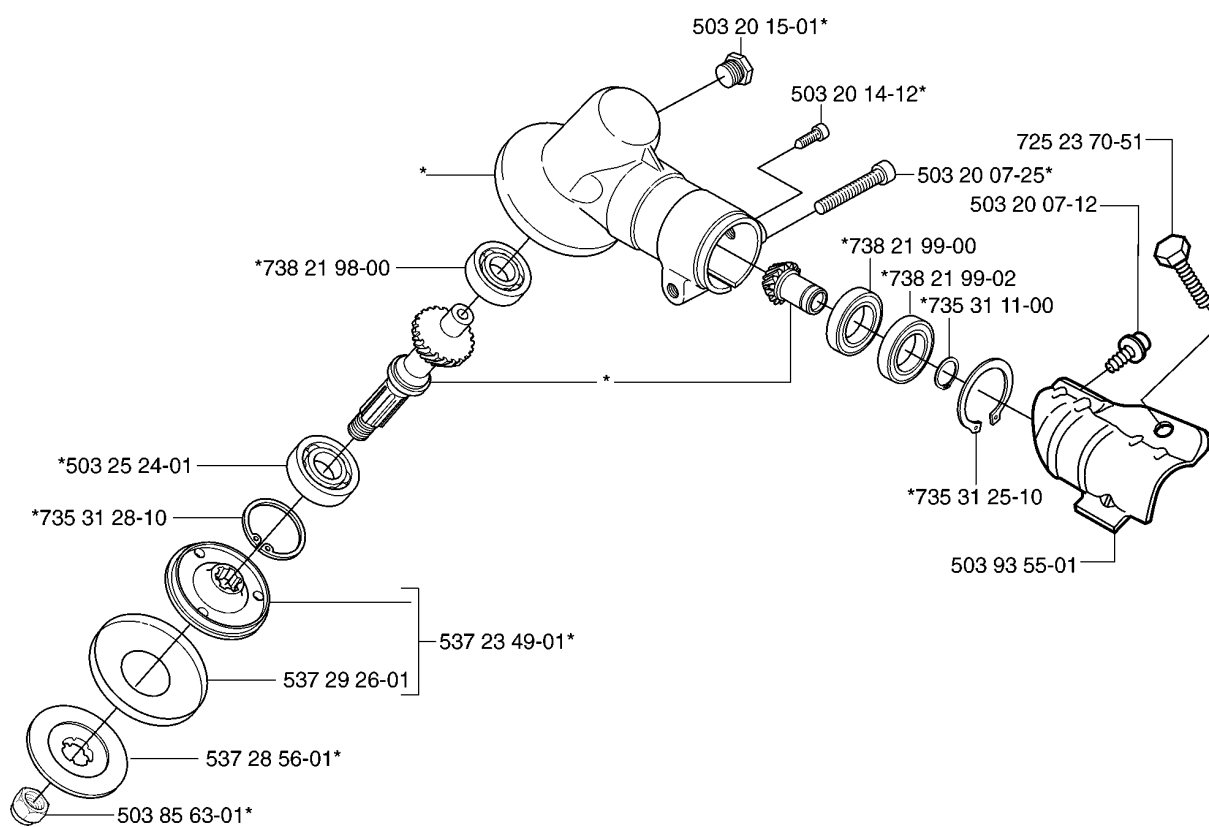

BEVEL GEAR

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 07-12	SCREW IHSCFM		1
503 20 07-25	SCREW IHSCFM		1
503 20 14-12	SCREW IHSCFMO		1
503 20 15-01	SCREW IHHM		1
503 25 24-01	BALL BEARING		1
503 85 63-01	NUT		1
503 93 55-01	CLAMP.GUARD		1
537 19 92-02	BEVEL GEAR ASSY		1
537 23 49-01	DRIVER ASSY		1
537 28 56-01	SUPPORT FLANGE		1
537 29 26-01	CUP		1
725 23 70-51	SCREW		1
735 31 11-00	CIRCLIP		1
735 31 25-10	CIRCLIP		1
735 31 28-10	CIRCLIP		1
738 21 98-00	BALL BEARING		1
738 21 99-00	BALL BEARING		1
738 21 99-02	BALL BEARING		1

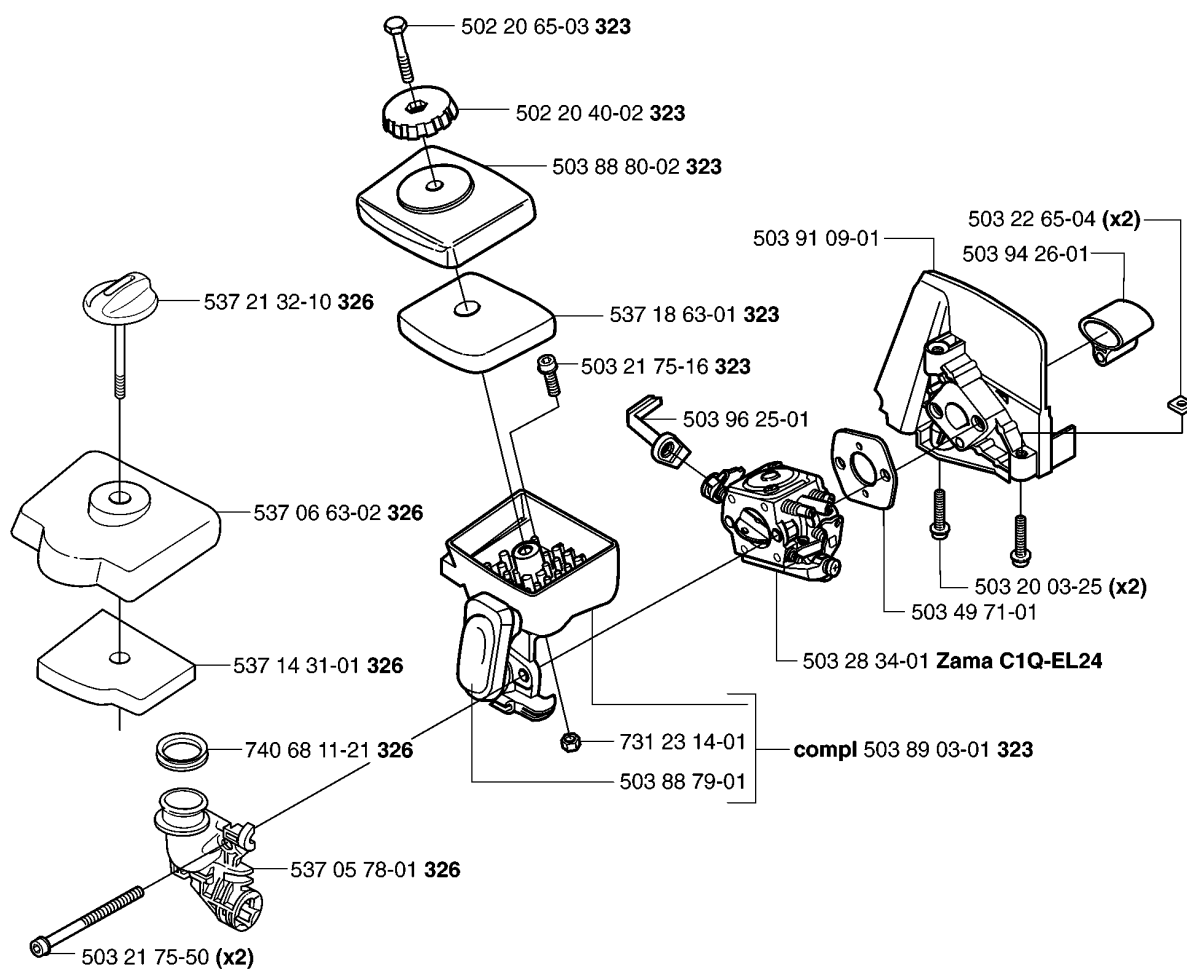 J


CARBURETOR & AIR FILTER

323 R, 2007-01

Part No	Description	Remark	QTY KIT
502 20 40-02	KNOB		1
502 20 65-03	SCREW EHHM		1
503 20 03-25	SCREW IHSCFM		2
503 21 75-16	SCREW IHSCFT		1
503 21 75-50	SCREW IHSCFT		2
503 22 65-04	SQUARE NUT		2
503 28 34-01	CARBURETTOR		1
503 49 71-01	GASKET		1
503 88 79-01	HUB CAP		1
503 88 80-02	FILTER COVER		1
503 89 03-01	FILTERBLOCK ASSY		1
503 91 09-01	INSULATION WALL		1
503 94 26-01	INLET PIPE		1
503 96 25-01	CHOKE CONTROL		1
537 05 78-01	BRACKET		1
537 06 63-02	FILTER COVER		1
537 14 31-01	AIR FILTER ASSY		1
537 18 63-01	AIR FILTER		1
537 21 32-10	KNOB		1
731 23 14-01	HEXAGON NUT		1
740 68 11-21	V-RING		1

V compl 503 28 34-01 Zama C1Q-EL24

 Zama C1Q-EL24

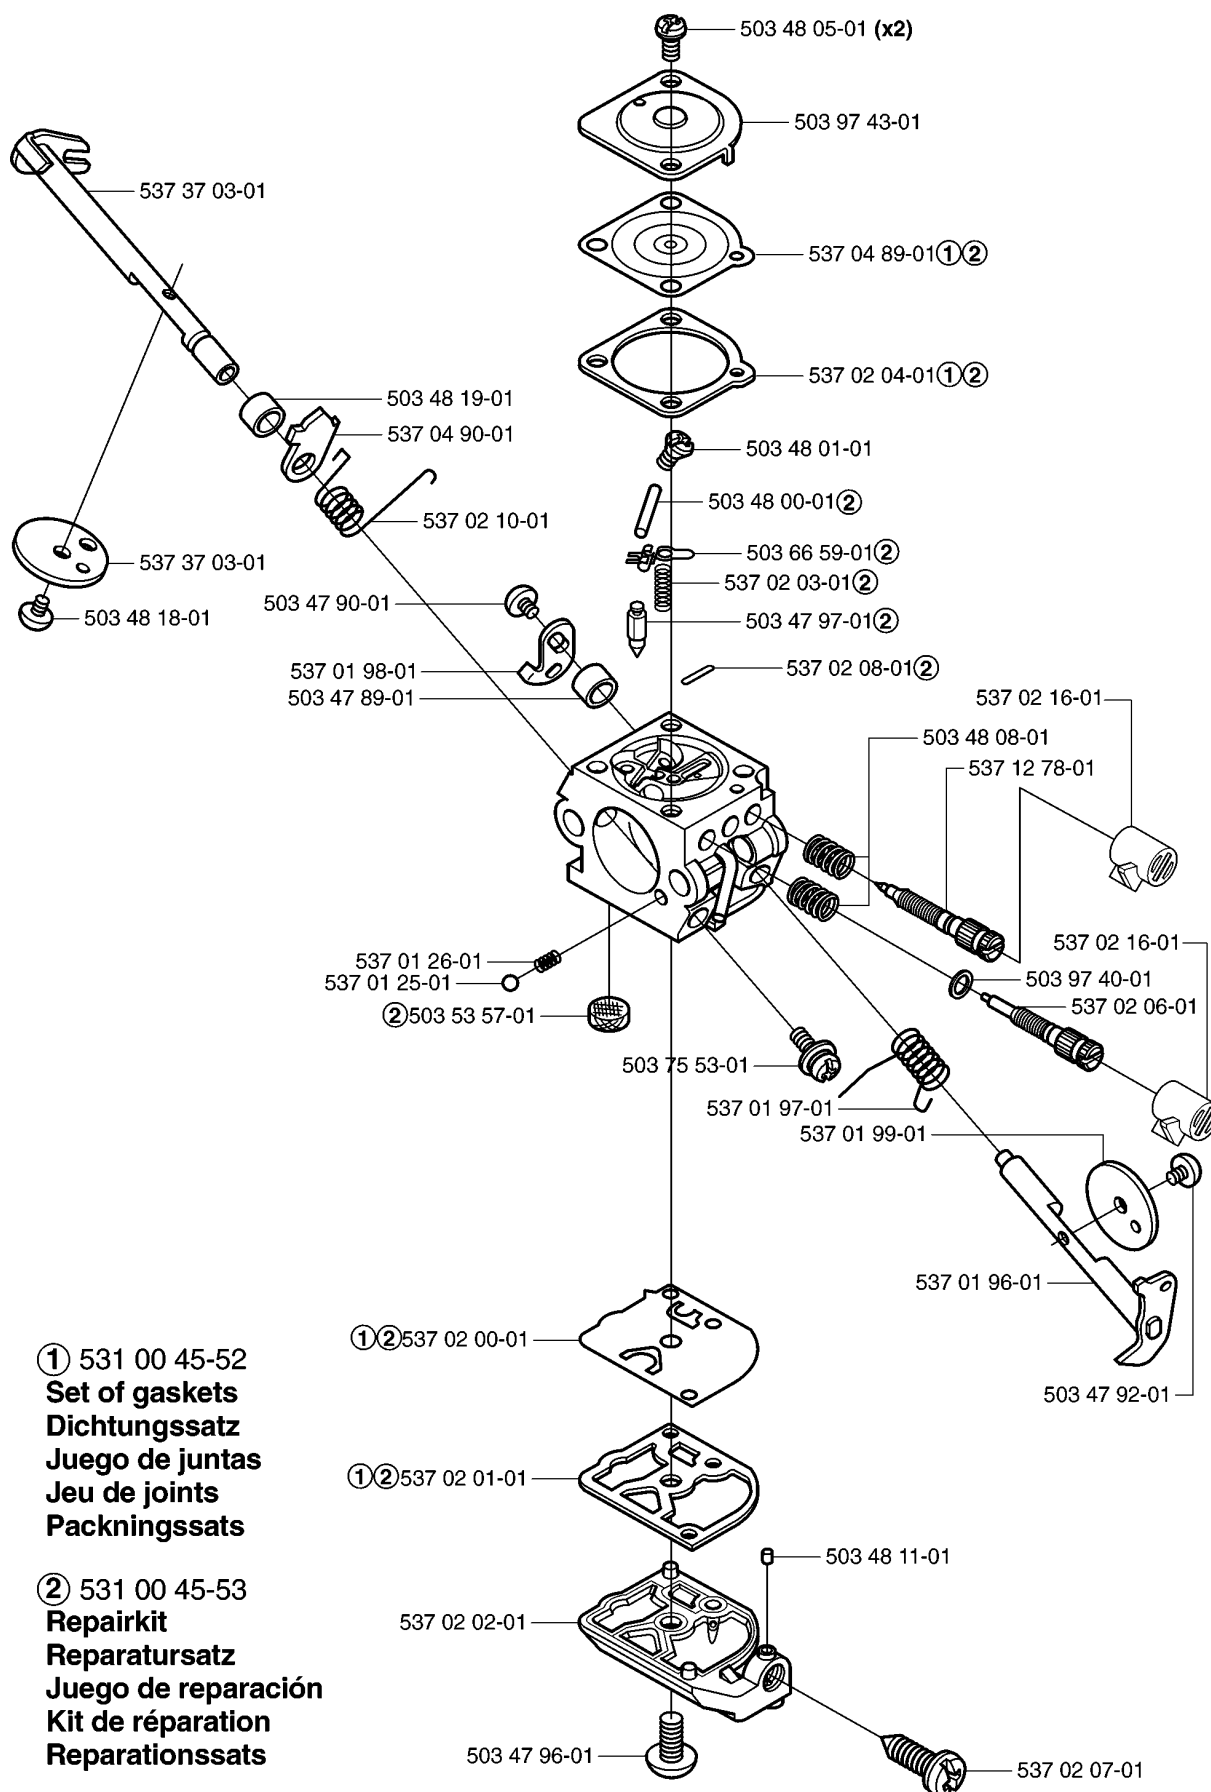


CARBURETOR DETAILS

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 28 34-01	CARBURETTOR		1
503 47 89-01	COLLAR		1
503 47 90-01	SCREW		1
503 47 92-01	SCREW		1
503 47 96-01	SCREW		1
503 47 97-01	VALVE		1
503 48 00-01	PIN RETAINING SCREW		1
503 48 01-01	SCREW		1
503 48 05-01	SCREW		2
503 48 08-01	SPRING		1
503 48 11-01	PIECE		1
503 48 18-01	SCREW		1
503 48 19-01	COLLAR		1
503 53 57-01	STRAINER		1
503 66 59-01	LEVER		1
503 75 53-01	SCREW		1
503 97 40-01	WASHER		1
503 97 43-01	COVER		1
537 01 25-01	BALL		1
537 01 26-01	SPRING		1
537 01 96-01	SHAFT ASSY		1
537 01 97-01	SPRING		1
537 01 98-01	LEVER		1
537 01 99-01	VALVE		1
537 02 00-01	DIAPHRAGM PUMP		1
537 02 01-01	GASKET		1
537 02 02-01	COVER		1
537 02 03-01	SPRING		1
537 02 04-01	GASKET		1
537 02 06-01	SCREW		1
537 02 07-01	SCREW		1
537 02 08-01	PLUG		1
537 02 10-01	SPRING		1
537 02 16-01	LIMITER CAP		1
537 02 16-01	LIMITER CAP		1
537 04 89-01	DIAPHRAGM		1
537 04 90-01	LEVER		1
537 12 78-01	SCREW		1
537 37 03-01	VALVE		1
537 37 03-01	VALVE		1

S 323

 *compl 537 04 11-03
**compl 537 04 12-07
***compl 537 30 96-01

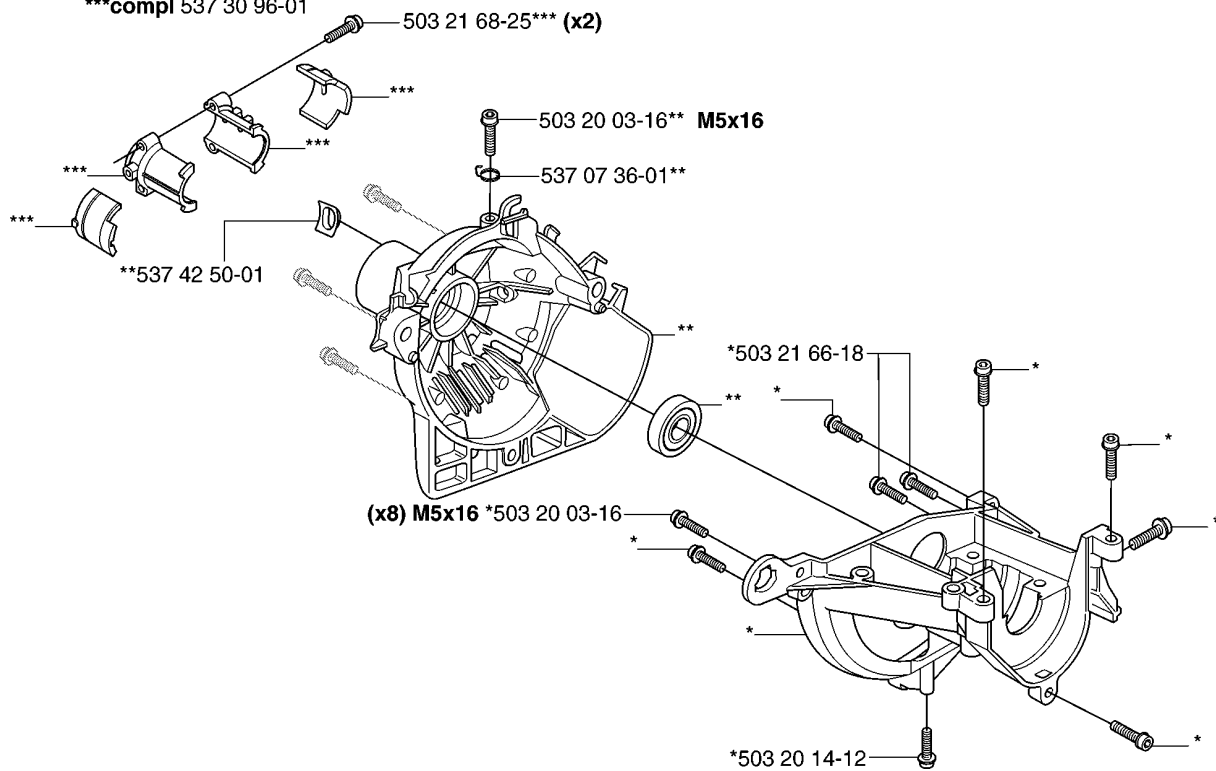

CRANKCASE

323 R, 2007-01


Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		1
503 20 03-16	SCREW IHSCFM		8
503 20 14-12	SCREW IHSCFMO		1
503 21 66-18	SCREW IH SCT		1
503 21 68-25	SCREW IHSCFT		2
537 04 11-03	CRANKCASE		1
537 04 12-07	CLUTCH COVER		1
537 07 36-01	SPRING		1
537 30 96-01	COMPRESSION SLEEVE		1
537 42 50-01	PROTECTIVE PLATE		1

Q 326

*compl 537 08 52-02

**compl 537 04 12-07

 ***compl 537 30 96-01

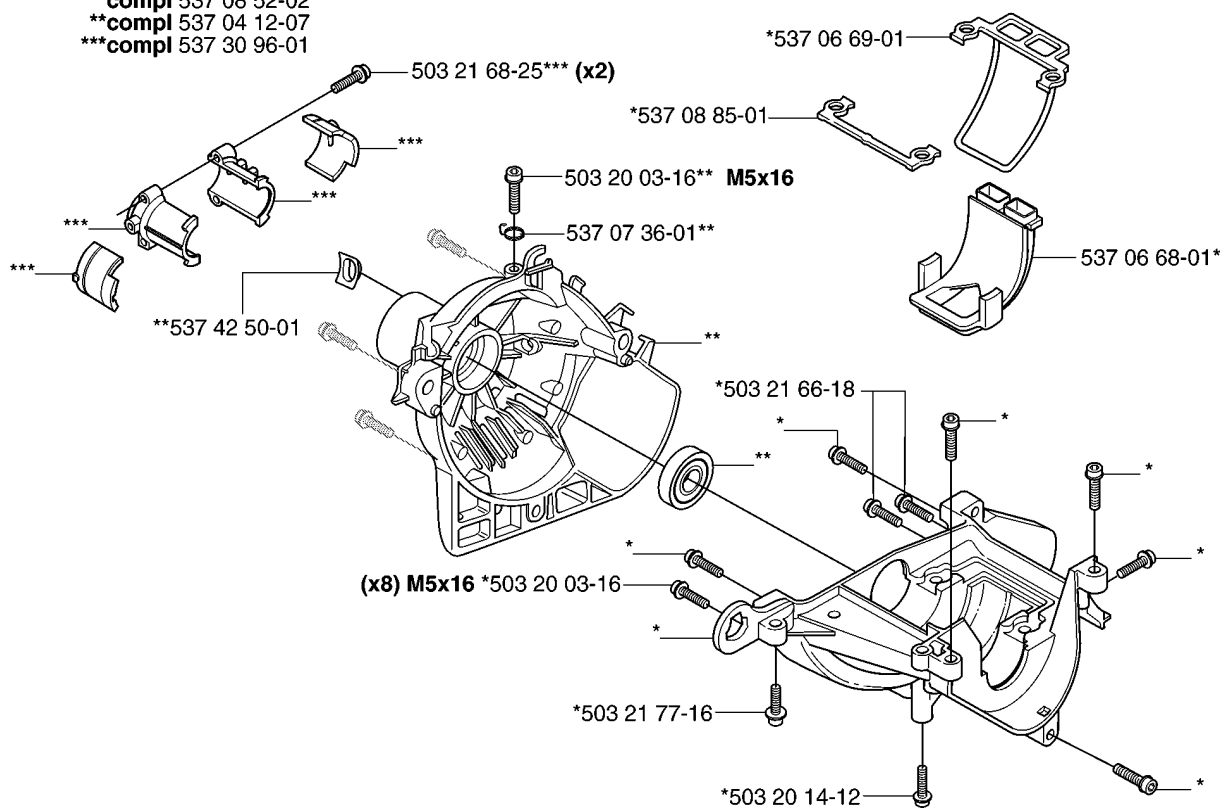


CRANKCASE

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		8
503 20 03-16	SCREW IHSCFM		1
503 20 14-12	SCREW IHSCFMO		1
503 21 66-18	SCREW IH SCT		1
503 21 68-25	SCREW IHSCFT		2
503 21 77-16	SCREW IH SCT		1
537 04 12-07	CLUTCH COVER		1
537 06 68-01	INSERT CRANKCASE		1
537 06 69-01	GASKET CRANKCASE		1
537 07 36-01	SPRING		1
537 08 52-02	CRANKCASE		1
537 08 85-01	GASKET		1
537 30 96-01	COMPRESSION SLEEVE		1
537 42 50-01	PROTECTIVE PLATE		1

T

 
*compl 503 85 24-74 (326)
**compl 503 85 24-75 (323)

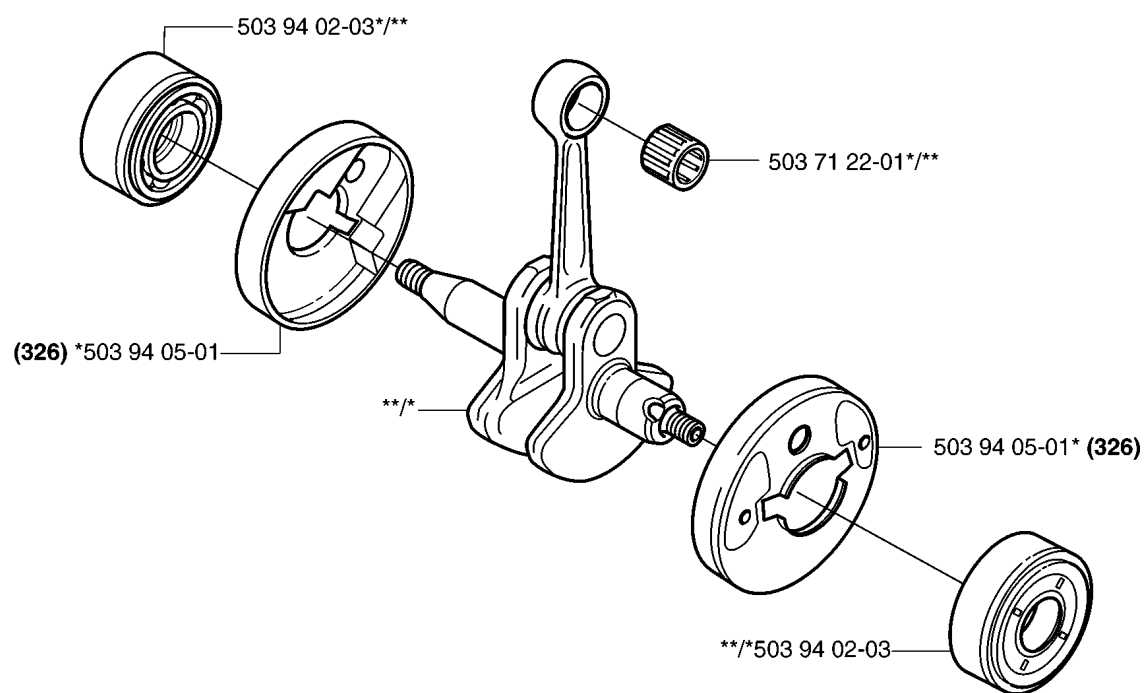

CRANKSHAFT

323 R, 2007-01


Part No	Description	Remark	QTY KIT
503 71 22-01	BEARING		1
503 85 24-74	CRANKSHAFT ASSY		1
503 85 24-75	CRANKSHAFT ASSY		1
503 94 02-03	BEARING CAGE		1
503 94 02-03	BEARING CAGE		1
503 94 05-01	CUP		1
503 94 05-01	CUP		1

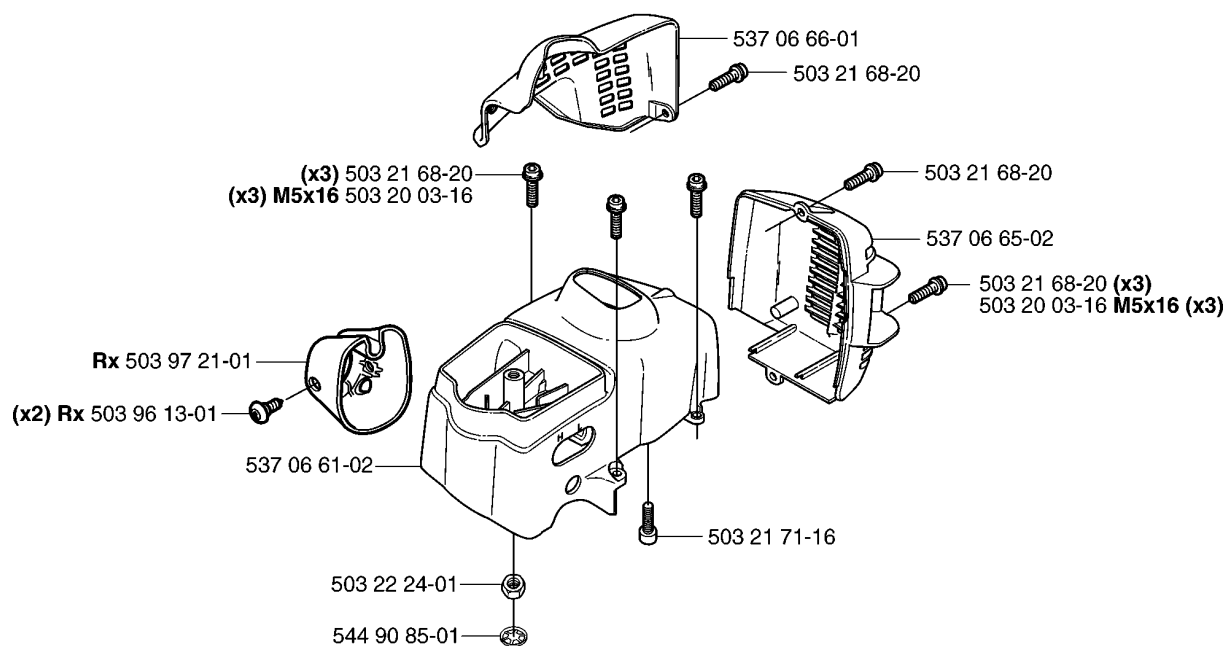 H 326Lx, LDx, RX, RJx, LS

CYLINDER COVER

323 R, 2007-01


Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		3
503 20 03-16	SCREW IHSCFM		3
503 21 68-20	SCREW IHSCFT		3
503 21 68-20	SCREW IHSCFT		3
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		1
503 21 71-16	SCREW IHSCFT		1
503 22 24-01	LOCK NUT		1
503 96 13-01	SCREW		2
503 97 21-01	COVER		1
537 06 61-02	CYLINDER COVER		1
537 06 65-02	HEAT PROTECTOR		1
537 06 66-01	ARM PROTECTION		1
544 90 85-01	WASHER		1

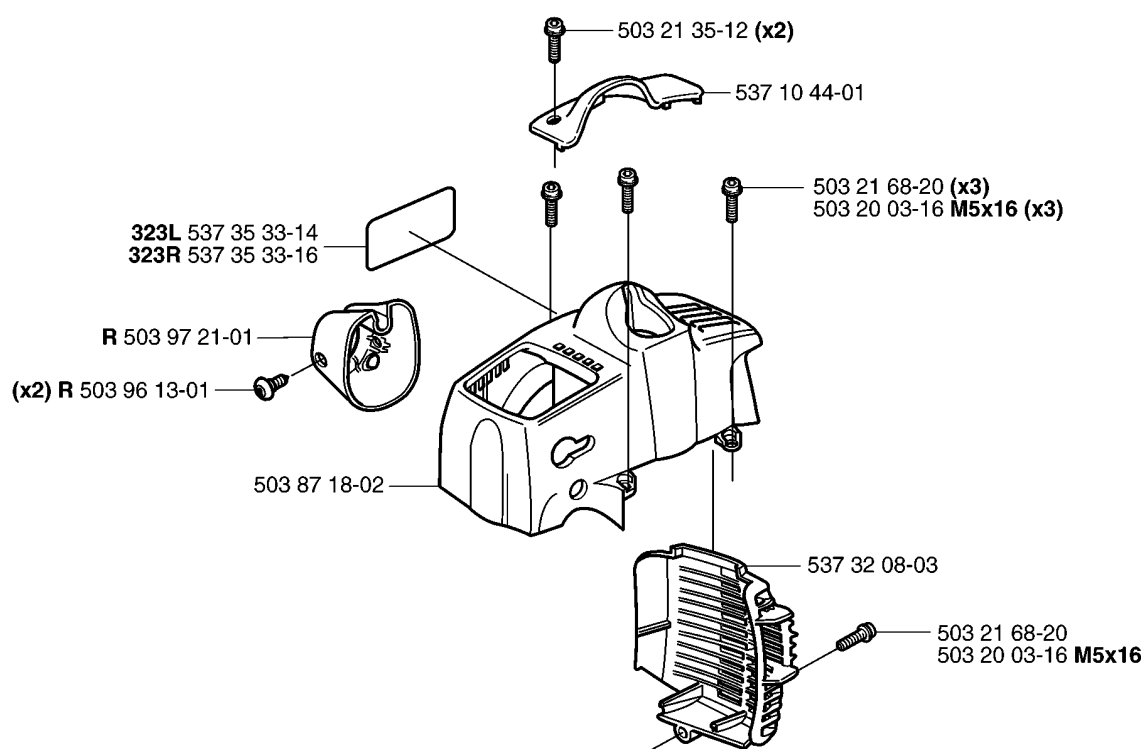 G 323L, R

CYLINDER COVER

323 R, 2007-01


Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		1
503 20 03-16	SCREW IHSCFM		3
503 21 35-12	SCREW CCRPANT		2
503 21 68-20	SCREW IHSCFT		1
503 21 68-20	SCREW IHSCFT		3
503 87 18-02	CYLINDER COVER		1
503 96 13-01	SCREW		2
503 97 21-01	COVER		1
537 10 44-01	ARM PROTECTION		1
537 32 08-03	HEAT PROTECTOR		1
537 35 33-14	LABEL		1
537 35 33-16	LABEL		1

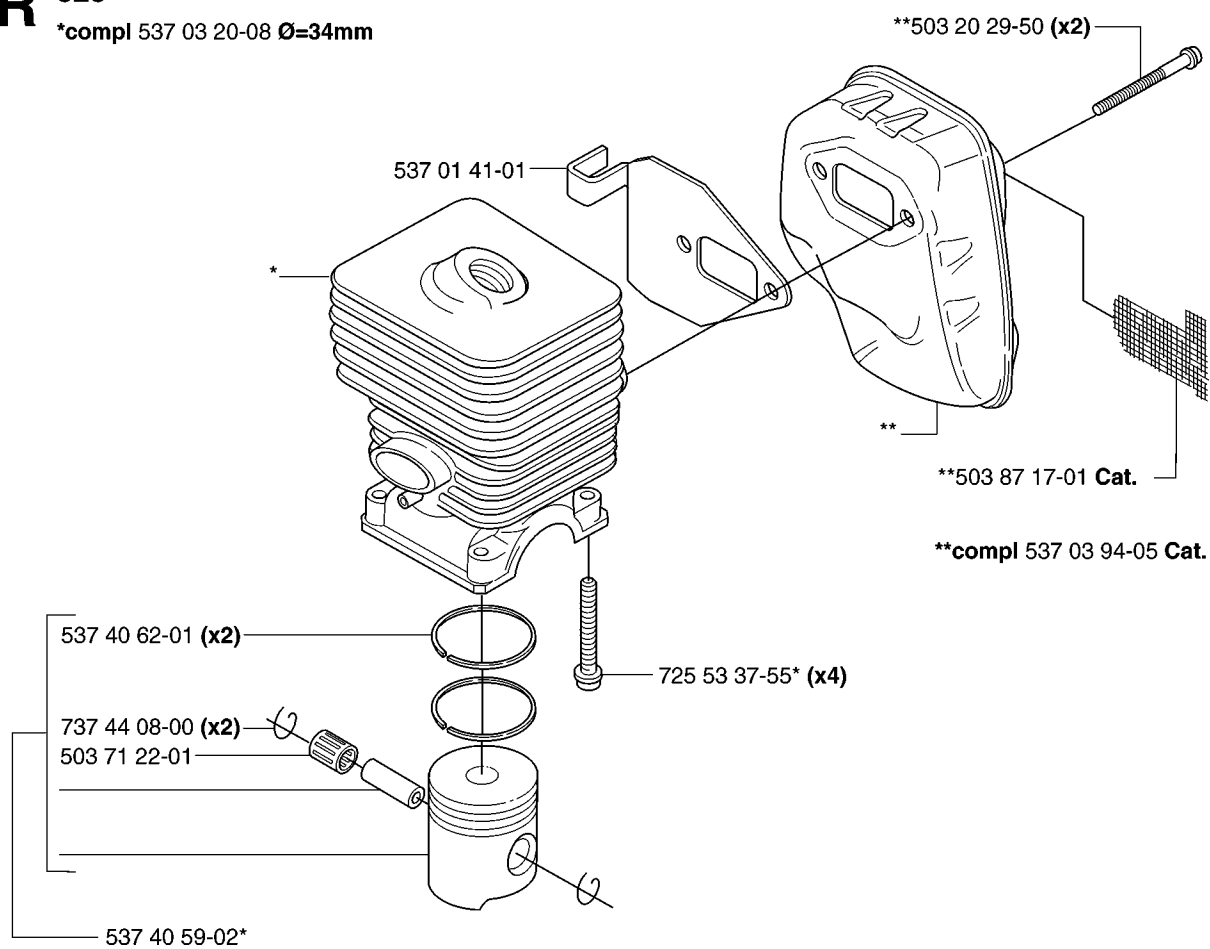 R 323***compl 537 03 20-08 Ø=34mm**

CYLINDER, PISTON & MUFFLER

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 29-50	SCREW IHSCFM		2
503 71 22-01	BEARING		1
503 87 17-01	SPARK ARRESTER SCREEN		1
537 01 41-01	GASKET		1
537 03 20-08	CYLINDER		1
537 03 94-05	MUFFLER ASSY		1
537 40 59-02	PISTON		1
537 40 62-01	PISTON RING		2
725 53 37-55	SCREW IHSCM		4
737 44 08-00	CIRCLIP		2

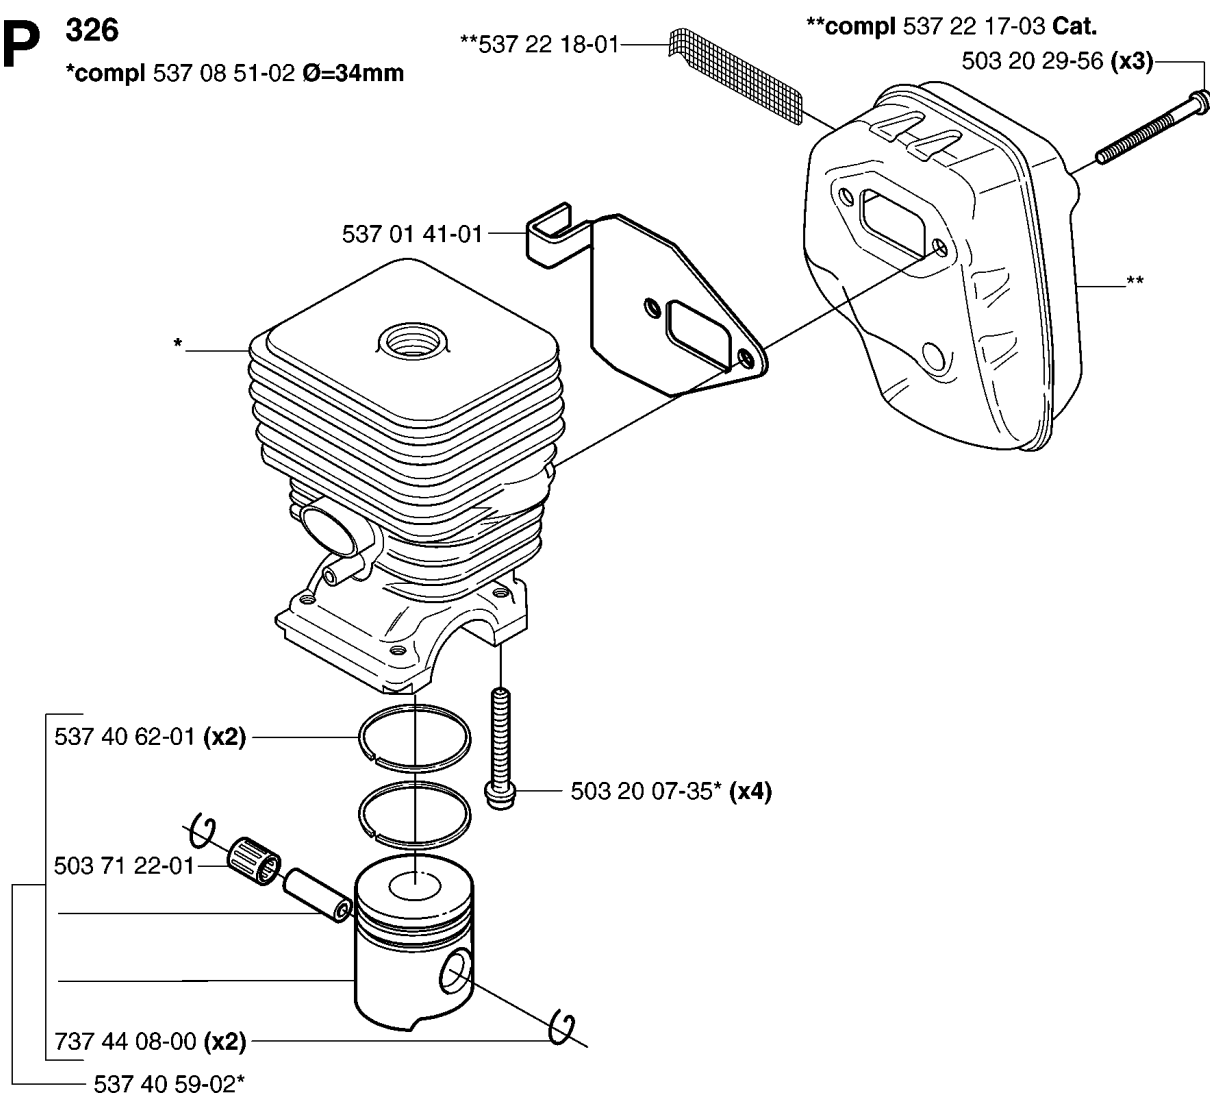 
P 326***compl 537 08 51-02 Ø=34mm**

CYLINDER, PISTON & MUFFLER

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 07-35	SCREW IHSCFM		4
503 20 29-56	SCREW IHSCFM		3
503 71 22-01	BEARING		1
537 01 41-01	GASKET		1
537 08 51-02	PISTON		1
537 22 17-03	MUFFLER ASSY		1
537 22 18-01	SPARK ARRESTER SCREEN		1
537 40 59-02	PISTON		1
537 40 62-01	PISTON RING		2
737 44 08-00	CIRCLIP		2

 
M *compl 537 06 86-02

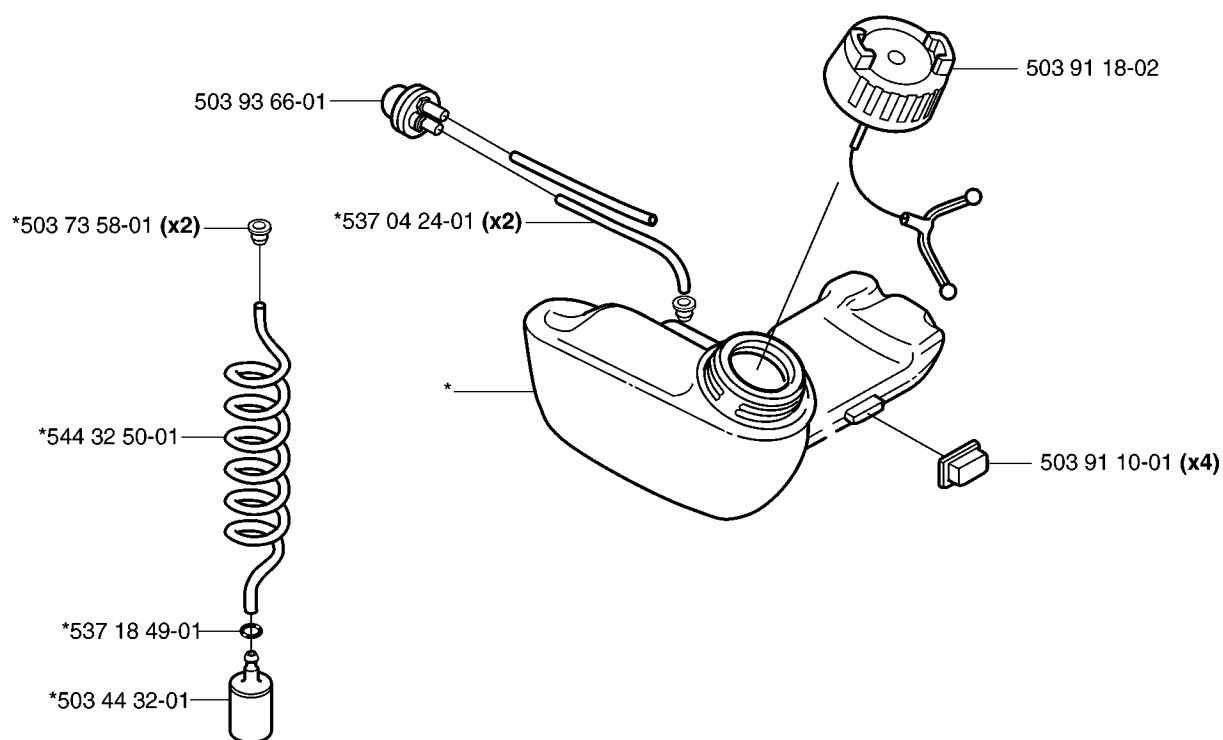

FUEL TANK

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 44 32-01	FILTER		1
503 73 58-01	BUSHING		2
503 91 10-01	SUSPENSION		4
503 91 18-02	TANK CAP		1
503 93 66-01	PRIMER HOUSING		1
537 04 24-01	FUEL HOSE		2
537 06 86-02	FUEL TANK		1
537 18 49-01	O-RING		1
544 32 50-01	FUEL HOSE		1

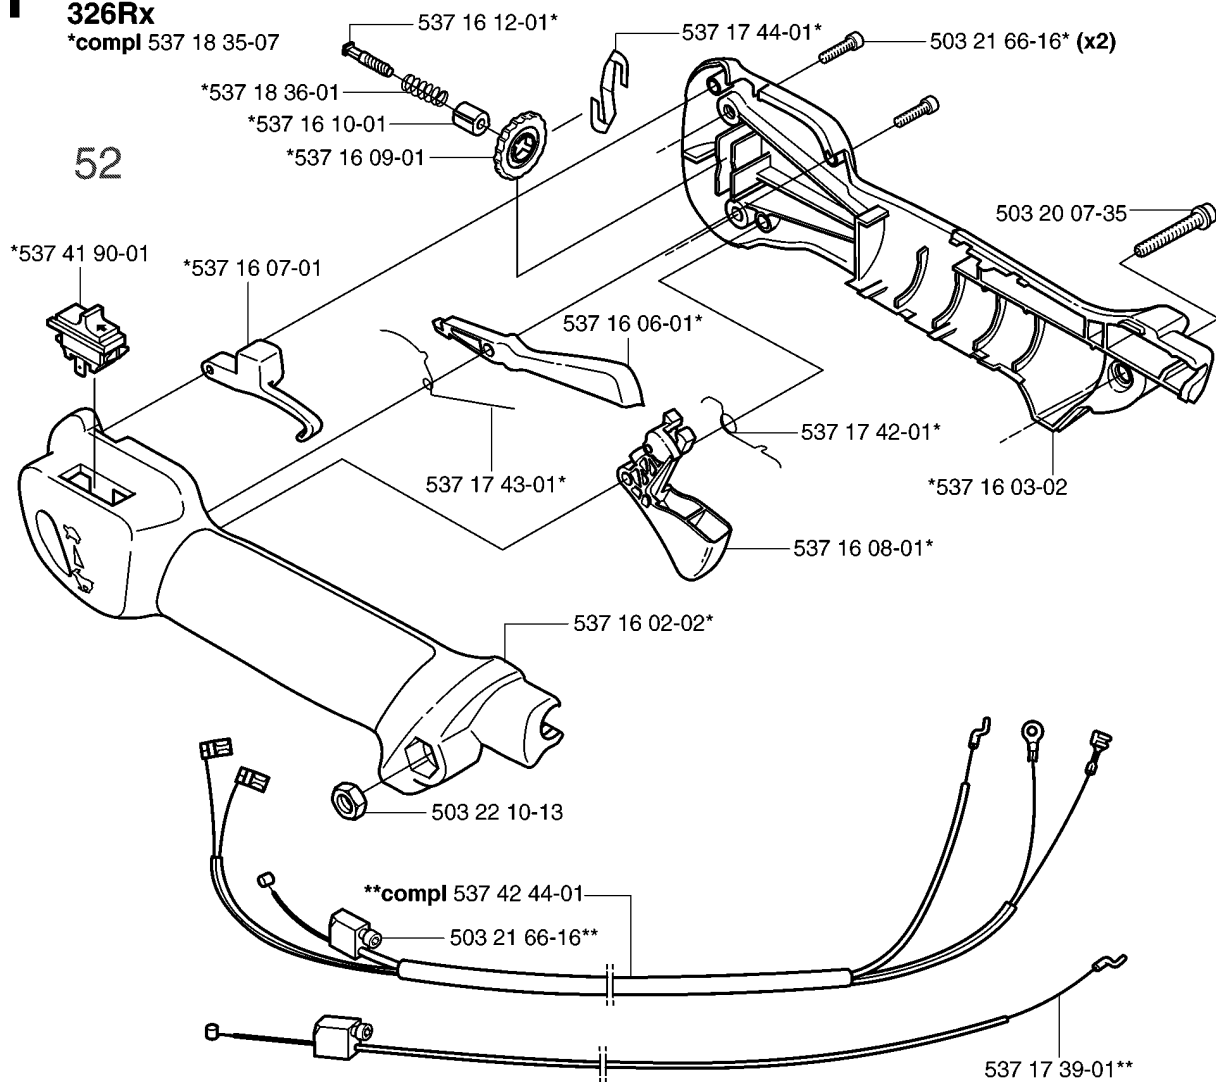 
**F 323R
326Rx*****compl** 537 18 35-07**52**

HANDLE & CONTROLS

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 07-35	SCREW IHSCFM		1
503 21 66-16	SCREW IHSCT		1
503 21 66-16	SCREW IHSCT		2
503 22 10-13	HEXAGON NUT		1
537 16 02-02	HANDLE HALF	Replaced by 537 18 35-07 HANDLE SYSTEM cpl	1
537 16 02-09	HANDLE HALF	Without hole for Steering wheel assy	1
537 16 03-02	HANDLE HALF		1
537 16 06-01	THROTTLE LOCKOUT		1
537 16 07-01	STARTER THROTTLE LOC		1
537 16 08-01	THROTTLE TRIGGER		1
537 16 09-01	STEERING WHEEL	Does not fit with HANDLE HALF 537 16 02-09	1
537 16 10-01	HUB	Does not fit with HANDLE HALF 537 16 02-09	1
537 16 12-01	SCREW	Does not fit with HANDLE HALF 537 16 02-09	1
537 17 39-01	THROTTLE WIRE ASSY		1
537 17 42-01	SPRING THROTTLE TRIG		1
537 17 43-01	SPRING		1
537 17 44-01	SPRING	Does not fit with HANDLE HALF 537 16 02-09	1
537 18 35-07	HANDLE SYSTEM		1
537 18 36-01	SPRING	Does not fit with HANDLE HALF 537 16 02-09	1
537 41 90-01	SWITCH		1
537 42 44-01	WIRING ASSY		1

 Y Duo Balance
***compl 537 27 57-01**
***compl 537 27 57-03 US**

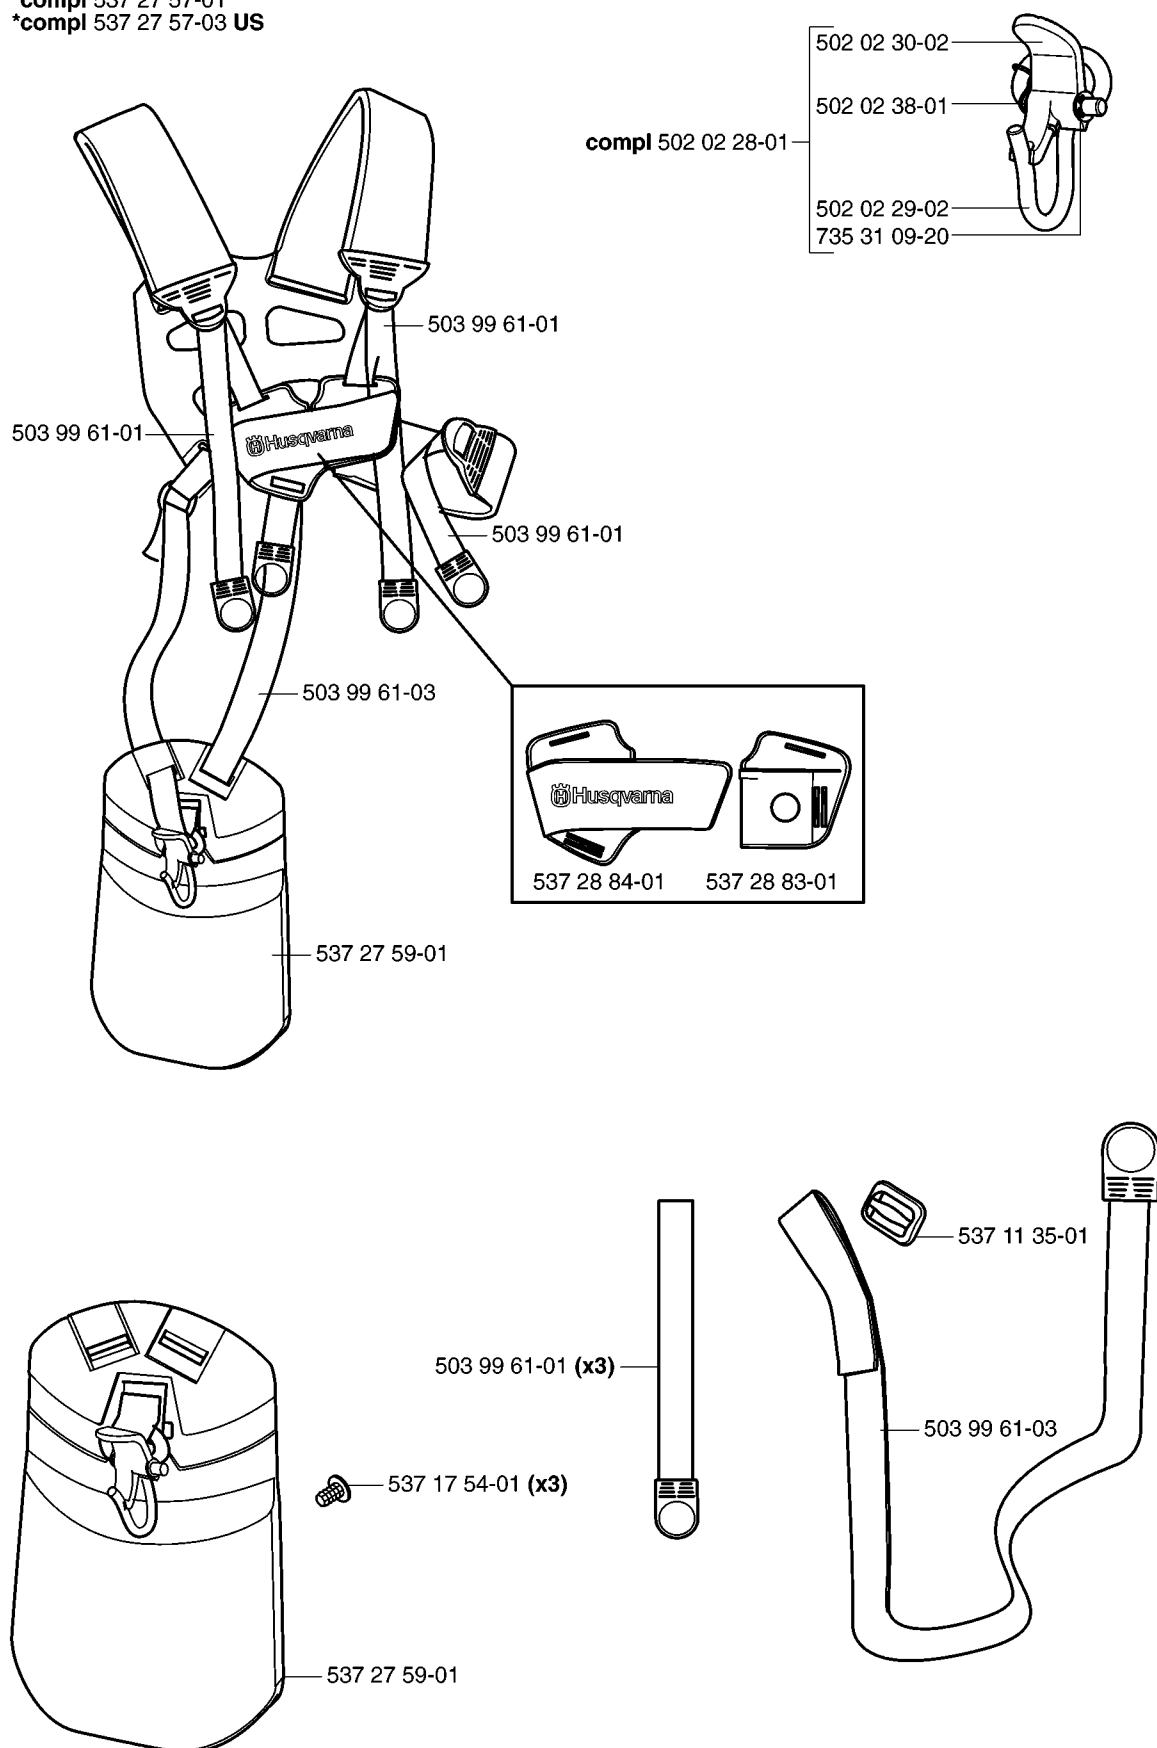


HARNESS

323 R, 2007-01

Part No	Description	Remark	QTY KIT
502 02 28-01	HARNESS		1
502 02 29-02	HARNESS		1
502 02 30-02	HARNESS		1
502 02 38-01	HARNESS		1
503 99 61-01	HARNESS		1
503 99 61-01	HARNESS		1
503 99 61-01	HARNESS		1
503 99 61-01	HARNESS		3
503 99 61-03	BAND		1
503 99 61-03	BAND		1
537 11 35-01	RETAINER		1
537 17 54-01	HARNESS		3
537 27 57-01	HARNESS		1
537 27 57-03	HARNESS		1
537 27 59-01	HIP PAD		1
537 27 59-01	HIP PAD		1
537 28 83-01	FRONT PIECE		1
537 28 84-01	FRONT PIECE		1
735 31 09-20	HARNESS		1

N *compl 537 41 87-01

 
**compl 537 06 33-02 (326)

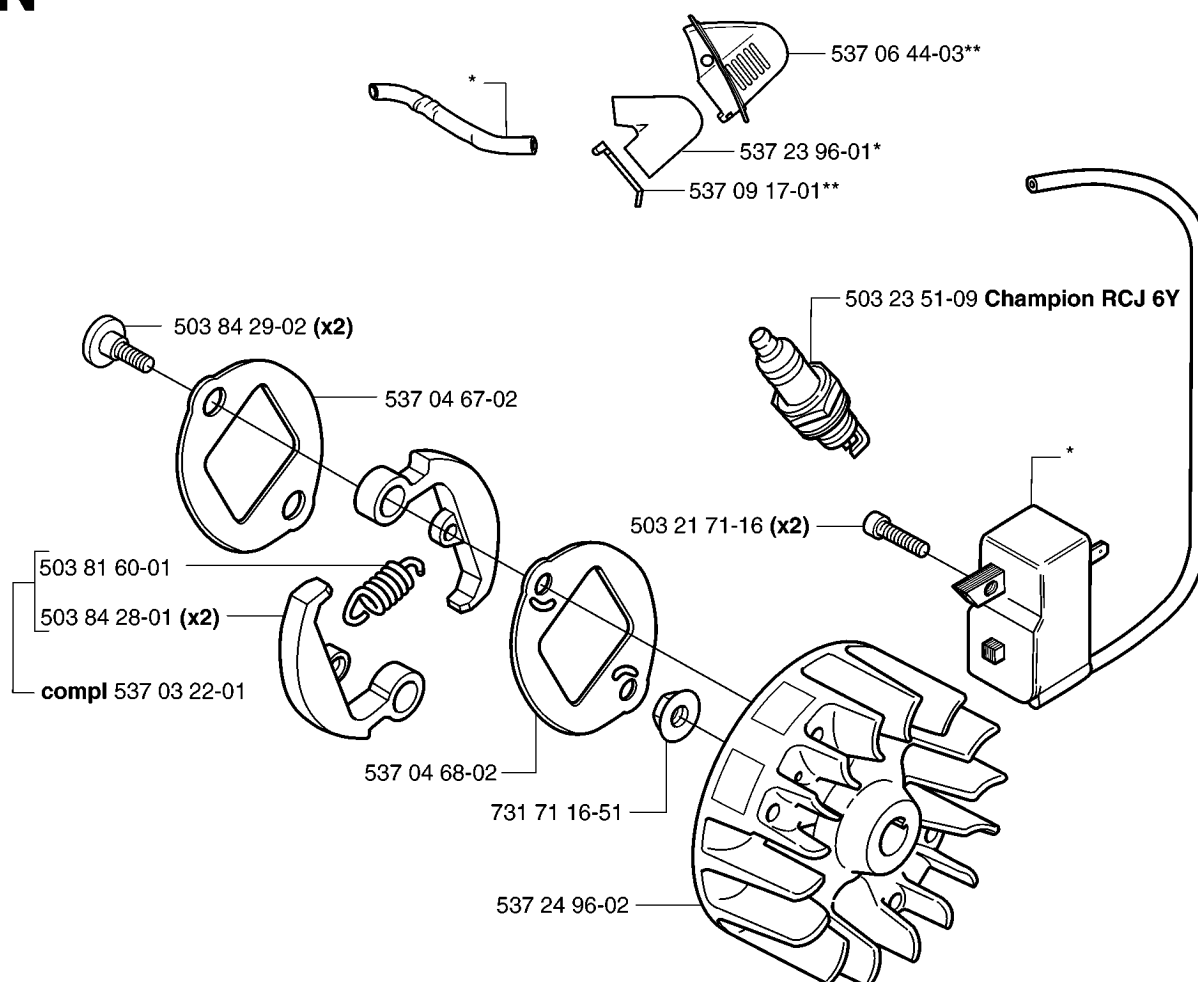

IGNITION SYSTEM

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 21 71-16	SCREW IHSCT		2
503 23 51-09	SPARK PLUG		1
503 81 60-01	CLUTCH SPRING		1
503 84 28-01	CLUTCH SHOE		2
503 84 29-02	SCREW		2
537 03 22-01	CLUTCH ASSY		1
537 04 67-02	WASHER		1
537 04 68-02	WASHER		1
537 06 33-02	COVER		1
537 06 44-03	COVER		1
537 09 17-01	SECURING PLATE		1
537 23 96-01	SPARK PLUG CAP		1
537 24 96-02	FLYWHEEL		1
537 41 87-01	ELECTRONIC MODULE		1
731 71 16-51	HEXAGON NUT FLANGE		1

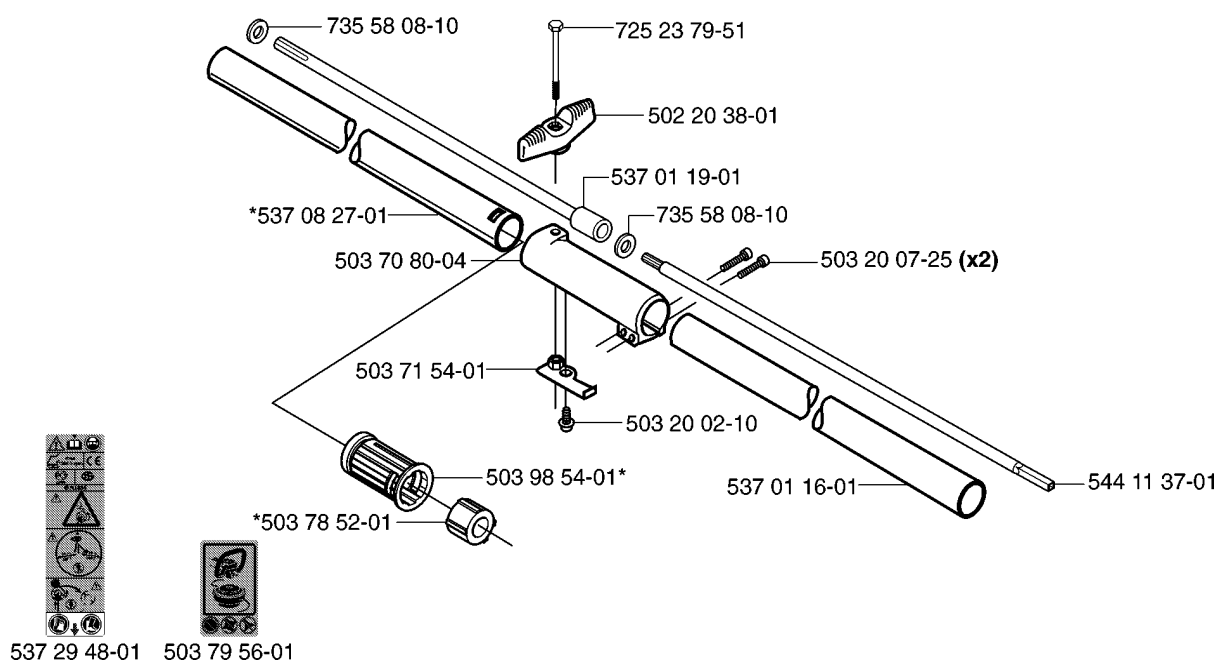 
C 326LDx
*compl 537 07 99-01

SHAFT

323 R, 2007-01

Ref	Part No	Description	Remark	QTY KIT
537 07 99-01	537 07 99-01	TUBE		1
735 58 08-10	735 58 08-10	LOCKWASHER		1
537 08 27-01	537 08 27-01	TUBE		1
503 70 80-04	503 70 80-04	COMPRESSION SLEEVE		1
503 71 54-01	503 71 54-01	LOCKING PLATE		1
503 78 52-01	503 78 52-01	SUPPORTING BEARING		1
537 29 48-01	589 29 51-01	LABEL		1
503 79 56-01	503 79 56-01	LABEL		1
503 98 54-01	503 98 54-01	BEARING CAGE		1
503 20 02-10	503 20 02-10	SCREW IHSCFM		1
537 01 16-01	537 01 16-01	TUBE		1
544 11 37-01	544 11 37-01	DRIVE SHAFT ASSY		1
503 20 07-25	503 20 07-25	SCREW IHSCFM		2
735 58 08-10	735 58 08-10	LOCKWASHER		1
537 01 19-01	537 01 19-01	DRIVE SHAFT		1
502 20 38-01	502 20 38-01	KNOB		1
725 23 79-51	725 23 79-51	SCREW EHHM		1

 D 323R
326Rx
 *compl 503 72 43-09

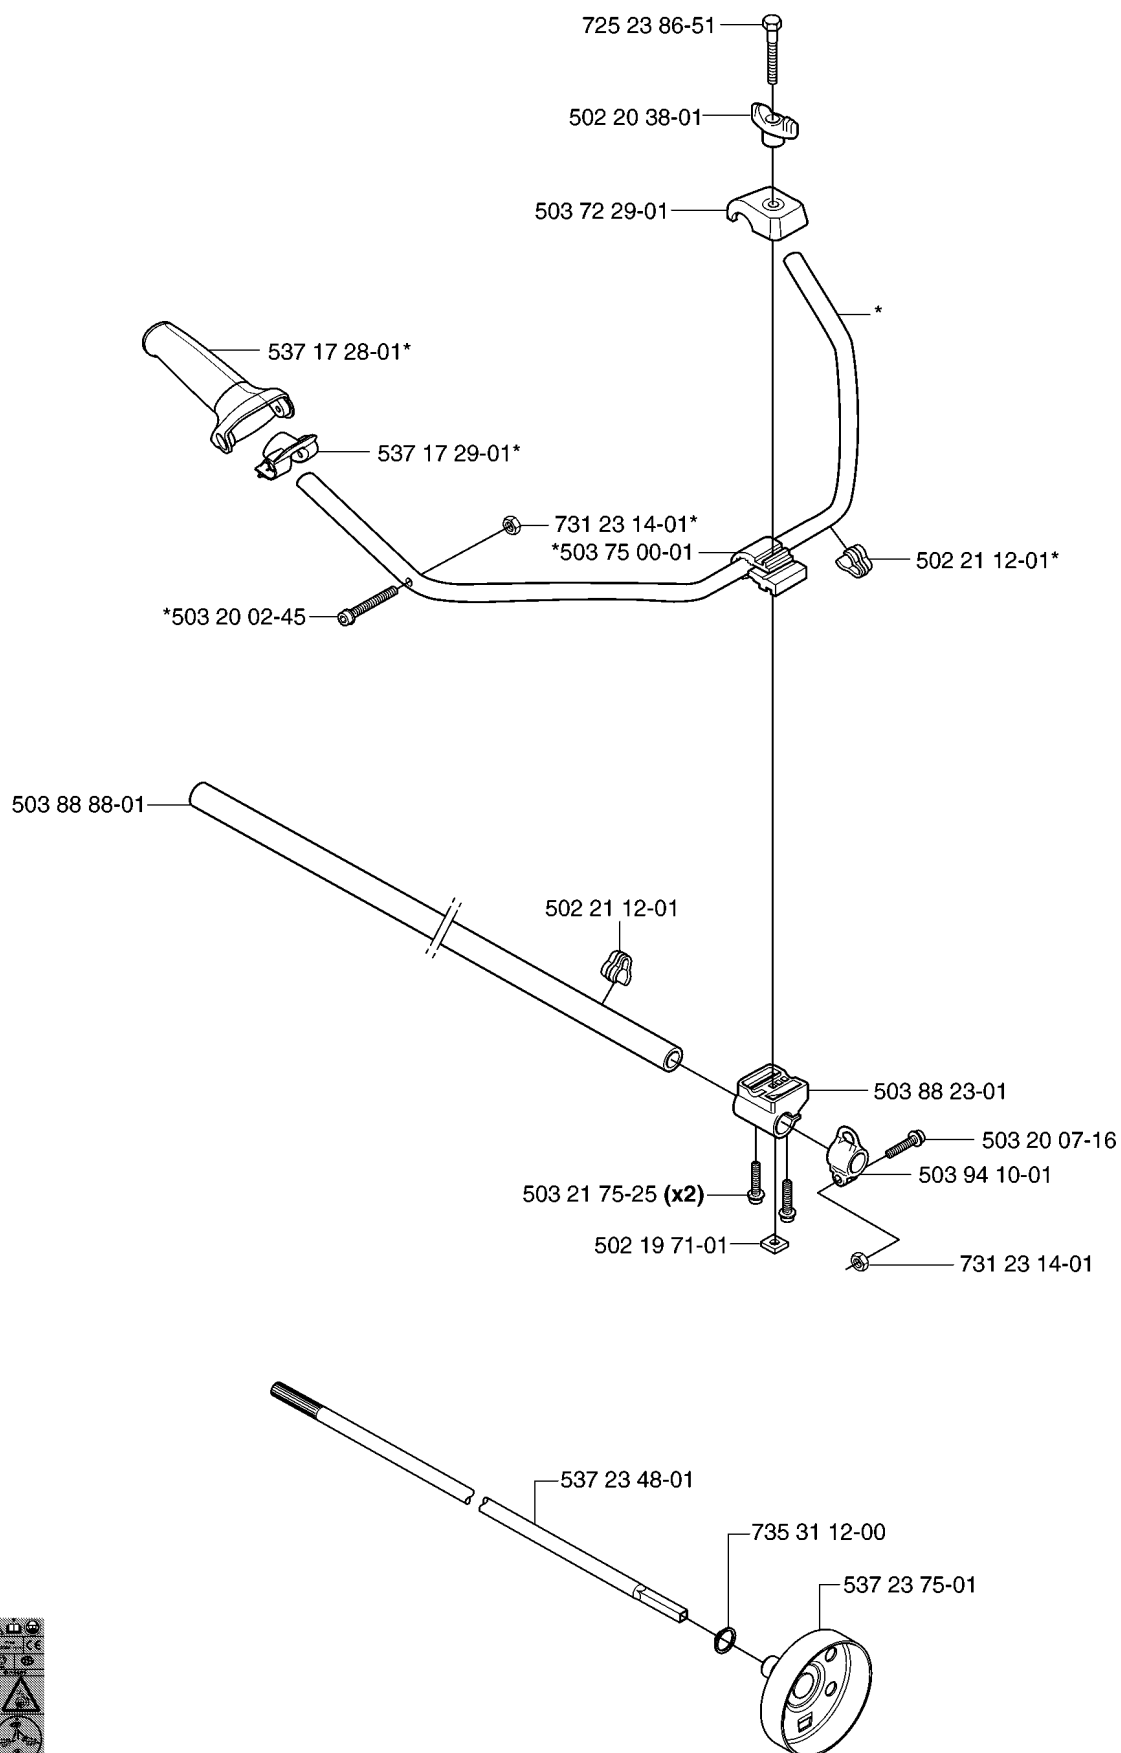


537 29 48-01

SHAFT & HANDLE

323 R, 2007-01

Ref	Part No	Description	Remark	QTY KIT
503 72 43-09	503 72 43-09	HANDLEBAR		1
537 17 28-01	537 17 28-01	HANDLE		1
537 17 29-01	537 17 29-01	COVER		1
503 20 02-45	503 20 02-45	SCREW IHSCFM		1
503 88 88-01	503 88 88-01	TUBE		1
502 21 12-01	502 21 12-01	STAPLE		1
503 21 75-25	503 21 75-25	SCREW IHSCFT		2
502 19 71-01	502 19 71-01	SQUARE NUT		1
537 23 48-01	537 23 48-01	DRIVE SHAFT		1
537 29 48-01	589 29 51-01	LABEL		1
537 23 75-01	537 23 75-01	CLUTCH DRUM ASSY		1
735 31 12-00	735 31 12-00	CIRCLIP		1
731 23 14-01	731 23 14-01	HEXAGON NUT		1
503 94 10-01	503 94 10-01	HOOK		1
503 20 07-16	503 20 07-16	SCREW IHSCFM		1
503 88 23-01	503 88 23-01	BRACKET		1
502 21 12-01	502 21 12-01	STAPLE		1
503 75 00-01	503 75 00-01	HANDLEBAR BRACKET		1
731 23 14-01	731 23 14-01	HEXAGON NUT		1
503 72 29-01	503 72 29-01	COVER		1
502 20 38-01	502 20 38-01	KNOB		1
725 23 86-51	725 23 86-51	SCREW EHHM		1

 
B 323L
326Lx
326RJx
326LS

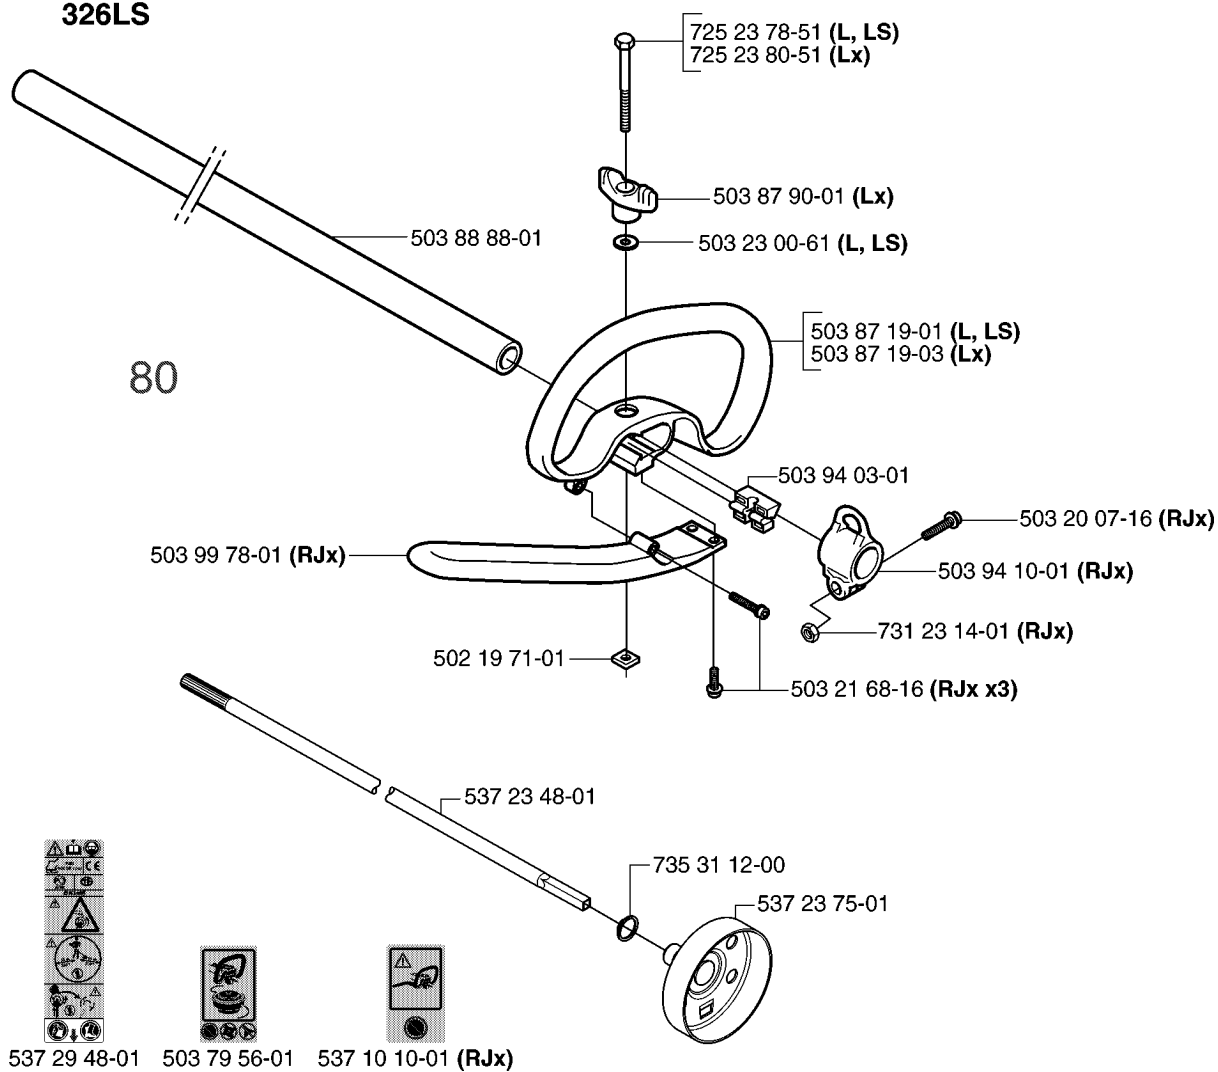

SHAFT & HANDLE

323 R, 2007-01


Ref	Part No	Description	Remark	QTY KIT
503 88 88-01	503 88 88-01	TUBE		1
503 99 78-01	503 99 78-01	HANDLE		1
502 19 71-01	502 19 71-01	SQUARE NUT		1
537 23 48-01	537 23 48-01	DRIVE SHAFT		1
537 29 48-01	589 29 51-01	LABEL		1
503 79 56-01	503 79 56-01	LABEL		1
537 10 10-01	537 10 10-01	LABEL		1
537 23 75-01	537 23 75-01	CLUTCH DRUM ASSY		1
735 31 12-00	735 31 12-00	CIRCLIP		1
503 21 68-16	503 21 68-16	SCREW IH SCT		3
731 23 14-01	731 23 14-01	HEXAGON NUT		1
503 94 10-01	503 94 10-01	HOOK		1
503 20 07-16	503 20 07-16	SCREW IH SCFM		1
503 94 03-01	503 94 03-01	DISTANCE		1
503 87 19-03	503 87 19-03	HANDLE		1
503 87 19-01	503 87 19-01	HANDLE.LOOP		1
503 23 00-61	503 23 00-61	WASHER		1
503 87 90-01	503 87 90-01	KNOB		1
725 23 80-51	725 23 80-51	SCREW EHHM		1
725 23 78-51	725 23 78-51	SCREW EHHM		1

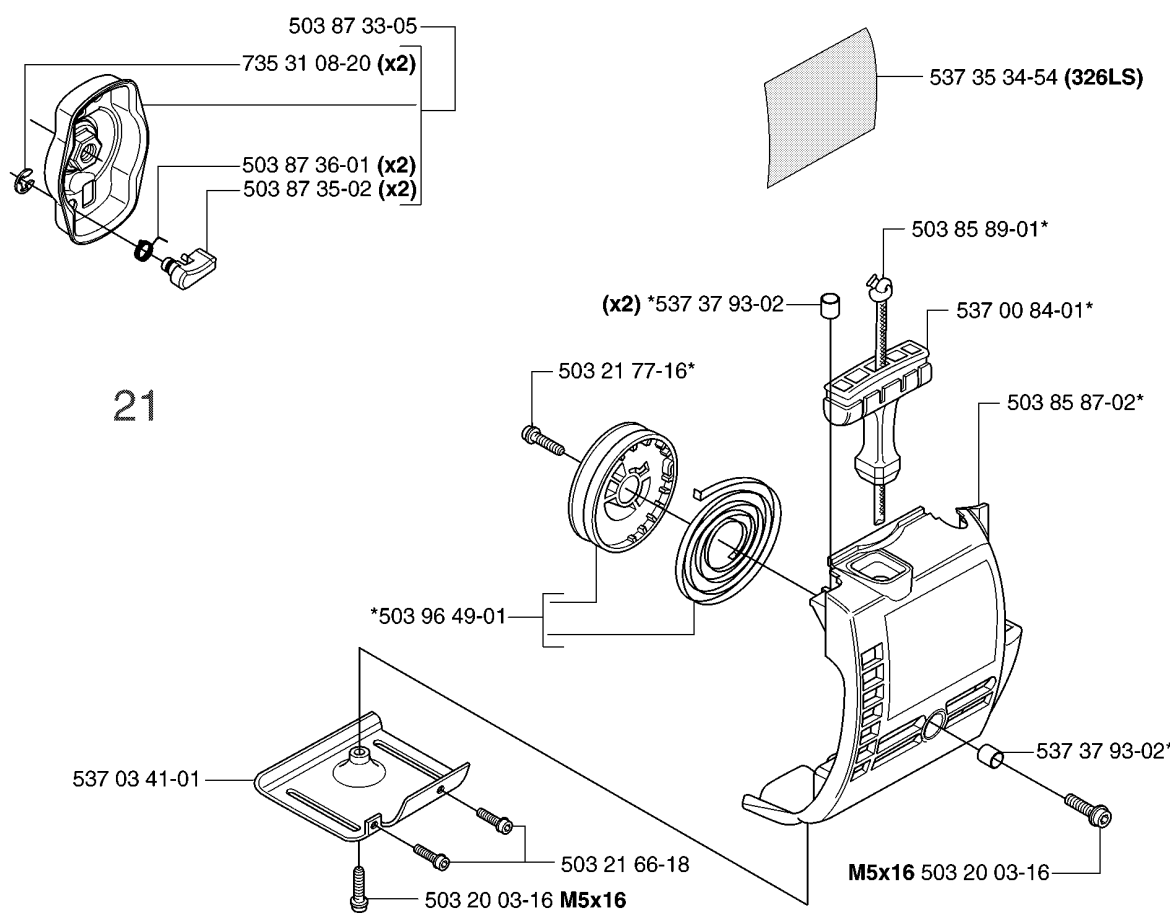 L***compl 503 85 28-06 326LS**

STARTER

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		1
503 20 03-16	SCREW IHSCFM		1
503 21 66-18	SCREW IHSCT		1
503 21 77-16	SCREW IHSCT		1
503 85 28-06	STARTER ASSY		1
503 85 87-02	STARTER HOUSING		1
503 85 89-01	STARTER CORD		1
503 87 33-05	BRIDGE		1
503 87 35-02	STARTER PAWL		2
503 87 36-01	SPRING		2
503 96 49-01	STARTER PULLEY		1
537 00 84-01	STARTER HANDLE		1
537 03 41-01	PROTECTIVE PLATE		1
537 35 34-54	LABEL		1
537 37 93-02	SPACING SLEEVE		2
537 37 93-02	SPACING SLEEVE		1
735 31 08-20	E-CLIP		2

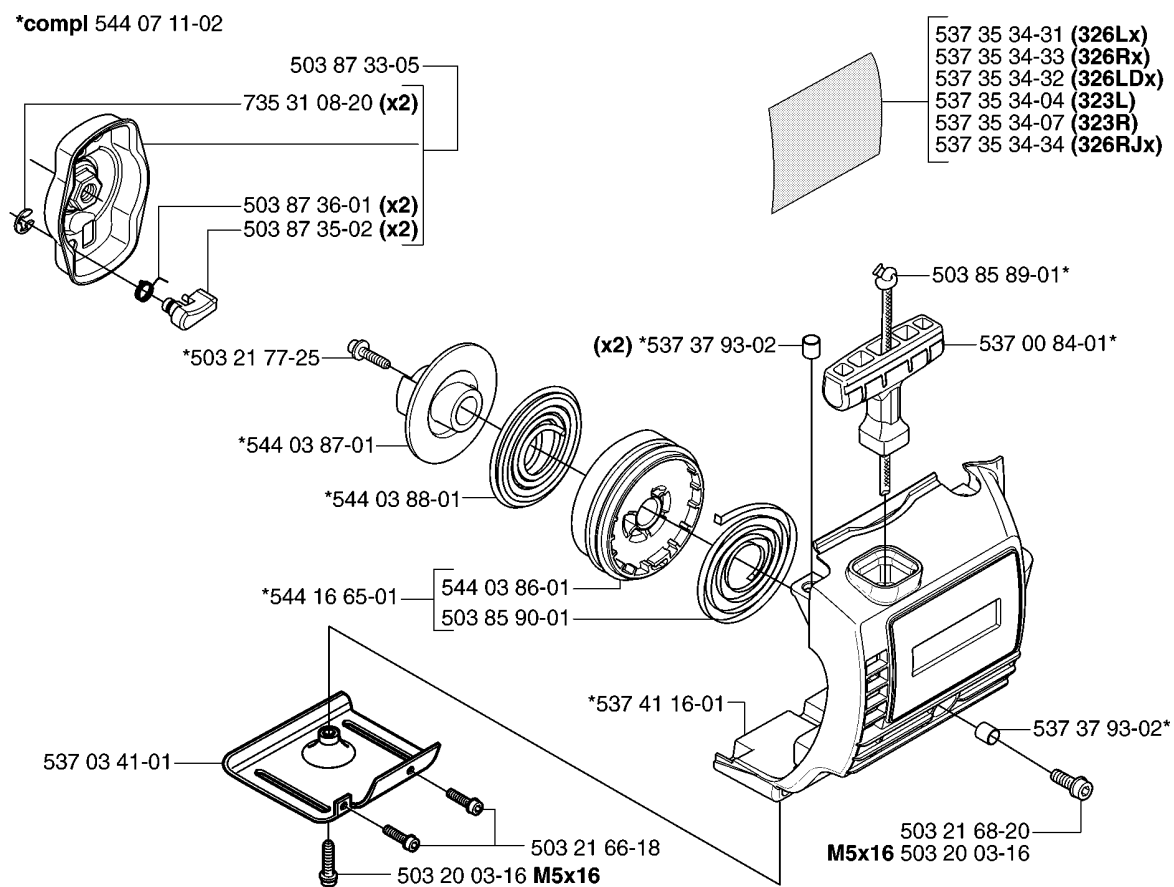 K***compl** 544 07 11-02

STARTER

323 R, 2007-01

Part No	Description	Remark	QTY KIT
503 20 03-16	SCREW IHSCFM		1
503 20 03-16	SCREW IHSCFM		1
503 21 66-18	SCREW IHSCF		1
503 21 68-20	SCREW IHSCFT		1
503 21 77-25	SCREW IHSCF		1
503 85 89-01	STARTER CORD		1
503 85 90-01	RECOIL SPRING		1
503 87 33-05	BRIDGE		1
503 87 35-02	STARTER PAWL		2
503 87 36-01	SPRING		2
537 00 84-01	STARTER HANDLE		1
537 03 41-01	PROTECTIVE PLATE		1
537 35 34-04	LABEL		1
537 35 34-07	LABEL		1
537 35 34-31	LABEL		1
537 35 34-32	LABEL		1
537 35 34-33	LABEL		1
537 35 34-34	LABEL		1
537 37 93-02	SPACING SLEEVE		2
537 37 93-02	SPACING SLEEVE		1
537 41 16-01	STARTER HOUSING		1
544 03 86-01	STARTER PULLEY		1
544 03 87-01	DRIVER		1
544 03 88-01	SPRING		1
544 07 11-02	STARTER ASSY		1
544 16 65-01	STARTER PULLEY ASSY		1
735 31 08-20	E-CLIP		2