
# Poulan PRO

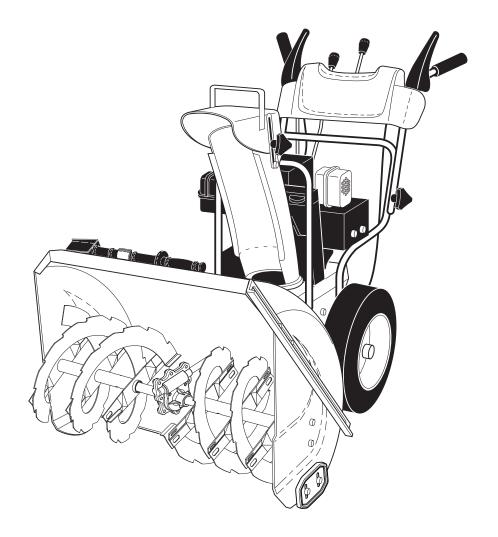

PART'S MANUAL

# MODEL NUMBER: 96198005603 SNOW THROWER

#### A WARNING:


Read the Owner's Manual and follow all Warnings and Safety Instructions. Failure to do so can result in serious injury.

Gasoline containing up to 10% ethanol (E10) is acceptable for use in this machine. The use of any gasoline exceeding 10% ethanol (E10) will void the product warranty.

Always Wear Eye Protection During Operation

585 40 51-27


### REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) AUGER HOUSING / IMPELLER ASSEMBLY

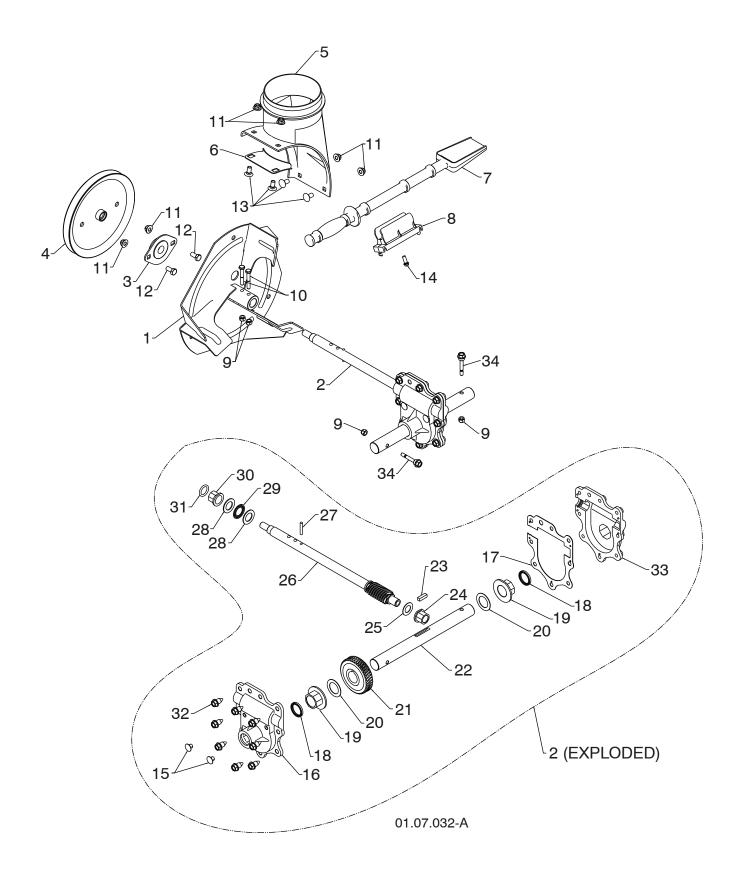


### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) AUGER HOUSING / IMPELLER ASSEMBLY

| KEY | PART         |                      |
|-----|--------------|----------------------|
| NO. | NO.          | DESCRIPTION          |
| 1   | 532 18 41-05 | IMPELLER             |
| 2   | 584 64 83-01 | GEARBOX ASSEMBLY     |
| 3   | 532 18 89-09 | BEARING              |
| 4   | 585 09 32-01 | IMPELLER PULLEY      |
| 5   | 532 44 24-38 | DISCHARGE BASE       |
| 6   | 532 18 40-95 | CORNER BRACKET       |
| 7   | 532 19 21-99 | CLEAN OUT TOOL       |
| 8   | 532 40 54-00 | TOOL CLIP            |
| 9   | 873 80 04-00 | NUT 1/4-20           |
| 10  | 874 78 04-26 | SCREW 1/4-20 X .625  |
| 11  | 532 42 79-42 | NUT 5/16-18          |
| 12  | 532 16 31-83 | SCREW 5/16-18 X .625 |
| 13  | 532 18 03-55 | CARRIAGE BOLT        |
| 14  | 532 19 41-89 | SCREW 13-16 X .625   |
| 15  | 532 40 77-60 | PLUG                 |
| 16  | 532 42 73-02 | GEARBOX COVER RH     |
| 17  | 532 42 73-45 | GASKET               |
| 18  | 532 40 77-70 | SEAL                 |
| 19  | 532 40 77-62 | BEARING              |
| 20  | 532 17 46-97 | THRUST WASHER 1.00   |
| 21  | 532 40 77-63 | WORM GEAR            |
| 22  | 532 40 77-64 | AUGER SHAFT          |
| 23  | 532 18 92-82 | SQUARE KEY           |
| 24  | 532 40 77-58 | BEARING              |
| 25  | 532 17 46-83 | THRUST WASHER        |
| 26  | 584 64 84-01 | IMPELLER SHAFT       |
| 27  | 532 18 42-05 | ROLL PIN             |
| 28  | 532 17 46-81 | THRUST WASHER        |
| 29  | 532 17 46-84 | THRUST BEARING       |
| 30  | 532 40 77-69 | BEARING              |
| 31  | 532 40 77-68 | O-RING               |
| 32  | 532 40 77-67 | SCREW 5/16-18 X .750 |
| 33  | 532 42 73-17 | GEARBOX COVER LH     |
| 34  | 532 19 20-90 | SHEAR BOLT           |
|     |              |                      |

## REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) AUGER HOUSING / IMPELLER ASSEMBLY

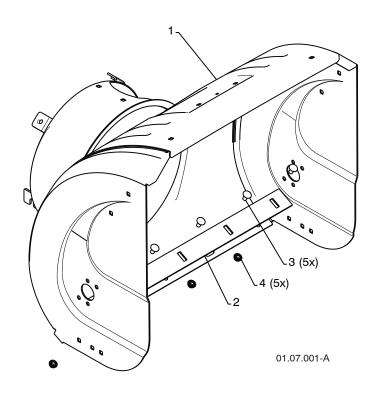

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION             |
|------------|--------------|-------------------------|
| 1          | 532 41 52-95 | AUGER HOUSING           |
| 2          | 532 40 78-25 | SCRAPER BAR             |
| 3          | 872 27 05-05 | CARRIAGE BOLT 5/16-18 X |
|            |              | .625                    |
| 4          | 532 15 53-77 | NUT 5/16-18             |

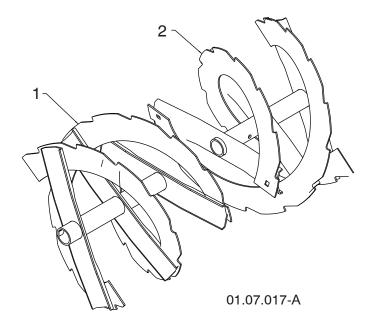

 KEY NO.
 PART NO.
 DESCRIPTION

 1
 532 44 46-43
 AUGER ASSEMBLY LH 24

 2
 532 44 46-42
 AUGER ASSEMBLY RH 24

## REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) AUGER HOUSING / IMPELLER ASSEMBLY


3

**DESCRIPTION** 

**AUGER BEARING** 

**BEARING PLUG** 


532 17 95-82 SCREW 5/16-18 X 1.00

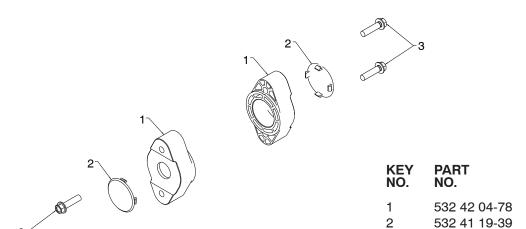

01.07.024-B


|             |    |            |              | 2                                   |
|-------------|----|------------|--------------|-------------------------------------|
| 3           | 3V |            |              |                                     |
|             |    | KEY<br>NO. | PART<br>NO.  | DESCRIPTION                         |
|             |    | 1          | 532 43 59-51 | PLATE SKID PLASTIC HDPE             |
|             |    | 2          | 532 42 65-89 | NUT 5/16-18 LARGE HEX<br>FLANGE BLK |
|             |    | 3          | 872 11 05-10 | CARRIAGE BOLT 5/16-18 X 1.25        |
| 01.11.003-B |    |            |              |                                     |

## REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) AUGER HOUSING / IMPELLER ASSEMBLY

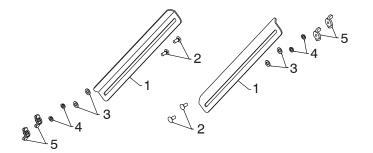


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION             |
|------------|--------------|-------------------------|
| 1          | 532 18 47-47 | DRIFT CUTTER BAR        |
| 2          | 872 27 05-06 | CARRIAGE BOLT 5/16-18 X |
|            |              | .750                    |
| 3          | 532 17 92-46 | PLASTIC WASHER          |
| 4          | 810 04 05-00 | LOCKWASHER 5/16         |
| 5          | 532 12 86-38 | NUT 5/16-18             |

### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) CONTROL PANEL / CHUTE

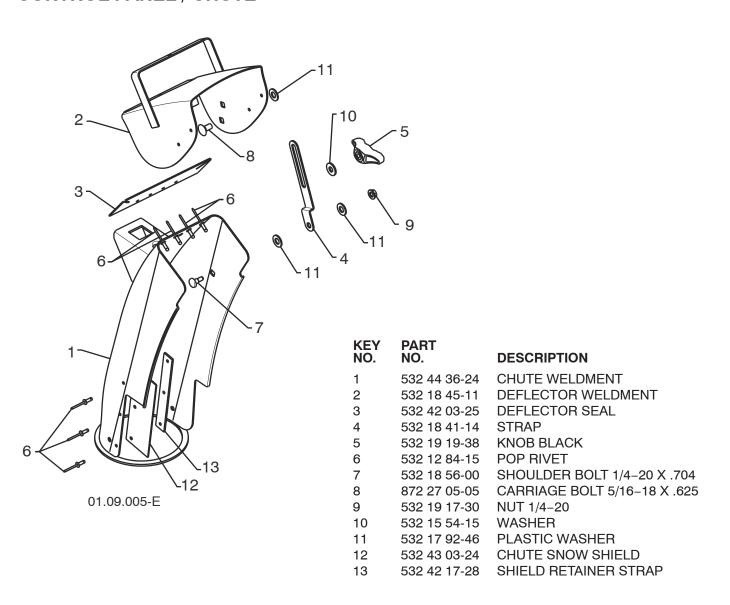

## REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) CONTROL PANEL / CHUTE

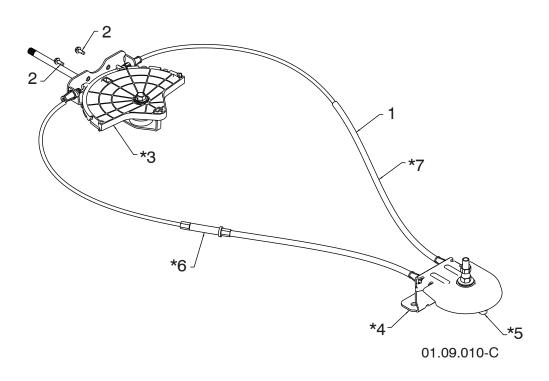


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                  |
|------------|--------------|------------------------------|
| 1          | 532 42 82-72 | LEVER/CABLE ROTATOR ASSEMBLY |
| 2          | 817 54 10-08 | SCREW 10-24 X .625           |
| *3         | 532 42 06-78 | ROTATOR HEAD                 |
| *4         | 532 40 59-32 | ROTATOR PIVOT BRACKET        |
| *5         | 532 42 06-75 | PULLEY PIVOT                 |
| *6         | 532 42 82-73 | CABLE ASSEMBLY ADJUSTABLE    |
| *7         | 532 42 83-10 | CABLE ASSEMBLY HEAT SHIELD   |


#### **NOTES:**

1. ITEMS INDICATED WITH AN \* ARE LISTED AS REFERENCE FOR SERVICE PARTS ONLY.

### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) HANDLES

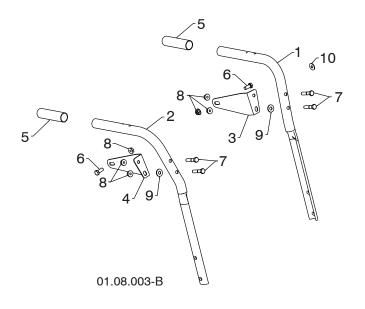


| KEY | PART         |                      |
|-----|--------------|----------------------|
| NO. | NO.          | DESCRIPTION          |
| 1   | 532 42 10-69 | PLOW HANDLE LH       |
| 2   | 532 42 10-70 | PLOW HANDLE RH       |
| 3   | 532 42 91-48 | PANEL BRACKET LH     |
| 4   | 532 42 91-49 | PANEL BRACKET RH     |
| 5   | 532 19 95-13 | HANDLE GRIP          |
| 6   | 874 78 05-12 | SCREW 5/16-18 X .750 |
| 7   | 874 78 05-24 | SCREW 5/16-18 X 1.50 |
| 8   | 532 75 11-53 | NUT 5/16-18          |
| 9   | 532 15 54-15 | WASHER               |
| 10  | 532 05 38-47 | WASHER               |
|     |              |                      |

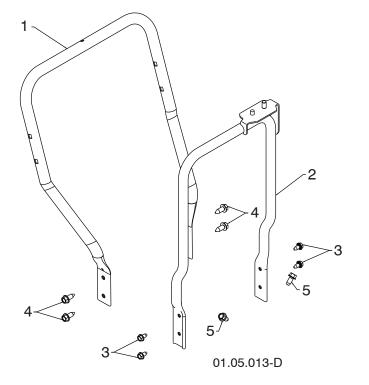


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION            |
|------------|--------------|------------------------|
| 1          | 585 23 81-02 | LOWER HANDLE           |
| 2          | 532 44 36-17 | PIVOT SUPPORT WELDMENT |
| 3          | 817 00 05-10 | SCREW 5/16-18 X .750   |
| 4          | 817 00 06-16 | SCREW 3/8-16 X 1.00    |
| 5          | 817 00 06-12 | SCREW 3/8-16 X .750    |
|            |              |                        |

### REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) HANDLES

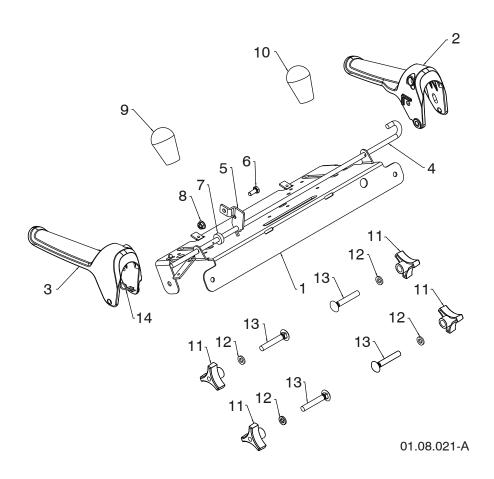


| KEY<br>NO. | PART<br>NO.   | DESCRIPTION   |
|------------|---|---|
| 1          | 585 19 88-02  | CONTROL PANEL   |
| 2          | 581 77 98-01  | LH CONTROL LEVER  |
| 3          | 581 77 97-01  | RH CONTROL LEVER  |
| 4          | 584 80 90-01  | INTERLOCK CONTROL ROD   |
| 5          | 585 00 47-03  | INTERLOCK BRACKET   |
| 6          | 874 78 04-10  | 1/4-20 X .625 HEX HEAD SCREW  |
| 7          | 532 42 16-13  | SPACER  |
| 8          | 532 08 83-49  | 1/4-20 FLANGE NUT (TOP LOCK)  |
| 9          | 532 41 42-81  | KNOB RED  |
| 10         | 532 41 42-80  | KNOB BLACK  |
| 11         | 532 17 88-99  | HANDLE KNOB   |
| 12         | 819 13 13-16  | 3/8 WASHER  |
| 13         | 872 12 06-18  | CARRIAGE BOLT 3/8-16 X 2.25   |
| 14         | 532 16 96-75  | RETAINER  |
|            | 1<br>2<br>3<br>4<br>5<br>6<br>7<br>8<br>9<br>10<br>11<br>12<br>13 | NO. NO.  1 585 19 88-02 2 581 77 98-01 3 581 77 97-01 4 584 80 90-01 5 585 00 47-03 6 874 78 04-10 7 532 42 16-13 8 532 08 83-49 9 532 41 42-81 10 532 41 42-80 11 532 17 88-99 12 819 13 13-16 13 872 12 06-18 |

### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) HANDLES

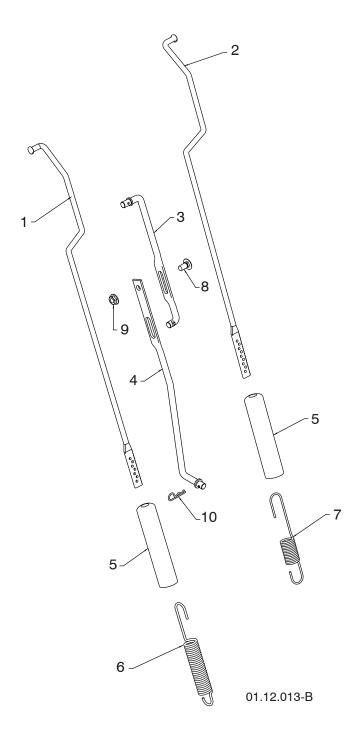


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                  |
|------------|--------------|------------------------------|
| 1          | 584 80 87-01 | IMPELLER ROD ASSEMBLY        |
| 2          | 584 80 88-01 | TRACTION ROD ASSEMBLY        |
| 3          | 532 18 04-45 | SHIFTER ROD TOP              |
| 4          | 532 18 77-16 | SHIFTER ROD BOTTOM           |
| 5          | 532 18 04-47 | SPRING SLEEVE                |
| 6          | 580 79 62-01 | SPRING CONTROL ROD           |
| 7          | 580 80 21-01 | SPRING TRACTION ROD          |
| 8          | 872 27 05-05 | CARRIAGE BOLT 5/16-18 X .750 |
| 9          | 532 15 53-77 | NUT 5/16-18                  |
| 10         | 532 16 96-75 | RETAINER                     |

### REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) HANDLES

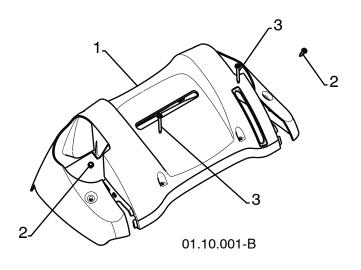


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION        |
|------------|--------------|--------------------|
| 1          | 532 18 33-52 | CONSOLE PANEL      |
| 2          | 532 18 44-71 | SCREW 10-24 X .625 |
| 3          | 532 17 52-62 | SCREW 10-24 X 1.25 |

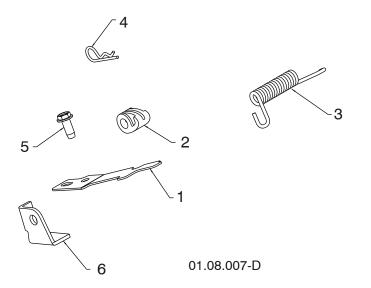


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION         |
|------------|--------------|---------------------|
| 1          | 532 41 62-88 | INTERLOCK SPRING    |
| 2          | 532 44 52-91 | INTERLOCK CAM       |
| 3          | 532 44 32-15 | TORSION SPRING      |
| 4          | 532 16 96-75 | RETAINER            |
| 5          | 817 06 04-10 | SCREW 1/4-20 X .625 |
| 6          | 532 42 18-14 | INTERLOCK STOP      |
|            |              |                     |

## REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) DRIVE

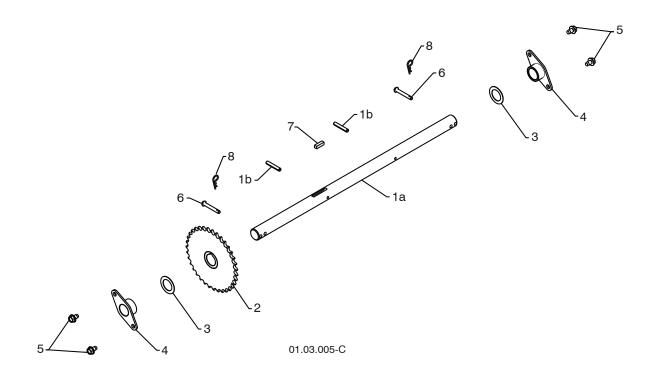

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                      |
|------------|--------------|----------------------------------|
| 1          | 532 18 82-26 | (assy of 1a,1b) AXLE<br>ASSEMBLY |
| 1a         | 532 17 93-52 | AXLE SHAFT                       |
| 1b         | 532 18 42-06 | ROLL PIN 3/16                    |
| 2          | 532 40 26-91 | SPROCKET                         |
| 3          | 532 44 49-49 | THRUST WASHER                    |
| 4          | 532 17 98-30 | BEARING                          |
| 5          | 817 49 05-08 | BOLT 5/16-18 X .500              |
| 6          | 532 17 12-71 | PIN                              |
| 7          | 532 18 92-82 | SQUARE KEY                       |
| 8          | 532 12 47-88 | RETAINER PIN                     |
|            |              |                                  |

## REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603) DRIVE

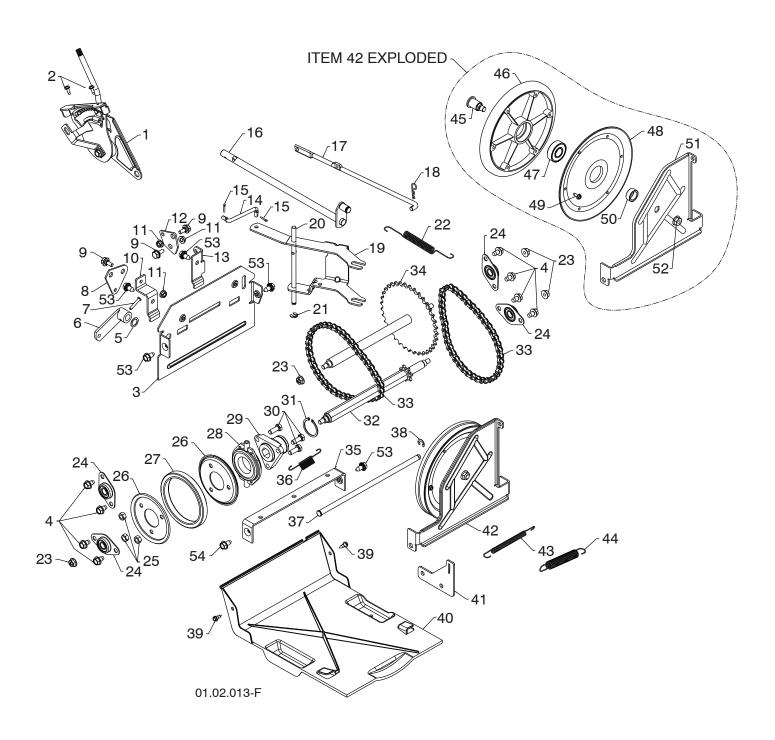



### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) DRIVE

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION             | KEY<br>NO. | PART<br>NO.  | DESCRIPTION          |
|------------|--------------|-------------------------|------------|--------------|----------------------|
| 1          | 532 19 88-75 | SPEED SELECTOR ASSEMBLY | 28         | 532 17 53-44 | BEARING              |
| 2          | 817 54 10-08 | THRED ROLLING SCREW     | 29         | 532 17 86-13 | WHEEL HUB            |
|            |              | 10-24 X .500            | 30         | 874 76 05-14 | SCREW 5/16-18875     |
| 3          | 532 41 54-31 | END PLATE               | 31         | 812 00 00-12 | RETAINER RING        |
| 4          | 817 49 05-08 | SCREW 5/16-18 X .50     | 32         | 532 40 21-87 | SPROCKET SHAFT       |
| 5          | 532 05 70-79 | WASHER                  | 33         | 532 40 16-19 | CHAIN                |
| 6          | 532 40 54-85 | CONTROL ARM             | 34         | 532 43 73-03 | SPROCKET WELDMENT    |
| 7          | 532 19 85-80 | CLEVIS PIN              | 35         | 532 41 54-29 | SHIFTER BRACKET      |
| 8          | 532 41 54-50 | SHIFTER PLATE           | 36         | 532 18 01-35 | SPRING               |
| 9          | 532 40 28-81 | SHOULDER BOLT           | 37         | 532 40 26-52 | PLATE PIVOT ROD      |
| 10         | 532 41 54-33 | SHIFTER BRACKET         | 38         | 532 42 82-88 | E-RING .375          |
| 11         | 532 19 17-30 | NUT 1/4-20              | 39         | 532 18 44-71 | SHOULDER SCREW       |
| 12         | 532 41 54-35 | CLUTCH PLATE            | 40         | 532 41 08-77 | BOTTOM PAN           |
| 13         | 532 41 68-64 | CLUTCH BRACKET          | 41         | 532 41 66-82 | SPRING BRACKET       |
| 14         | 532 18 71-01 | SHIFTER LINK            | 42         | 532 40 26-89 | DRIVE PLATE ASSEMBLY |
| 15         | 532 70 02-79 | RETAINER                | 43         | 532 41 45-57 | IDLER SPRING         |
| 16         | 532 42 75-42 | CONTROL SHAFT           | 44         | 532 17 88-28 | IDLER SPRING         |
| 17         | 532 40 25-68 | CLUTCH ROD              | 45         | 532 40 25-04 | PULLEY SHAFT         |
| 18         | 532 16 96-75 | RETAINER                | 46         | 532 40 18-20 | DRIVE PLATE          |
| 19         | 581 42 25-01 | SHIFTER YOKE            | 47         | 532 19 87-91 | BEARING              |
| 20         | 532 40 23-10 | PIVOT ROD               | 48         | 532 40 23-93 | PULLEY HALF          |
| 21         | 812 00 00-36 | RETAINER                | 49         | 817 54 10-08 | SCREW 10-24 X .50    |
| 22         | 532 40 28-78 | RETURN SPRING           | 50         | 532 40 25-11 | SPACER BEARING       |
| 23         | 532 75 11-53 | NUT 5/16-18             | 51         | 532 42 29-41 | SWING PLATE          |
| 24         | 532 40 89-81 | BEARING                 | 52         | 532 13 20-10 | NUT 3/8-16           |
| 25         | 873 93 05-00 | NUT 5/16-18             | 53         | 532 42 88-67 | SCREW 5/16-18 X .750 |
| 26         | 532 19 95-09 | RUBBER WHEEL PLATE      | 54         | 817 00 05-10 | BOLT 5/16-18 X .625  |
| 27         | 585 02 10-01 | RUBBER RING             |            |              |                      |


#### **REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603)**

**CHASSIS / ENGINE / PULLEYS** 

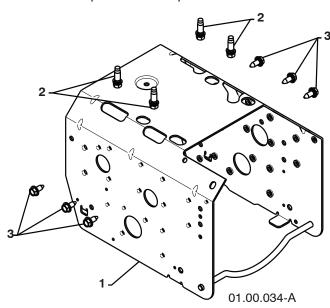


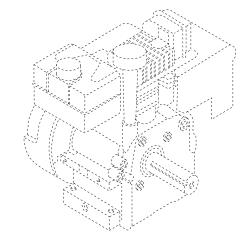

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                           |
|------------|--------------|---------------------------------------|
|            | 532 43 60-67 | COMPLETE LCT ENGINE<br>PW2HK18650178E |
| 1          | 532 42 92-75 | FRAME                                 |
| 2          | 532 15 04-06 | BOLT 3/8-16                           |
| 3          | 532 42 88-67 | SCREW 5/16-18 X .750                  |

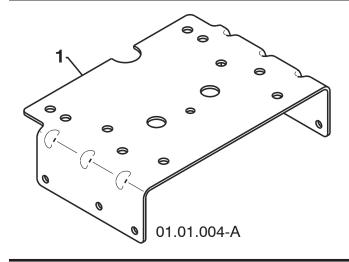


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION           |  |  |
|------------|--------------|-----------------------|--|--|
| 1          | 532 43 07-64 | ENGINE MOUNTING PLATE |  |  |

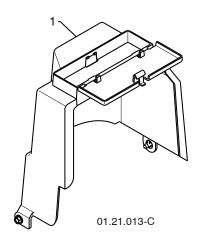


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION    |
|------------|--------------|----------------|
| 1          | 532 44 30-30 | COVER ASSEMBLY |
|            |              |                |

## REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) CHASSIS / ENGINE / PULLEYS

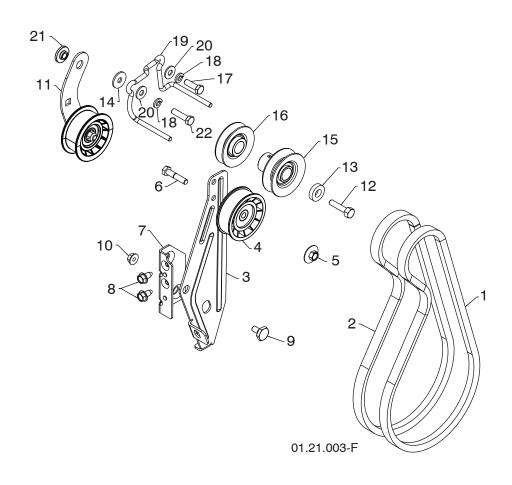

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                  | KEY<br>NO. | PART<br>NO.  | DESCRIPTION          |
|------------|--------------|------------------------------|------------|--------------|----------------------|
| 1          | 532 40 80-07 | IMPELLER BELT                | 13         | 532 40 00-26 | WASHER               |
| 2          | 532 41 97-44 | TRACTION BELT                | 14         | 532 05 92-89 | WASHER               |
| 3          | 584 23 24-02 | IDLER ARM BRACKET            | 15         | 532 42 64-91 | PULLEY ENG IMPELLER  |
| 4          | 532 18 05-23 | IDLER PULLEY                 | 16         | 532 42 64-90 | PULLEY ENG TRACTION  |
| 5          | 532 42 65-89 | NUT 5/16-18                  | 17         | 874 61 05-16 | SCREW 5/16-18 X 1.00 |
| 6          | 874 78 05-24 | CAPSCREW 5/16-18 X 1.50      | 18         | 810 04 05-00 | LOCKWASER 5/16       |
| 7          | 585 28 49-01 | IDLER BRACKET                | 19         | 585 05 82-01 | BELT GUIDE           |
| 8          | 817 00 05-10 | SCREW 5/16-18 HEX            | 20         | 532 15 54-15 | WASHER               |
| 9          | 532 42 42-97 | SHOULDER BOLT 5/16-18 X .500 | 21         | 532 17 53-31 | IDLER BUSHING        |
| 10         | 532 75 11-53 | NUT 5/16-18 TOP LOCK         | 22         | 874 61 05-20 | CAPSCREW HEX HEAD    |
| 11         | 585 23 84-01 | TRACTION IDLER ARM ASM       |            |              | 5/16 X 1.25 GR5      |
| 12         | 532 85 10-84 | CAPSCREW 3/8-24 X 1 375      |            |              |                      |


### REPAIR PARTS SNOWTHROWER--MODEL NUMBER 961980056 (96198005603) WHEELS

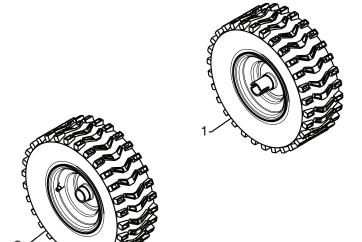

01.06.018-A

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION       |
|------------|--------------|-------------------|
| 1          | 532 43 75-22 | WHEEL ASSEMBLY LH |
| 2          | 532 43 75-23 | WHEEL ASSEMBLY RH |


### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) BAG OF PARTS

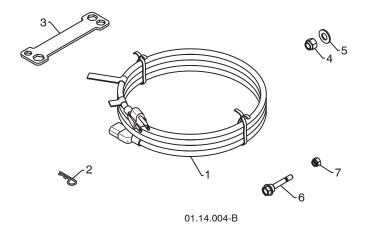


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION               |
|------------|--------------|---------------------------|
| 1          | 532 19 85-63 | POWER CORD                |
| 2          | 532 16 96-75 | RETAINER PIN              |
| 3          | 532 42 91-12 | WRENCH                    |
| 4          | 873 80 06-00 | LOCKNUT 3/8-16            |
| 5          | 819 13 13-16 | WASHER 3/8                |
| 6          | 532 19 20-90 | SHEAR BOLT 1/4-20 X 1-3/4 |
| 7          | 873 80 04-00 | LOCKNUT 1/4-20            |
|            |              |                           |
|            |              |                           |




| KEY<br>NO. | PART<br>NO.  | DESCRIPTION             |  |  |
|------------|--------------|-------------------------|--|--|
| 1          | 532 44 30-59 | SAFETY IGNITION KEY KIT |  |  |

 

 

| KEY | PART         |                             |  |  |  |
|-----|--------------|-----------------------------|--|--|--|
| NO. | NO.          | DESCRIPTION                 |  |  |  |
| 1   | 532 18 04-45 | SHIFTER ROD TOP             |  |  |  |
| 2   | 532 18 77-16 | SHIFTER ROD BOTTOM          |  |  |  |
| 3   | 872 27 05-05 | CARRIAGE BOLT 5/16-18 X .75 |  |  |  |
| 4   | 532 15 53-77 | NUT 5/16-18                 |  |  |  |


#### REPAIR PARTS SNOW THROWER -- MODEL NUMBER 961980056 (96198005603)

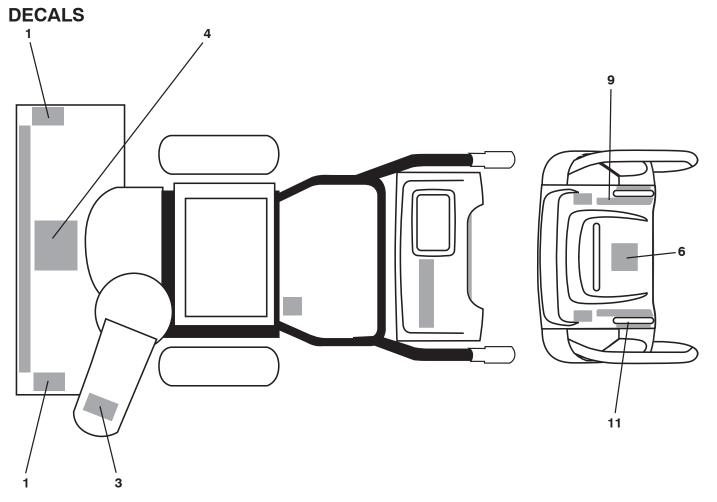

| <b>KEY</b> | PART         |                            |
|------------|--------------|----------------------------|
| NO.        | NO.          | DESCRIPTION                |
| 1          | 532 18 10-37 | DECAL, DANGER              |
| 3          | 532 18 10-35 | DECAL, DANGER, DEFLECTOR   |
| 4          | 532 18 10-42 | DECAL, DANGER              |
| 6          | 532 18 10-33 | DECAL, INSTRUCTION         |
| 9          | 581 43 01-01 | DECAL, CON RT SPD/LEV/PWST |
| 11         | 581 43 01-02 | DECAL, CON LT WD/DEF       |
|            | 585 40 51-27 | OWNER'S MANUAL, ENGLISH    |
|            | 585 40 51-31 | OWNER'S MANUAL, FRENCH     |

#### **SERVICE NOTES**

# **REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) ENGINE, LCT - 436067**

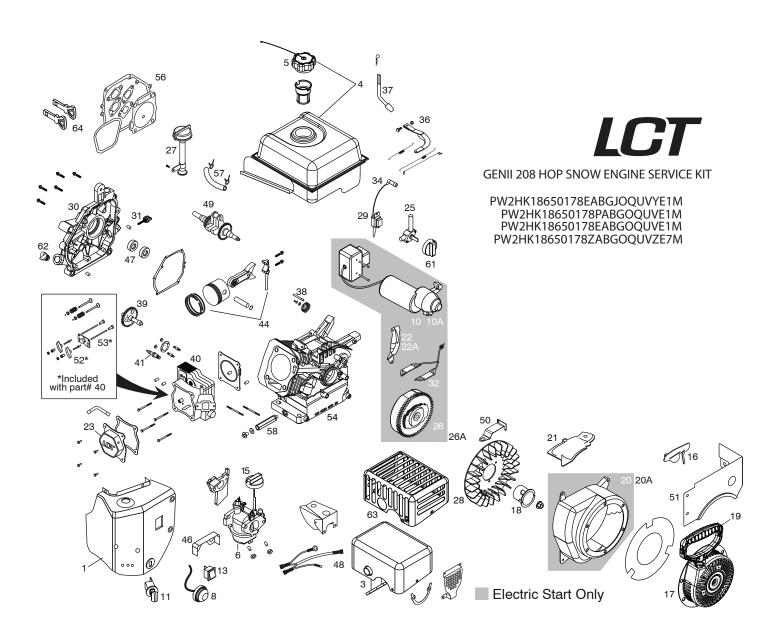

#### REPAIR PARTS SNOW THROWER - - MODEL NUMBER 961980056 (96198005603) ENGINE, LCT - 436067

|     | PART<br>NO.  | DESCRIPTION                              |    | PART<br>NO.  | DESCRIPTION                 |
|-----|--------------|--|----|--------------|-----------------------------|
| 1   | 532 43 65-61 | Heater Box Assembly-Snow                 | 28 | 532 42 05-86 | Flywheel Fan                |
| 3   | 532 43 65-63 | Muffler Assembly-Snow                    | 29 | 532 44 39-34 | Ignition Coil Assy (CDI)    |
| 4   | 532 43 65-64 | Fuel Tank Assembly-Snow                  | 30 | 532 42 06-06 | Crankcase Cover Assy        |
| 5   | 532 42 49-42 | Oversized Fuel Tank Cap                  | 31 | 532 42 09-61 | Black Oil Dipstick          |
|     |              | (Click Style)                            | 32 | 532 42 49-59 | Charging Coil Dc            |
| 6   | 532 43 65-65 | Carburetor Assembly-Snow                 | 34 | 532 43 69-66 | Spark Plug Boot             |
| 8   | 532 42 49-49 | Primer Bulb Assembly W/Hose-Snow         | 36 | 532 42 06-01 | Governor Arm Assy           |
| 10  | 532 43 64-66 | Electric Starter Assembly-Snow           | 37 | 532 42 06-02 | Governor Shaft              |
| 10A | 532 43 66-71 | European 230V Electric Starter           | 38 | 532 42 96-46 | Governor Gear Assy          |
| 11  | 532 42 49-54 | Key Switch Assembly                      | 39 | 532 42 05-84 | Camshaft                    |
| 13  | 532 42 49-57 | On/Off Switch                            | 40 | 532 42 05-78 | Cylinder Head Assy          |
| 15  | 532 42 92-24 | Choke Knob-Snow                          | 41 | 532 42 49-39 | Spark Plug                  |
| 16  | 532 42 49-60 | Governor Linkage Shield Plate            | 44 | 532 42 05-82 | Piston And Rod Assy         |
| 17  | 532 43 69-67 | Recoil Starter Assembly-Snow             | 46 | 532 42 92-60 | Vapor Shield                |
| 18  | 532 43 69-68 | Starter Cup Small                        | 47 | 532 42 95-99 | Seal Kit                    |
| 19  | 532 42 49-68 | Snow Starter Grip                        | 48 | 532 42 92-62 | Wire Harness                |
| 20  | 532 42 49-71 | Blower Housing Assembly, Electric        | 49 | 532 42 96-00 | Crankshaft                  |
|     |              | Start-Snow (Black)                       | 50 | 532 42 92-59 | Speed Control Bracket       |
| 20A | 532 42 92-30 | Blower Housing Assembly Manual           | 51 | 532 43 65-62 | Fuel Tank Skirt             |
|     |              | Start-Snow (Black)                       | 52 | 532 42 96-91 | Rocker Asm Kit              |
| 21  | 532 42 49-73 | Shield, Cylinder                         | 53 | 532 42 05-79 | Push Rod Kit                |
| 22  | 532 42 49-75 | Shield, Flywheel-Electric Start          | 54 | 532 42 65-67 | Cylinder Assy               |
|     |              | (If Equipped)                            | 56 | 532 42 96-01 | Gasket Kit                  |
| 22A | 532 42 95-96 | Shield, Flywheel-Manual Start            | 57 | 532 43 21-44 | Fuel Hose Kit               |
| 23  | 532 42 05-80 | Valve Cover                              | 58 | 532 43 26-86 | Extended Oil Drain Tube     |
| 25  | 532 42 92-34 | Fuel Petcock, Snow                       | 61 | 532 43 27-52 | Fuel Knob-Snow              |
| 26  | 532 42 92-35 | Flywheel Assembly, Electric Start-       | 62 | 532 42 95-98 | Non-Removable Oil Plug      |
|     |              | Snow                                     | 63 | 532 43 66-72 | Ce Compliant Muffler Shield |
| 26A | 532 42 05-85 | Flywheel Assembly, Manual Start-<br>Snow | 64 | 532 44 30-59 | Red Key Set                 |
| 27  | 532 42 49-69 | High Oil Fill Assy Kit, Snow             |    |              |                             |

#### **SERVICE NOTES**

#### **SERVICE NOTES**

#### LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

HOP Outdoor Products Customer Service Dept. 9335 Harris Corners Parkway Charlotte, NC 28269 USA In Canada contact: HOP 5855 Terry Fox Way Mississauga, Ontario L5V 3E4

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.

