
GRASS CATCHER Operator / Parts Manual

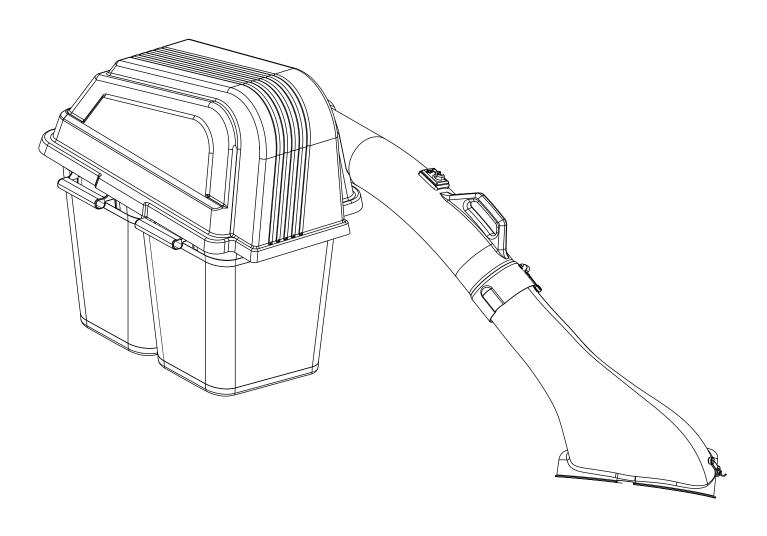

587 96 04-01 46" / 2 BAG



Please read the operator manual carefully and make sure you understand the instructions before using the machine. **CONGRATULATIONS** on the purchase of a new collection system. It has been designed, engineered and manufactured to give the best possible dependability and performance.

If you experience any problem you cannot easily remedy, contact your nearest authorized service center/ department. They have competent, well-trained technicians and the proper tools for service and repairs.

Please read and retain this manual. The instructions will enable you to assemble and maintain your collection system properly. Always observe the SAFETY RULES.

CAUTION! DO NOT operate mower with grass catcher partially installed.

- Disengage blades and stop engine before leaving mower seat to empty containers, unclogging chutes, etc.
- Close cover before starting.
- Disengage mower blades when crossing driveways or gravel surfaces and other areas where thrown objects could be a hazard.
- DO NOT attempt to vacuum cans or other potentially hazardous projectiles.

CAUTION! Before assembling grass catcher to mower:

- Set parking brake.
- Place motion control levers in NEUTRAL position.
- · Turn ignition key OFF and remove key.
- Make sure the blades and all moving parts have completely stopped.

KNOW YOUR GRASS CATCHER

READ THIS OPERATION MANUAL AND SAFETY RULES BEFORE ASSEMBLING OR OPERATING YOUR COLLECTION SYSTEM. Compare the illustrations with the carton contents to familiarize yourself with the parts before starting the assembly. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Grass Catcher and to prevent injury to yourself and others. Save this manual for future reference.

CAUTION! Do not leave grass in bagger containers. Empty containers after each use and before storing. Failure to do so may result in spontaneous combustion which could develop into a fire.

CAUTION! Grass catcher components are subject to wear, damage and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.

CAUTION! Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

CAUTION! The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. ALWAYS wear safety glasses or eye shields before starting your mower and while mowing. Standard safety glasses are recommended or a wide vision safety mask for over spectacles.

CAUTION! Battery posts, terminals and related accessories contain lead and lead compounds, chemicals know to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

CONTENTS

SAFETY	4
ASSEMBLY	6
PARTS 1	C

Tips For Improved Bagging

- Follow the mower operation instructions in the Operator Manual.
- When using the grass catcher on a lawn where grass bagging equipment has not been used previously, thatch and debris that has accumulated for long periods of time is picked up. The amount collected and the total time of operation may be greater than will be experienced with regular use of the grass catcher.
- · Always run throttle at full speed when bagging.
- Select a speed low enough to give good mower cutting performance, good quality cut and good bagging performance.
 - NOTE: It may be necessary to overlap width of cut to suit conditions.
- If grass is extremely tall, it should be mowed twice. The first cut should be at one of the highest settings, the second time to desired height.
- Use the left hand side of mower for trimming.
- Avoid cutting wet grass or in the morning while the dew is still heavy. Grass clippings collected under these conditions tend to be sticky and adhere to the walls of the flow path causing clogging.
- If the grass catcher fails to pick up cut grass, it is an indication that clogging has occurred in the system or that the grass catcher containers are full.
 - Disengage blades, place motion control levers in neutral position.
 - Unlatch and raise cover.
 - Slide out containers and dispose of clippings.
 - Replace containers, close cover, and latch.
 - b. Unlatch chutes and check for clogging.
 - Remove all debris in chute.
 - Reassemble and latch chutes.

- Plastic trash bags (3.0 mil, 30 gallon) can be inserted inside grass catcher containers for ease of debris disposal. To remove the plastic trash bags when full:
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - b. Unlatch and raise cover.
 - c. Remove one container at a time by grasping container handles and pulling toward the rear, off of the tube rails.
 - d. With the container resting on the ground, close and secure the top of the plastic lawn bag.
 - e. Tip the container on its side and slide the filled bag from the container.
 - f. Install a new plastic lawn bag with the edges of the bag draped over upper lip of the Container.
 - g. Repeat for other container.
 - Reinstall containers making sure right container overlaps left container at center supports.
 - Close cover and secure latches over center support tubes.

General Recommendations

Always observe safety rules when performing any maintenance.

- Before each use check for loose fasteners.
- Clean unit thoroughly after each use.

Blade Care

- For best results mower blades must be kept sharp.
 Replace bent or damaged blades.
- See instructions in the mower operator manual.

Storage

When grass catcher is to be stored for a period of time, clean it thoroughly, remove all dirt and debris. Store in a clean, dry place.

WARNING! THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

General Operation

- Read, understand and follow all instructions in the manual and on the machine before starting.
- Keep machine free of grass or other debris buildup which can touch hot exhaust/engine parts and burn. Do not allow the mower deck to plow debris that can cause buildup to occur.
- Stop engine before removing grass catcher or unclogging chute.
- Do not operate the mower without either the entire grass catcher or the guard in place. Be aware of the mower discharge direction and do not direct it towards anyone.
- Clear the area of objects such as rocks, stones, toys, wire etc., which could be picked up and thrown by the blades.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- The owner and operator of this equipment can prevent accidents and is responsible for accidents or injuries occurring to themselves, other people and/or property.
- Be sure the area is clear of all people and pets before mowing. Stop the machine if anyone enters the area.
- · Never carry passengers or children even with blades off.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Slow down before turning.
- Never leave the machine unattended when the engine is running. Always turn off the blades, set the parking brake, stop the engine and remove the key before leaving the machine.
- Turn off blades when not mowing.
- · Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch out for traffic when operating near or crossing roadways.
- Use extra care when loading and unloading the machine onto a trailer or truck.
- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- Clean any oil or fuel spillage before operating or storing the machine.
- Allow machine to cool before storage.

Slope Operation

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

DC

- Mow up and down slopes (10° Max.), not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use slow speed. Choose a low speed so that you will not have to stop while on the slope.
- Use extra care with grass catchers or other attachments.
 These can change the stability of the machine.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly **straight** down the slope.

DO NOT

- Do not turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.
- Do not mow near drop-off, ditches, or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- Do not mow on wet grass. Reduced traction could cause sliding.
- Do not try to stabilize the machine by putting your foot on the ground.

Service

- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating the mower or performing any adjustments or repairs. A wide vision safety mask over spectacles or standard safety glasses are recommended.
- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check regularly for proper operation.
- Clean oil or fuel spills. Allow machine to cool before storing.
- Stop and inspect the equipment if you strike an object.
 Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.
- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as shown in the Operator Manual.

ASSEMBLY

TOOLS REQUIRED


- Wrench ½" (2)
- Wrench 9/16" (2)
- Wrench⁷/16" (2)
- Ft/Lbs Torque Wrench
- Socket and Ratchet 9/16"
- Standard Screwdriver

CONTAINER CONTENTS


- Bagger Assembly
- Upper Chute
- Mounting Brackets
- Cover Assembly
- Lower Chute
- Bag of Hardware

NOTE: When the terms RH (right hand) or LH (left hand) are used, it refers to when the operator is seated on the mower.

PARTS IDENTIFICATION

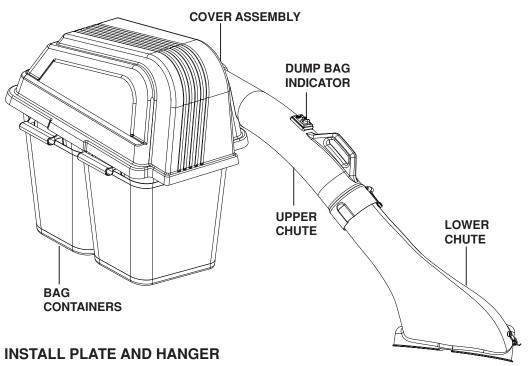


- Using hardware provided in kit, attach support mount to unit.
- 2. Attach hanger bracket to support mount. Do not fully tighten nuts at this time.

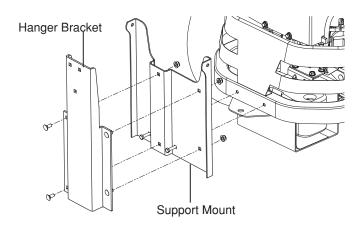

3. Secure rear end of support straps to outside of hanger assembly inserting a spacer between the mower and the strap. Set reinforcement plates to the outside of the tank brackets and fasten front end of support strap to tank

bracket and reinforcement plate with round head bolt. Secure front end of reinforcement plate to tank bracket with hex bolt. Fully secure all mounting hardware.

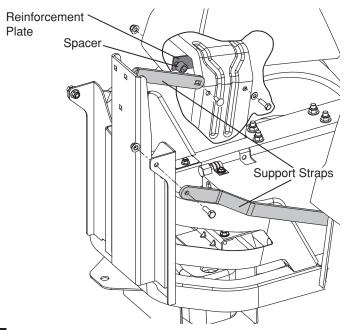


ASSEMBLY

MOUNTING COVER ASSEMBLY


NOTE: Assistance from another person may ease mounting the cover assembly to mower.

- 1. Position cover assembly on the ground behind the mower.
- Lift and rotate cover to align the frame bracket with the hanger and slide the cover down until secure.

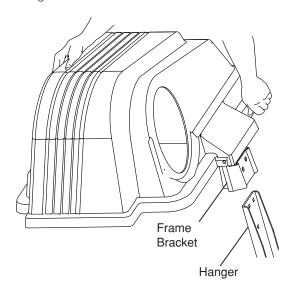


INSTALLING SPACER PLUG

Remove end cap from the center bag support arm. Fully insert spacer plug into the ends of the support tube. It may be necessary to tap the spacer into place with a hammer or mallet. Replace the end cap back over the spacer. The additional extension will hold the hood more securely when latched.

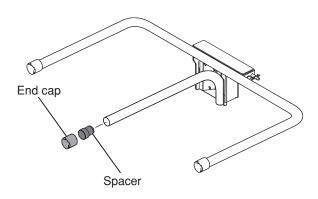

CONTAINER INSTALLATION


- Install containers on support frame, overlapping containers at center tube.
 - NOTE: One container should always overlap the other container at the center tube.
- 2. Close cover and lock latch handle over support tubes.

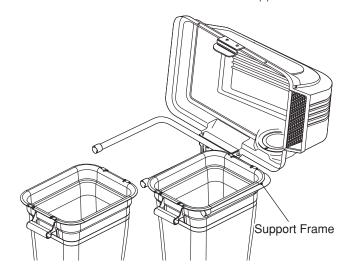

CHUTE INSTALLATION


Model Z 246 Series only - use Steps 1-4

- 1. Remove the deflector from the deck, retaining the spring for reuse.
- 2. Remove the deflector bracket from the deck and retain the hardware.
- Attach the new bracket assembly to the deck with the original bracket hardware.

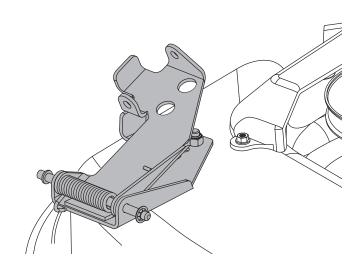


ASSEMBLY

4. Reattach the deflector to the new bracket assembly with the replacement pin and bowtie clip from the kit.

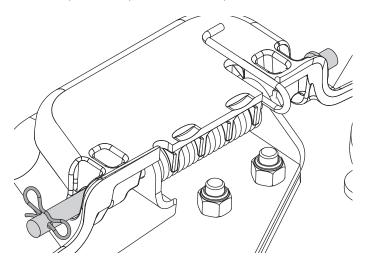

All models - use Step 5


Lift the deflector up and set the lower chute over the front tab on the bracket assembly and hook the chute latch assemblies onto the tabs on the deck ridge.

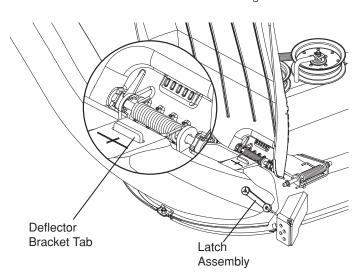


- Slide upper chute onto lower chute, lining up notches and channels.
- Stretch bungee latch up onto acorn nut on upper chute to secure.

HOOD SEAL INSTALLATION

- Install the grommet into hood assembly, making sure grommet is seated correctly and securely. It is recommended to use a box pattern as shown when drilling holes.
- 2. While holding the grommet securely in place, drill one ¹³/₆₄ (.203) diameter hole through the grommet and hood assembly at a distance of ¹/₄" (.250) from the outside edge of the grommet. See illustration.

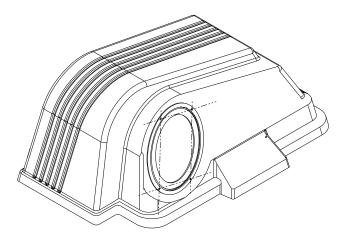

Locate the seal fastening kit (packaged separately). Install
hardware using configuration shown before drilling the
next hole. Repeat the procedure with each remaining hole.

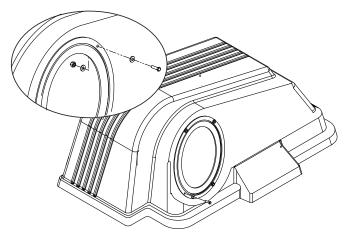


CHUTE / HOOD INSTALLATION

- Push upper chute through the gasketed opening in the cover assembly.
- Rotate chute so the chute opening is downwards toward the container bags.


LEVELING MOWER DECK

Be sure deck is properly leveled for best mower performance. See the mower's operator manual for instructions.

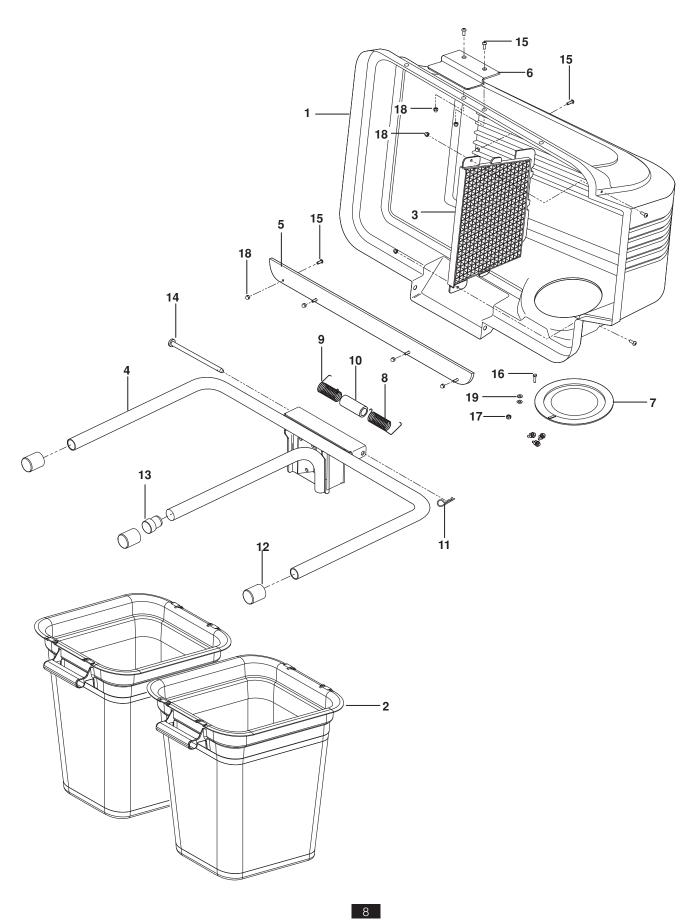

REPAIR PARTS

ITEM PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1 539 11 11-39	9 1	COVER ASSY, COMPLETE	11	539 10 80-96	1	HAIRPIN, RETAINER
2 532 40 02-26	52	CONTAINER, SOFT BAG	12 :	539 10 80-97	3C	CAP, TUBING END
3 532 12 75-33	3 1	SCREEN, COVER	13 \$	522 80 13-01	1S	PACER PLUG
4 532 17 97-46	5 1	FRAME, BAGGER	14 :	532 19 27-86	1P	PIN, HINGE
5 532 15 50-42	21	STRIP, REINFORCEMENT	15 8	871 08 10-10	9S	SCREW #10-24 x 5/8
6 532 13 08-95	51	LATCH HANDLE, COVER	16 \$	539 10 63-12	4S	SCREW #10-24 x 3/4
7 532 12 75-34	11	GASKET	17 :	539 97 69-77	4N	IUT #10-24 HEX NYLOC
8 532 13 27-96	5 1	SPRING, COVER LH	18 \$	539 10 80-86	9N	IUT #10-24 ACORN
9 532 13 29-83	3 1	SPRING, COVER RH	19 8	819 07 08-18	8V	VASHER #10 FLAT
10 532 13 32-35	5 1	SPACER COVER				

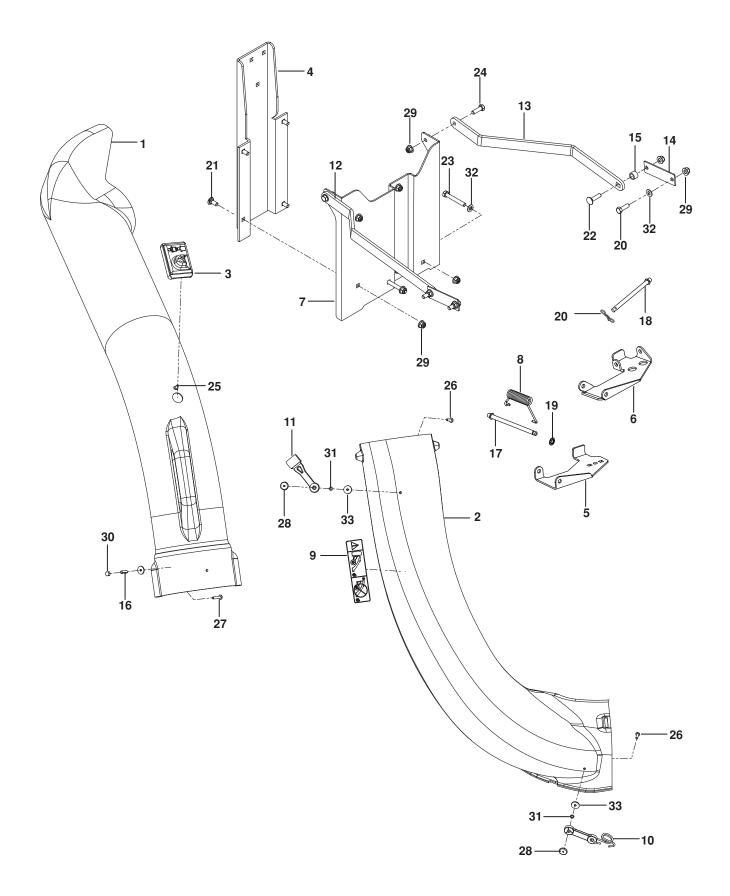

REPAIR PARTS

ITEM PART NO. QTY. DESCRIPTION	ITEM PART NO. QTY. DESCRIPTION
1 525 49 70-011CHUTE, UPPER	18 588 71 04-011PIN
2 532 40 54-55 1CHUTE, LOWER	19 532 11 04-521PUSHNUT
3 539 10 80-82 1INDICATOR, BAG DUMP	20 587 22 53-011CLIP, BOWTIE
4 522 85 47-02 1BRACKET, HANGER	21 872 14 05-064BOLT RDHD SQNK ⁵ /16-18 x ³ / ₄
5 587 96 80-02 1BRACKET, LOWER	22 539 10 04-722BOLT RDHD SQNK ⁵ /16-18 x 1 ¹ / ₄
6 587 96 81-02 1BRACKET, UPPER	23 874 78 05-362BOLT ⁵ / ₁₆ -18 x 2 ¹ / ₄
7 587 34 77-02 1MOUNT, LOWER	24 874 78 05-164BOLT ⁵ / ₁₆ -18 x 1
8 587 96 83-01 1SPRING	25 818 02 10-08 1SCREW #10-14 x ½
9 539 10 81-63 1DECAL, CATCHER	26 871 08 10-103SCREW #10-24 x ⁵ /8
10 539 10 81-942LATCH ASSY, CHUTE	27 532 08 71-75 1SCREW #10-24 x 11/8
11 539 10 80-88 1LATCH, HOOD	28 539 10 80-893NUT #10-24 WELD PLATED
12 587 34 79-02 1STRAP, SUPPORT, RT	29 539 11 28-99 12NUT 5/16-18 HEX FLG NYLOC
13 587 34 78-02 1STRAP, SUPPORT, LT	30 539 10 80-86 1NUT #10-24 ACORN
14 523 11 28-022PLATE	31 539 10 95-523WASHER 3/16 LOCK
15 579 61 33-012SPACER	32 819 11 11-166WASHER 5/16 SAE FLAT
16 539 10 80-85 1SPACER, SPLIT	33 539 10 80-84 4WASHER ³ / ₁₆ x ³ / ₄ 16 GA
17 587 97 24-011PIN	

P/N 115 74 17-27 Rev B 2015-03-15