




# SPARE PARTS LIST

ACCESSORIES AND TOOLS

SPIKE AERATOR, 586636901, 2018-05

### REPAIR PARTS FOR 586 63 69-01 SPIKE AERATOR

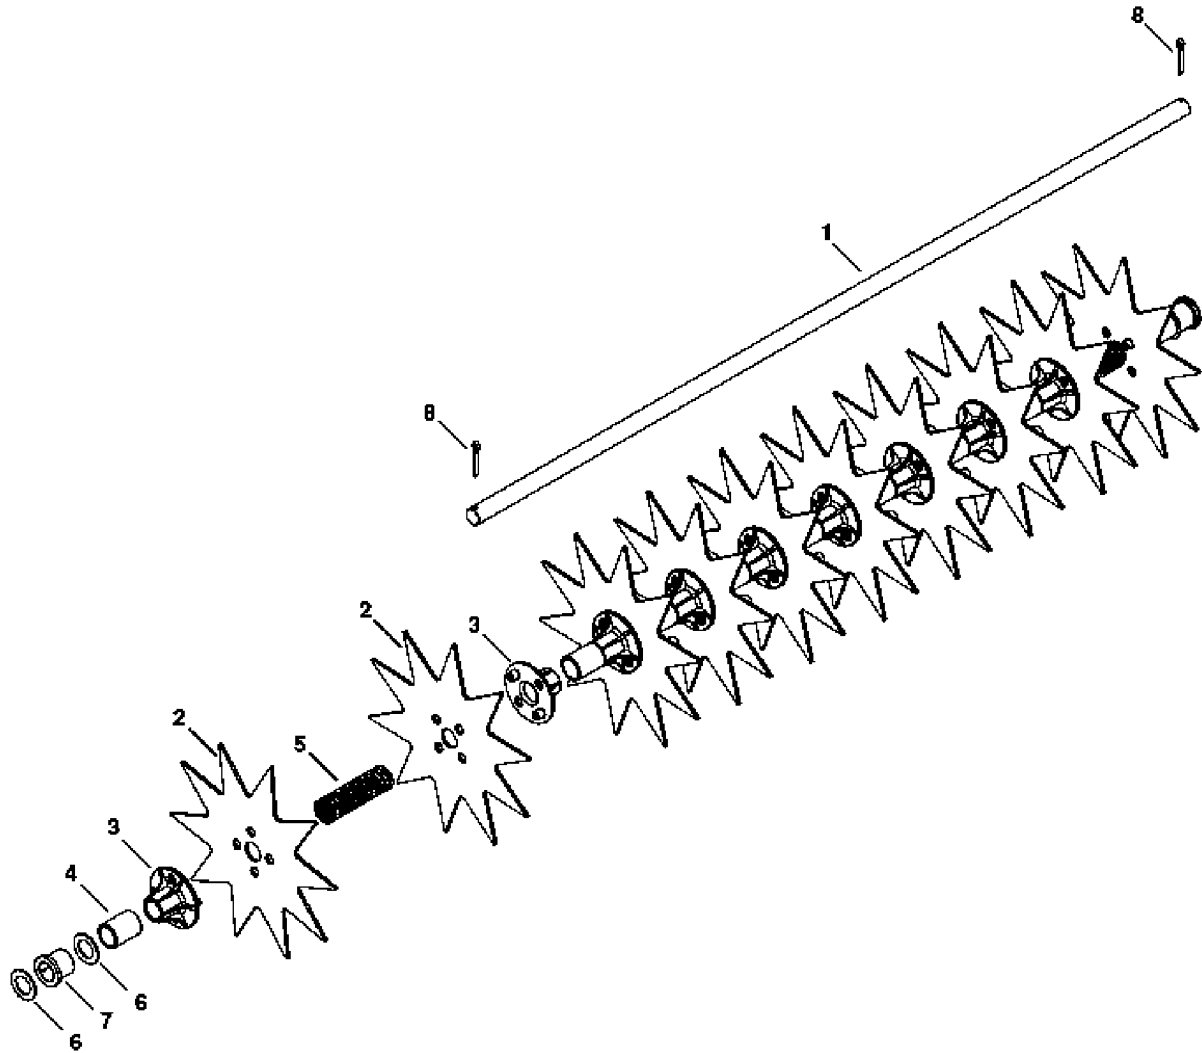

**EUROPEAN PART NUMBERS:**

REF	QTY	PART NO	DESCRIPTION	REF	QTY	PART NO	DESCRIPTION
1	1	586 80 27-01	Shaft	6	4	586 80 77-01	Washer, .78" x 1.25" x .062"
2	10	531 00 81-03	Spike Disk	7	2	504 06 63-01	Flange Bearing
3	16	531 00 76-30	Spike Disk Hub	8	2	531 00 27-38	Cotter Pin 5/32" x 1-1/4"
4	9	531 00 81-04	Spacer, .8" x 1" x 1.33"	1		45400	Owners Manual
5	2	588 99 19-01	Compression Spring				

**U.S.A. PART NUMBERS:**

REF	QTY	PART NO	DESCRIPTION	REF	QTY	PART NO	DESCRIPTION
1	1	26369	Shaft	6	4	1540-31	Washer, .78" x 1.25" x .062"
2	10	23900	Spike Disk	7	2	44798	Flange Bearing
3	16	45148	Spike Disk Hub	8	2	41631	Cotter Pin 5/32" x 1-1/4"
4	9	44494	Spacer, .8" x 1" x 1.33"	1		45400	Owners Manual
5	2	47777	Compression Spring				

PRODUCT COMPLETE

SPIKE AERATOR, 586636901, 2018-05

Ref	Part No	Description	Remark	QTY KIT
1	586 80 24-01	TRAY		1
2	531 00 81-03	WHEEL		10
3	531 00 76-30	HUB		16
4	531 00 81-04	SPACER WASHER		9
5	588 99 19-01	COMPRESSION SPRING		2
6	586 80 77-01	WASHER		4
7	504 06 63-01	BEARING		2
8	531 00 27-38	SPLIT PIN		2