

CRAFTSMAN®

Product questions or problems?

1-888-331-4569

Customer Care Hot Line

Get answers to questions, troubleshoot problems,
order parts, or schedule repair service.

Para respuestas a preguntas o problemas, y ordenar
piezas o pedir servicio para la reparación de su equipo.

To help us help you, register your product at www.craftsman.com/registration

Para poderte ayudar mejor, registra tu producto en www.craftsman.com/registration

Join the Craftsman Club today!

CRAFTSMAN® CLUB

www.craftsman.com/signup

Receive exclusive member benefits including special pricing and offers,
project sharing, expert advice, and SHOP YOUR WAY REWARDS!

Como miembro exclusivo, recibe diversos beneficios como ofertas, precios especiales, proyectos
nuevos, consejos de expertos y nuestro programa de puntos SHOP YOUR WAY REWARDS!

® Registered Trademark / ™ Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / ™ Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países

Repair Parts Manual

CRAFTSMAN®

LAWN TRACTOR


22 HP,* 48" Mower

Electric Start

Automatic Transmission

Model No.

917.203921

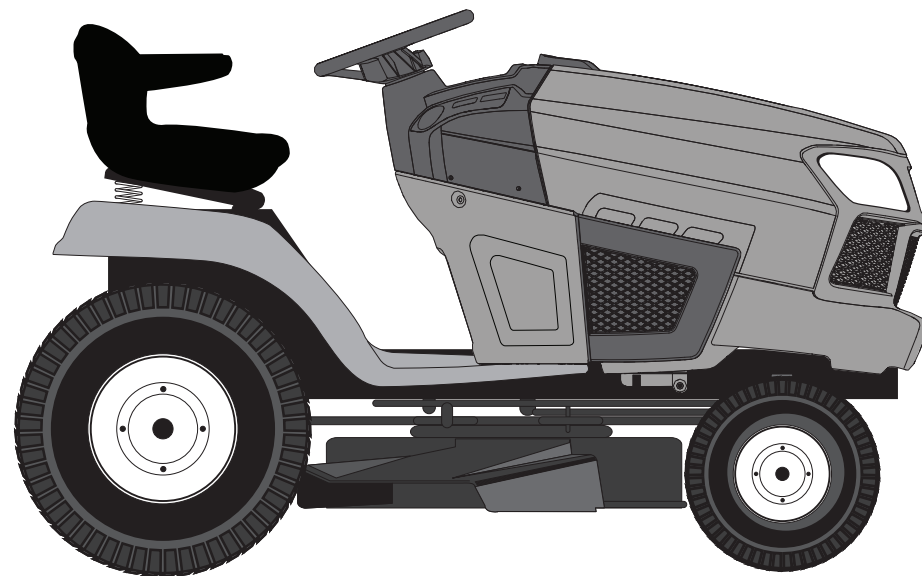

For answers to your questions
about this product, call:

1-888-331-4569

Craftsman Customer Help Line

Sears Brands Management Corporation, Hoffman Estates, IL 60179 U.S.A.
Visit our Craftsman website: www.craftsman.com

* The power rating as declared by the engine manufacturer is the average gross power output at the specified RPM of a typical production engine for the engine model measured using SAE Standards for engine gross power. Please refer to the engine manufacturer for details.

⚠ WARNING: This tractor is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest Sears service center (See ENGINE ASSEMBLY section of this manual).

REPAIR PROTECTION AGREEMENTS

Congratulations on making a smart purchase. Your new Craftsman® product is designed and manufactured for years of dependable operation. But like all products, it may require repair from time to time. That's when having a Repair Protection Agreement can save you money and aggravation.

Purchase a Repair Protection Agreement now and protect yourself from unexpected hassle and expense.

Here's what's included in the Agreement:

- **Expert service** by our 12,000 professional repair specialists.
- **Unlimited service and no charge** for parts and labor on all covered repairs.
- **Product replacement** if your covered product can't be fixed.
- **Discount of 25%** from regular price of service and service-related parts not covered by the agreement; also, 25% off regular price of preventive maintenance check.
- **Fast help by phone** – phone support from a Sears representative on products requiring in-home repair, plus convenient repair scheduling.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

Sears has over 12,000 professional repair specialists, who have access to over 4.5 million quality parts and accessories. That's the kind of professionalism you can count on to help prolong the life of your new purchase for years to come. Purchase your Repair Protection Agreement today!

Some limitations and exclusions apply.

For prices and additional information call 1-800-827-6655.

SEARS INSTALLATION SERVICE

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. call **1-800-4-MY-HOME®**.

TRACTOR - - MODEL NUMBER 917.203921

BRIGGS & STRATTON ENGINE-MODEL NUMBER 44R677, TYPE NUMBER 0019-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
462	691261	Washer (Starter Cable)	975	796777	Bowl-Fuel
467	591660	Knob-Air Cleaner	987	691000	Seal-Throttle Shaft
474	592830	Alternator	1005	791236	Fan-Flywheel
501	845907	Regulator	1012	592556	Retainer-Link
503	691532	Strap-Starter	1013	690954	Nipple-Oil Filter
505	691029	Nut (Governor Control Lever)	1017	796214	Screen-Oil Pump
510	696541	Drive-Starter	1022	690971	Gasket-Rocker Cover
513	692024	Clutch-Drive	1023	793146	Cover-Rocker (Cylinder #1)
523	691036	Dipstick	1023A	499600	Cover-Rocker (Cylinder #2)
524	691032	Seal-Dipstick Tube	1024	796220	Pump-Oil
525	691037	Tube-Dipstick	1026	690981	Rod-Push (Exhaust) (Steel)
526	691108	Screw (Regulator)	1026A	690982	Rod-Push (Intake) (Aluminum)
552	796638	Bushing-Governor Crank	1027	795890	Filter-Oil
552A	690553	Bushing-Governor Crank	1029	690972	Arm-Rocker
562	690311	Screw (Governor Control Lever)	1029A	807323	Arm-Rocker
573	790444	Plate-Back	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
601	691038	Hose-Clamp (Black)	1040	791237	Plate-Trim
615	698290	Retainer-Governor Shaft	1051	691265	Ring-Retaining
616	691045	Crank-Governor	1058	381258TRI	Operator's Manual
617	697891	Seal-O Ring (Intake Manifold) (Red)	1059	698516	Kit-Screw/Washer (Alternator)
633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)	1070	592604	Screw (Flywheel Fan)
633A	690998	Seal-Choke/Throttle Shaft	1090	691293	Retainer-Brush
635	66538s	Boot-Spark Plug	1095	694013	Gasket Set-Valve
654	690958	Nut (Carburetor) (Serrated)	1100	791959	Pivot-Rocker Arm
659	691029	Nut (Starter Strap)	1119	691183	Screw (Alternator)
668	691500	Spacer (Rotating Screen)	1123	690987	Seal-O Ring (Solenoid Retainer)
668A	691215	Spacer (Rotating Screen)	1124	841653	Seal-O Ring (Fuel Transfer Tube)
672	690234	Gasket-Carburetor Plate	1124A	690988	Seal-O Ring (Fuel Transfer Tube)
691	790574	Seal-Governor Shaft	1126	690991	Screw (Fuel Transfer Tube)
697	591909	Screw (Drive Cap)	1127	695407	Screw (Float Bowl)
703	691010	Clip (Fuel Line)	1128	690990	Screw (Carburetor Nozzle)
718	690959	Pin-Locating	1193	592577	Screw (Thermostat) (#10-32x.62)
729	797454	Clip-Wire	1329	N/A	Replacement Engine (Not Available At This Printing)
741	690980	Gear-Timing	1330	N/A	Repair Manual (Not Available At This Printing)
742	690328	Retainer-E Ring	1353	699725	Seal-O Ring (Fuel Transfer Tube Extension)
750	796208	Screw (Oil Pump Cover)			
783	695708	Gear-Pinion			
789	591392	Harness-Wiring			
797	693167	Nut (Brush Retainer)			
798	697890	Screw (Rocker Arm)			
801	691283	Cap-Drive			
802	691286	Cap-End			
842	691031	Seal-O Ring (Dipstick Tube)			
847	499602	Dipstick/Tube Assembly			
850	100106	Sealant-Liquid			
851	493880s	Terminal-Spark Plug			
865	591667	Cover-Air Guide (Valley)			
868	690968	Seal-Valve			
877	790544	Wire/Connector-Alternator			
883	690970	Gasket-Exhaust			
914	691127	Screw (Rocker Cover)			
918	797408	Hose-Vacuum (Rocker Cover #1)			
918A	799160	Hose-Vacuum (EVAP)			
929	695239	Screw (Choke Control Bracket)			
943	796222	Seal-O Ring (Oil Pump Cover) (Square Cut) (I.D. 2.48)			
943A	690589	Seal-O Ring (Oil Pump Cover)			
947	798779	Solenoid-Fuel			
964	799159	Cap-Connector			
965	796221	Cover-Oil Pump			
968	795120	Cover-Air Cleaner			

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - - MODEL NUMBER 917.203921

BRIGGS & STRATTON ENGINE-MODEL NUMBER 44R677, TYPE NUMBER 0019-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	591695	Cylinder Assembly	141	796228	Kit-Choke Shaft
2	797673	Bushing/Seal Kit (Magneto Side)	142	699726	Nozzle-Carburetor
3	391086s	Seal-Oil (Magneto Side)	150	841649	Gasket-Nozzle
4	796307	Sump-Engine	163	691001	Gasket-Air Cleaner
5	796231	Head-Cylinder (Cylinder #1)	186	795985	Connector-Hose (Intake Manifold)
5A	796232	Head-Cylinder (Cylinder #2)	186A	799158	Connector-Hose (EVAP)
7	693997	Gasket-Cylinder Head	186B	845141	Connector-Hose (EVAP)
8	792185	Breather Assembly	187	791766	Line-Fuel (Cut to Required Length)
9	690937	Gasket-Breather	188	691108	Screw (Control Bracket)
10	691108	Screw (Breather Assembly)	192	690083	Adjuster-Rocker Arm
11	792184	Tube-Breather	209	798921	Spring-Governor (Orange)
12	591911	Gasket-Crankcase	211	691019	Spring-Governed Idle (No Color)
13	793988	Screw (Cylinder Head)	212	695238	Link-Throttle
15	690946	Plug-Oil Drain	216	796229	Link-Choke
16	796237	Crankshaft	217	799771	Spring-Choke Return
20	795387	Seal-Oil (PTO Side)	219	793338	Gear-Governor
22	694966	Screw (Crankcase Cover/Sump)	220	799772	Washer (Governor Gear)
23	691053	Flywheel	221	841026	Cup-Governor
24	222698s	Key-Flywheel (Aluminum)	222	592555	Bracket-Control
25	792023	Piston Assembly (Standard)	227	798856	Lever-Governor Control
	792072	Piston Assembly (.020" Over-size)	231	690718	Screw (Choke Valve)
26	792026	Ring Set (Standard)	240	695666	Filter-Fuel
	792073	Ring Set (.020" Oversize)	250	690957	Retainer-Breather
27	690975	Lock-Piston Pin	252	794389	Collector-Oil
28	696581	Pin-Piston	265	691024	Clamp-Casing
29	796209	Rod-Connecting	267	792629	Screw (Casing Clamp)
32	690976	Screw (Connecting Rod)	276	695410	Washer-Sealing (Aluminum)
33	697576	Valve-Exhaust	276A	690997	Washer-Sealing (Fiber)
34	792200	Valve-Intake	276B	794271	Washer-Sealing
35	694865	Spring-Valve (Intake)	287	697820	Screw (Dipstick Tube)
36	694865	Spring-Valve (Exhaust)	304	591668	Housing-Blower
42	499586	Keeper-Valve	305	691005	Screw (Blower Housing) (1/4-20x.66)
45	690977	Tappet-Valve	305A	790690	Screw (Blower Housing) (Blower Housing to Intake Elbow)
46	792555	Camshaft	305B	691061	Screw (Blower Housing) (#8-32x.87)
48	N/A	Short Block (Not Available At This Printing)	306	591666	Shield-Cylinder (Cylinder #2)
50	591784	Manifold-Intake	306A	796852	Shield-Cylinder (Cylinder #1)
51	795123	Gasket-Intake	307	691003	Screw (Cylinder Shield)
51A	690950	Gasket-Intake	307A	691108	Screw (Cylinder Shield) (1/4-20x.66)
51B	690949	Gasket-Intake	309	497595	Motor-Starter
53	690951	Stud (Carburetor)	310	690323	Screw (Starter Motor)
54	699816	Screw (Intake Manifold)	311	497608	Brush Set
73	494439	Screen-Rotating	332	691059	Nut (Flywheel)
74	698425	Screw (Rotating Screen)	333	592846	Armature-Magneto
75	691056	Washer (Flywheel)	334	691061	Screw (Magneto Armature)
95	690718	Screw (Throttle Valve)	337	491055s	Plug-Spark
98	699721	Kit-Idle Speed	358	694012	Gasket Set-Engine
104	694918	Pin-Float Hinge	367	697820	Screw (Wire Clip)
105	797410	Valve-Float Needle	377	690979	Key-Woodruff
108	699723	Valve-Choke	385	797409	Screw (Fuel Pump)
117	792296	Jet-Main (Standard) (Left Jet)	387	808656	Pump-Fuel
117A	842627	Jet-Main (Standard) (Left Jet)	404	690442	Washer (Governor Crank)
118	699457	Jet-Main (High Altitude) (Left Jet) (5000/9000 Feet)	405	697820	Screw (Back Plate)
118A	699733	Jet-Main (High Altitude) (Right Jet) (5000/9000 Feet)	415	794903	Plug
121	797890	Kit-Carburetor Overhaul	418	795912	Plate-Carburetor
125	796227	Carburetor	431	591661	Elbow-Intake
130	690993	Valve-Throttle	445	593240	Filter-Air Cleaner Cartridge
131	499805	Kit-Throttle Shaft	447	691003	Screw (Air Guide Cover) (#10-24x.43)
133	699724	Float-Carburetor			
135	699729	Tube-Fuel Transfer			
137	690994	Gasket-Float Bowl			


SCHEMATIC

SCH12

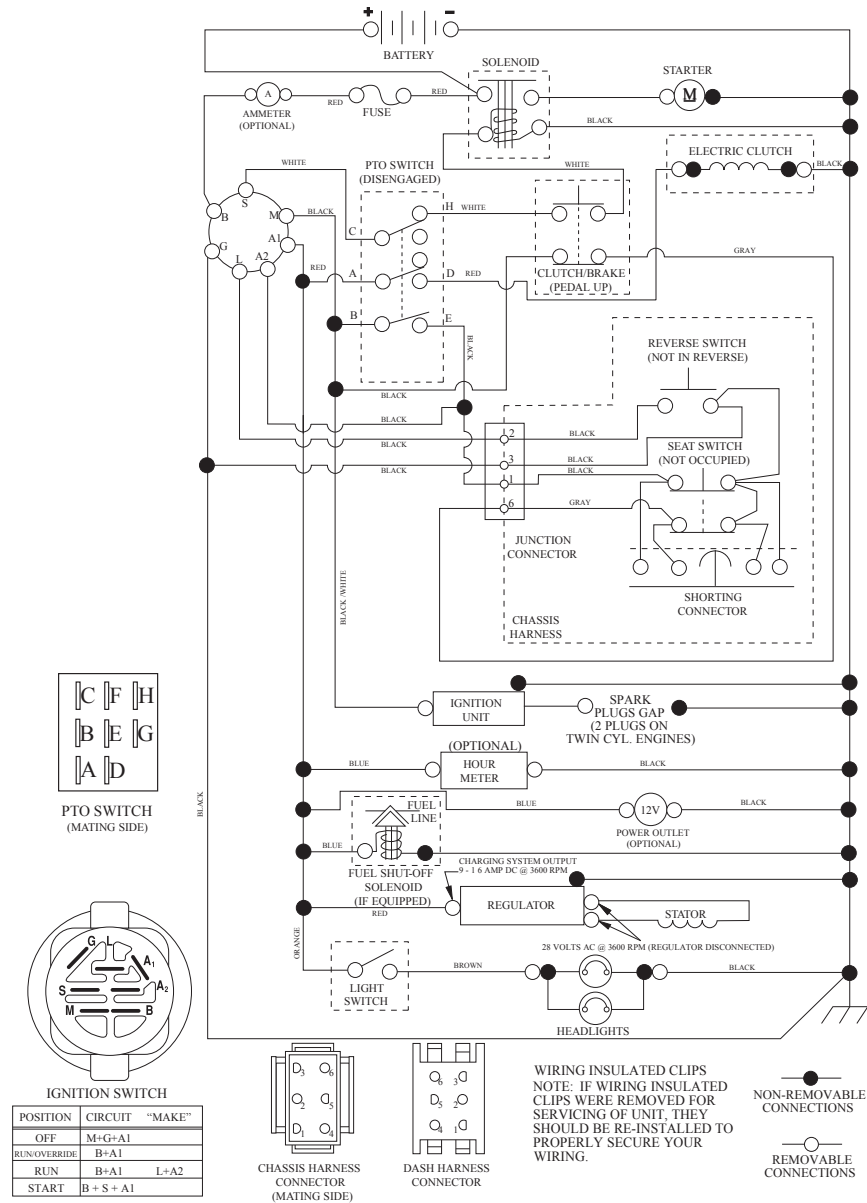


TRACTOR - - MODEL NUMBER 917.203921

ELECTRICAL

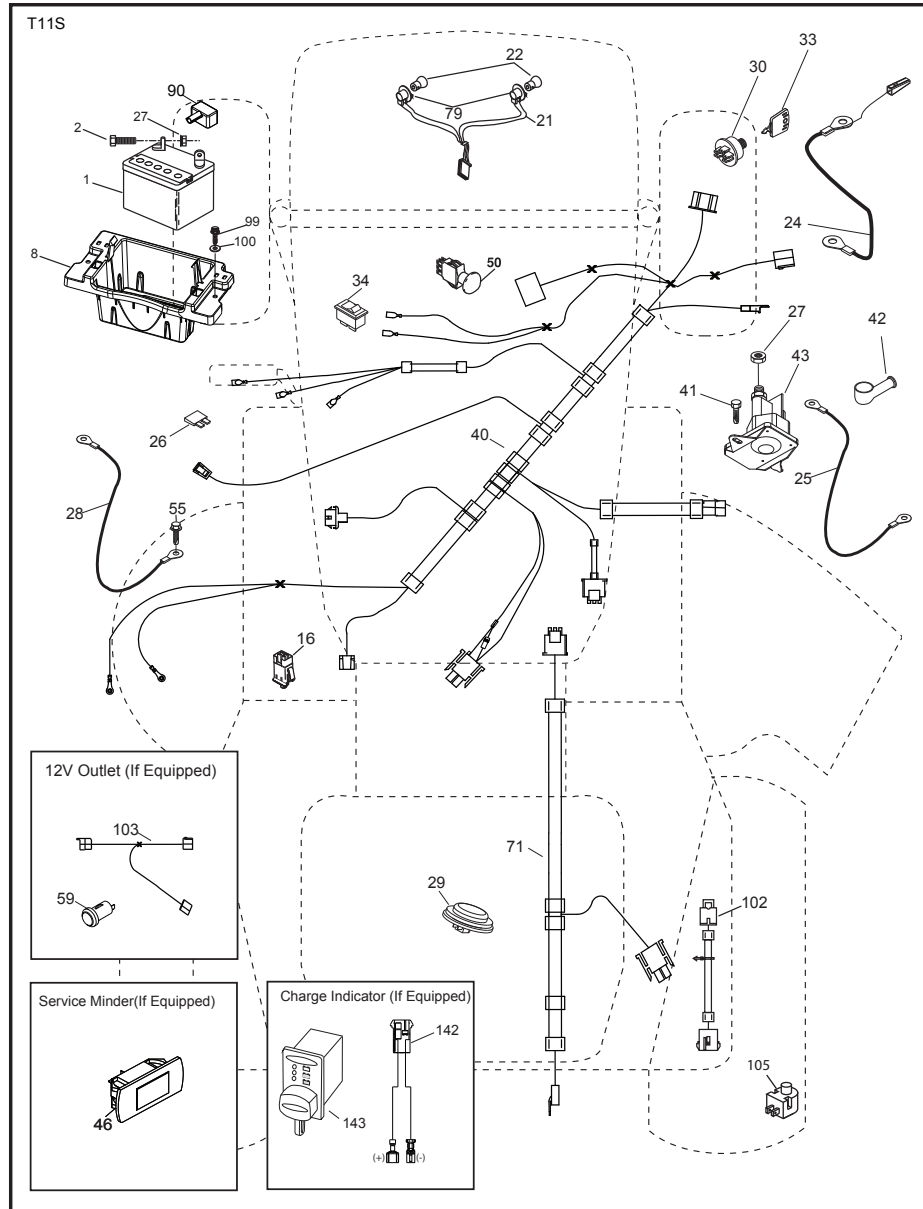

TRACTOR - - MODEL NUMBER 917.203921

BRIGGS & STRATTON ENGINE-MODEL NUMBER 44R677, TYPE NUMBER 0019-G1

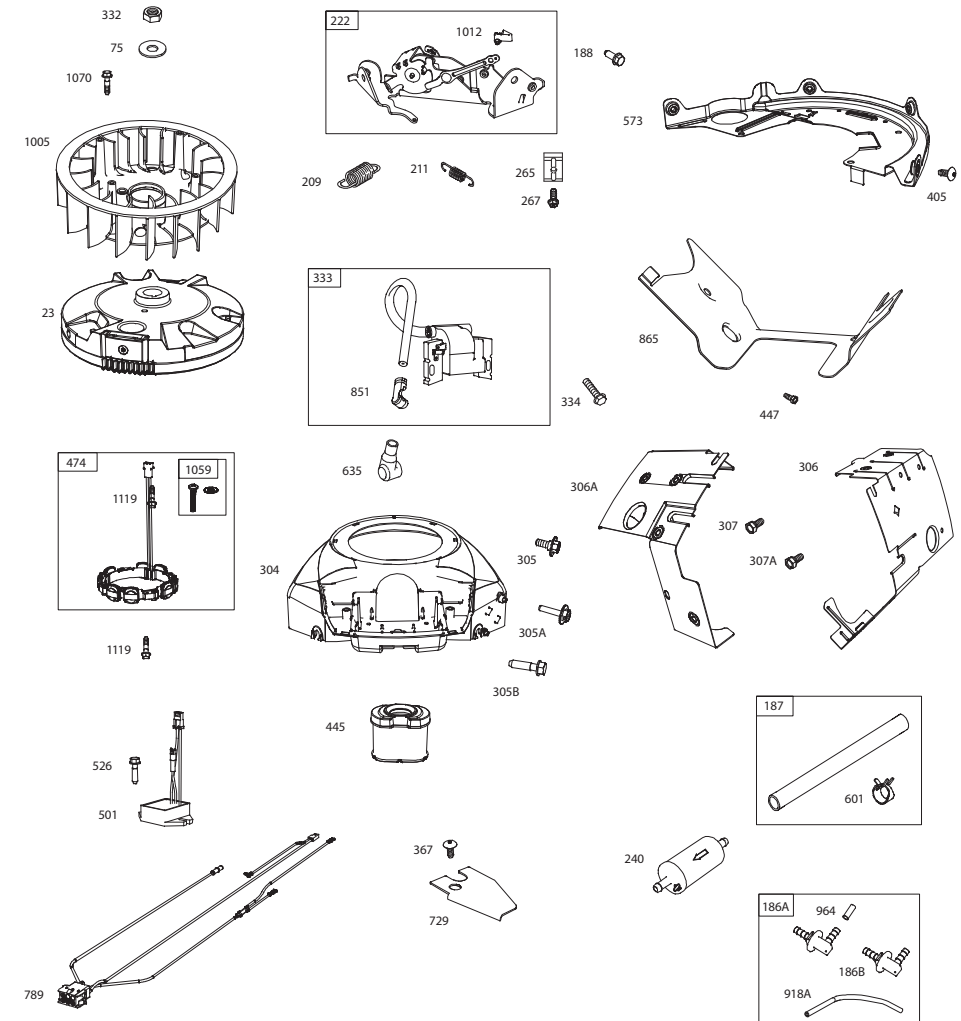


TRACTOR - - MODEL NUMBER 917.203921

BRIGGS & STRATTON ENGINE-MODEL NUMBER 44R677, TYPE NUMBER 0019-G1

ELECTRICAL

TRACTOR - - MODEL NUMBER 917.203921

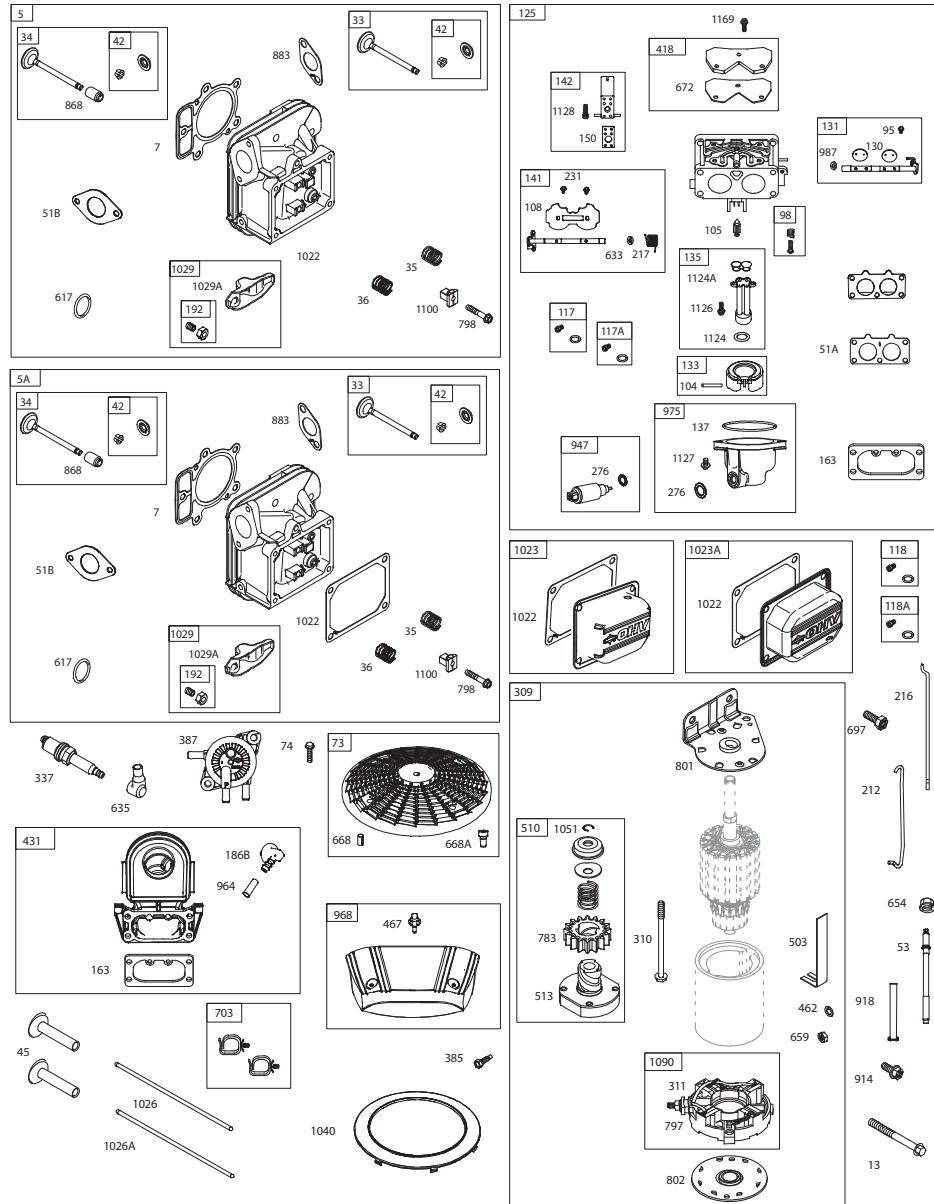

KEY PART NO. NO.

DESCRIPTION

1	163465	Battery
2	74760412	Bolt Hex Hd. 1/4-20 unc x 3/4
8	586365702	Box Battery
16	176138	Switch Interlock Push-In
21	400252	Harness Socket Light w/4152J
22	4152J	Bulb Light
24	585555601	Cable Battery
25	585555501	Cable Starter
26	175158	Fuse
27	73510400	Nut Keps Hex 1/4-20 unc
28	416588	Cable, Ground
29	401545	Switch, Seat
30	193350	Switch, Ign.
33	411932	Key/Chain
34	110712X	Switch Light/Reset
40	501132901	Harness Ign. Dash
41	17720408	Screw Thd. Cut 1/4-20 x 1/2
42	131563	Cover, Terminal
43	192507	Solenoid
46	586161801	Gauge Hourmeter
50	582107602	Switch PTO
55	17060512	Screw Thdrol. 5/16-18 x 3/4 TYTT
71	194276	Harness Ign.
79	175242	Socket Asm. Bulb Twistlock
90	435395	Cover Terminal Battery
99	17670412	Screw Hexwsh. Thdrol. 1/4-20 x 3/4
100	19091416	Washer 9/32 x 7/8 x 16 Ga.
102	581023401	Harness Pigtail
105	407568	Switch Reverse TT Pedal Control

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

chassis-tex_TALON II_3



48 SHORT BLOCK

1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL

358 ENGINE GASKET SET

3 518 163 524 691 842 868 883 943 943A 1022 51 51A

121 CARBURETOR OVERHAUL KIT

51 137 150 633 987 1123 1124 1124A 1353 104 217 276 276A 276B 672

1095 VALVE GASKET SET

7 868 883 518 1022 163 850 22 10 3

1

2

3

718

4

12

15

616

404

552A

742

742

552

691

965

943

750

1024

1017

1013

415

20

847

523

842

525

524

287

46

45

1027

250

252

227

212

505

562

16

332

75

377

741

50

212

51A

163

929

54

617

617

186

415

219

221

615

220

25

26

27

28

27


29

32

TRACTOR - - MODEL NUMBER 917.203921
GENTRANS TRANSAXLE - MODEL NUMBER (RS800 LR) 584973901

TRACTOR - - MODEL NUMBER 917.203921
CHASSIS ASSEMBLY

RS800 LR

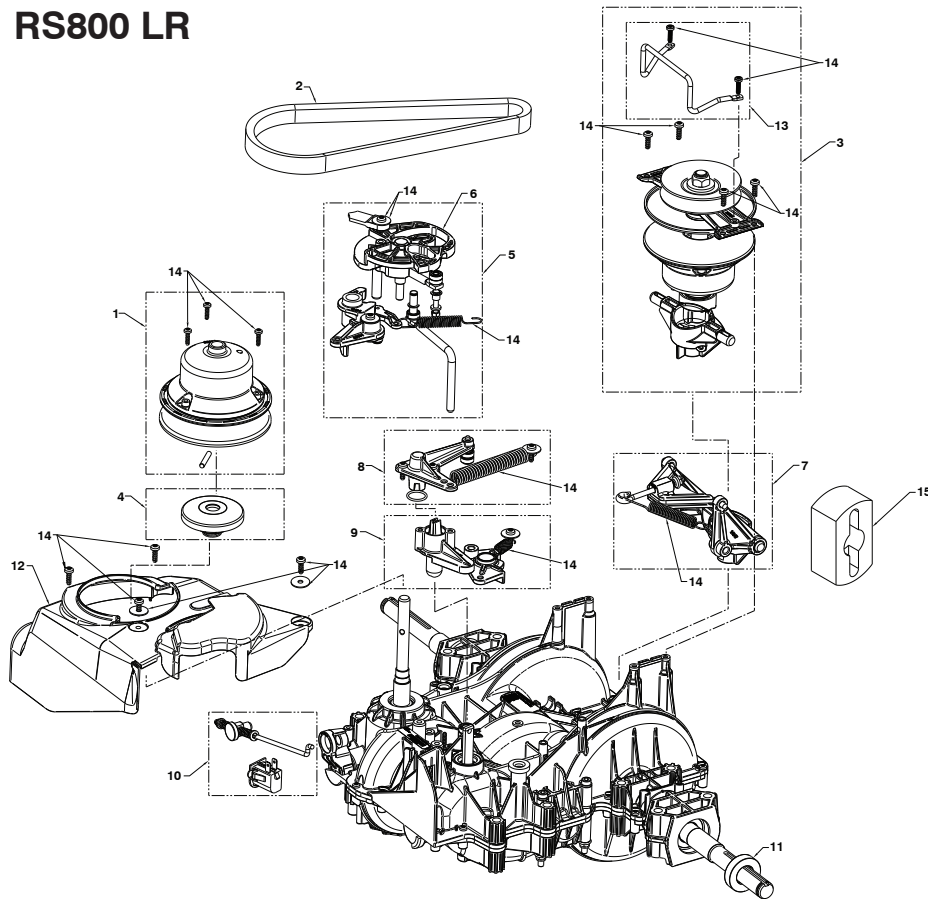

KEY PART NO.	NO.	DESCRIPTION
1	587086701	Driven Kit RS800
2	587086101	Variation Belt
3	587086703	Driver Kit
4	587291101	Inversion Security System
5	587086702	Control Kit RS800 P
6	587086302	Control Cam RS800 P
7	587291201	Variation Kit
8	587291301	Brake Kit
9	587291401	Bypass Kit
10	587291402	Inversion Kit

KEY PART NO.	NO.	DESCRIPTION
11	587086401	Output Seals Kit RS800
12	587291601	Cover RS800 P
13	588508301	Belt Keeper Kit
14	587086901	Hardware Kit RS800
15	587086501	Driven Tool


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

KEY PART NO.	NO.	DESCRIPTION
5	580485806	Dash
14	580354406	Hood
15	580485601	Lens LH
18	580485302	Grille
25	580484501	Lens RH
34	580910801	Plate engine
35	191111116	Washer 11/32 x 11/16 x 16 Ga.
36	17060512	Screw 5/16-18 x 3/4
37	414878X615	Fender
52	73680500	Nut Crown lock 5/16-18
58	412280	Drawbar
68	17490508	Screw Thdrol 5/16-18 x 1/2
102	4497H	Retainer Spring 1"
130	416358	Screw # 10 x .750 BOS Thread
137	407590	Bumper Dash
138	193224X428	Cupholder
150	580485501	Duct Heat Hood
151	580663302	Bracket Pivot
152	199535	Shield Browning/Debris
161	193229X428	Window Fuel
162	142432	Screw Hex Wsh Hi-Lo 1/4 x 1/2
165	196826	Support Tank Rear
175	196304	Crossmember
176	400776	Screw 10-24 x 5/8 Wshd Qdrx
177	195228	Bushing Steering
180	415063	Chassis
181	193102X428	Bushing Mtg. Fender Crgo.
182	406859	Dash Lower
183	74520520	Bolt 5/16-18 x 1-1/4
189	17000512	Screw 5/16-18 x 3/4
191	580485101	Mylar Headlight RH
194	73900500	Nut Lock Hex Flange 5/16-18
195	401556X428	Plug Hole Dash 12V Adapter
196	431658	Console Asm. Deck Lift
202	580485001	C-Closeout Lwr Trm RH
203	580484801	C-Closeout Lwr Trm LH
205	580843706	Assembly Corner RH
206	580843806	Assembly Corner LH
213	74760512	Bolt hex HD 5/16-18 unc x 3/4
218	580897301	Pivot Hood Assy
228	195161	Stud Fastener
233	196539	Bolt Shoulder
235	406129	Spacer Fender
236	73930500	Nut Center Lock 5/16-18
287	17600406	Screw Hex Washead 1/4-20 x 3/8
297	580484901	Mylar Headlights LH
298	580851001	Nut Push
335	580484602	C-Side Closeout RH
336	580484402	C-Side Closeout LH
350	445143	Clip X-Mass Tree
363	580724501	Cap Talon Grille
364	17060408	Screw

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.203921


GROUND DRIVE

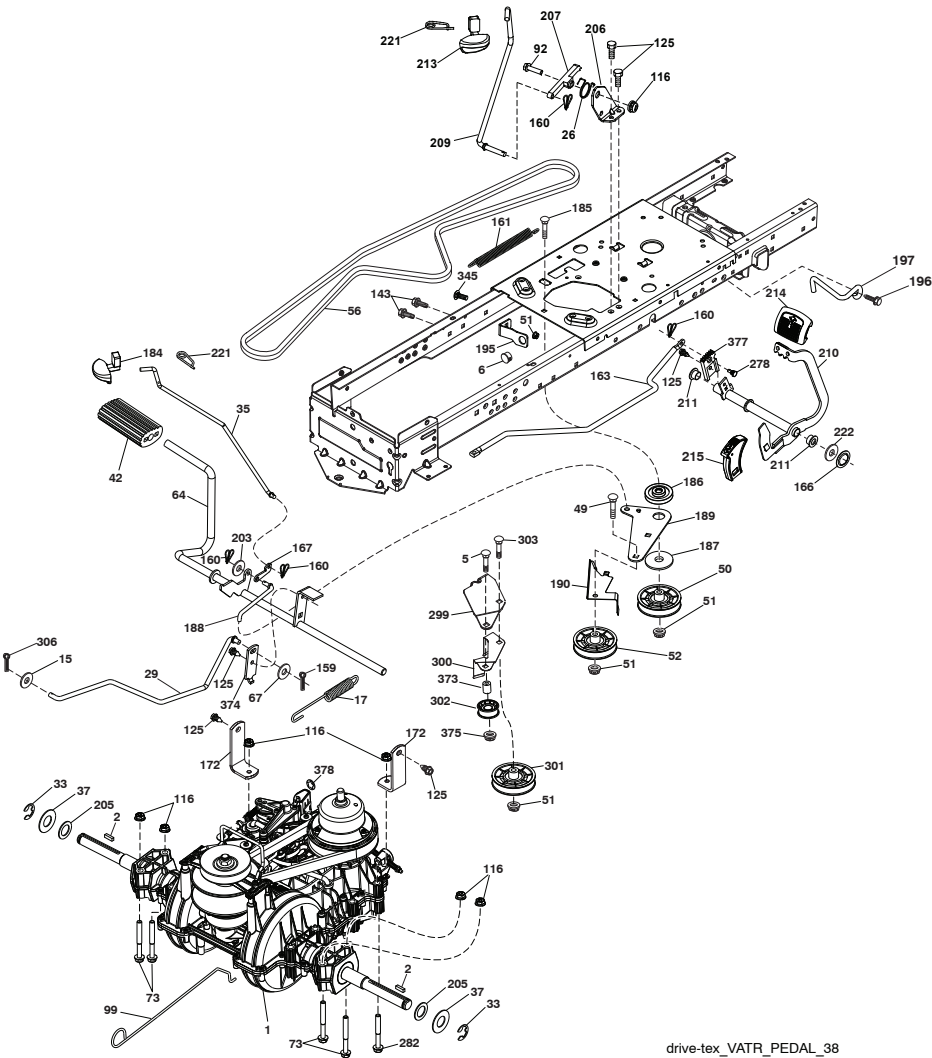

drive-tex_VATR_PEDAL_38


TRACTOR - - MODEL NUMBER 917.203921

DECALS

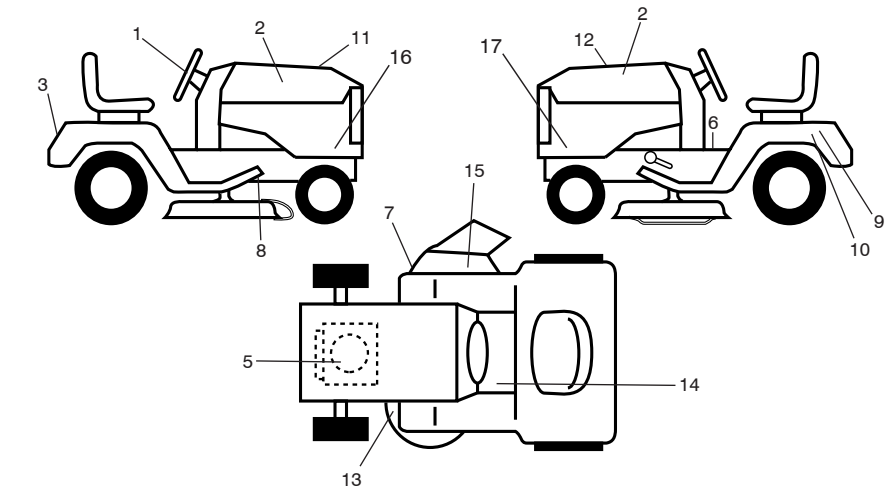

KEY PART NO.	NO.	DESCRIPTION	KEY PART NO.	NO.	DESCRIPTION
1	581894601	Decal, Steering	14	424102	Decal, Warning
2	585767601	Decal, Hood LH/RH	15	584904601	Decal, Deck/Deflect Warning
3	587390201	Decal, Fender	16	586207902	Decal, Sideskirt LH
5	582522401	Decal, Engine HP	17	586207901	Decal, Sideskirt RH
6	581578801	Decal, Fender Warning	--	581724801	Decal, Bypass
7	581724502	Decal, Mower Caution	--	193226X428	Pad, Footrest LH
8	421534	Decal, V-Belt Schematic Drive	--	400981X428	Pad, Footrest RH
9	434996	Decal, Battery Dnge/Poi	--	588807326	Manual, Operator's (English/Spanish)
10	434995	Decal, Battery	--	588807327	Manual, Repair Parts
11	586106501	Decal, Replacement	--	588799624	Manual, Quick Start Guide Craftsman
12	585571401	Decal, Customer Maint.			
13	581580002	Decal, Mower V-Belt SCH.			

WHEELS & TIRES

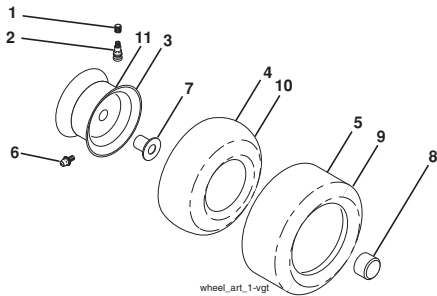


KEY PART NO.	NO.	DESCRIPTION
1	59192	Cap, Valve, Tire
2	65139	Stem, Valve
3	106732X613	Rim Assembly, Front
4	59904	Tube, Front
5	106222X	Tire, Front 15 x 6-6
6	278H	Fitting, Grease
7	9040H	Bearing, Flange
8	104757X428	Cap, Axle
9	122082X	Tire, Rear 20 x 10-8
10	7152J	Tube, Rear
11	106108X613	Rim Assembly, Rear
--	144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.203921

LIFT ASSEMBLY

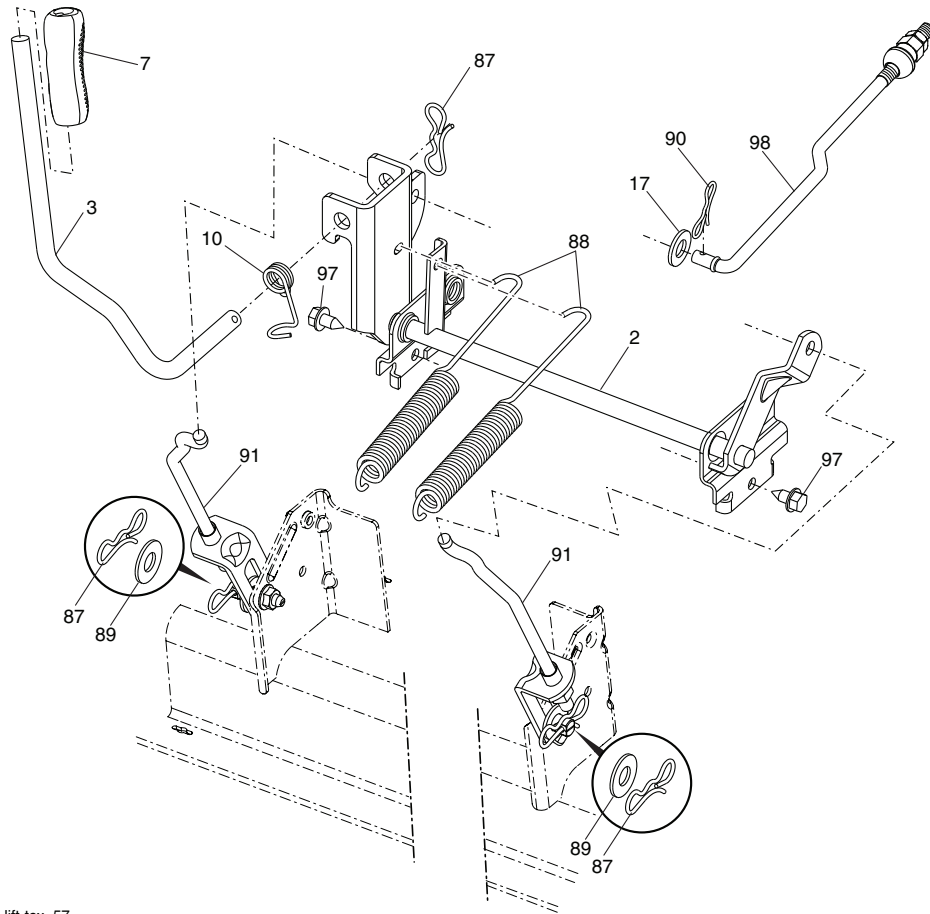

lift-tex_57

KEY PART NO.	NO.	DESCRIPTION
2	422027	Shaft Asm., Lift
3	426896	Lever Asm., Lift Rh
7	445060X428	Grip, Lever
10	196314	Spring Torsion
17	19131312	Washer 13/32 x 13/16 x 12 Ga.
87	194209	Pin Cotter 7/16 Bow Tie Lock
88	410710	Spring Lift Assist

KEY PART NO.	NO.	DESCRIPTION
89	19191912	Washer Clear Zinc
90	194208	Pin Cotter 5/16 Bow Tie Lock
91	195181	Link Lift Susp Mower Rear
97	17000612	Screw 3/8-16 x .75
98	195264	Link Lift Susp. Front Mower

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.203921


GROUND DRIVE

KEY PART NO.	NO.	DESCRIPTION	KEY PART NO.	NO.	DESCRIPTION
1	-----	Transmission, Gen Trans RS800 LR (584973901) (See transaxle breakdown.)	187	19133210	Washer 13/32 x 2 x 10 Ga.
2	123583X	Key Square	188	194323	Link Clutch Ground Drive
5	74760636	Bolt Hex HS 3/8-16 unc	189	194317	Bellcrank Grounddrive Nstg/Nstl
6	124028X	Bushing Snap	190	194318	Keeper Bellcrank Drive Ground
15	19131316	Washer 13/32 x 13/16 x 16 Ga.	195	581504601	Brake Bracket
17	501487101	Spring Brake	196	17000616	Screw 3/8-16 x 1
26	199679	Spring Return Cruise	197	585658601	Link Clutch Anti-Rotation
29	584823101	Rod Brake	203	19111116	Washer 11/32 x 11/16 x 16 Ga.
33	12000001	E-Ring	205	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
35	583864501	Rod Brake Parking	206	448596	Bracket Mount Latch Cruise
37	188967	WasherHarden.793x1.637x060	207	448264	Latch Control Cruise
42	8883R	Cover Pedal Blk Round	209	199592	Rod Control Cruise
49	72110614	Bolt Rdhd 3/8-16 unc x 1-3/4 Gr.5	210	588921001	Weldment Pedal
50	194327	Idler.Flat	211	120183X	Bearing Nylon
51	73900600	Nut Hex Flangelock 3/8-16	213	196441X428	Knob Control Cruise
52	194326	Idler V-Groove Offset	214	421263	Pedal Forward Pad
56	197253	Belt Drive	215	448254	Cap Pedal Reverse
64	448353	Shaft Asm. Pedal Brake	221	403187	Retainer Spring Clip Handle
67	19131312	Washer 13/32 x 13/16 x 12 Ga.	222	79212010	Washer 21/32 x 1-1/4 10 Ga.
73	74490544	Bolt Hex Flghd 5/16-18 Gr. 5	278	580369101	Bolt Cruise Variator
92	74760520	Bolt	282	74490548	Screw Thdrol 5/16-18 x 3
99	435935	Rod Bypass	299	415683	Bracket Mount Idler
116	73900500	NutLockHexFlange5/16-18unc	300	415681	Keeper Idler Rear
125	17000512	Screw 5/16-18 x 3/4 Smgml Tap/Bl	301	415680	Pulley Idler V-Groove
143	17490508	Screw Thdrol 5/16-18 x 1/2 Tytt	302	581420501	Pulley Idler Flat 2.0 Od
159	76020412	Pin Cotter 1/8 x 3/4	303	72110618	Bolt Rdhd Sgnk 3/8-16 x 2-1/4
160	169484	Retainer Clip(M) Dia. 290	306	76020416	Cotter Pin
161	105709X	Spring Return Clutch 6.75	345	72110606	Bolt Rdhd Sgnk 3/8-16 x 1 Gr. 5
163	583971301	Rod Control Pedal	373	581461801	Spacer Idler
166	429164	Nut Push .625	374	581475201	Bracket Brake Arm
167	405257	Latch Brake Parking	375	73680600	Nut Crownlock 3/8-16 unc
172	583974201	Strap Torque LH/RH	377	584303401	Gear Sector
184	196439X428	Handle Parking Brake	378	584287701	Nut Push 8 mm
185	72110622	Bolt Rdhd 3/8-16 unc x 2-3/4 Gr.5			
186	194321	Spacer Retainer			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

ENGINE

TRACTOR - - MODEL NUMBER 917.203921

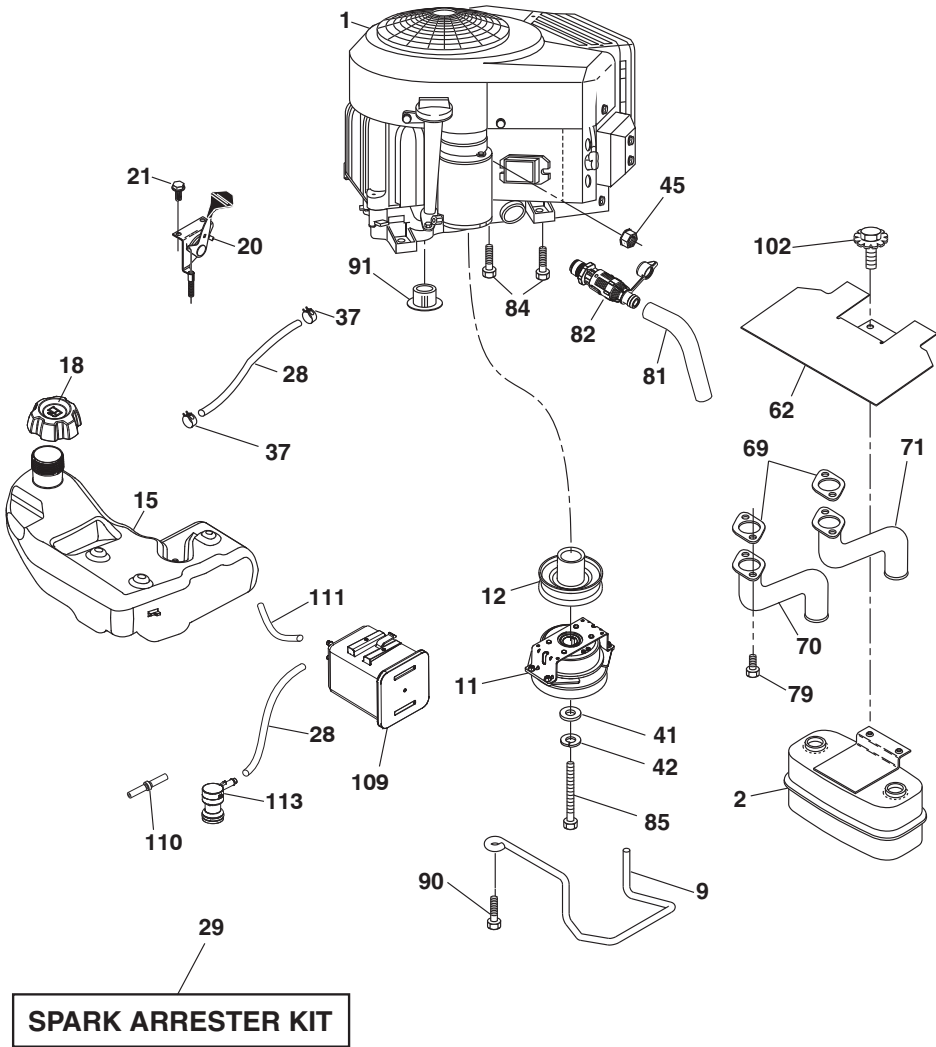


engine-tex_bs-2cyl_118_r1

MOWER DECK

TRACTOR - - MODEL NUMBER 917.203921

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	197216	Deck Weldment Mower	97	178515	Washer Hardened
6	197248	Cover Mandrel LH	98	196105	Spring Drive
7	587452401	Cover Mandrel RH	113	72110508	Bolt Rdhd Sqnk 5/16-18 x 3/4
9	583970702	Torque Strap	114	197451	Rod Tension Relief
11	180054	Blade High Lift	116	193406	Bolt, Shoulder
12	404851	Rod Anti-Sway	117	174873	Gauge Wheel
13	587256401	Shaft Asm.	120	19132012	Washer 13/32 x 1-1/4 x 12 Ga.
14	187281	Housing, Mandrel	122	187557	Bushing Tension Relief
15	585323901	Bearing, Mandrel	185	73900700	Nut Lock Flange 7/16-14 Gr. 5
16	19131312	Washer 13/32 x 13/16 x 12 Ga.	187	195161	Stud Fastener w/"D" Anti-Rotation
17	72110505	Bolt 5/16-18 x 5/8	188	73900500	Nut Lock Hex Flange
18	72140505	Bolt RdHd 5/16-18 unc x 5/8	189	195185	Arm Susp. Mower Rear
19	194208	Pin Cotter 5/16 Bow Tie Lock	190	196539	Bolt Shoulder
20	174378	Baffle Vortex	194	74490736	Bolt Hex Washer Head
21	73680500	Nut, Crownlock 5/16-18 unc	209	17000512	Screw 5/16-18 x 3/4
22	174493	Stripper Mandrel	241	152927	Screw TT #10-32.5 3/8 Flange
24	105304X	Cap Sleeve	242	415598	Port, Washout
25	178102	Spring, Torsion	--	416405	Coupling Quick Connect
26	110452X	Nut, Push	--	587125401	Mandrel Assembly (Includes housing (key #14), shaft assembly (key #13), and bearing only (key #15) and (key #33) - pulley/nut/washer and blade bolt/washers not included)
27	180655X428	Deflector Shield	--	199859	Replacement Mower, Complete
29	131491	Rod, Hinge			
32	153532	Pulley, Mandrel			
33	400234	Nut, Flg. Top Lock			
36	584309301	Screw Sems 7/16-20 x 1 Hx Hd			
39	197380	Pulley, Idler, 4.50 Hub			
41	584953901	Bolt Hex WSHRHD 313-18 x 1.19			
43	196065	Arm, Idler			
46	137729	Screw, Thdroll. 1/4-20 x 5/8			
47	197242	Belt Deck Drive			
48	197379	Pulley Idler 4.50 RAW			
49	73900600	Nut, Lock Flg. 3/8-16 unc			
50	17490636	Screw TT 3/8-16 x 2-1/4			
52	193197	Pulley Idler 48" Primary			
54	72110612	Bolt Carr. Sh 3/8-16 x 1-1/2 Gr. 5			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

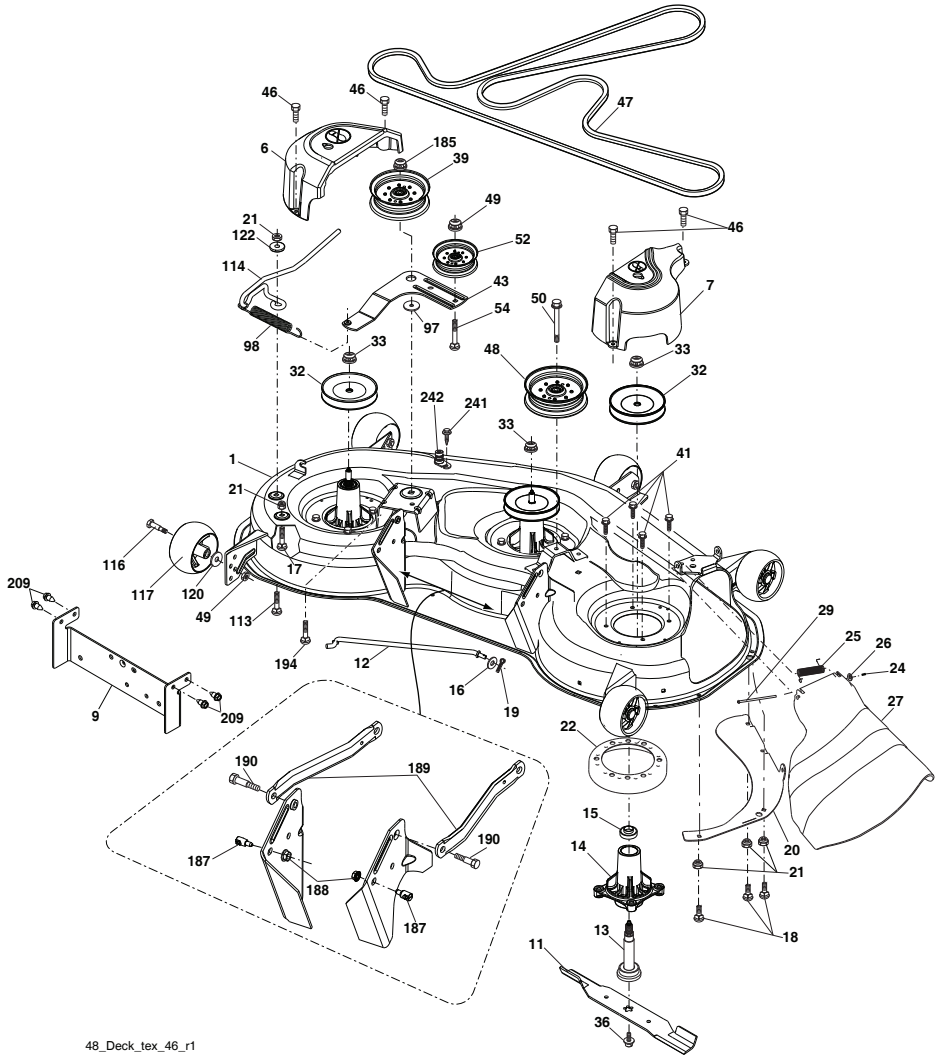

48_Deck_tex_46_r1

KEY PART NO.	PART NO.	DESCRIPTION
1	---	Engine B&S Model No. 44R677-0019-G1 (586103601)(See engine breakdown.)
2	445962	Muffler
9	584911602	Keeper Belt Engine
11	587241601	Clutch Electric
12	402980	Pulley Engine
15	420722	Tank Fuel
18	585124802	Cap Fuel
20	421473X428	Control Throttle/Choke
21	416358	Screw 10 x .750 BOS Thread
28	401135	Fuel Line
29	137180	Spark Arrester Kit
37	123487X	Clamp Hose
41	126197X	Washer
42	10040700	Washer Lock 7/16
45	73510400	Nut Keps Hex 1/4-20 unc
62	434017	Shield Heat
69	165391	Gasket
70	581881101	Exhaust Tube LH
71	581881001	Exhaust Tube RH
79	183906	Screw 5/16-18 x 1
81	148456	Tube Drain Oil
82	428287	Valve Oil Drain
84	17060620	Screw 3/8-16 x 1-1/4
85	179953	Bolt Hex 7/16-20 x 3.75 Gr.
90	17000616	Screw 3/8-16 x 1.0
91	187495	Bushing
102	17000512	Screw 5/16-18 x 3/4
109	414114	Canister Carbon
110	414118	Valve Asm
111	414119	Purge Line
113	414127	Valve Slant Cartridge


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - - MODEL NUMBER 917.203921

STEERING ASSEMBLY

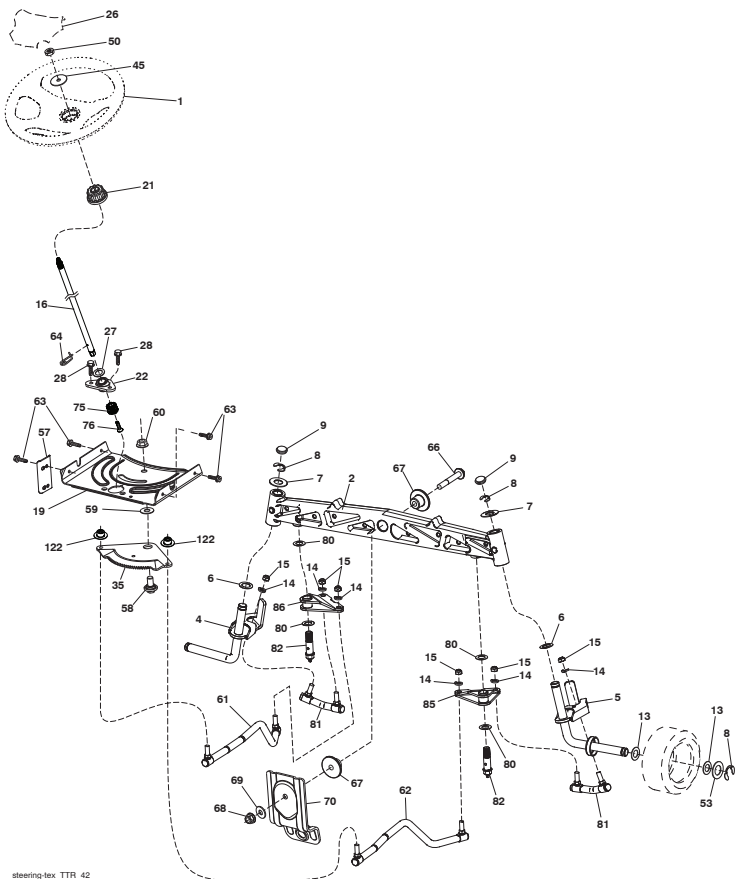

steering-lex_TTR_42


KEY PART NO.	NO.	DESCRIPTION
1	414851X428	Wheel, Steering
2	436870	Axle Asm., Front
4	436873	Spindle Asm., LH
5	436874	Spindle Asm., RH
6	6266H	Washer Thrust 0.75 x 1.23
7	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
8	12000029	Ring, Clip #T5304-75
9	184946X667	Cap, Spindle
13	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
14	10040600	Washer Lock 3/8
15	73540600	Nut, Crown Lock 3/8-24 unf
16	587016002	Shaft Steering
19	194729	Plate Steering
21	586840201	Adapter, Wheel Steering Splnd Alum
22	585029901	Bearing Subasm Shaft Steer Low
26	414852X428	Insert, Wheel Steering
27	19211616	Washer 21/32 x 1 x 16 Ga.
28	17000612	Screw 3/8-16 x 3/4
35	440770	Gear, Sector Plate
45	587016401	Washer 3/8 ID 2-3/8OD 12 Ga. PLTD
50	73900600	Nut Lock Flg. 3/8-16 unc
53	188967	Washer Hardened .793 x 1.637 x .060

KEY PART NO.	NO.	DESCRIPTION
57	197246	Bracket Upstop
58	194747	Bolt Shoulder Sector Pivot CFM
59	194748	Washer Thrust Sector Steering
60	73971000	Nut Flange Lock 5/8-11
61	436884	Draglink, LH
62	436885	Draglink, RH
63	17000512	Screw 5/16-18 x 3/4
64	199849	Retainer Clip Spring Steering
66	71020748	Bolt Hex Fghd 7/16-14 x 3 Serr
67	194737	Bushing PM Front Axle
68	73900700	Nut Lock Flange 7/16-14 Gr. 5
69	199162	Washer 1.5 x .505 x .118
70	585338801	Bracket Deck Susp. Front
75	580683701	Pinion
76	580683601	Screw Head Sock
80	1370H	Washer Thrust 5/8 x 1.10 x 1/32
81	436887	Link Cross RH
82	442147	Pivot Bolt
85	441873	Pivot RH
86	441872	Pivot LH
122	444962	Cap Gear

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 917.203921

SEAT ASSEMBLY

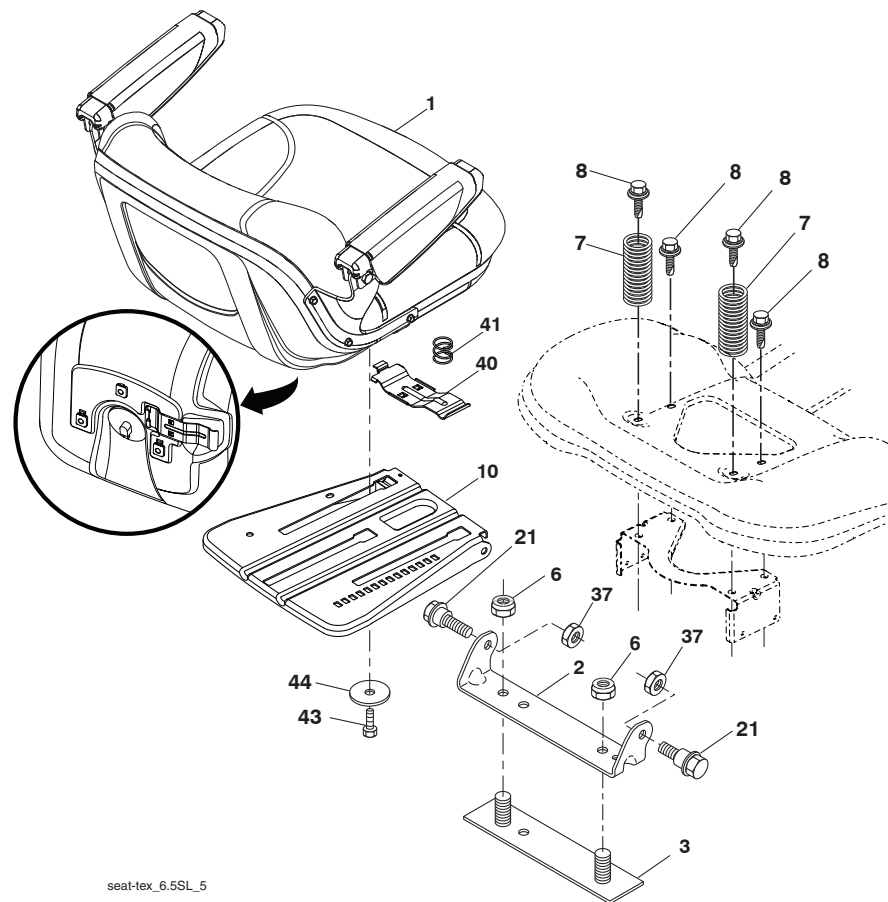

seat-lex_6.5SL_5

KEY PART NO.	NO.	DESCRIPTION
1	586507601	Seat
2	180166	Bracket Pivot Fender
3	140675	Strap, Asm Fender
6	73800600	Nut, Lock W/Ins. 3/8-16 unc
7	587613301	Spring, Seat Cprsn
8	171877	Bolt 5/16-18 unc x 3/4 w/Sems
10	196977	Pan, Seat
21	171852	Bolt, Shoulder 5/16-18
37	73800500	Nut, Lock 5/16-18 unc

KEY PART NO.	NO.	DESCRIPTION
40	197661	Handle Slide Seat
41	198200	Spring Latch Seat
43	74760612	Bolt 3/8-16 x 3/4
44	19133812	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm