



Heated Lever & Grip Accessory Kit Installation Instructions


 
 
 
 
 
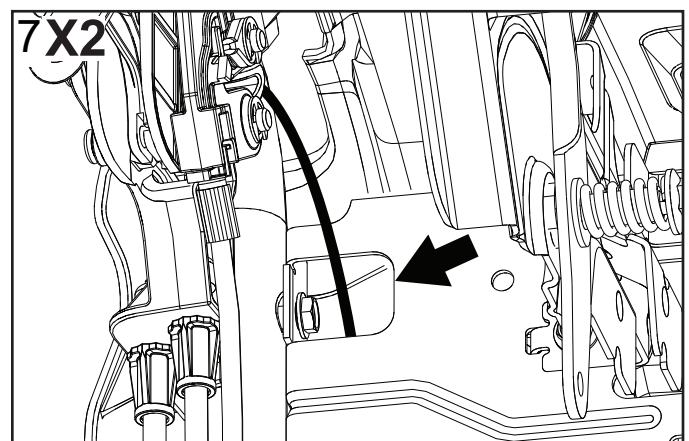 


TABLE OF CONTENTS







200/200P SERIES LEVERS INSTALL	3
300 SERIES LEVERS INSTALL.....	5
200 SERIES MAIN HARNESS INSTALL	7
200/200P/300 SERIES WIRE SPLITTER INSTALL.....	8
400/400T SERIES KIT INSTALL.....	9

200 SERIES: ST224, ST227, ST230
200P SERIES: ST224P, ST227P, ST230P
300 SERIES: ST324, ST327, ST330
400 SERIES: ST424, ST427, ST430
400T SERIES: ST424T, ST427T, ST430T

 Install Lower Heated Grip: 200 Series

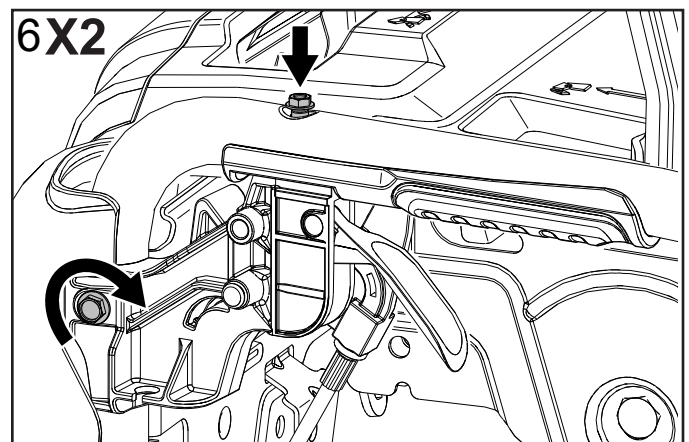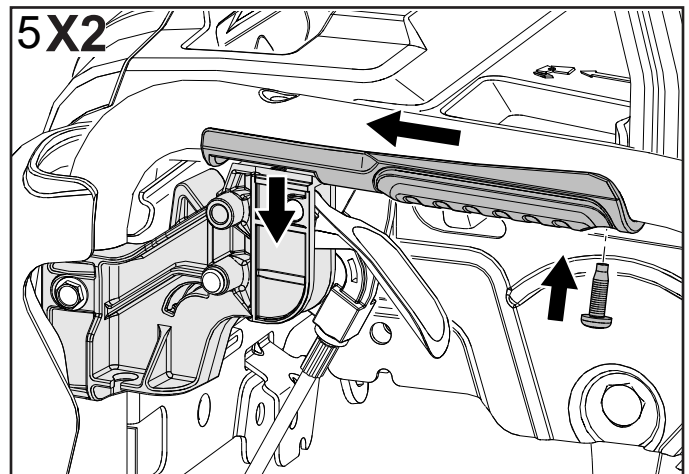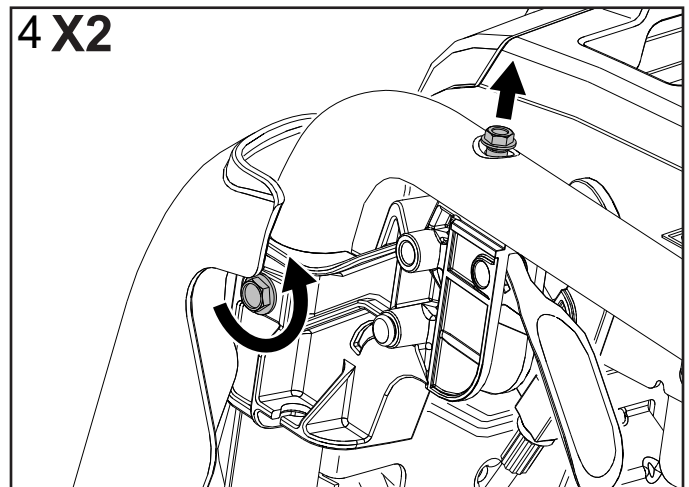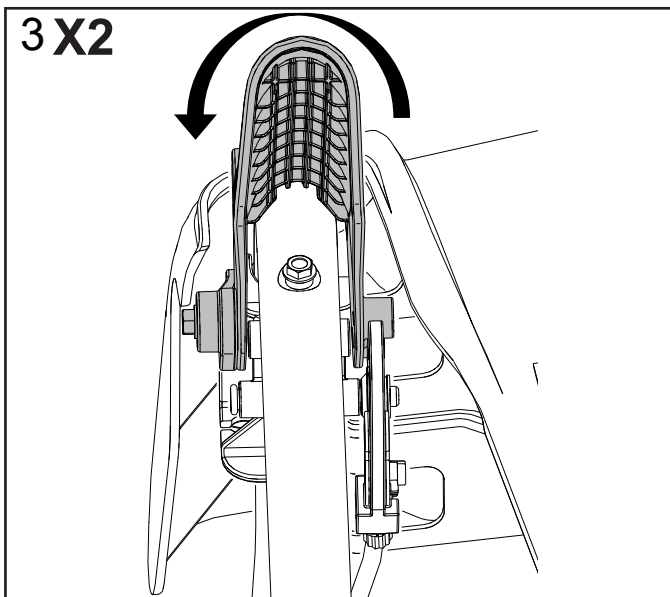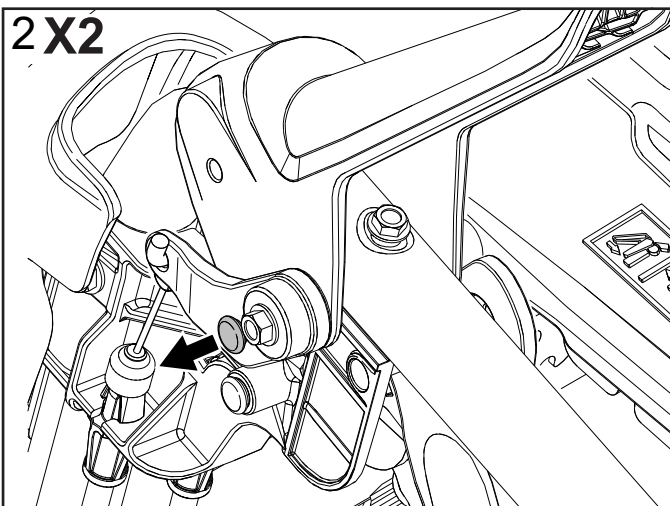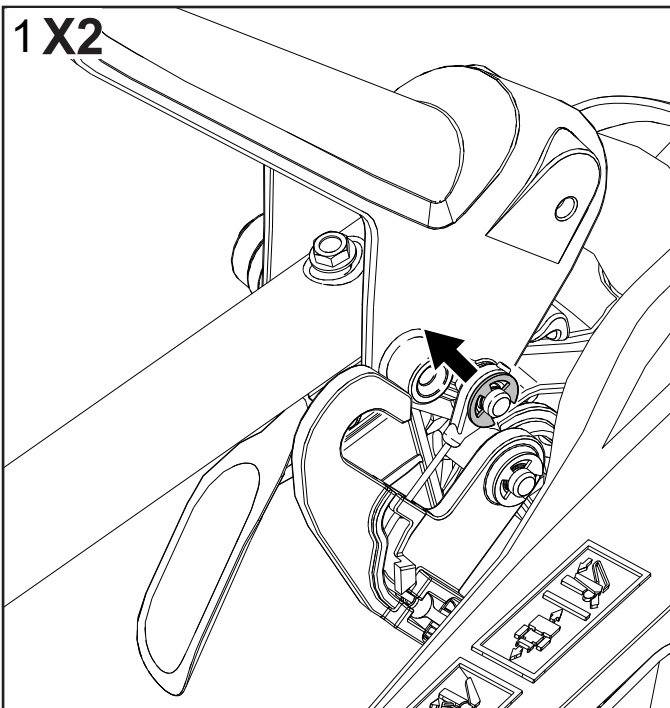


      Install Heated Levers: 200 & 200P Series

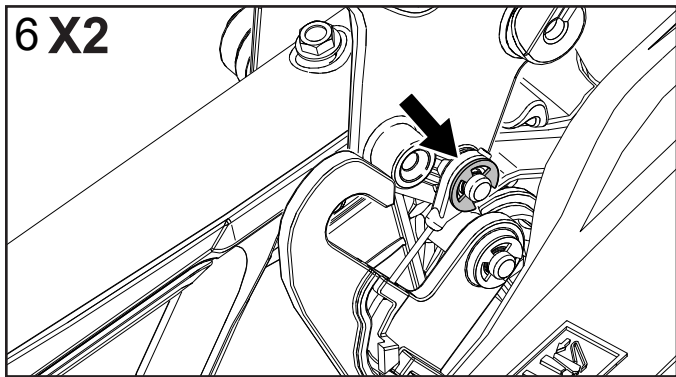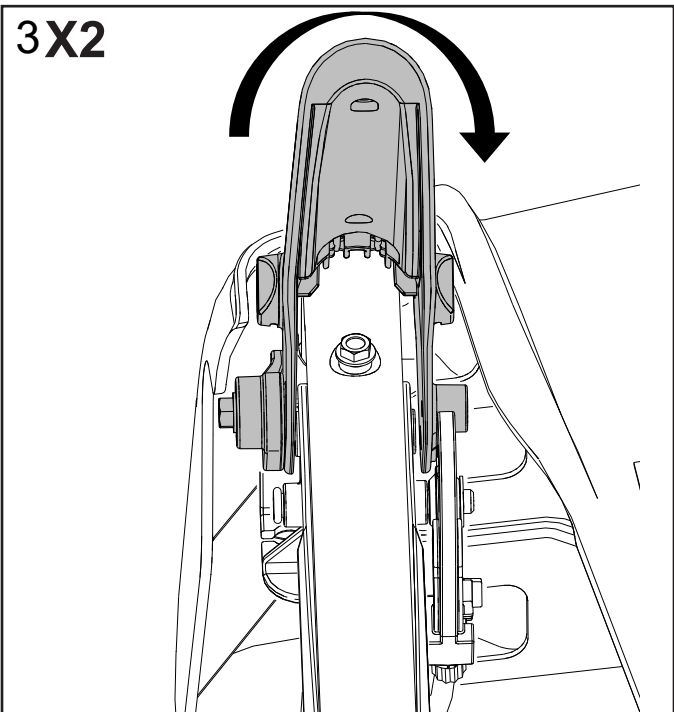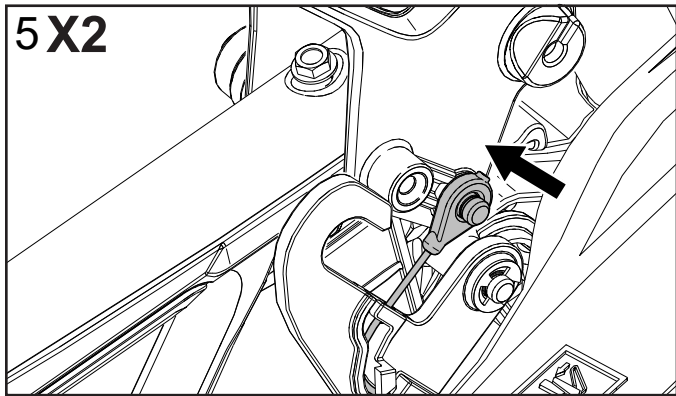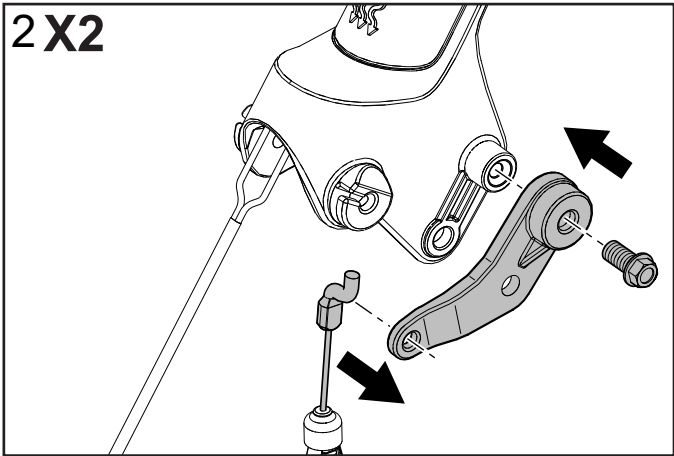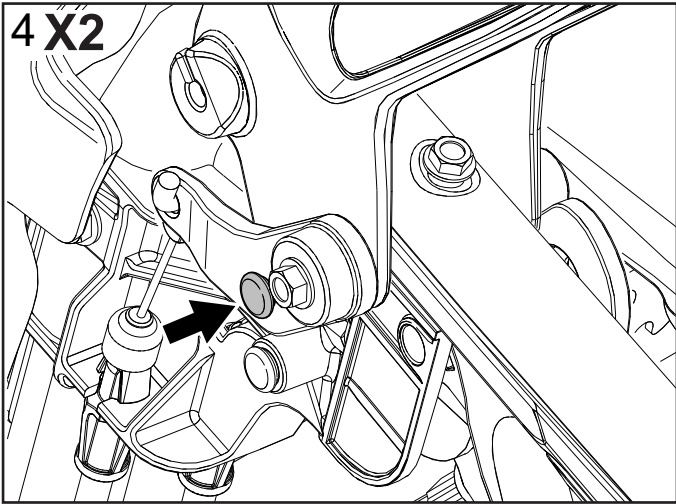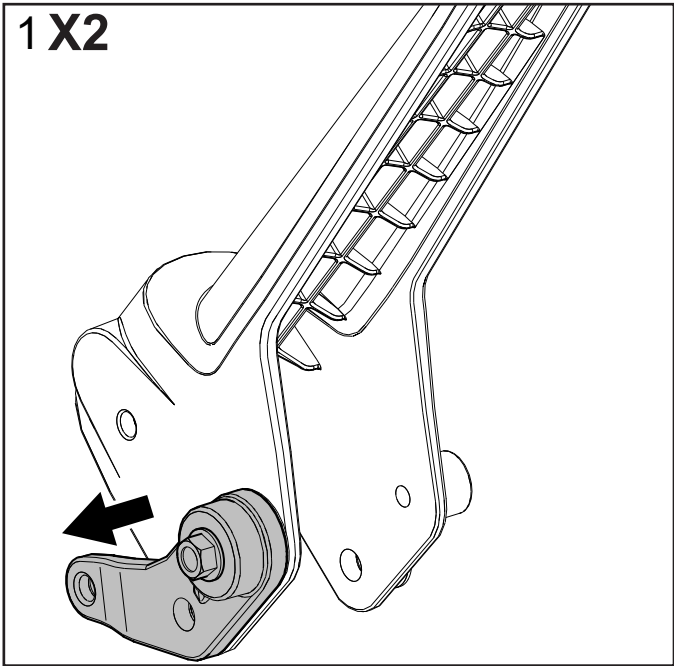


Install Heated Levers: 300 Series

 
1 X2

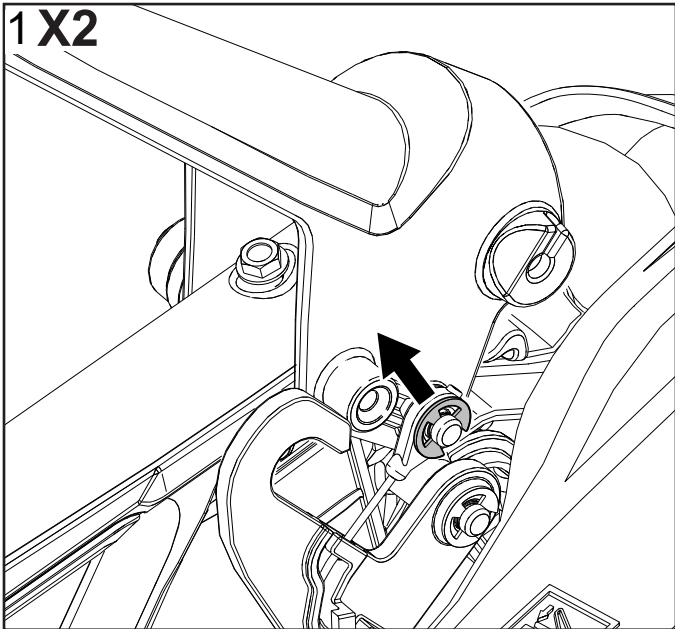


4 X2

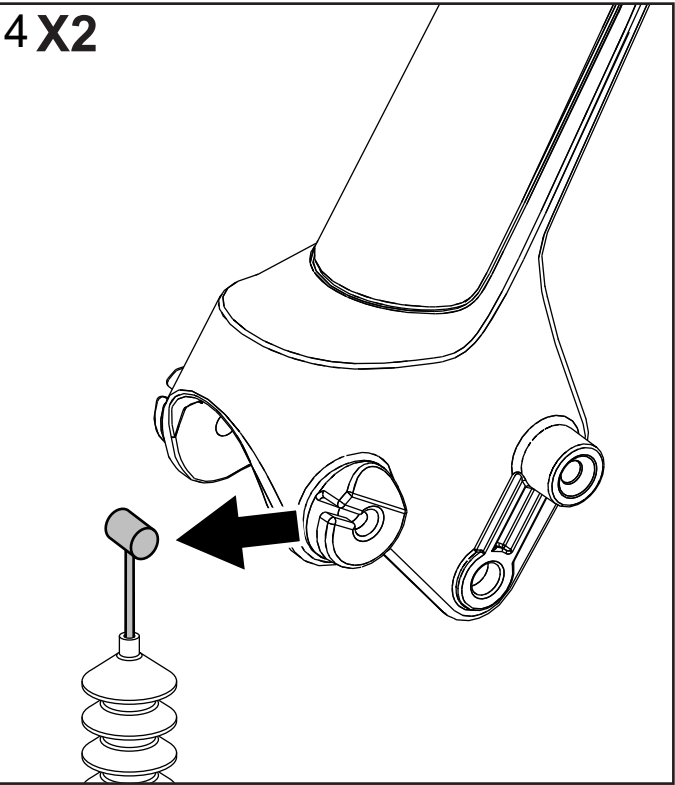 


2 X2

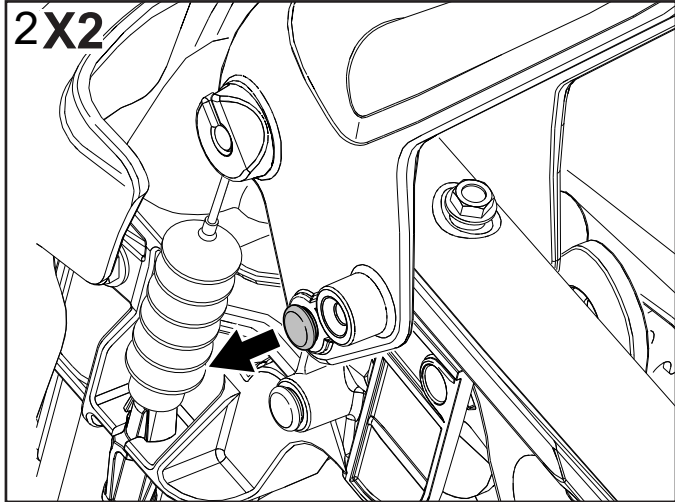 





5 X2

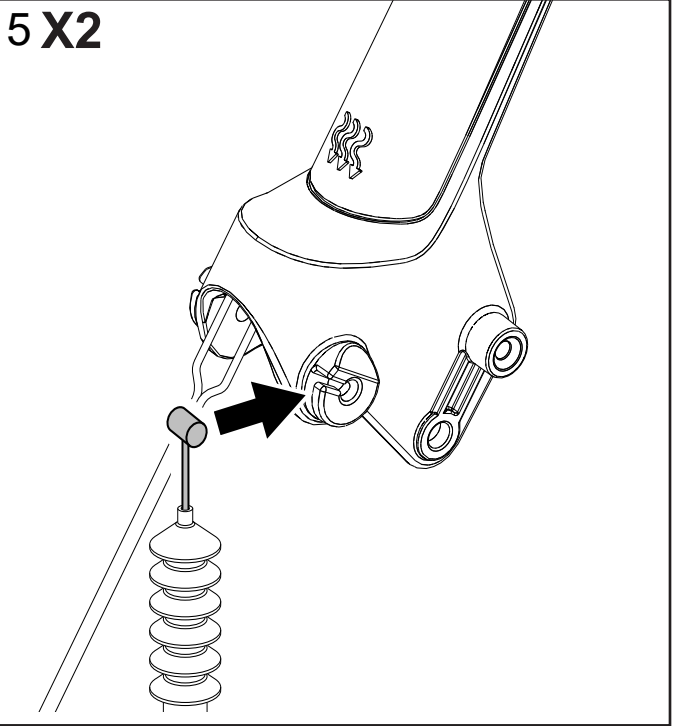 






3 X2

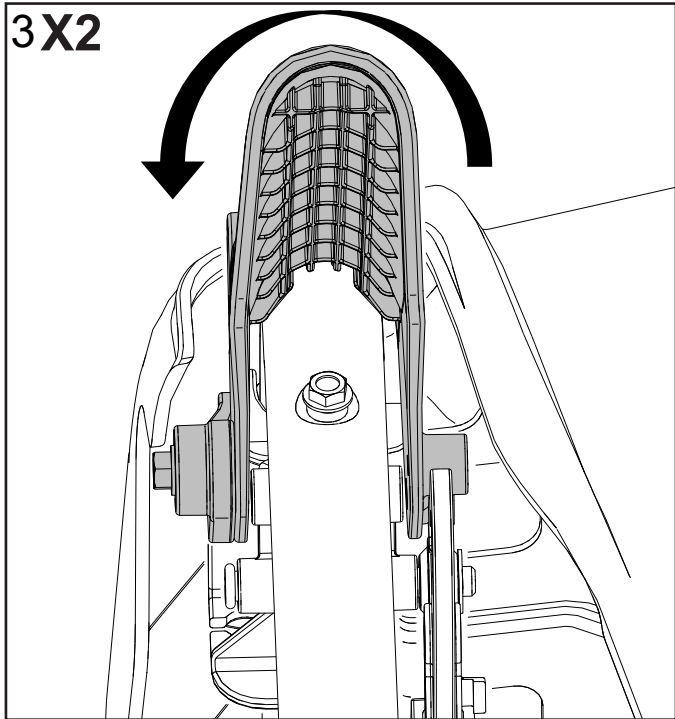 

Install Heated Levers: 300 Series


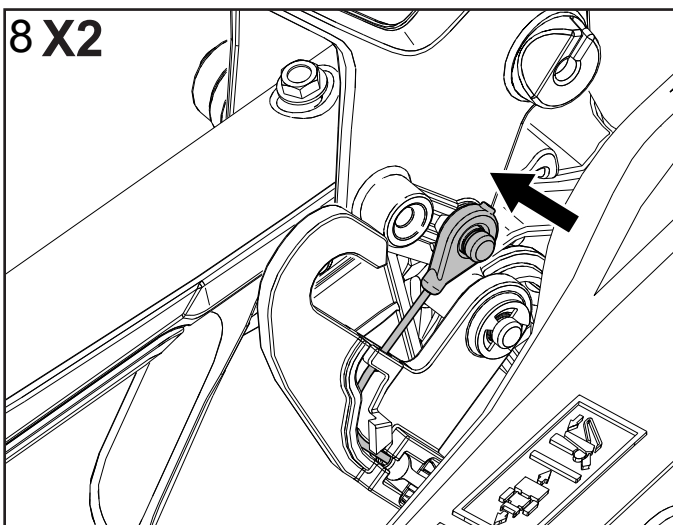 
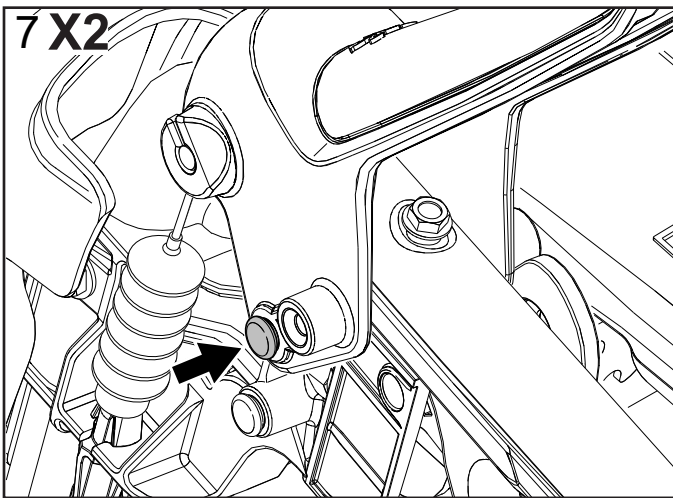 
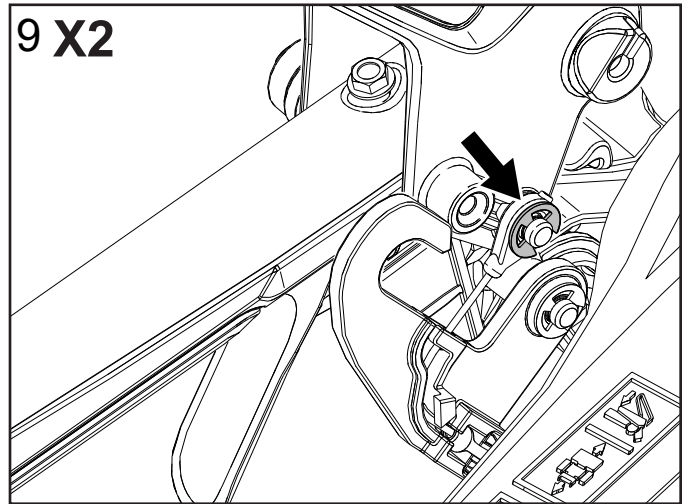 
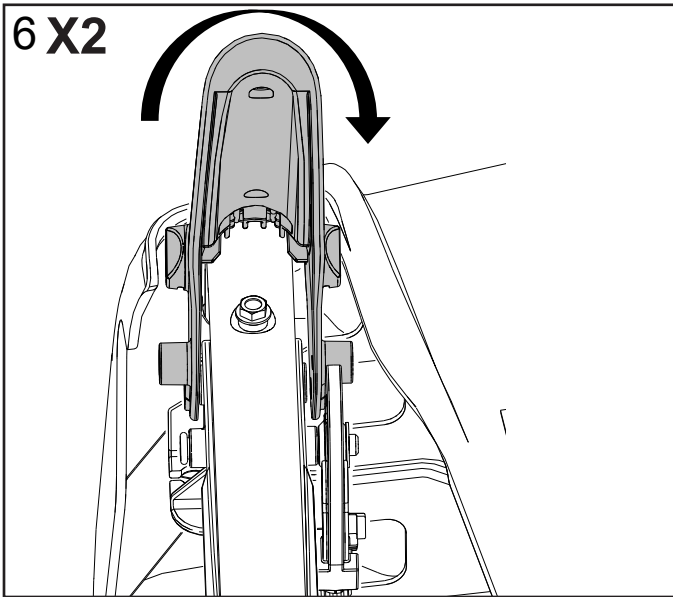 


Install Main Wiring Harness: 200 Series

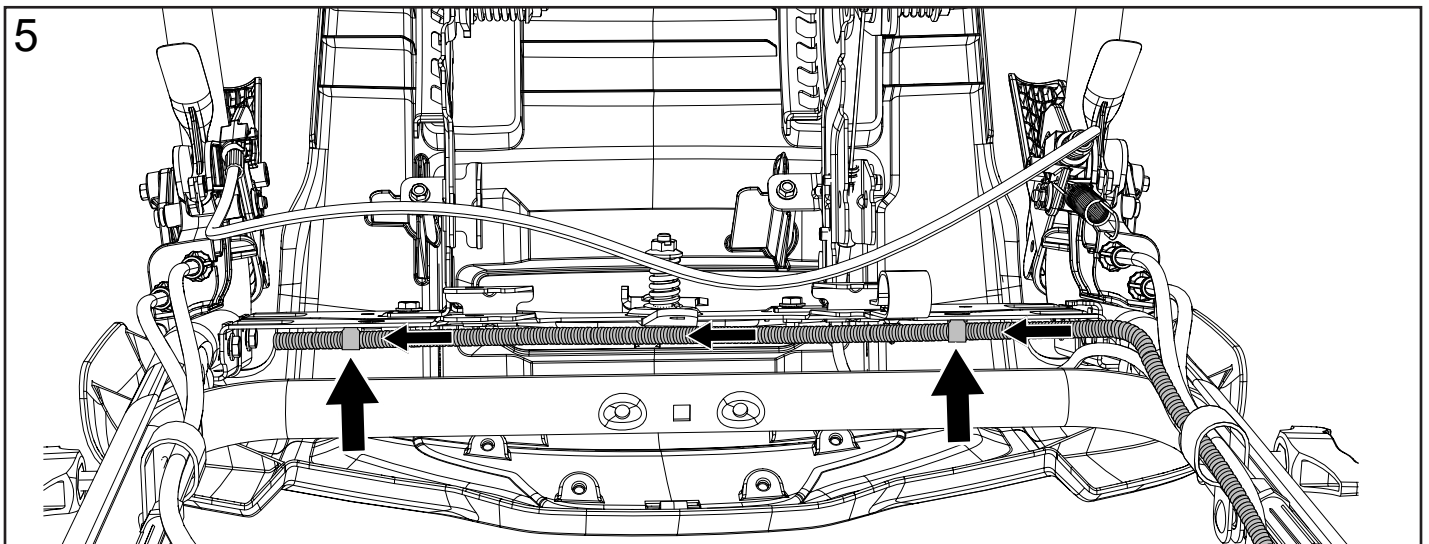 
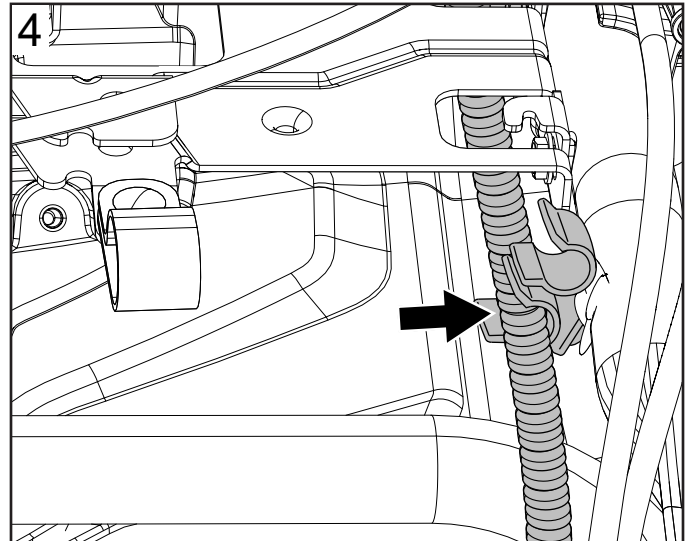 
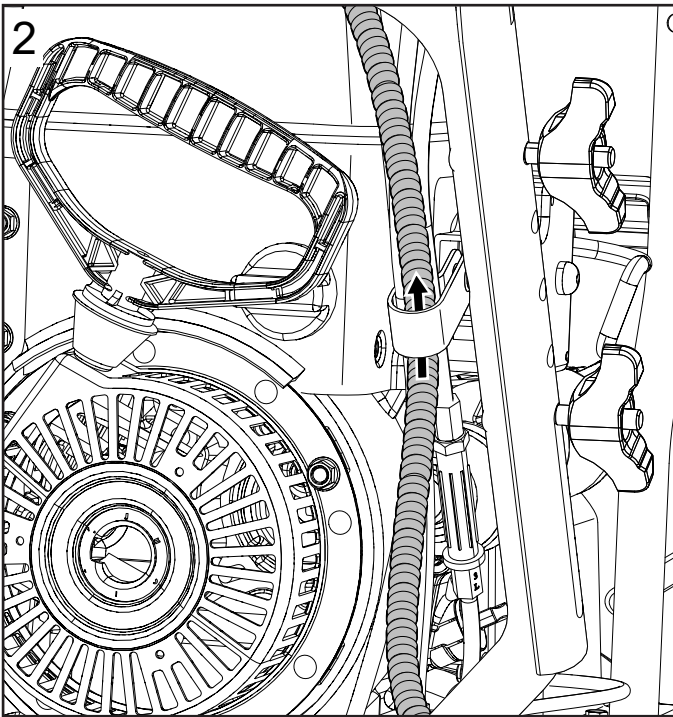 
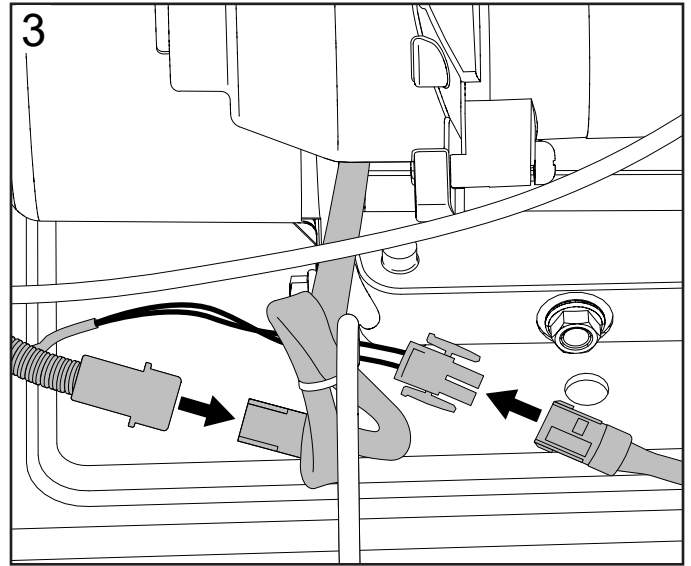 
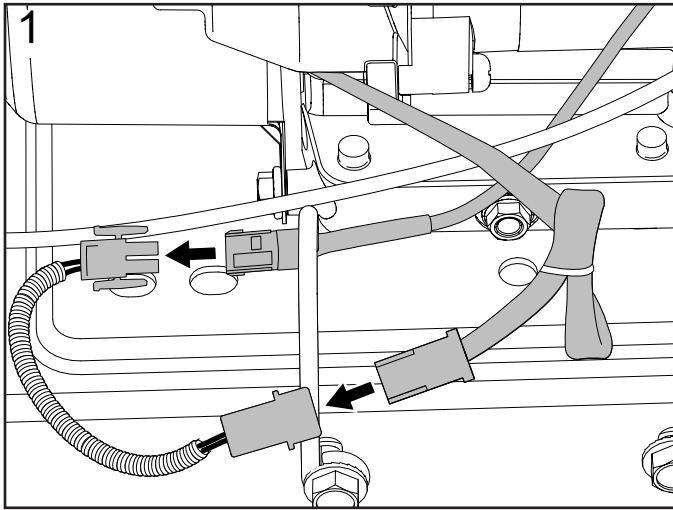 


Install Wire Splitter: 200, 200P, & 300 Series

  
 
 
 
200P & 300 Series ONLY

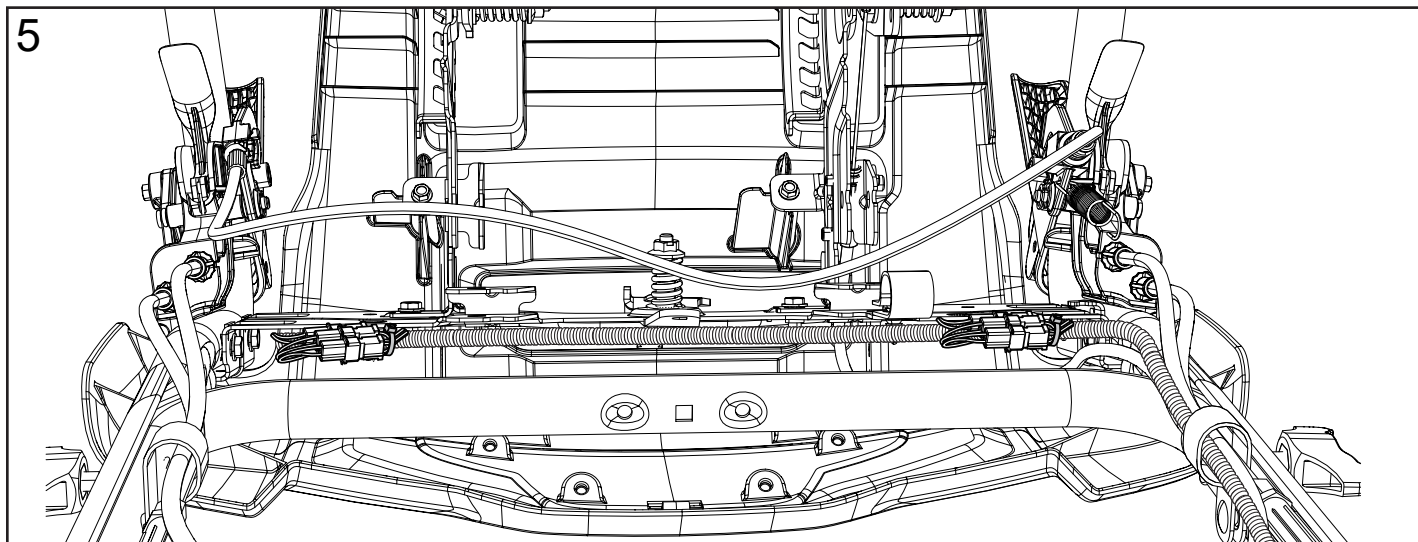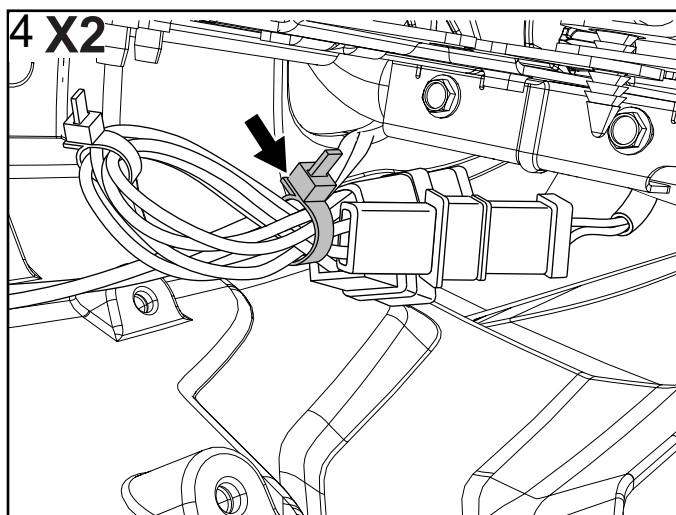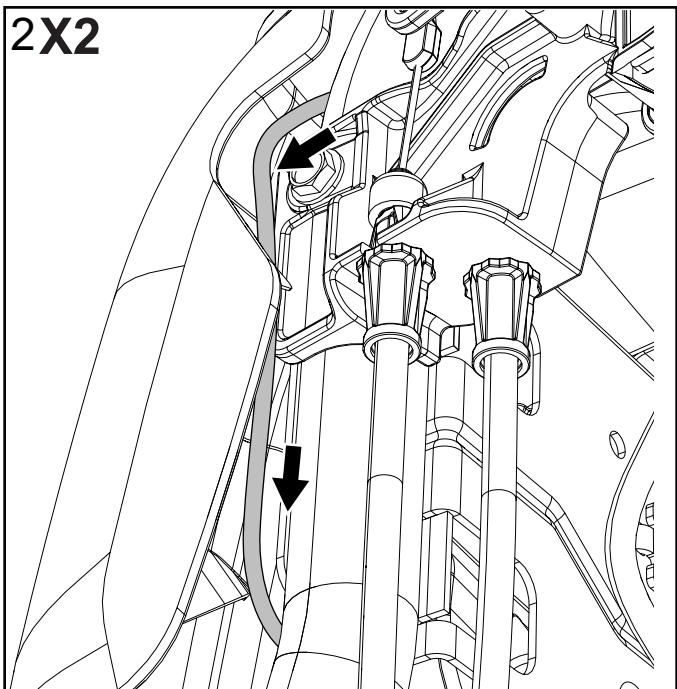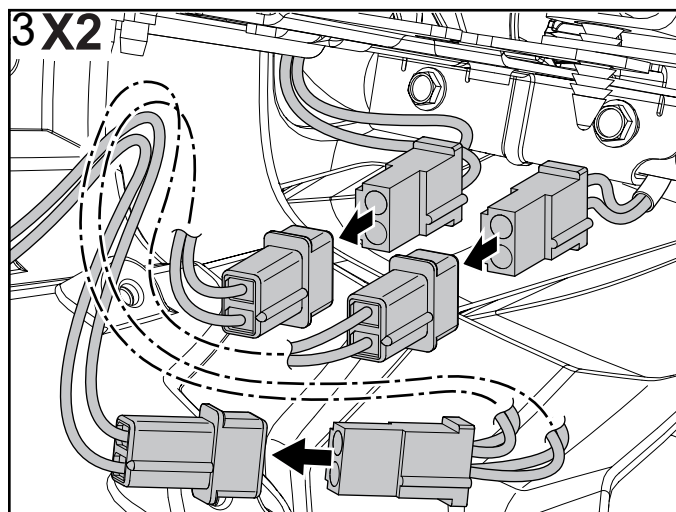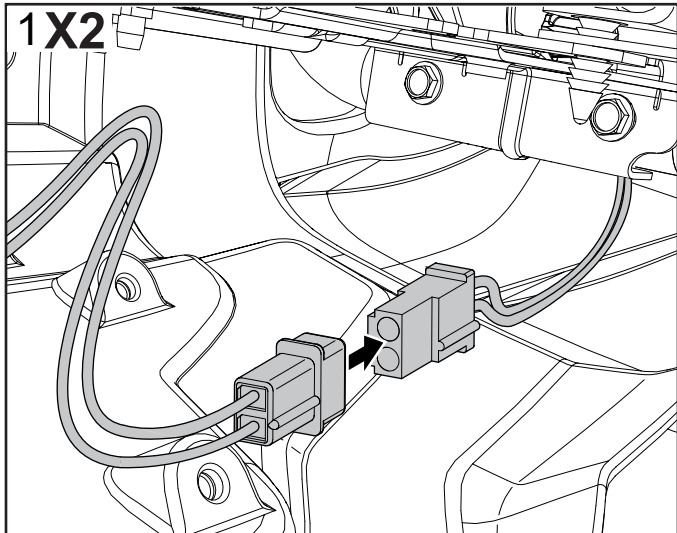

 
 
 
 
 
Install Heated Levers: 400 & 400T Series

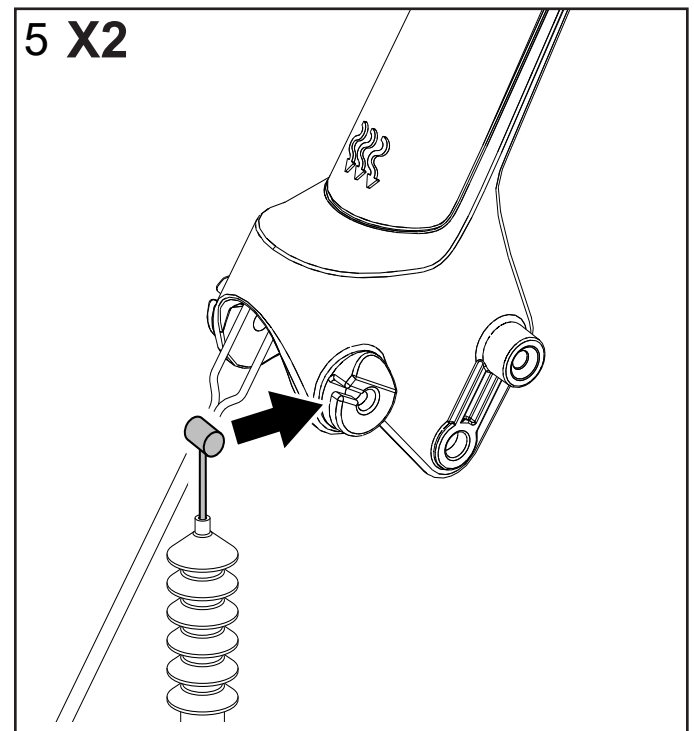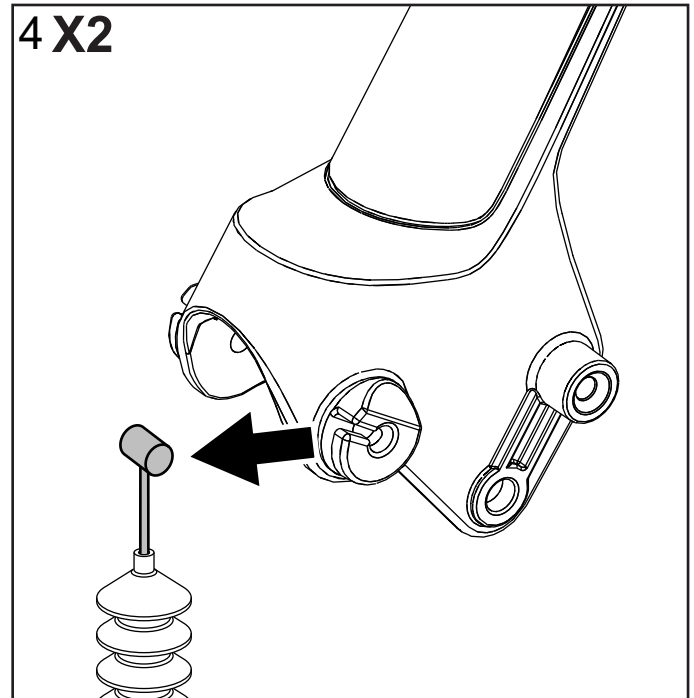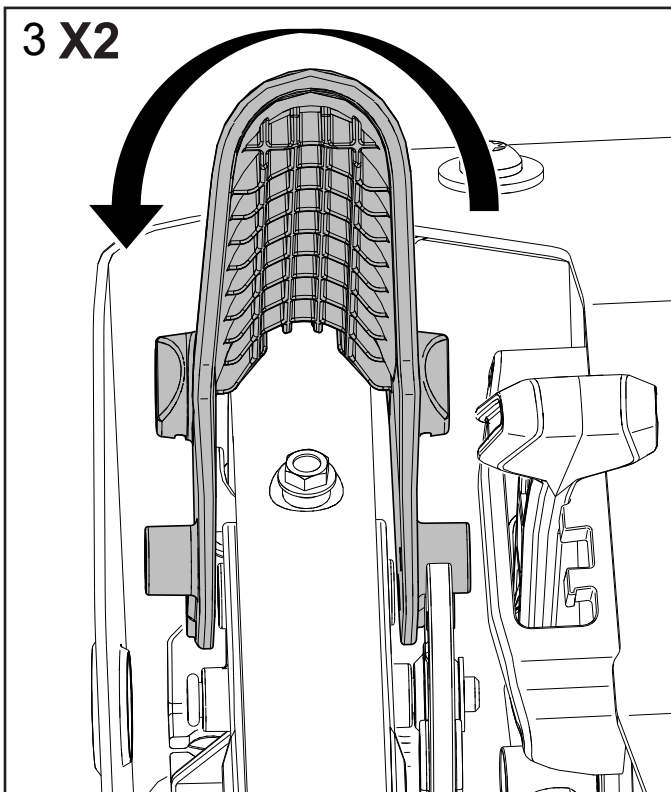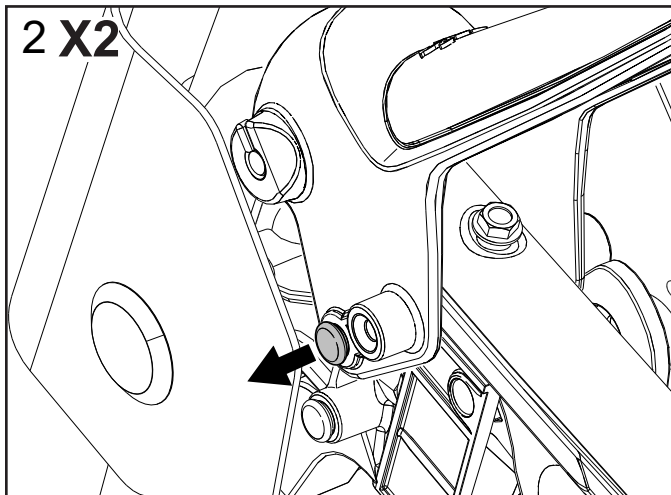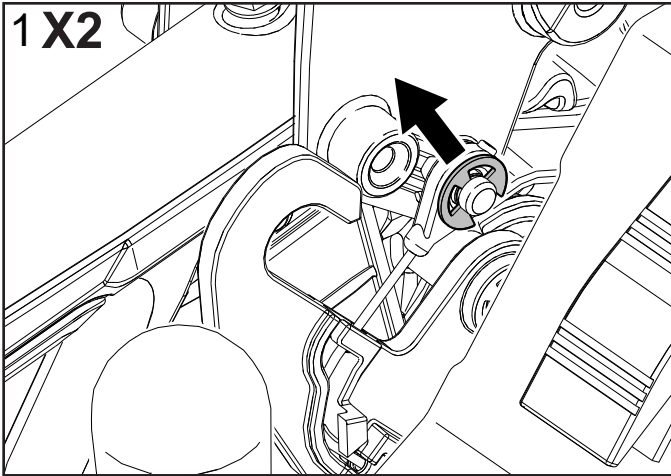

    Install Heated Levers: 400 & 400T Series

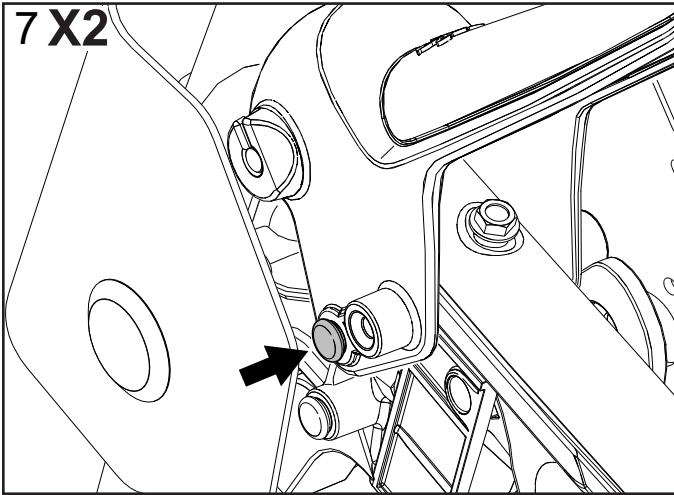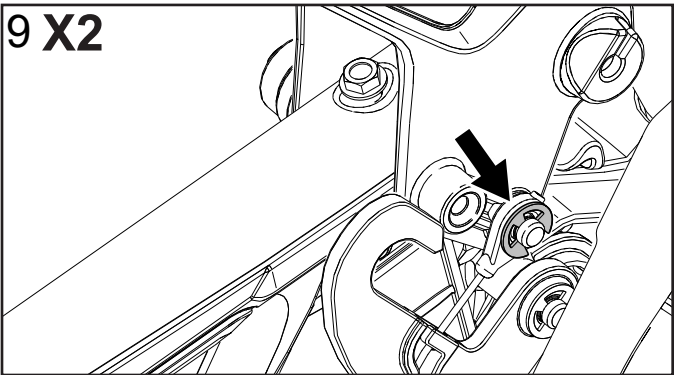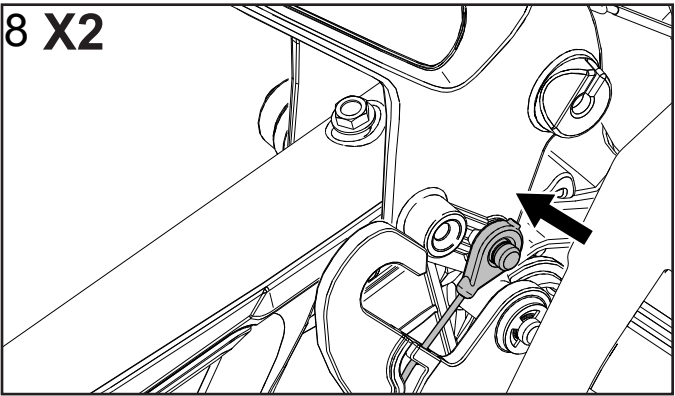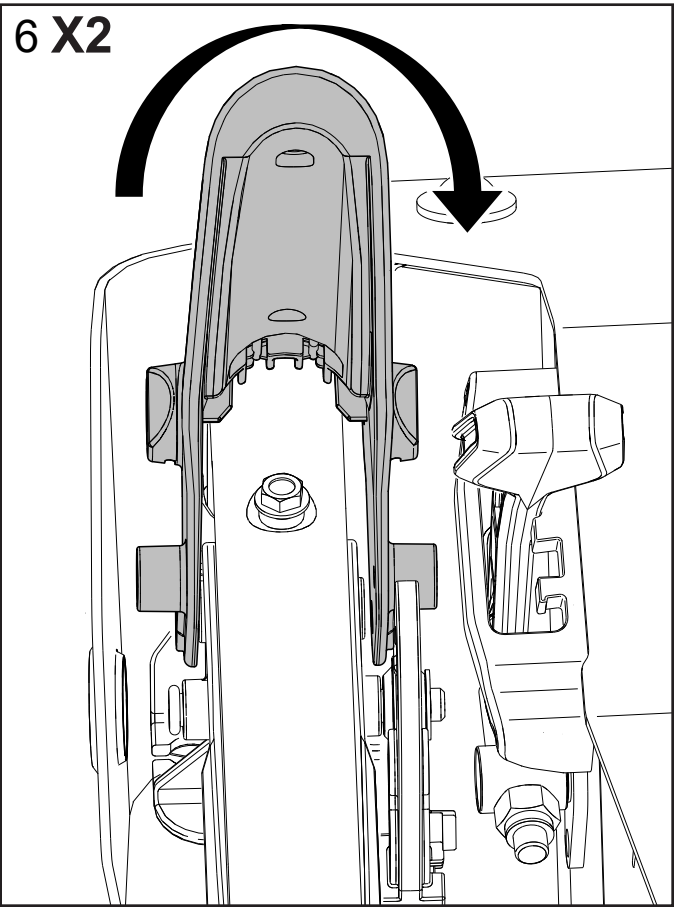

Wire Routing: 400 & 400T Series

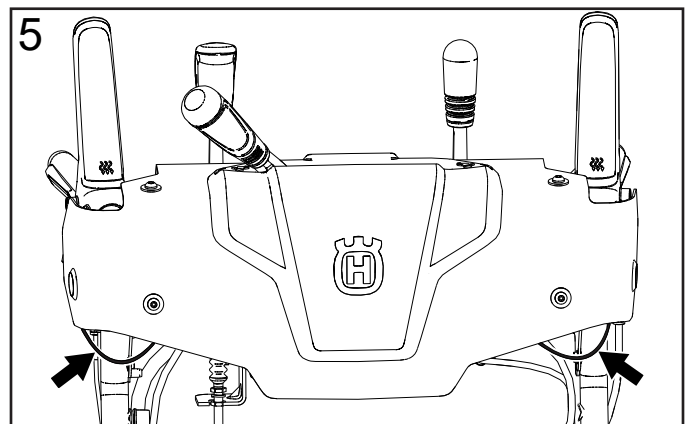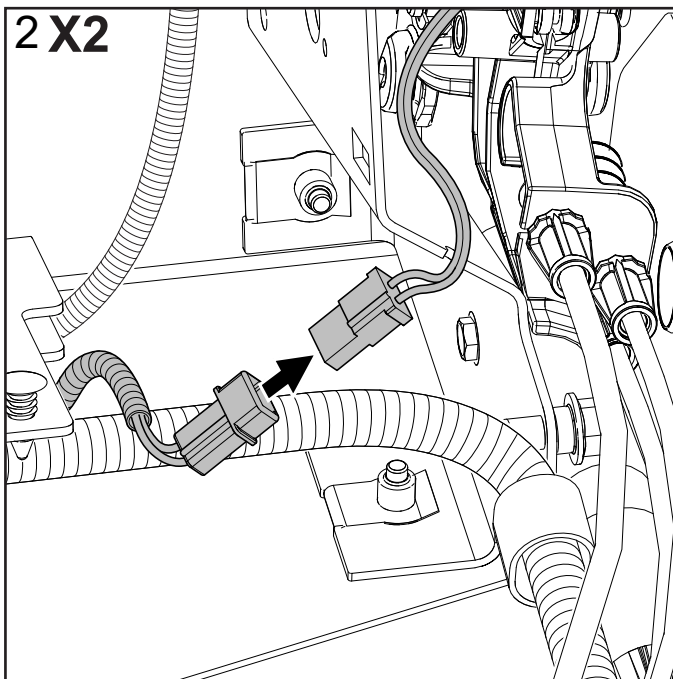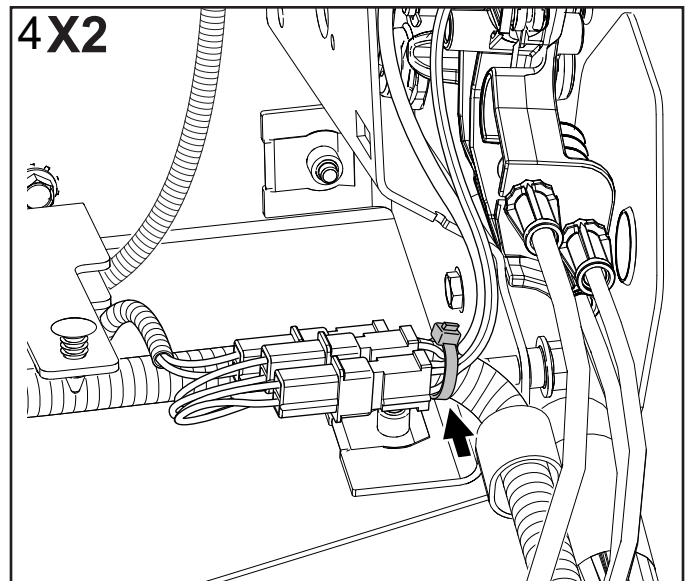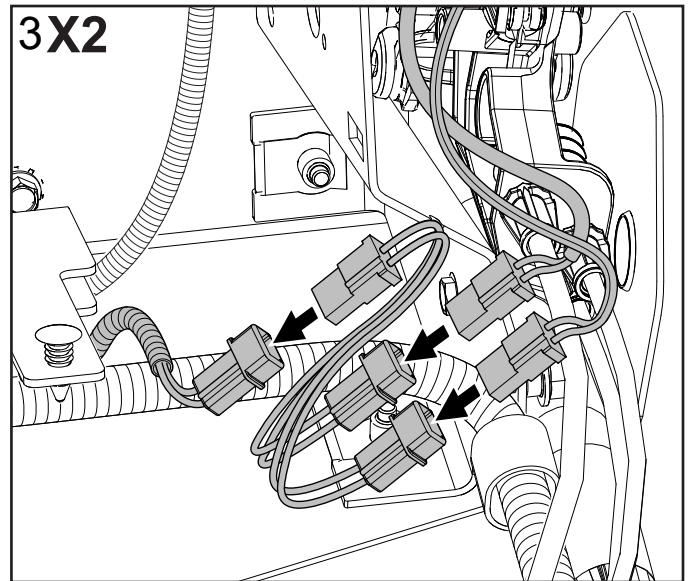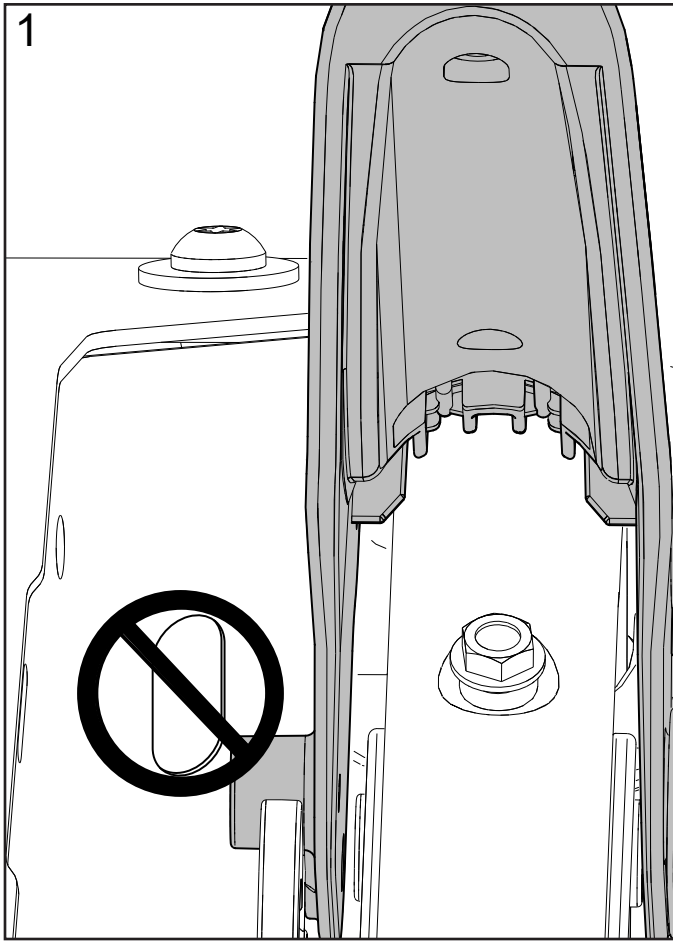     



www.husqvarna.com