

Sand Spreader

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

596 29 30-01


Pos	Part number	Part name	Qty	Pos	Part number	Part name	Qty
1	531 02 12-74	Weldment	1	43	535 41 50-07	Drive Shaft	1
2	531 02 12-75	Frame	1	44	535 41 50-08	Switch	1
3	531 02 12-83	Grip	1	45	501 56 09-01	Screw	1
4	531 02 12-84	Guard	1	46	535 41 50-10	Band	15
5	531 02 12-85	Self-Fastening	4	47	531 02 11-32	Nut	1
6	529 50 41-01	Support Wheel	2	49	531 00 53-16	Nut, Lock	1
7	531 02 12-87	Shaft	1	51	535 41 50-11	Washer	2
8	531 02 12-88	Rubber	1	52	531 02 12-81	Cable Harness	1
9	531 02 12-76	Plate	1	53	531 02 12-82	Screw, slot-headed	2
10	531 02 12-89	Spring Blade	1	54	535 41 50-12	Nut	2
11	531 02 12-90	Tube	1	55	535 41 50-13	Decal, Sand	1
12	531 02 12-91	Plate	1	56	535 41 50-14	Decal, Sand Spreader	1
13	531 02 12-92	Rubber	1	57	535 41 50-15	Mounting plate	1
14	531 02 12-93	Socket	1	58	577 46 90-01	Decal, Husqvarna	1
15	531 02 12-77	Chain Guard	1	59	525 73 12-01	Cable Connector	1
16	531 02 12-78	Drive Chain	1	60	529 50 12-01	Collar 25/12,5-42	2
17	531 02 12-94	Chain Wheel	1				
18	531 02 12-95	Screw	2				
19	531 00 51-08	Bearing, Flange	2				
20	501 48 72-01	Control Rod	1				
21	531 02 12-97	Pop Rivet	10				
22	531 02 11-98	Nut, Lock	17				
23	531 02 11-29	Nut	2				
24	588 16 41-01	Grip	1				
25	593 01 47-01	Pin, Trailer, Assy	1				
26	531 02 12-19	Nut, Lock	6				
27	531 02 11-46	Screw	4				
28	531 02 12-99	Screw	14				
29	531 00 52-28	Screw	2				
30	535 41 50-01	Screw	2				
31	531 02 11-42	Nut	2				
32	535 41 50-02	Screw, Lock	4				
33	535 41 50-03	Pin, Spring	1				
35	531 02 11-84	Washer	12				
36	531 02 11-96	Screw	3				
37	535 41 50-04	Reflector	2				
38	531 02 12-79	Electric Motor	1				
39	535 41 50-05	Part,Shaft Coupling	1				
40	531 02 12-80	Housing, Drive Shaft	1				
41	535 41 50-06	Part,Shaft Coupling	1				
42	531 02 11-88	Bearing	2				

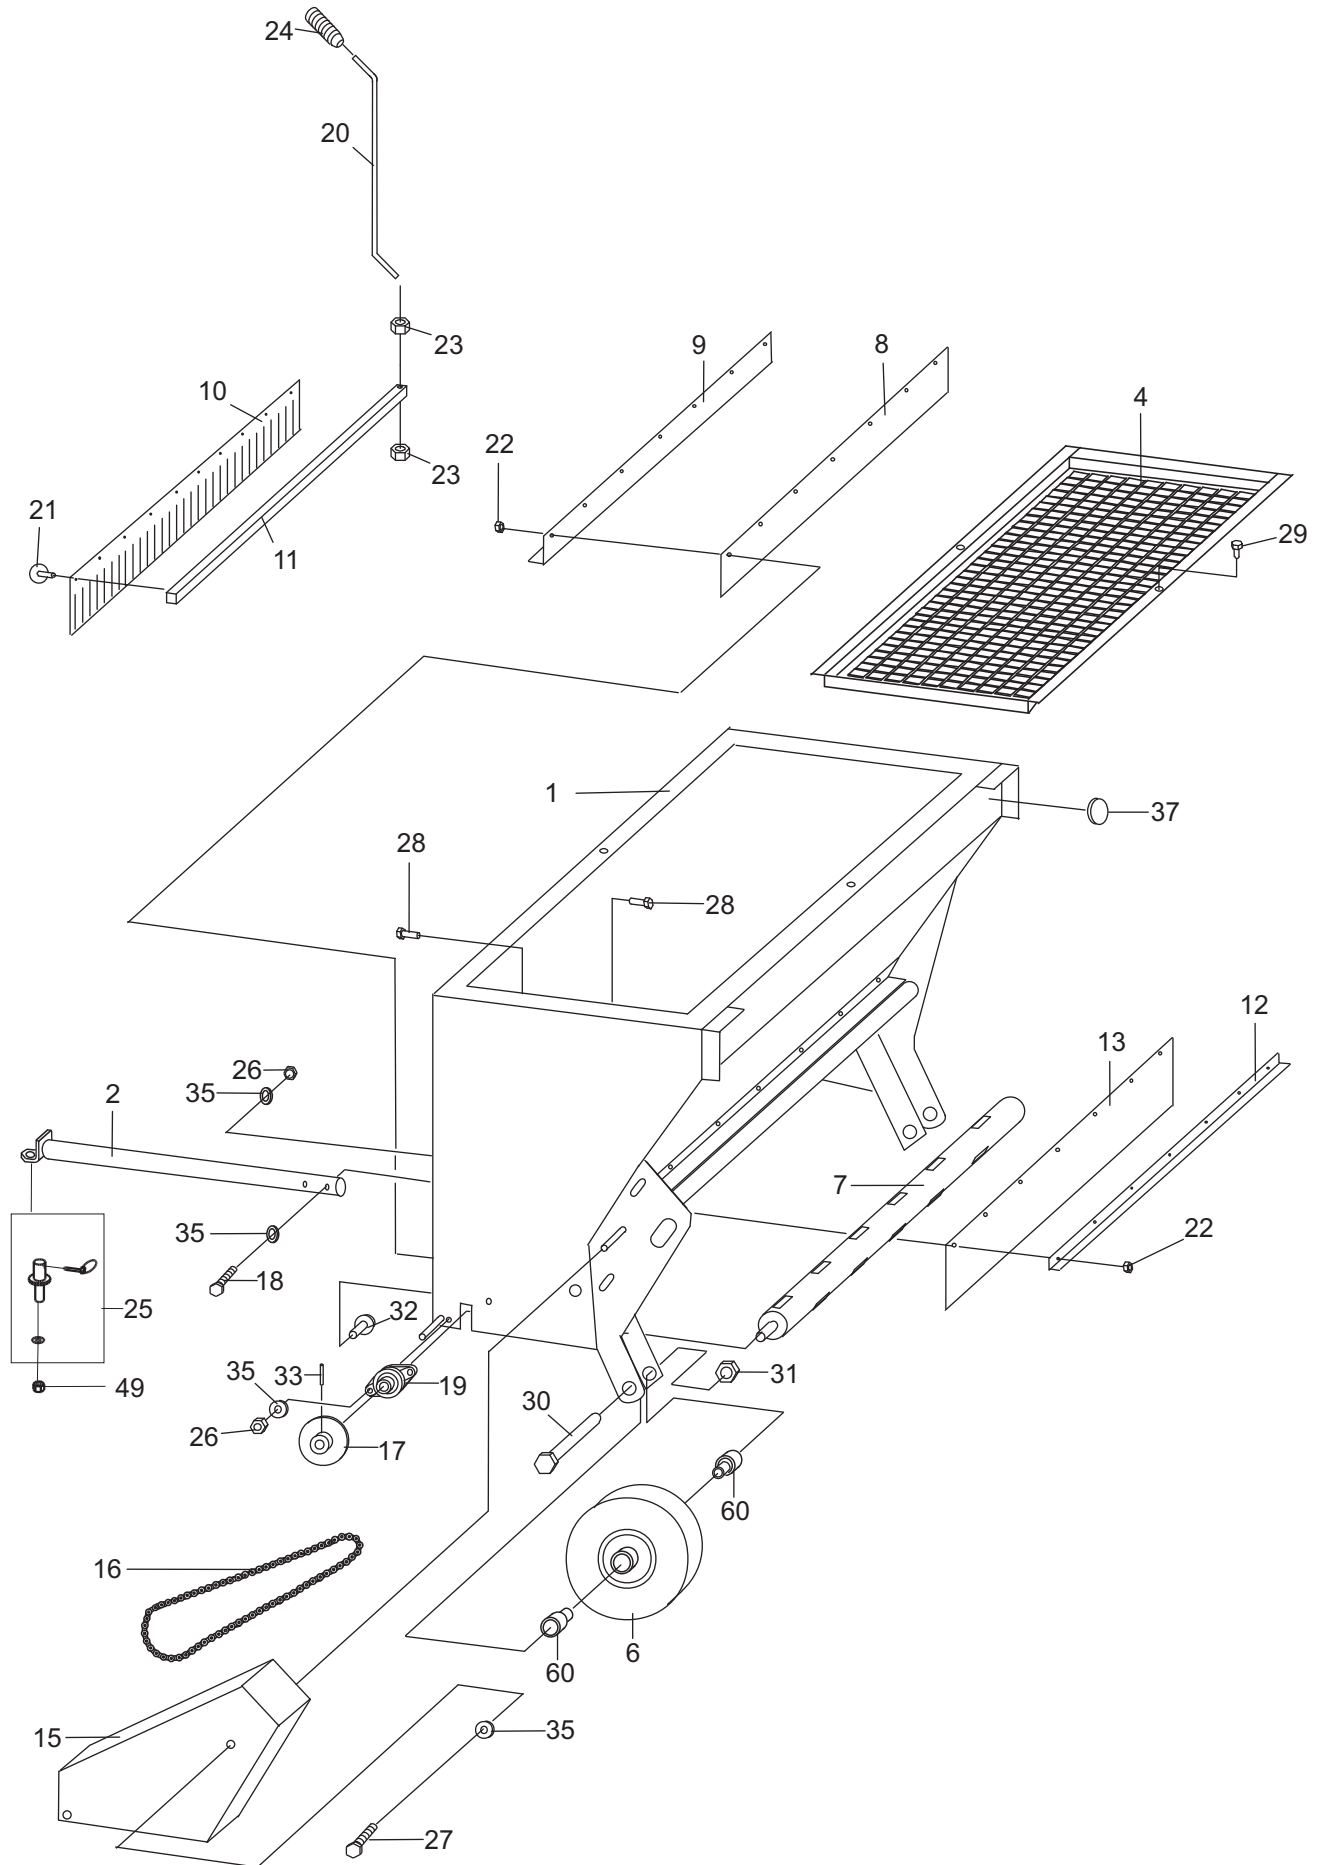

596 29 30-01

T-80654

17.08.2020

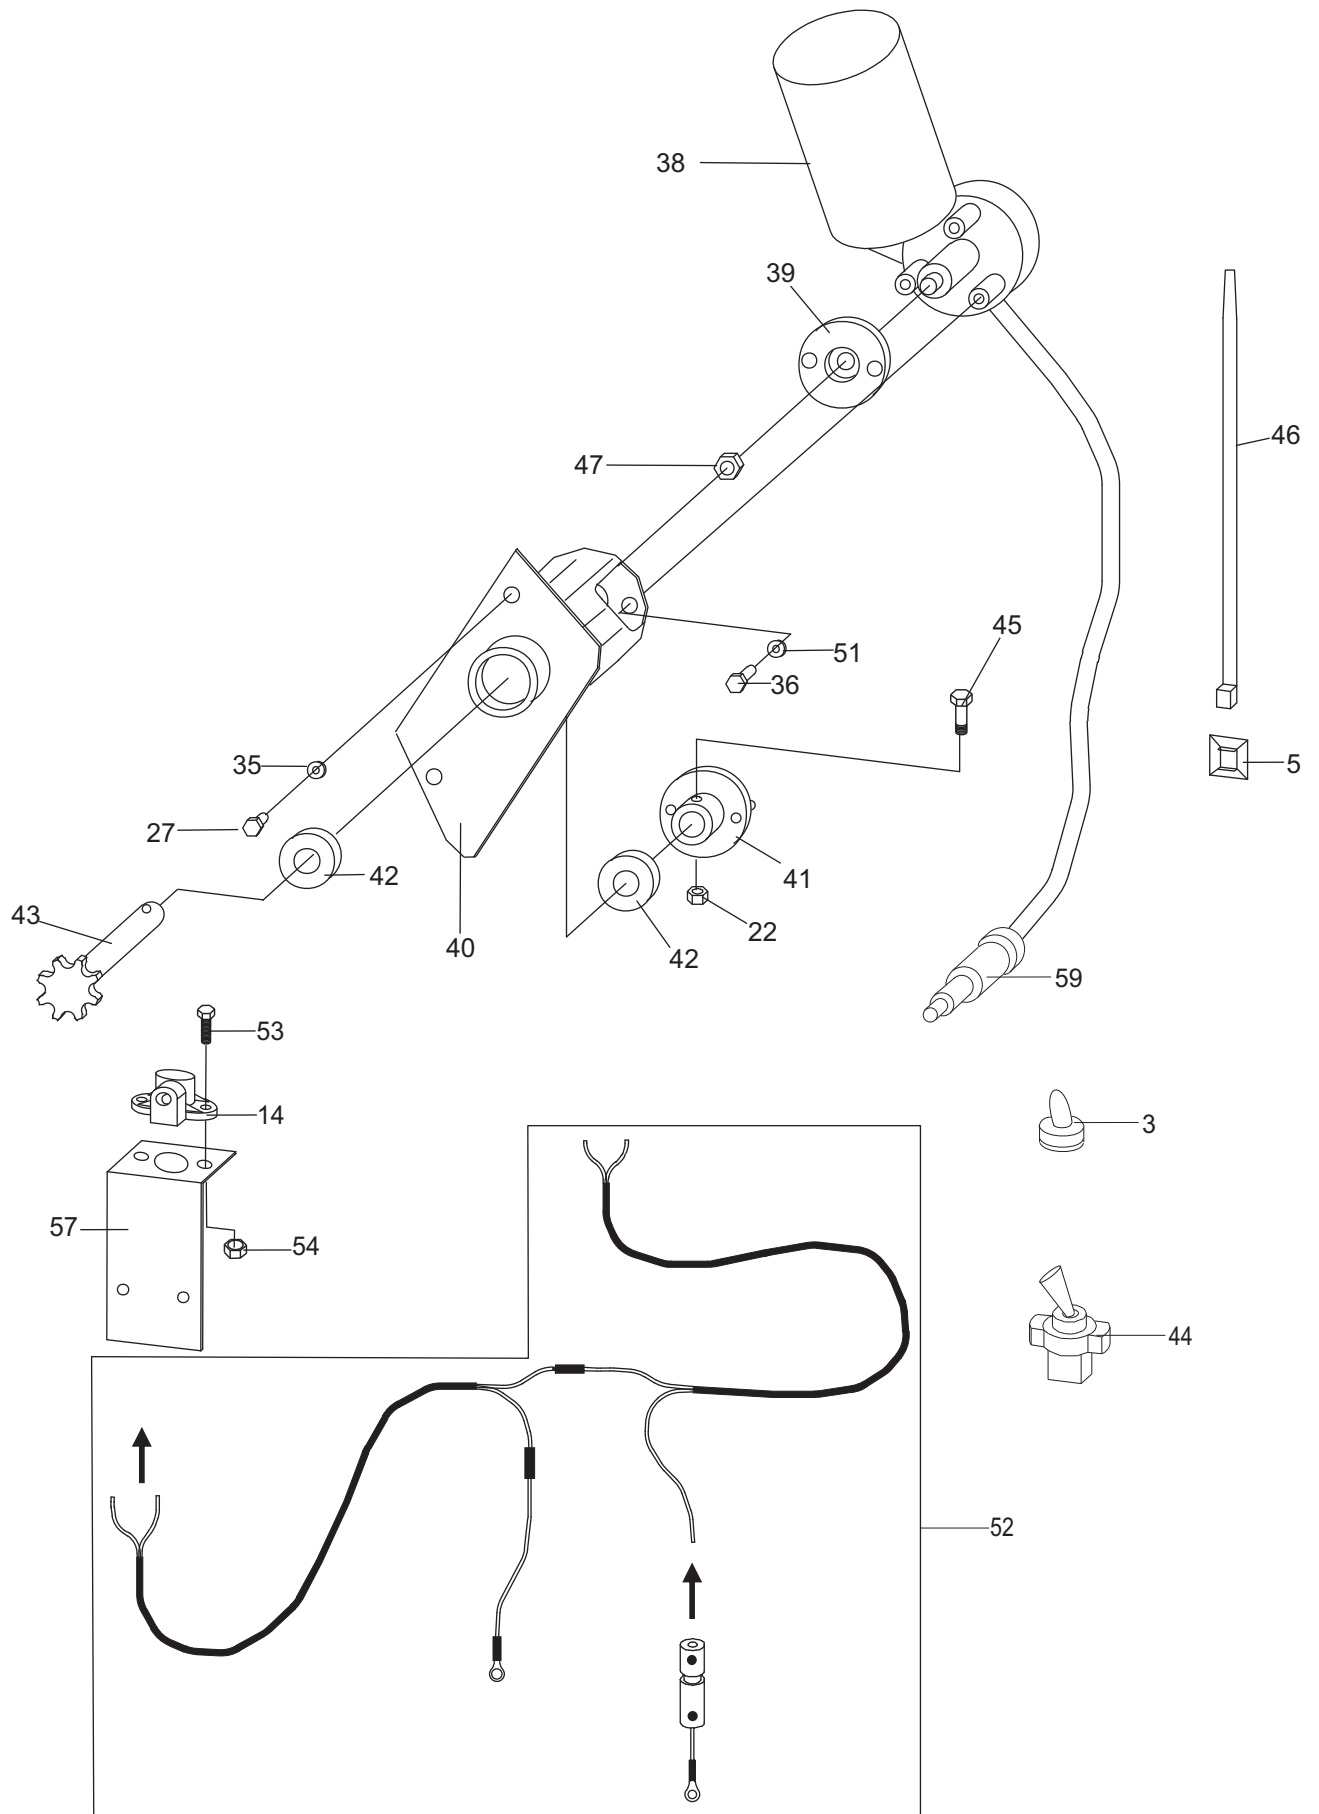

596 29 30-01

T-80654

17.08.2020