



Husqvarna
Group

Illustrated Parts List - IPL Update

Product Name(s)

562XP/XPG

Description of change

1. Implementation of Torx key on all screws. We change all screws with Allen key to Torx key. This change is made to ensure the correct torque of screws in production.

Comments

This update is fully exchangeable. Some kits in our spare part Warehouses will be depleted with the old screws. The screws for the starter pawl on the flywheel are excluded.

Introduced from

Serial number / Date	Remark
s/n 20174300385	Valid for new Torx screws.

IPL updates

Page Title	Ref. no	New part no	Name	Excl. part no.	Remark
Accessories	17	575 88 07-01	Spanner T27/T20		New
Carburettor & Air filter	8	574 35 35-03	Screw ITXSCM	503 20 25-50	
	11	526 81 81-01	Screw ITXSCM	510 02 06-01	
Chain brake	2	526 83 45-01	Screw CH DS	537 20 90-01	
	7	526 22 18-01	Screw CITXPANT	503 21 70-10	
	23	575 79 35-01	Screw ITXPANM	503 21 26-16	
Clutch & Oil pump	14	526 81 81-02	Screw ITXSCM	510 02 06-02	
	Crankcase	2	525 75 52-02	Screw ITXSFCM	503 20 02-13
7		575 79 35-01	Screw ITXPANM	503 21 26-16	
	16	525 82 44-01	Screw ITXSCM	505 11 15-01	
	17	575 84 11-04	Screw ITXSCM	503 20 08-03	
	21	525 79 81-03	Screw ITXSFCFT	503 21 88-76	
	25	526 81 81-01	Screw ITXSCM	510 02 06-01	
Cylinder piston	2	582 39 27-01	Screw	725 53 39-55	

Page Title	Ref. no	New part no	Name	Excl. part no.	Remark
Fuel tank	1	525 88 74-02	Screw CITXPANT	503 21 28-10	
	11	525 79 81-02	Screw ITXSCFT	503 21 88-74	
	15	586 31 21-03	Antivib. element	586 31 21-01	
	16	505 12 87-02	Antivib. element	505 12 87-01	
	22	525 79 81-03	Screw ITXSCFT	503 21 88-76	
Handle	1	575 38 89-03	Front handle	575 38 89-01	
	2	525 79 81-03	Screw ITXSCFT	503 21 88-76	
	3	525 79 81-01	Screw ITXSCFT	503 21 88-72	
	4	505 12 97-05	Antivib. element	505 12 97-02	
Handle heated	5	526 81 81-02	Screw ITXSCM	510 02 06-02	
	7	575 38 89-04	Front handle	575 38 89-02	562XPG
	8	525 79 81-03	Screw ITXSCFT	503 21 88-76	
	12	525 88 74-01	Screw CITXPANT	503 21 28-13	
	13	504 87 24-04	Flywheel assy	504 87 24-02	562XPG
	18	506 00 69-01	Screw PAWL	501 81 99-01	See comment.
	19	505 12 97-05	Antivib. element	505 12 97-02	
	20	525 79 81-01	Screw ITXSCFT	503 21 88-72	
Handle wrap	1	576 94 51-04	Handle kit, wrap	576 94 51-01	
	2	525 79 81-03	Screw ITXSCFT	503 21 88-76	
	3	525 79 81-01	Screw ITXSCFT	503 21 88-72	
	4	505 12 97-05	Antivib. element	505 12 97-02	
	5	505 15 69-03	Front handle assy	505 15 69-01	
	6	576 87 30-04	Spike assy kit	576 87 30-02	
	7	575 79 35-01	Screw ITXPAMN	503 21 26-16	
	11	525 75 51-03	Screw ITXSCFM	503 20 07-80	
	15	588 96 64-01	Handle kit wrap		New

Page Title	Ref. no	New part no	Name	Excl. part no.	Remark
Handle wrap heat	1	576 94 51-05	Handle kit, wrap	576 94 51-02	562XPG
	2	525 79 81-03	Screw ITXSCFT	503 21 88-76	
	5	525 88 74-01	Screw CITXPANT	503 21 28-13	
	7	525 79 81-01	Screw ITXSCFT	503 21 88-72	
	7	525 79 81-01	Screw ITXSCFT	503 21 88-72	
	8	505 12 97-05	Antivib. element	505 12 97-02	
	9	505 15 69-04	Front handle assy	505 15 69-02	562XPG
	12	576 87 30-04	Spike assy kit	576 87 30-02	
	13	575 79 35-01	Screw ITXPAMN	503 21 26-16	
	17	525 75 51-03	Screw ITXSCFM	503 20 07-80	
Ignition system	3	525 75 52-03	Screw ITXSCFM	503 20 02-20	
	7	504 87 24-03	Flywheel assy	504 87 24-01	
	7	504 87 24-04	Flywheel assy	504 87 24-02	
	11	506 00 69-01	Screw PAWL	501 81 99-01	See comment.
Muffler	1	581 91 48-02	Muffler kit	581 91 48-01	
	4	525 82 51-06	Screw ITXSCM	725 53 80-55	
	9	525 76 25-01	Screw ITXSCM	503 20 73-20	
Starter	5	576 35 66-01	Screw ITXSCT	503 20 52-16	
	8	525 88 74-01	Screw CITXPANT	503 21 28-13	
	10	525 82 45-01	Screw CITXPANMO	544 08 03-01	