

# Jet 50



**1.1997**

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**

**Repuestos**

**Reservdelar**

Replaces


Ersetzt

Remplace

Vervangt

Reemplaza

Ersätter

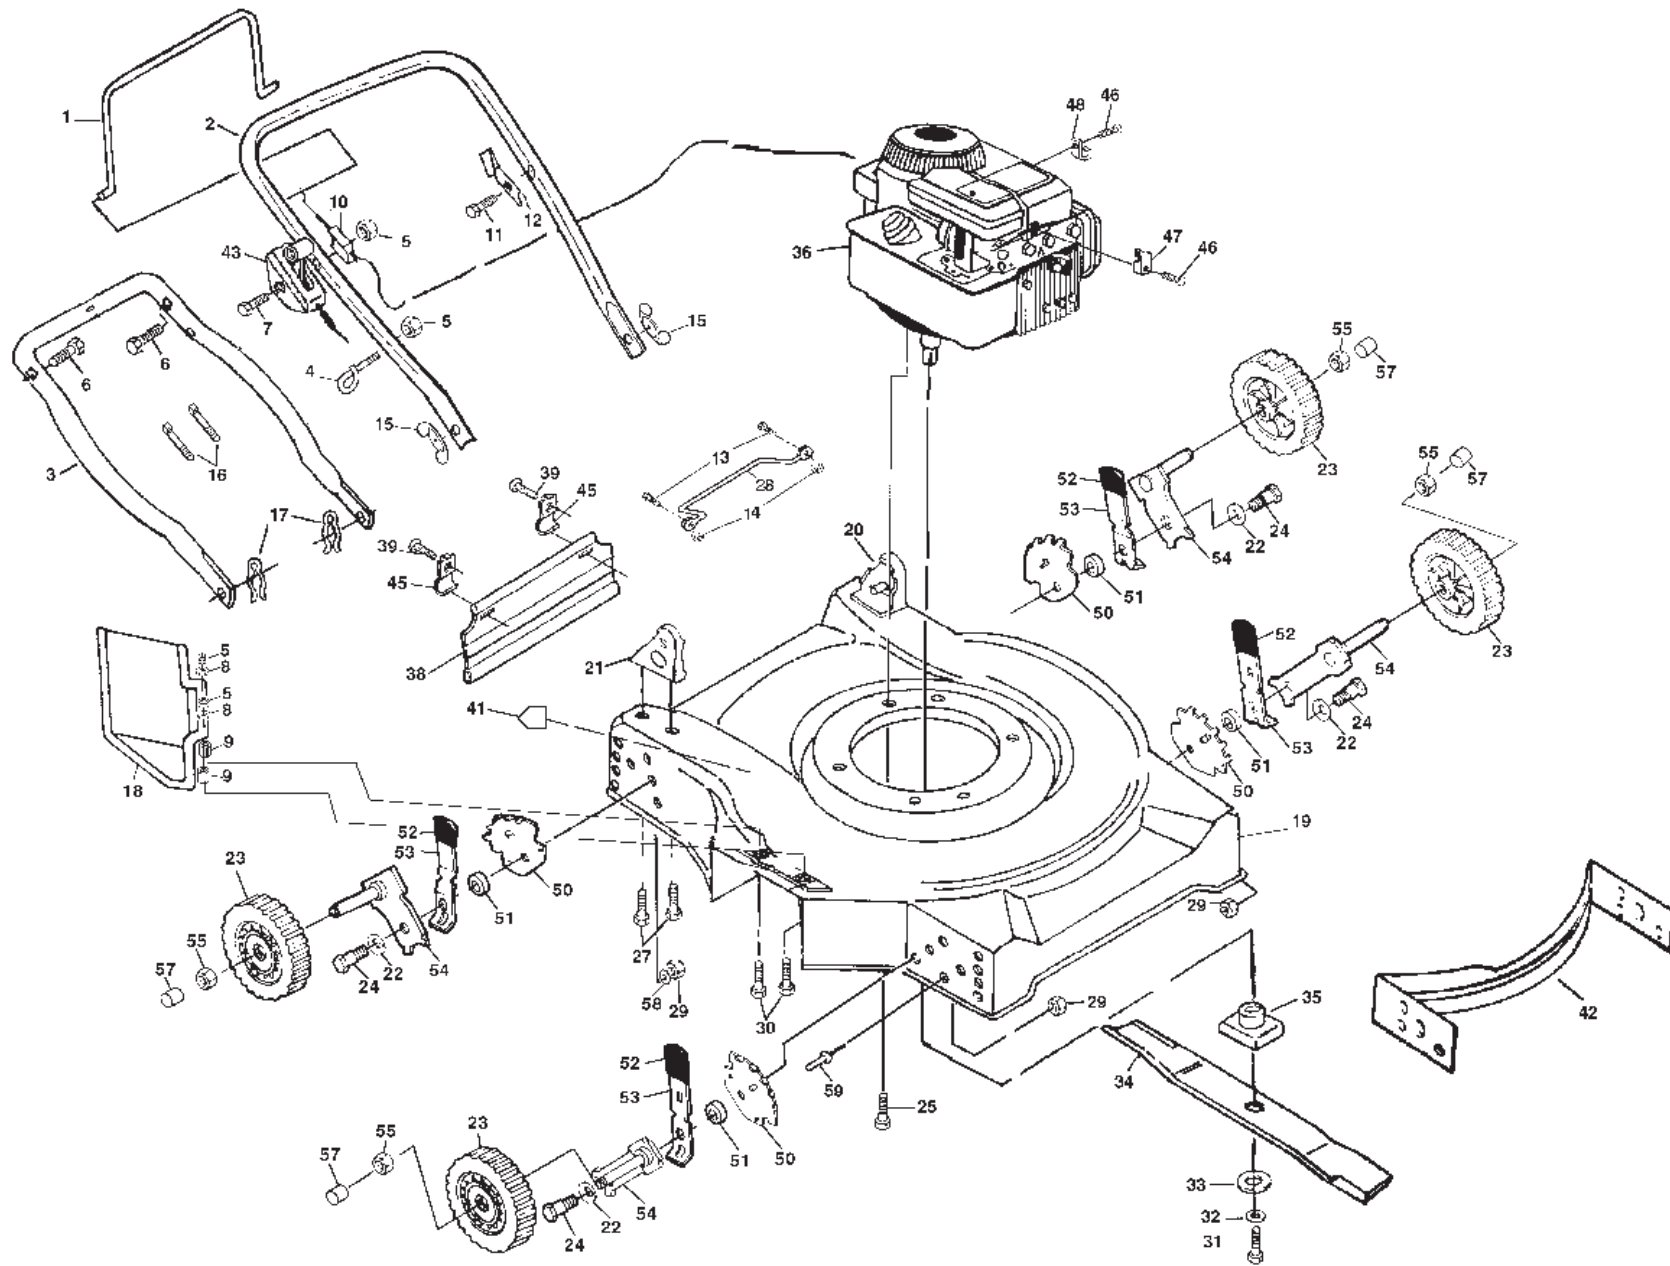

KEY NO.	PART NO.	DESCRIPTION
1	532086902	Control Bar
2	532125338	Upper Handle
3	532157082	Lower Handle
4	532132001	Rope Guide
5	532063601	Locknut 1/4-20
6	532131959	Handle Bolt 5/16-18 x 1-3/4
7	532144929	Hex Washer Head Screw 1/4-20 x 2.12
8	532053847	Washer
9	532130640	Spacer
10	532130861	Engine Zone Control Cable
11	532750097	Hex Washer Head Screw #10-24 x 1/2
12	532125162	Up-Stop Bracket
13	532085825	Screw
14	532069180	Nut
15	532128638	Steel Wingnut 5/16-18
16	532151517	Cable Clip
17	532051793	Hairpin Cotter
18	532851750	Discharge Guard
19	532152510	Housing Assembly Kit (Includes #42)
20	532153027	Handle Bracket Assembly (Left)
21	532153026	Handle Bracket Assembly (Right)
22	532062335	Belleville Washer
23	532130491	Wheel & Tire Assembly
24	532142748	Shoulder Bolt
25	532150406	Hex Head Thread Rolling Screw 3/8-16 x 1-1/8
26	532059289	Washer
27	532149741	Thread Cutting Screw 5/16-18 x 3/4
28	532154147	Foot Guard

KEY NO.	PART NO.	DESCRIPTION
29	532751592	Locknut 3/8-16
30	874930416	Hex Head Bolt 1/4-20
31	532851084	Hex Head Screw 3/8-24 x 1-3/8 Gr. 8
32	532850263	Helical Lockwasher 3/8
33	532851074	Hardened Washer
34	531006063	20" Blade
35	532850977	Blade Adapter
36	-----	*Engine - Briggs & Stratton Model No. 95902
38	532140543	Rear Skirt
39	532750097	Hex Washer Head Screw #10-24 x .50
41	532145494	Decal, Danger
42	532147354	Front Baffle
43	532851462	Throttle Control
45	532125207	Skirt Brackets
46	532083816	Screw #10
47	532111190	*Clamp
48	532087930	Throttle Clip
50	532139901	Wheel Adjusting Bracket
51	532146630	Spacer
52	532087877	Selector Knob
53	532141730	Selector Spring
54	532149857	Axle Arm Assembly
55	532083923	Locknut
57	532800090	Hubcap
58	532061537	Washer
59	532128415	Pop Rivet

\* These Parts must be purchased through an authorized Briggs & Stratton Dealer.