

Jet 50R



1.1997

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Replaces


Ersetzt

Remplace

Vervangt

Reemplaza

Ersätter

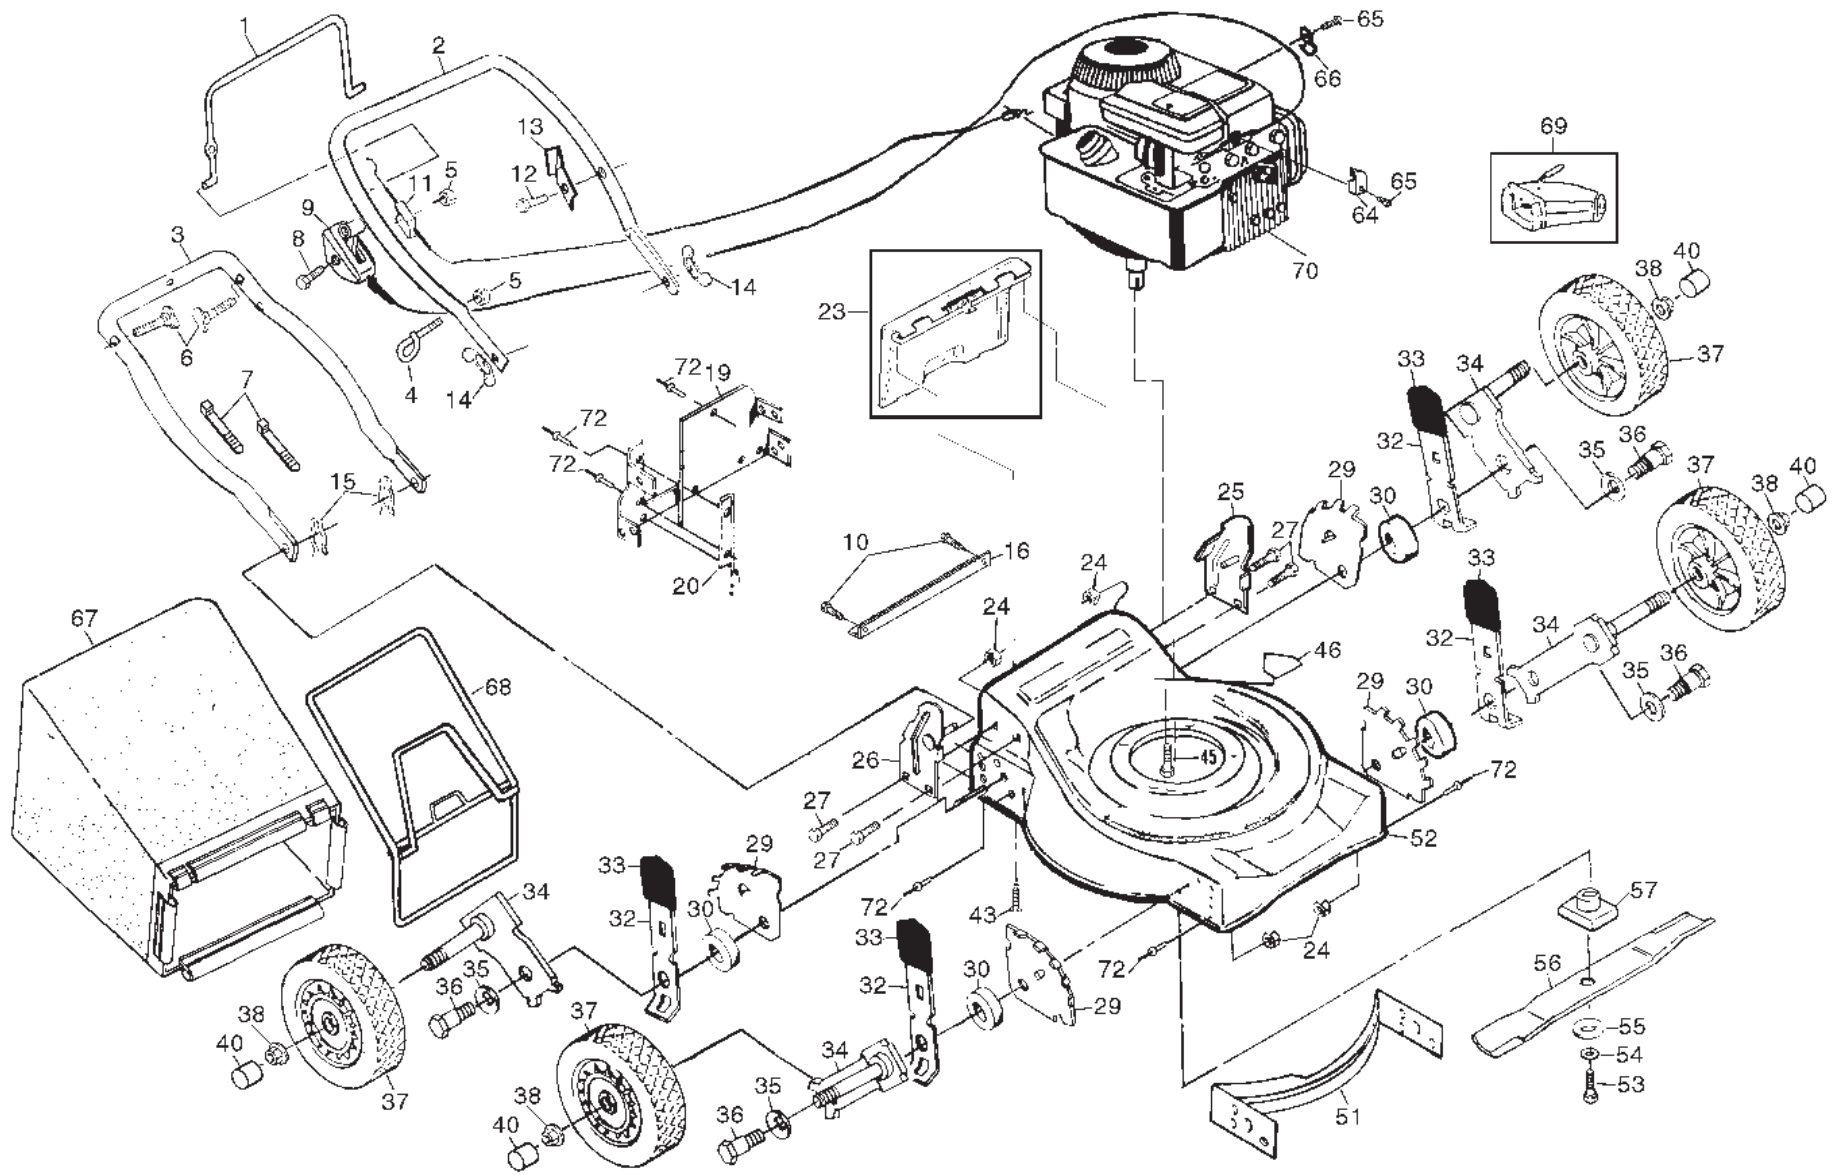

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532086902	Control Bar	37	532130491	Wheel Assembly
2	532155978	Upper Handle	38	532083923	Flanged Locknut
3	532153031	Lower Handle	40	532800090	Hubcap
4	532132001	Rope Guide	43	532054583	Hex Tapping Screw 1/4-20 x 1/2
5	532063601	Locknut 1/4-20	45	532150406	Hex Head Thread Rolling Screw 3/8-16 x 1
6	532131959	Handle Bolt	46	532145494	Danger Decal
7	532066426	Wire Tie	51	532138864	Front Baffle
8	532144929	Hex Washer Head Screw 1/4-20 x 2-1/8	52	532149100	Housing Assembly (Incl. Ref. #46, 51, 19, & 20)
9	532851462	Throttle Control Screw	53	532851084	Hex Head Screw 3/8-24 x 1-3/8 Grd. 8
10	532146694	Screw	54	532850263	Helical Lock Washer
11	532130861	Engine Zone Control Cable	55	532851074	Hardened Washer
12	532750097	Hex Washer Head Screw #10-24 x 1/2	56	531006061	20" Blade
13	532125162	Up-Stop Bracket	57	532850977	Blade Adapter
14	532128638	Wing Nut	64	532213146	*Cable Clamp (Engine)
15	532051793	Hairpin Cotter	65	532083816	Screw #10 x 5/8
16	532147625	Foot Guard	66	532087930	Cable Clip
19	532148784	Back Plate	67	532146896	Grass Bag
20	532138866	Side Baffle	68	532088614	Catcher Frame)
23	532147613	Rear Door Assembly Kit	70	-----	*Engine - Briggs/Stratton Model No. 95902
24	532751592	Locknut 3/8-16	72	532128415	Pop Rivet
25	532153030	Handle Bracket Assembly (Left)			
26	532153029	Handle Bracket Assembly (Right)			
27	532150078	Screw 5/16-18 x 3/4			
29	532139901	Wheel Adjusting Bracket			
30	532146630	Spacer			
32	532141730	Selector Spring			
33	532087877	Selector Knob			
34	532149857	Axle Arm Assembly			
35	532062335	Belleville Washer			
36	532142748	Shoulder Bolt 3/8-16			

*These parts must be purchased through an authorized Briggs and Stratton dealer.