


# LTH 130

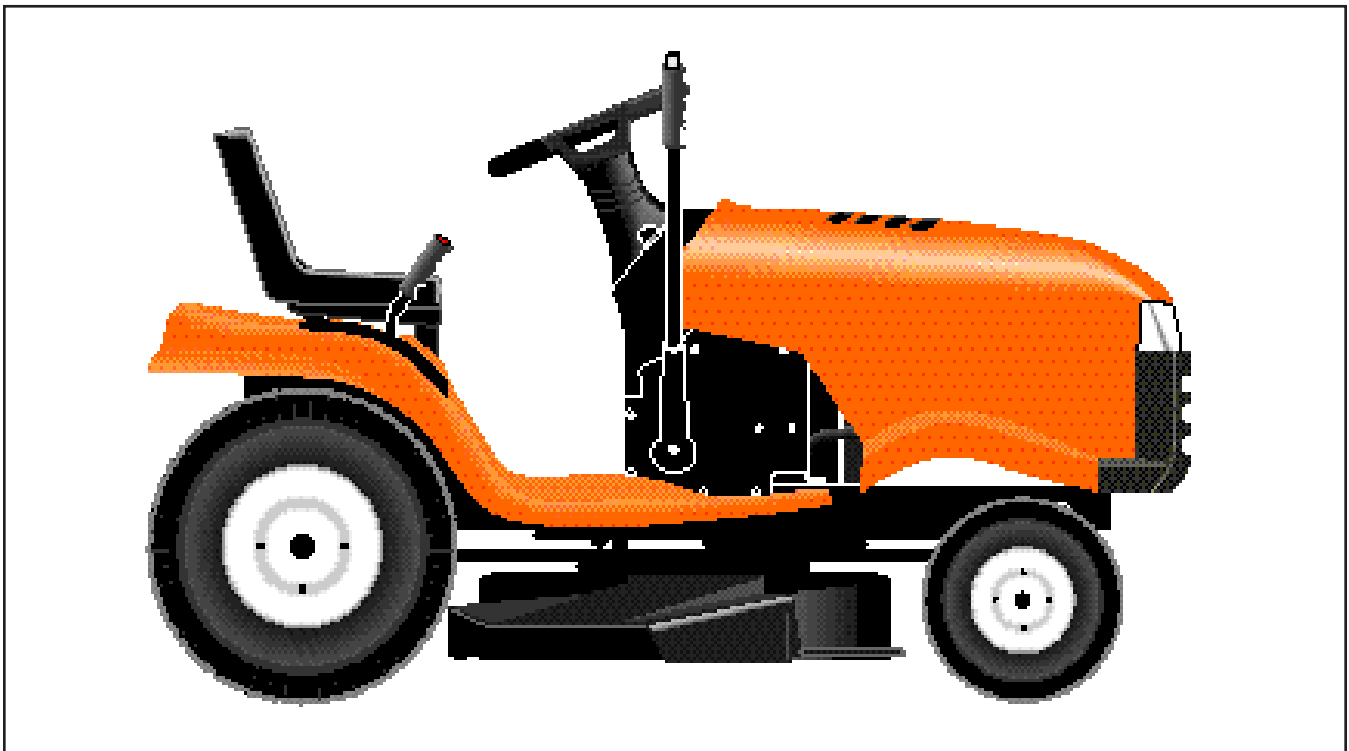



**Ride Mower**

**954140107A**

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## SCHEMATIC

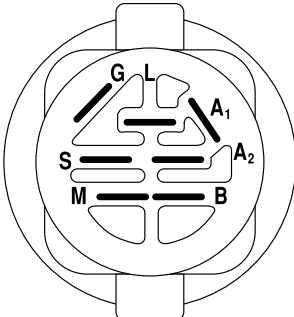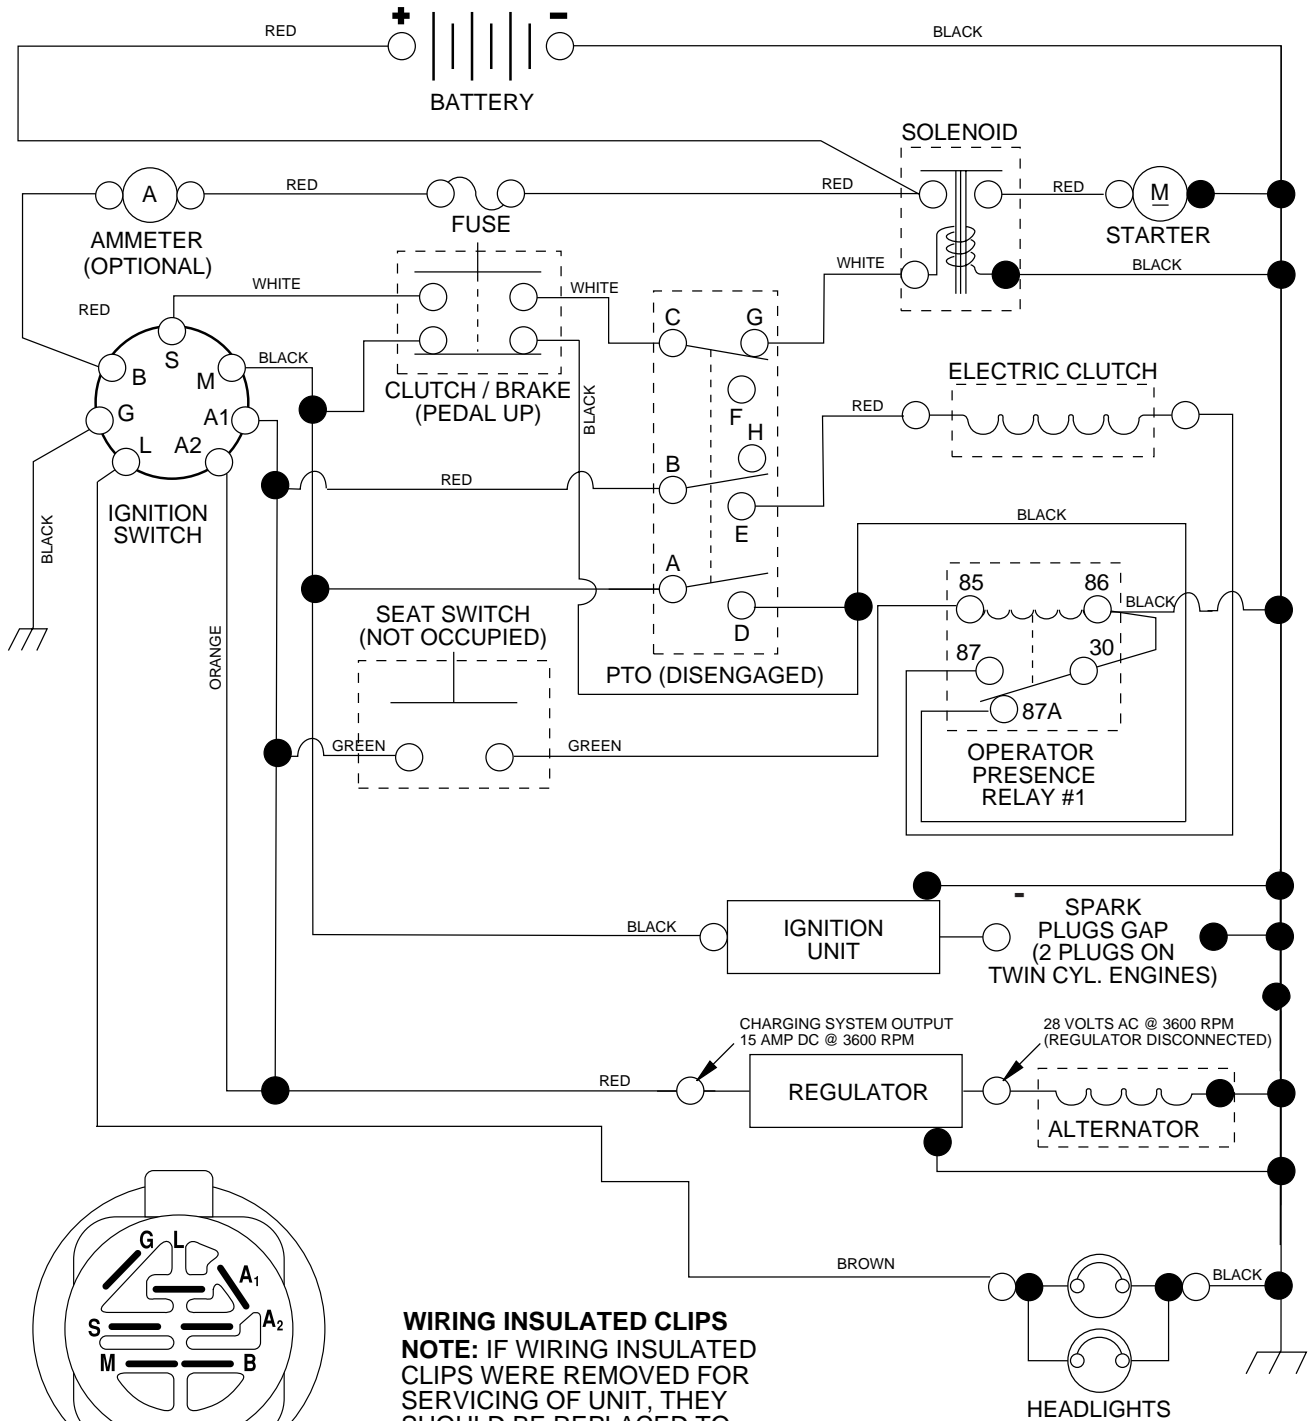

**IGNITION SWITCH**

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	NONE
RUN/LIGHT	B+A1	A2+L
RUN	B+A1	NONE
START	B + S + A1	NONE

**WIRING INSULATED CLIPS**


NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

**PTO SWITCH**


POSITION	CIRCUIT
OFF	C + G, B + H
ON	C + F, B + E, A + D

● NON-REMOVABLE CONNECTIONS

○ REMOVABLE CONNECTIONS

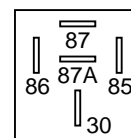


**RELAY**

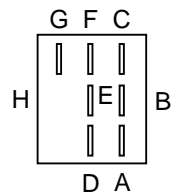

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## ELECTRICAL

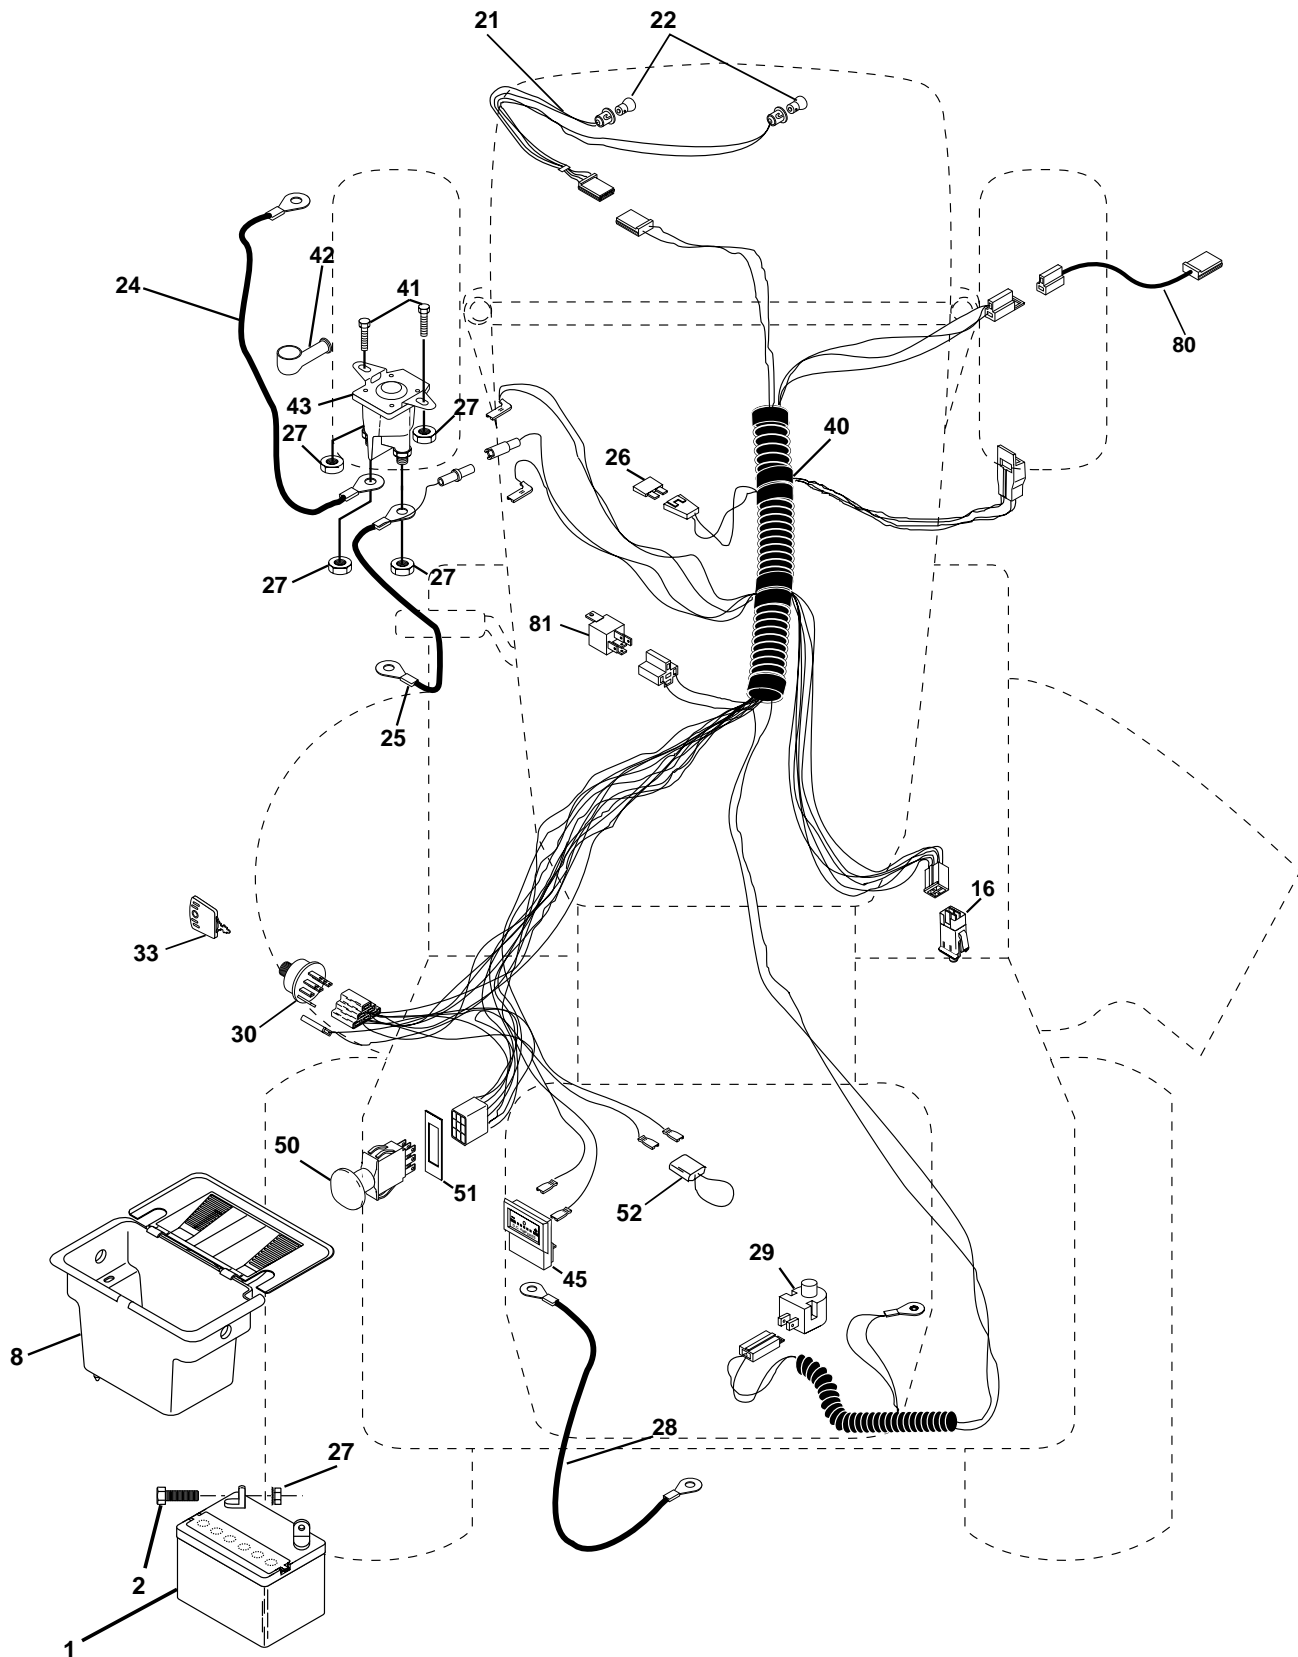

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 9541401-07

## ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532144925	Battery 12 Volt 25 AMP
2	874760412	Bolt Hex Hd 1/4-20unc x 3/4
8	532156417	Case Battery Mech Hinge
16	532153664	Switch Interlock Push-In
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532166181	Harness Asm Light W/4152j
22	532004152	Bulb Light #1156
24	532124780	Cable Battery 6 Ga 11" red
25	532146147	Cable Battery 6 Ga 44" red w/16 wire
26	532166180	Fuse 15 AMP Auto Green
27	873510400	Nut Keps Hex 1/4-20 Unc
28	532124773	Cable Ground 6 Ga 12" black
29	532160784	Switch Plunger Normal OP Olive
30	532163968	Switch Ign
33	532140401	Key Ign Molded
40	532170222	Harness Ign.
41	871110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532131563	Cover Terminal Red
43	532145673	Solenoid
45	532122822	Ammeter Rectangular 15 Amp
50	532169417	Switch PTO 3PDT Black Delta
51	532140405	Ring Retainer PTO
52	532141940	Protection Wire Loop
80	532146685	Harness Clutch EVX
81	532109748	Relay Asm

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## CHASSIS AND ENCLOSURES

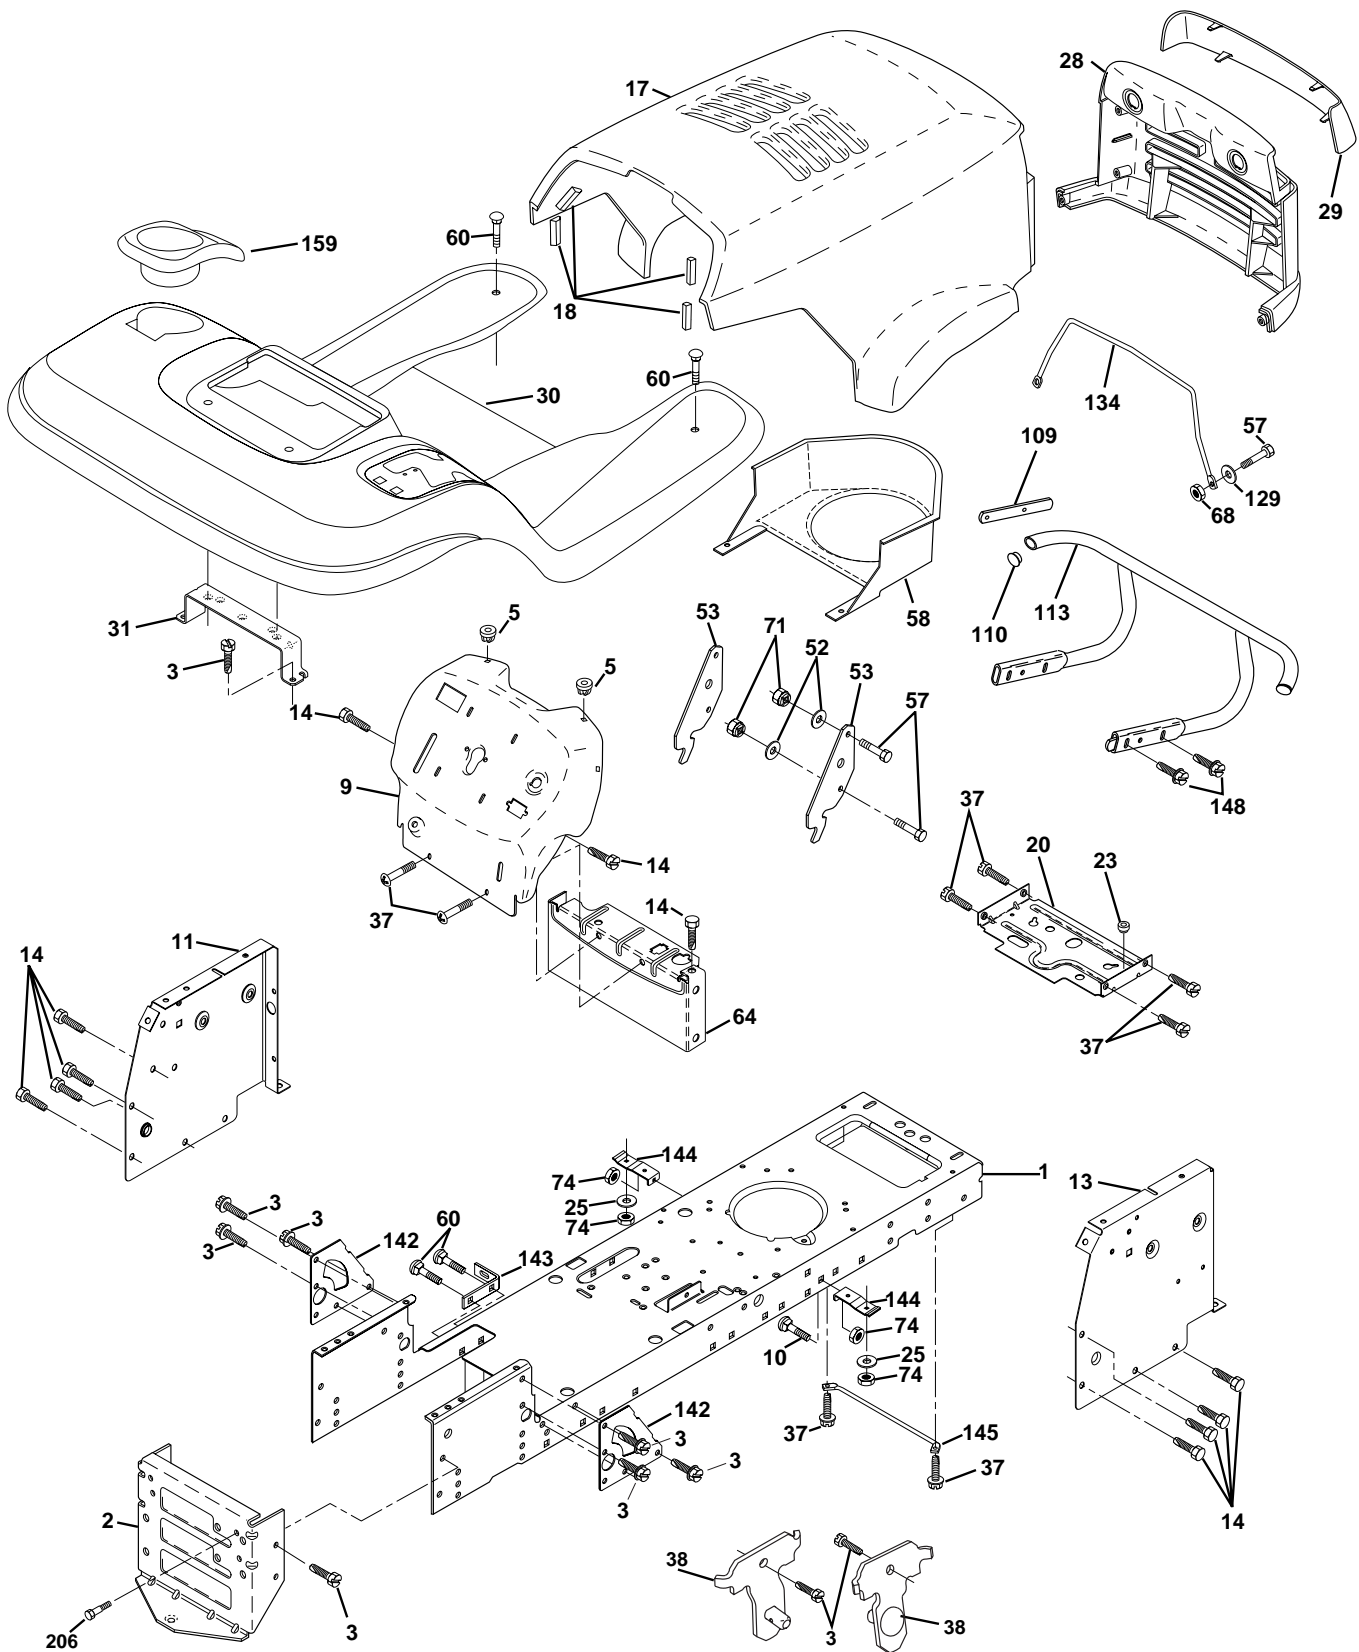

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532169830	Chassis STL Stamping
2	532169061	Drawbar,
3	817060612	Screw 3/8-16x3/4
5	532155272	Bumper Hood/Dash
9	532171624	Dash Slkscr Stl PLM Elec W/A
10	872140608	Bolt Carriage 3/8-16 x 1
11	532155927	Panel Dash Lh
13	532169195	Panel Dash Rh
14	817490608	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532165378	Hood LT/PL Husqvarna
18	532126938	Bumper Hood
20	532156437	Plate Mtg Battery Fuel Tank Fr
23	532124028	Bushing
25	819131312	Washer 13/32 X 13/16 X 12 Ga
26	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
28	532165379	Grille LT/PL Husqvarna
29	532165380	Lens LT/PL Husqvarna
30	532171625	Fender Footrest STLT Pnt
31	532139976	Bracket Support Fender
37	817490508	Screw Thdrol 6/16-18 x 1/2 TYT
38	532169834	Bracket, Asm. Pivot, Mower Rear
52	819091416	Washer 9/32 x 7/8 x 16 Ga.
53	532150067	Bracket Pnt. Pick off LT/PL Husqvarna
57	874780412	Bolt Hex 1/4-20 x 3/4
58	532150127	Air Duct Engine P/L
60	872140606	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532154798	Dash Lower STLT
68	873510400	Nut Keps Hex 1/4-20 UNC
71	873680400	Nut Crownlock 1/4-20 Unc
74	873680600	Nut Crownlock 3/8-16 UNC
109	532170310	Bracket Extension Bumper
110	532143679	Plug Plastic
113	532170311	Bumper Asm.
129	819091016	Washer 9/32 x 5/8 x 16 Ga.
134	532160219	Rod Support Hood LT/PL Husq.
142	532165867	Plate Reinforcement STLT
143	532154966	Bracket Swaybar Chassis
144	532154207	Bracket Pnt Footrest STLT
145	532156524	Rod Pivot Chassis/Hood
148	817060620	Screw 3/8-16 x 1-1/4
159	532166508	Cupholder Stlt Grey
206	532170165	Bolt Shoulder 5/16-18 TT
--	532005479	Plug Button

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## DRIVE

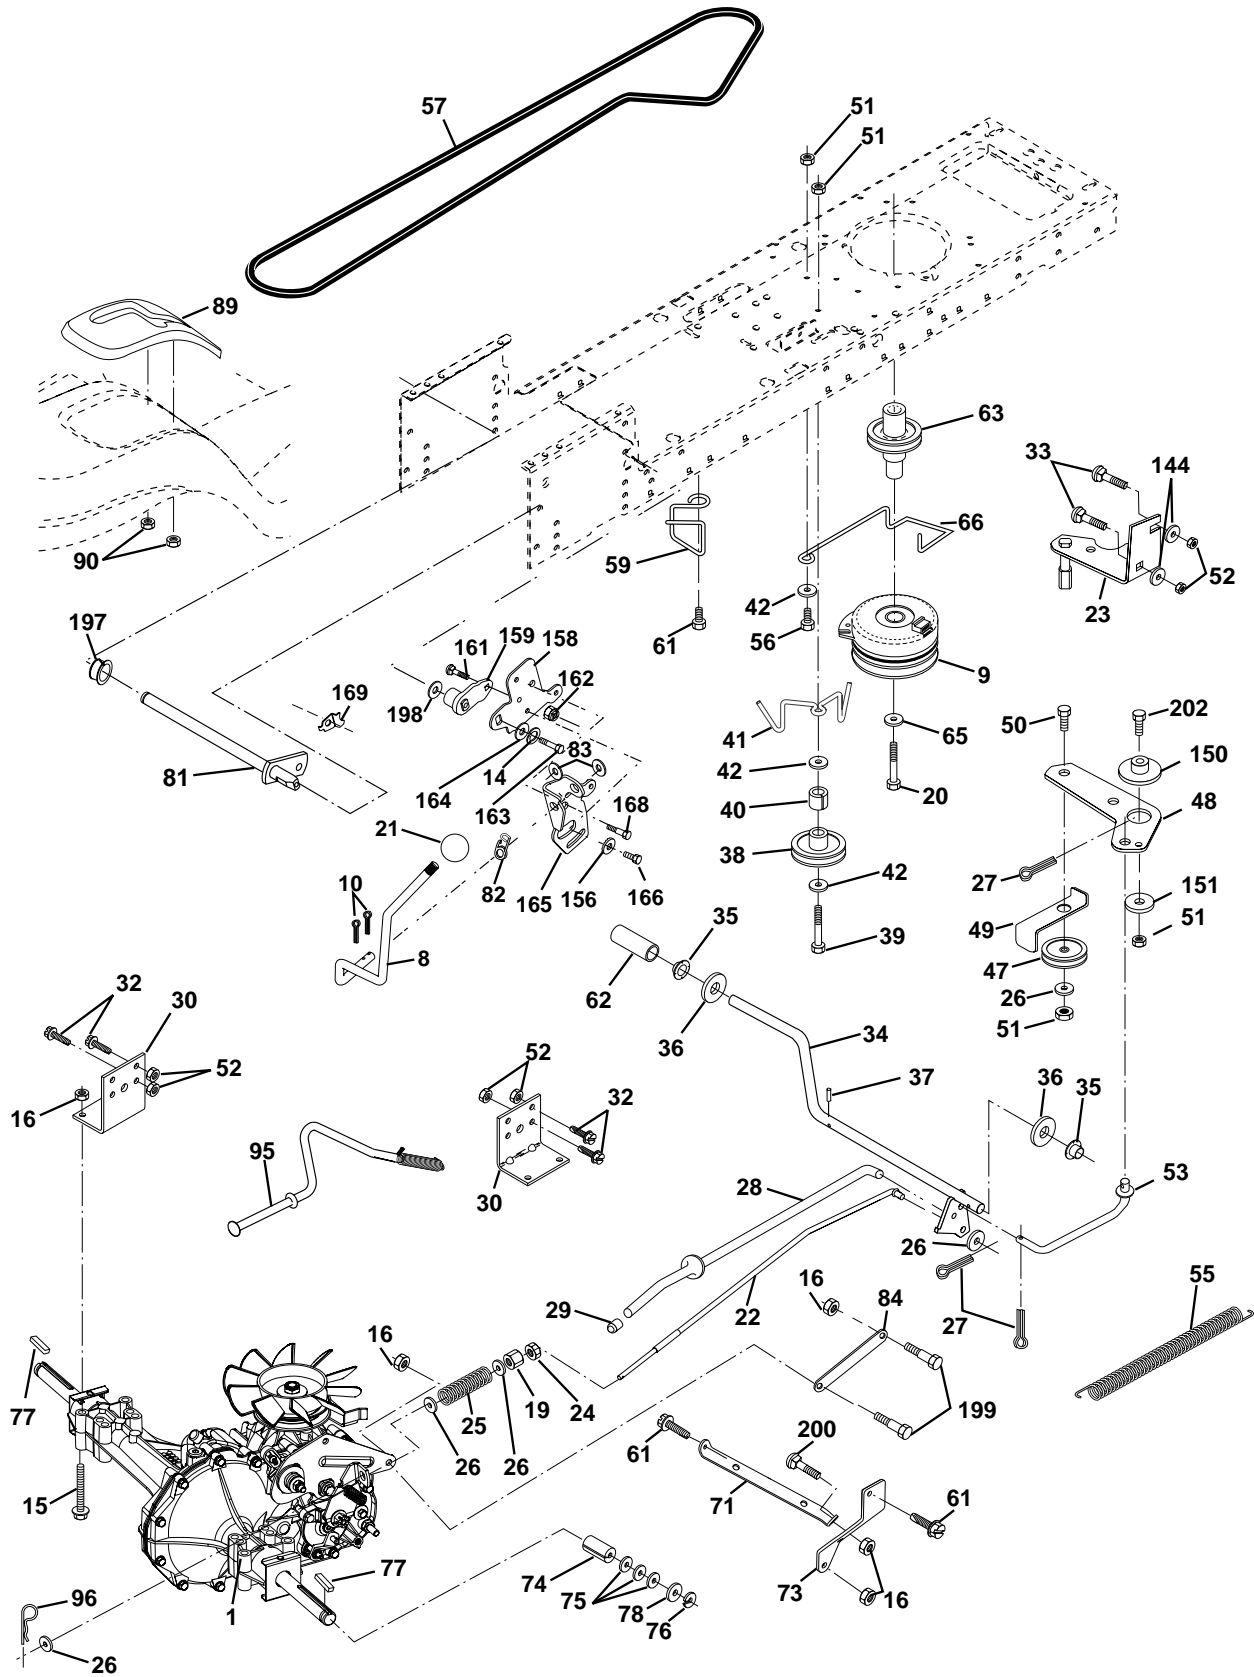

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle (Order Parts From Transaxle Manufacturer) Hydro Gear, Model No. 322-0510	61	817060612	Screw 3/8-16 x 3/4
8	532165866	Rod Shift Fender Adjust STLT	62	532124872	Cover, Pedal
9	532145028	Clutch, Elect. EVX LT Mag 5217-2	63	532145868	Pulley, Clutch Electric EVX
10	876020416	Pin Cotter 1/8 x 1 CAD	65	810040700	Washer
14	810040400	Washer Lock Hvy Helical	66	532154778	Keeper Belt Engine Hydro
15	874490544	Bolt, Hex Flghd 5/16-18 Gr. 5	71	532169183	Strap Torque Lh Hydro
16	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc P	73	532169182	Strap Torque Rh Hydro
19	873800600	Nut Lock Hex W/Wsh 3/8-16 Unc	74	532169496	Spacer, Axle
20	532150280	Bolt Hex 7/16-20 x 4-1/4 Ga. 1.38	75	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
21	532121274	Knob, Duckhead 1/2-13	76	812000001	E-Ring
22	532169498	Rod, Brake Hydro	77	532123583	Key, Square
23	532171258	Bracket, Asm Anti-Rot EVX	78	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
24	873350600	Nut	81	532165596	Shaft Asm Cross Tapered
25	532106888	Spring, Brake Rod	82	532165711	Spring Torsion
26	819131316	Washer	83	819171216	Washer 17/32 x 3/4 x 16 Ga.
27	876020412	Pin Cotter 1/8 x 3/4 CAD.	84	532169843	Link Transaxle Hydr
28	532145204	Rod, Parking Brake	89	532166510	Console, Shift
29	532071673	Cap, Parking Brake	90	532124346	Nut, Self-Thd Wsh-hd 1/4 Zinc
30	532130807	Bracket, Transaxle	95	532170201	Control Asm Bypass Hydro
32	874760512	Bolt Hex Hd 5/16-18 Unc x 3/4	96	532124788	Retainer Spring 1" Zinc/Cad
33	872140506	Bolt Rdhd Sqnk 5/16-18 UNC x 3/4	144	819111016	Washer 11/32 x 5/8 x 16 Ga.
34	532155071	Shaft, Foot Pedal	150	532165850	Bushing Bellcrank Grd Drive
35	532120183	Bearing, Nylon	151	819133210	Washer 13/32 x 2 x 10 Ga.
36	819211616	Washer	156	532166002	Washer Srrted 5/16ID x 1.125
37	532124963	Pin, Roll	157	532153236	Bolt Shoulder 5/16-18 Unc - 2A
38	532131494	Pulley, Idler, Flat	158	532165589	Bracket Shift Mount
39	872110622	Bolt	159	532165494	Hub Tapered Flange Shift Lt
40	532124965	Spacer, Split	161	872140406	Bolt Rdhd Sqnk 1/4-20 Unc
41	532165838	Keeper, Belt Idler	162	873680400	Nut Crownlock 1/4-20 Unc
42	819131312	Washer 13/32 x 13/16 x 12 Gauge	163	874780416	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
47	532127783	Pulley, Idler, V-Groove	164	819091010	Washer 5/8 x 0281 x 10 Ga
48	532154407	Bellcrank Clutch Grnd Drv Stl	165	532165623	Bracket Pivot Lever
49	532123205	Retainer, Belt	166	532166880	Screw 5/16-18 x 5/8
50	872110612	Bolt	168	532165492	Bolt Shoulder 5/16-18 x .561
51	873680600	Nut	169	532165580	Plate Fastening Cross Sh STLT/CRD
52	873680500	Nut Crownlock 5/16-18	197	532169613	Nyliner Snap-In 5/8" ID
53	532105710	Link, Clutch	198	532169593	Washer Nyl 7/8 ID x .105" Hyd
55	532105709	Spring, Return, Clutch	199	532169612	Bolt Shoulder 5/16-18 Unc
56	874760620	Bolt Fin Hex 3/8-16 UNC x 1-1/4	200	532078051	Bolt Rdhd Sq Neck 5/16-18 x 1 Unc
57	532140294	V-Belt, Ground Drive	201	817490612	Screw Thdrol 3/8-16 x 3/4 TYTT
59	532169691	Keeper, Center Span			


**NOTE:** All component dimensions give in U.S. inches.  
1 inch = 25.4 mm.



# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## STEERING ASSEMBLY

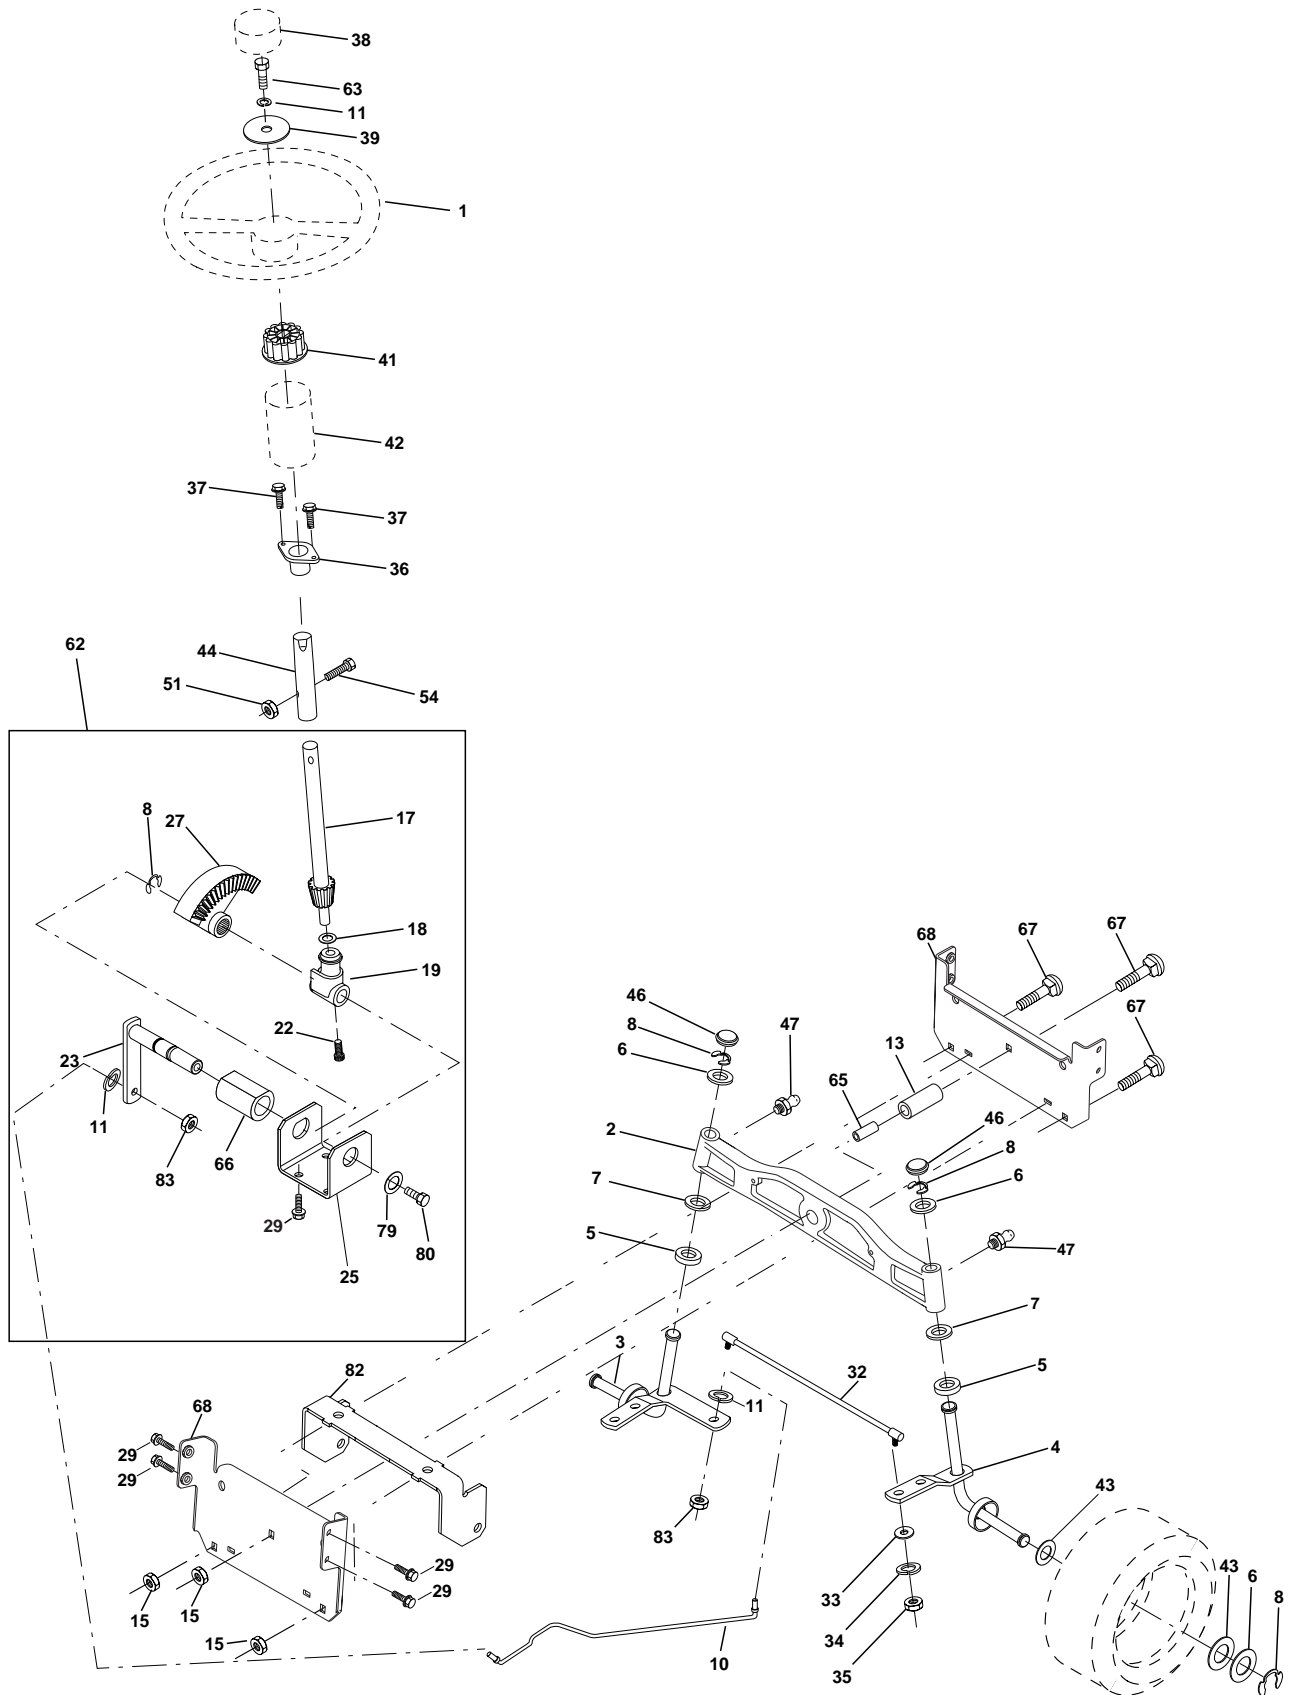

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532166627	Wheel Steering
2	532165854	Axle Cast Lt Machined
3	532169840	Spindle Asm LH 15"
4	532169839	Spindle Asm RH 15"
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 X 1-1/4 X 16 Ga
8	812000029	Ring Klip #t5304-75
10	532169832	Link Drag
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
13	532136518	Spacer Brg Axle Front
15	532145212	Nut Hex Flange Lock Yel
17	532156546	Shaft Asm Strg
18	532057079	Washer Thrust 515x 750x 033
19	532160395	Support Shaft
22	532165857	Screw Hex Wsh Hd Torx
23	532165851	Shaft Asm Pittman
25	532154406	Bracket Steering
27	532136874	Gear Sector
29	817060612	Screw 3/8-16x3/4
32	532139929	Rod Tie BJ Solid 19.75
33	819111216	Washer 11/32 x 3/4 x 16 Ga.
34	810040500	Washer Lock Hvy Helical 5/16
35	873680500	Nut Crown Lock 5/16-18
36	532155099	Bushing Strg
37	532152927	Screw
38	532166626	Insert Cap Strg Wh
39	819132411	Washer 13/32 X 1-1/20 x 11 Ga.
40	532124701	Lock nut
41	532159945	Adaptor Wheel Strg
42	532169634	Boot Steering Shaft
43	532121749	Washer 25/32 X 1 1/4 X 16 Ga
44	532153720	Extension Steering Shaft LR/LT
46	532121232	Cap Spindle Fr Top Blk
47	532124836	Fitting Grease
51	873800500	Nut Lock Hex w/Ins 5/16-18
54	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532167902	Kit, Steering Assembly Svc
63	874780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532160367	Spacer Brace Axle
66	532154404	Bearing Arm Pittman
67	872110618	Bolt, Rdhd Sqnk 3/8-16 x 2-1/4
68	532169827	Axle, Brace
79	819132012	Washer 13/32 x 1-1/4 x 12
80	874950612	Bolt Hex Nylon 3/8-16 x 3/4
82	532169835	Bracket Susp Chassis Front

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## SEAT ASSEMBLY

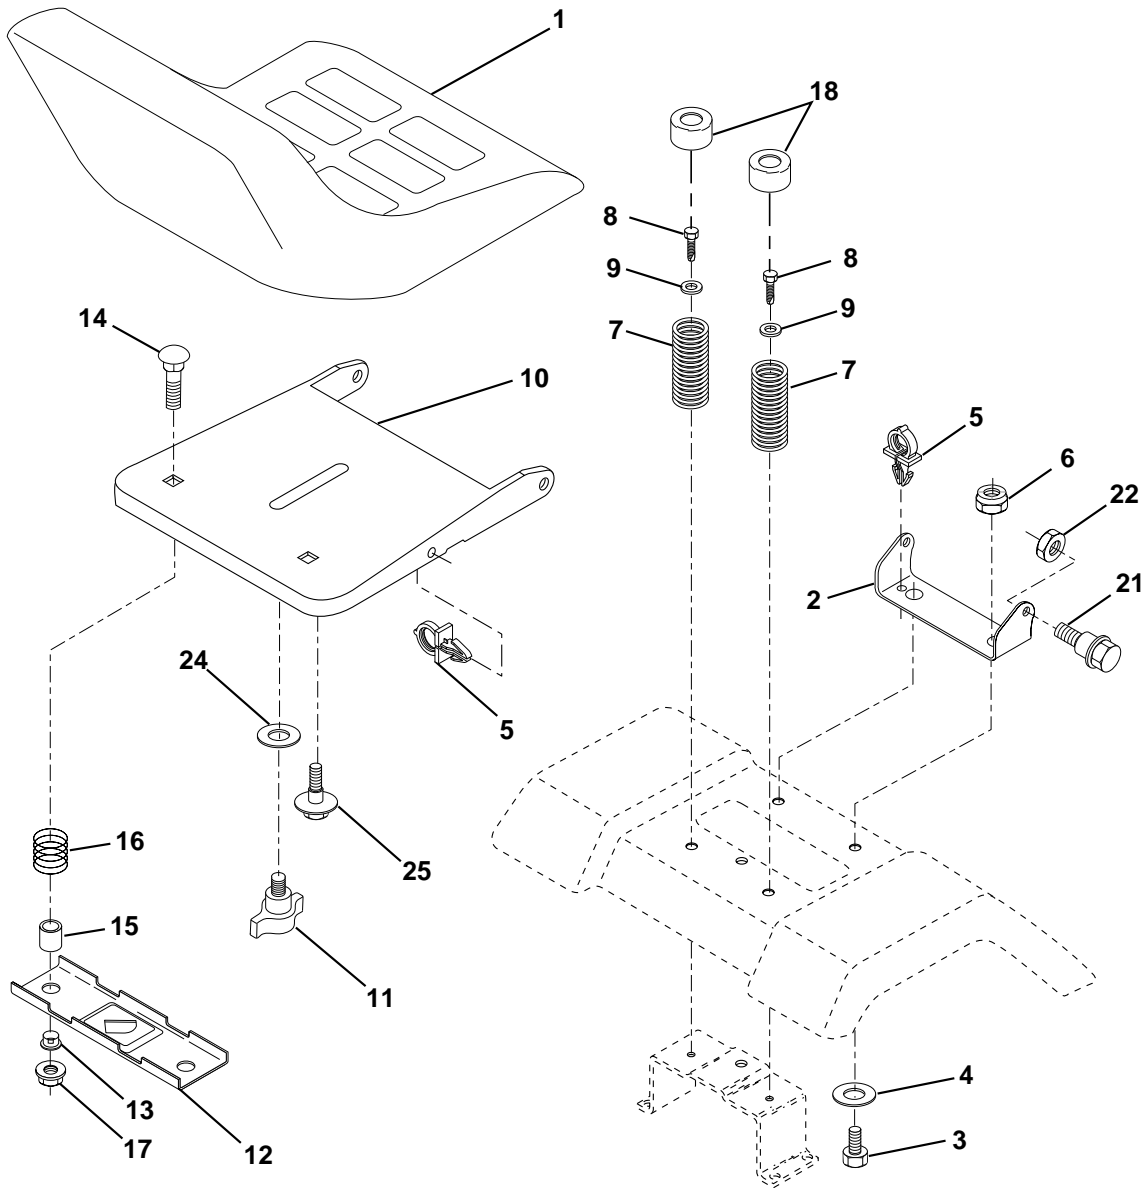

### KEY PART NO. NO.

### DESCRIPTION

1	532140838	Seat
2	532140551	Bracket Pivot Seat 8 720
3	874760616	Bolt Fin Hex 3/8-16unc X 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push-In
6	873800600	Nut Hex w/Ins. 3/8-16 Unc
7	532124181	Spring Seat Cprsn 2 250 Blk Zi
8	817060616	Screw 3/8-16 X 1-1/2
9	819131614	Washer 13/32 X 1 X 14 Ga.
10	532155925	Pan Seat
11	532166369	Knob Seat 1/2-13 UNC Blk
12	532121246	Bracket Mounting Switch

### KEY PART NO. NO.

### DESCRIPTION


13	532121248	Bushing Snap Blk Nyl 50 Id
14	872050412	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532134300	Spacer Split 28x 96 Yel Zinc
16	532121250	Spring Cprsn 1 27 Blk Pnt
17	532123976	Nut Lock 1/4 Lge Flg Gr 5 Zinc
18	532124238	Cap Spring Seat
21	532153236	Bolt Shoulder 5/16-18 Unc
22	873800500	Nut Hex Lock W/Ins 5/16-18
24	819171612	Washer 17/32 X 1 X 12 Ga.
25	532127018	Bolt Shoulder 5/16-18 X 62

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07


## DECALS

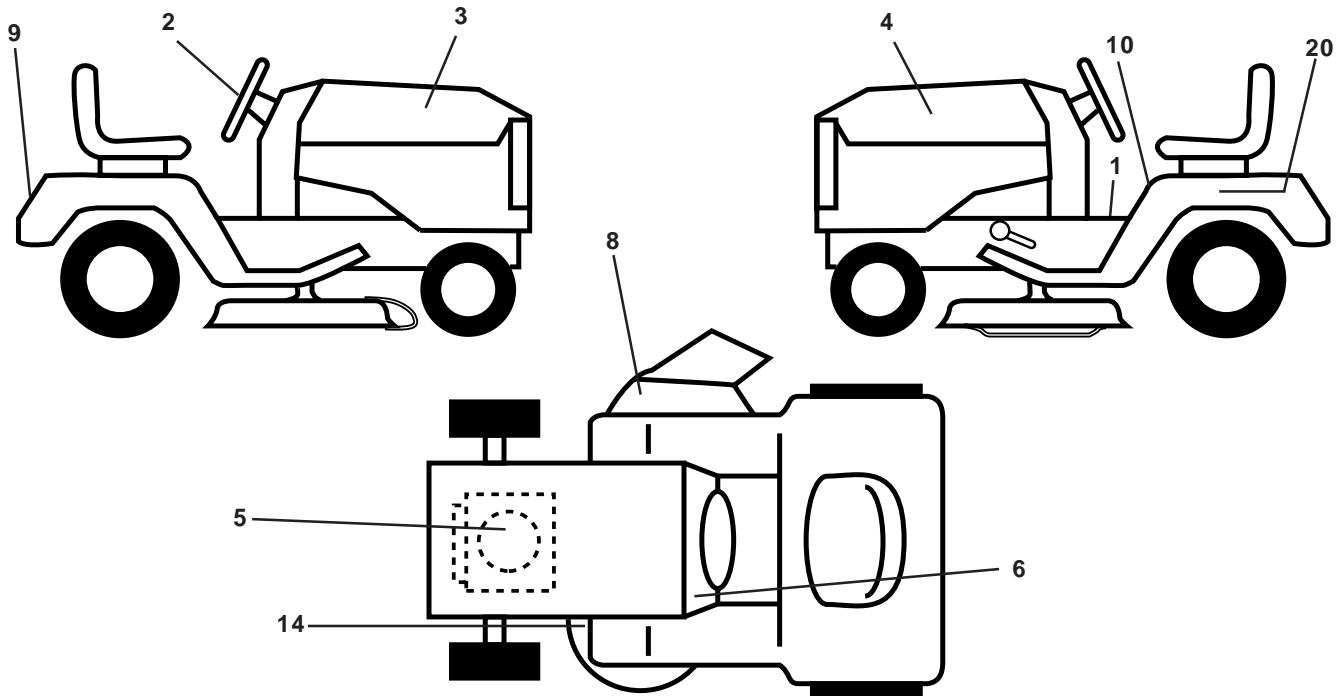

KEY NO.	PART NO.	DESCRIPTION
1	532157032	Decal Oper Step Thru Eng/Fr
2	532170564	Decal Wheel Steering
3	532150725	Decal Hood RH
4	532150726	Decal Hood LH
5	532166102	Decal HP Engine
6	532171458	Decal Dash Logo
8	532137259	Decal Warning
9	532150617	Decal Fender Husq

KEY NO.	PART NO.	DESCRIPTION
10	532157140	Decal Fender Danger Eng/Fr
14	532160396	Decal V-Belt Schematic
20	532145005	Decal Bat Dan/Psn
--	532171284	Pad Footrest LH STLT
--	532171285	Pad Footrest RH STLT
--	532138311	Decal Handle Lft Height Adjust
--	532169210	Decal ByPass Lt Hydro
--	532170969	Manual Owner's (English)
--	532170970	Manual Owner's (French)

## WHEELS & TIRES

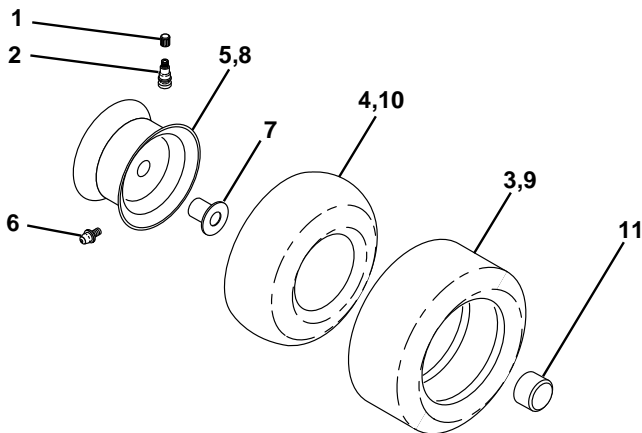


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 6 0 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532138336	Rim Asm 6"front Silver Service
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532138337	Rim Asm 8"rear Silver Service
9	532124635	Tire R Ts 18x8 5-8 C Service
10	532124926	Tube Rear (Service Item Only)
11	532104757	Cap Axle Blk 1 50 X 1 00
--	532144334	Sealant, Tire ( 10 oz. Tube)

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 9541401-07

## ENGINE

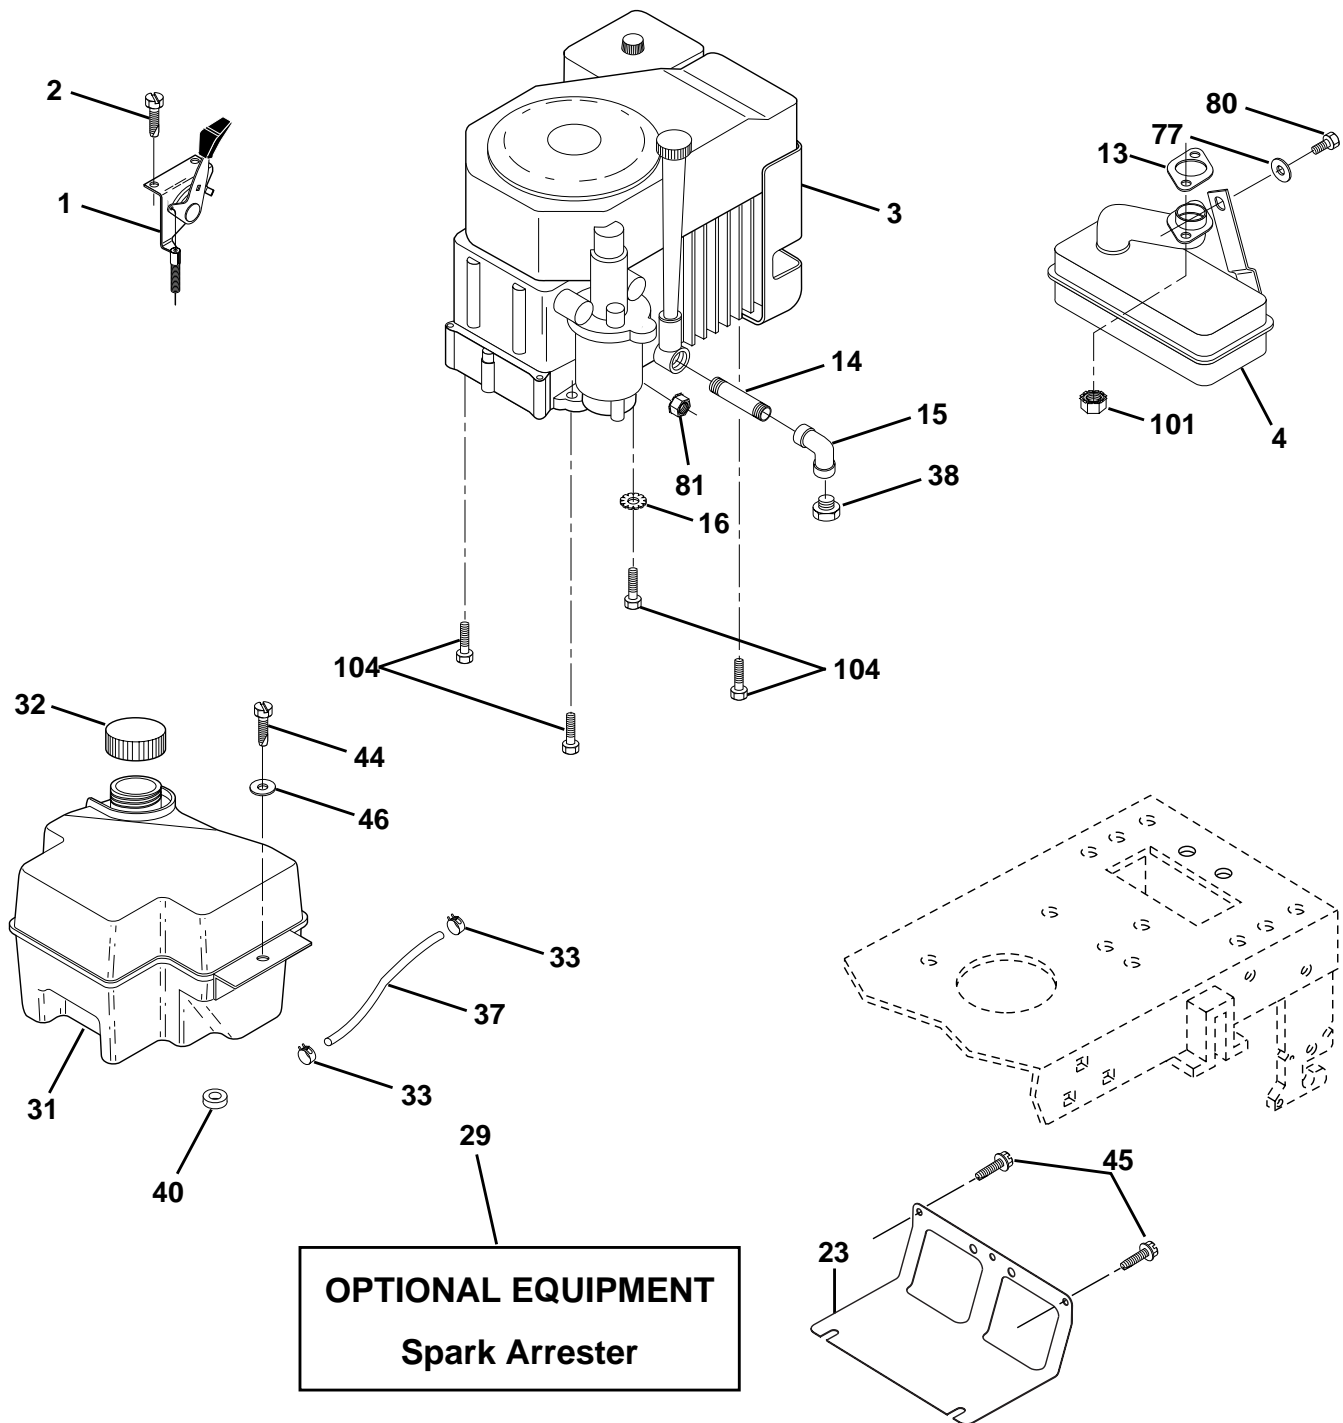

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	532141296	Control THTICH 27 LH FLAG DOM
2	817720410	Screw Hex Thd Cut 1/4-20 x 5/8 T
3	-----	Engine, Model Kohler CV15S (Order Parts From Engine Manufacturer)
4	532159420	Muffler
13	532163831	Gasket Kohler CV13-CV16.5
14	813280328	Nipple Pipe 3/8 Npt X 3-1/2
15	813200300	Elbow Std 90 Degree 3/8-18 Npt
16	811050600	Washer Lock Ext Tooth 3/8
23	532169837	Shield Browning/Debris Guard
29	532137180	Kit Spark Arrestor (Flat Scrn)
31	532161911	Tank Fuel Front 2 00 Gal Nat
32	532140527	Cap Asm Fuel W/sym Vented
33	532123487	Clamp Hose Black
37	532137040	Line Fuel 20"
38	-----	Plug Oil Drain (Order From Engine Manufacturer)
40	532124028	Bushing Snap Nyl Blk Fuel Line
44	817490412	Screw Hexwsh Thdrol 1/4-20x3/4
45	817060612	Screw 3/8-16 x 3/4
46	819091416	Washer 9/32 X 7/8 X 16 Ga
77	819101216	Washer 5/16 x 3/4 x 16 Ga.
80	874760508	Bolt Hex Hd 5/16-18 UNC x 1/2
81	532128861	Nut Flange 1/4-20 Starter Nut
101	532163305	Nut Flange Me-1.25 Non-LK
104	817120616	Screw 3/8-16 x 1-1/2

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## MOWER DECK

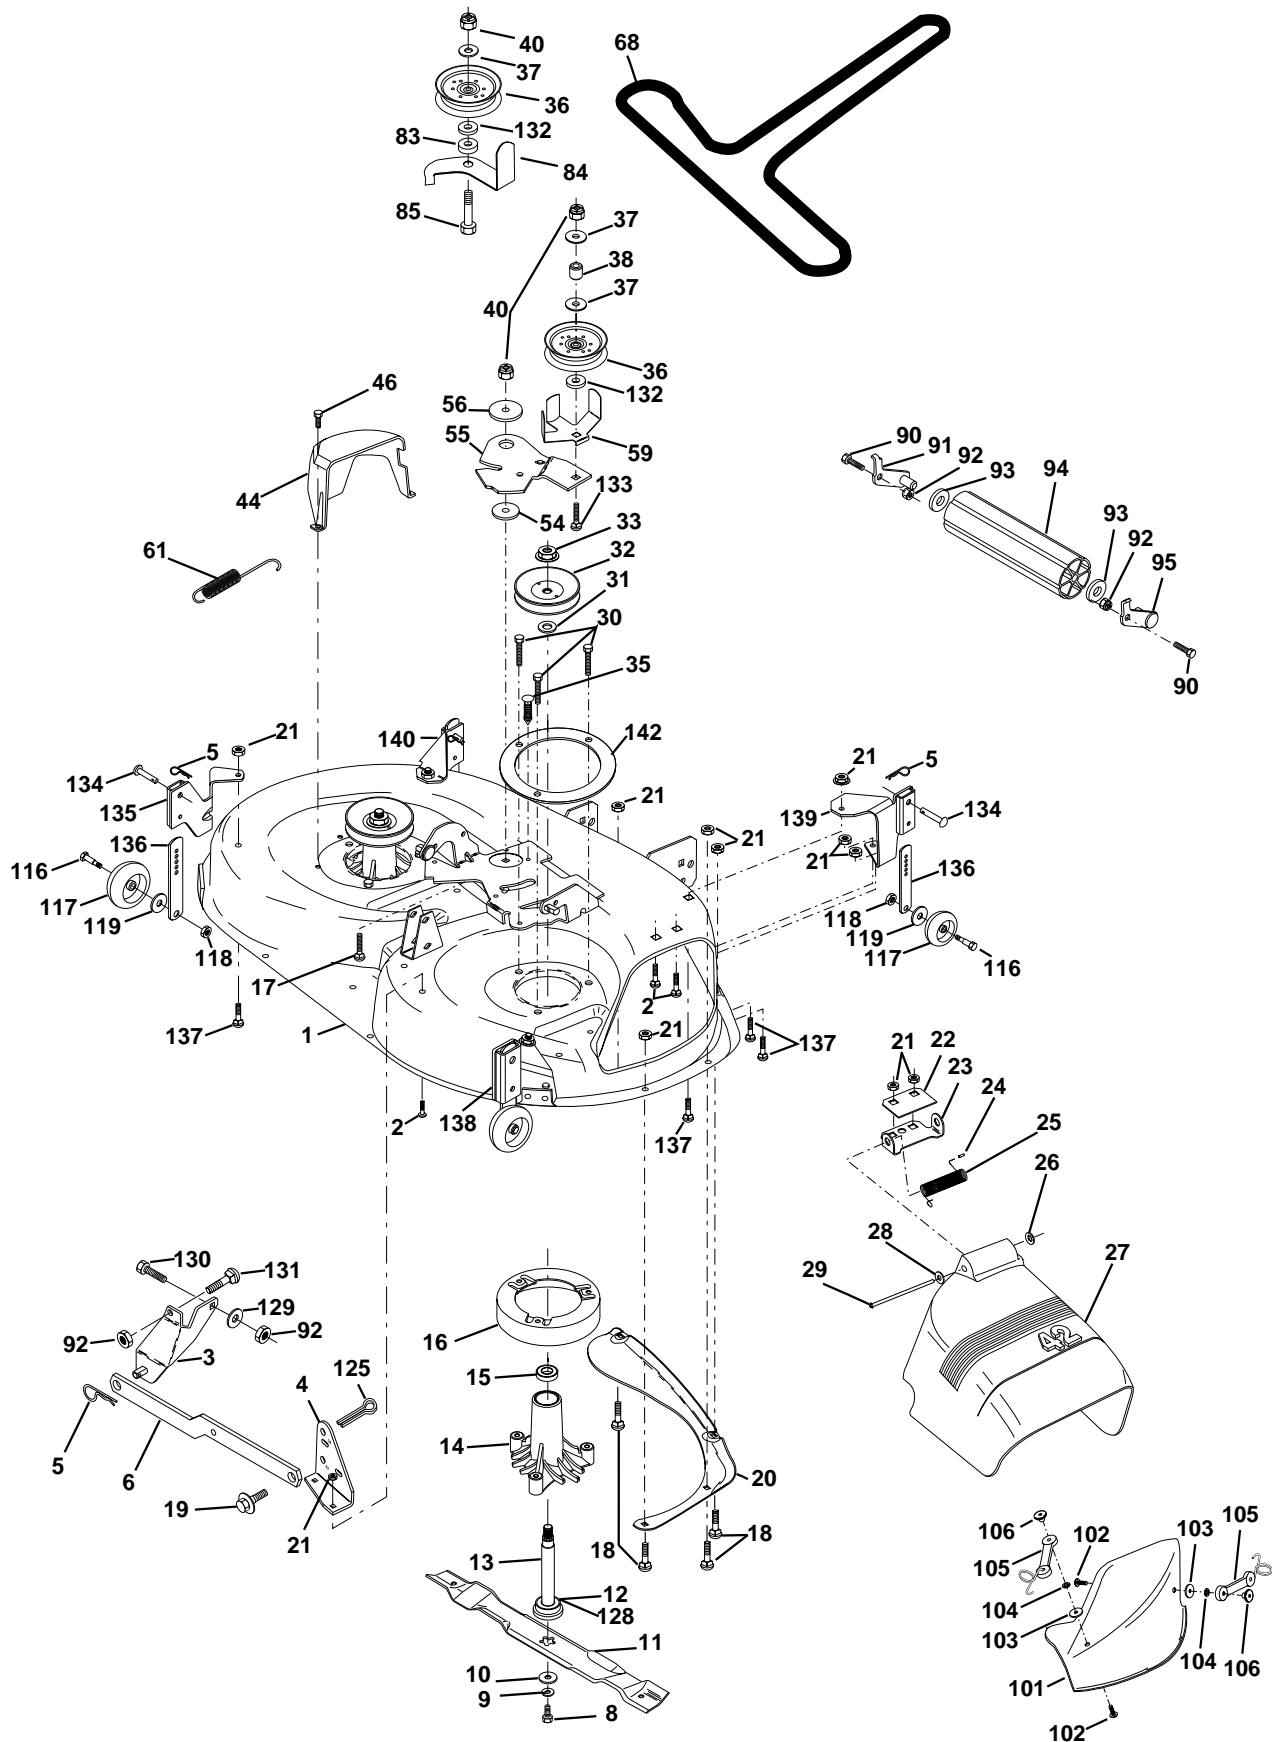

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## MOWER DECK


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532162809	Deck Weldment Mower 42" W/Adj	59	532141043	Guard, Belt
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	61	532131950	Spring Ext. Elect
3	532138017	Bracket Asm Fr Sway Bar 38/42	68	532144200	V-Belt Mower
4	532138440	Bracket Asm Deck 42"sway Bar	83	532120958	Washer Sintered
5	532124670	Retainer Spring	84	532156084	Keeper 'Belt Idler
6	532130832	Arm Suspension Rear	85	872140620	Bolt Carriage 3/8-16 x 2-1/2 Gr.5
8	532850857	Bolt 3/8-24x1 25 Gr8 Patched	90	874760616	Bolt Fin Hex 3/8-16unc X 1
9	810030600	Washer Lock Hvy 3/8 Unplated	91	532132274	Bracket Asm Noseroller LH
10	532140296	Washer Hard Blade Mower Vented	92	873800600	Nut Lock Hex w/ins. 3/8-16 UNC
11	532134149	Blade Mower Mulching 42"	93	819171416	Washer 17/32 X 7/8 X 16 Ga
12	532129895	Bearing Ball #6204 (Mandrel)	94	532132264	Roller Nose 38 & 42
13	532137645	Shaft Asm W/lower Bearing	95	532132273	Bracket Asm Noseroller RH
14	532128774	Housing Mandrel Vented(machd)	101	532136420	Cover Mulching 42" Blk
15	532110485	Bearing Ball Mandrel	102	871161010	Screw
16	532140329	Stripper Round Mower	103	819061216	Washer #10
17	872110618	Bolt Rdhd Sqnk 3/8-16 X 2-1/4	104	810071000	Washer Lock #10
18	872140505	Bolt Carr 5/16-18 X 5/8	105	532160793	Latch Asm Bagger
19	532132827	Bolt Shoulder	106	532125004	Nut Weld .327/.304 #10-24
20	532159770	Baffle Vortex 42	116	532137644	Bolt Shld
21	873680500	Nut Crown Lock 5/16-18	117	532133957	Wheel Gauge blk.
22	532134753	Stiffener Bracket 42"deck	118	873930600	Nut Centerlock 3/8 - 16 UNC
23	532131267	Bracket Deflector Mower 42"	119	819121414	Washer 3/8 x 7/8 x 14 Ga.
24	532105304	Cap Sleeve 80x 112 Blk Mower	125	876020816	Cotter Pin
25	532123713	Spring Torsion Deflector 2 52	128	532153390	Washer Felt
26	532110452	Nut Push Phos & Oil	129	819131312	Washer 13/32 x 13/16 x 12 Ga.
27	532171634	Shield Deflector Mower 42" Grey	130	874780616	Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5
28	819111016	Washer 11/32 X 5/8 X 16 Ga	131	872140608	Bolt Rdhd Sqnk 3/8-16 Unc x 1
29	532131491	Rod Hinge 42"6 75 Wlg	132	819132203	Washer 13/32 x 1-3/8 x 3 Ga
30	532157722	Screw Thdrol Washer Head	133	872110622	Bolt Rdhd 3/8-16 UNC x 2-3/4 Gr.5
31	532129963	Washer Spacer Mower Vented	134	532156941	Pin Head Rivet
32	532153535	Pulley Mandrel 42"	135	532159765	Bracket Asm Whl Ga Rear LH 42"
33	532137266	Nut 9/16top Lock Flng Cntr	136	532155986	Bar Pnt Adjusting Wheel Gauge
35	532133835	Fastner Christmas Tree	137	872110505	Bolt Carr 5/16-18 x 5/8 Short
36	532131494	Pulley Idler Flat 3 060	138	532159763	Bracket Asm Whl Ga. Rear RH 42"
37	819131316	Washer 13/32 X 13/16 X 16 Ga	139	532159767	Bracket Asm Whl Ga. Front RH 42"
38	532132823	Spacer Spring Stop Idler	140	532159768	Bracket Asm Whl Ga. Front RH 42"
40	873680600	Nut Lock 3/8-16 Unc	142	532153183	Reinforcement Mandrel Ring
44	532140088	Guard Mandrel LH Black	--	532170979	Deck Serv 42" Elec Vent (Standard Deck - Order Nose Roller, Gauge Wheel and Mulcher Plate components separately Key Nos. 90-95, 101-106 and 111-121)
46	532137729	Screw Thdrol 1/4-20x5/8			
54	532133943	Washer Hardened			
55	532140084	Arm Idler 42"mower LT/YT			
56	532165723	Spacer Retainer Mower	--	532130794	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)



# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## MOWER LIFT

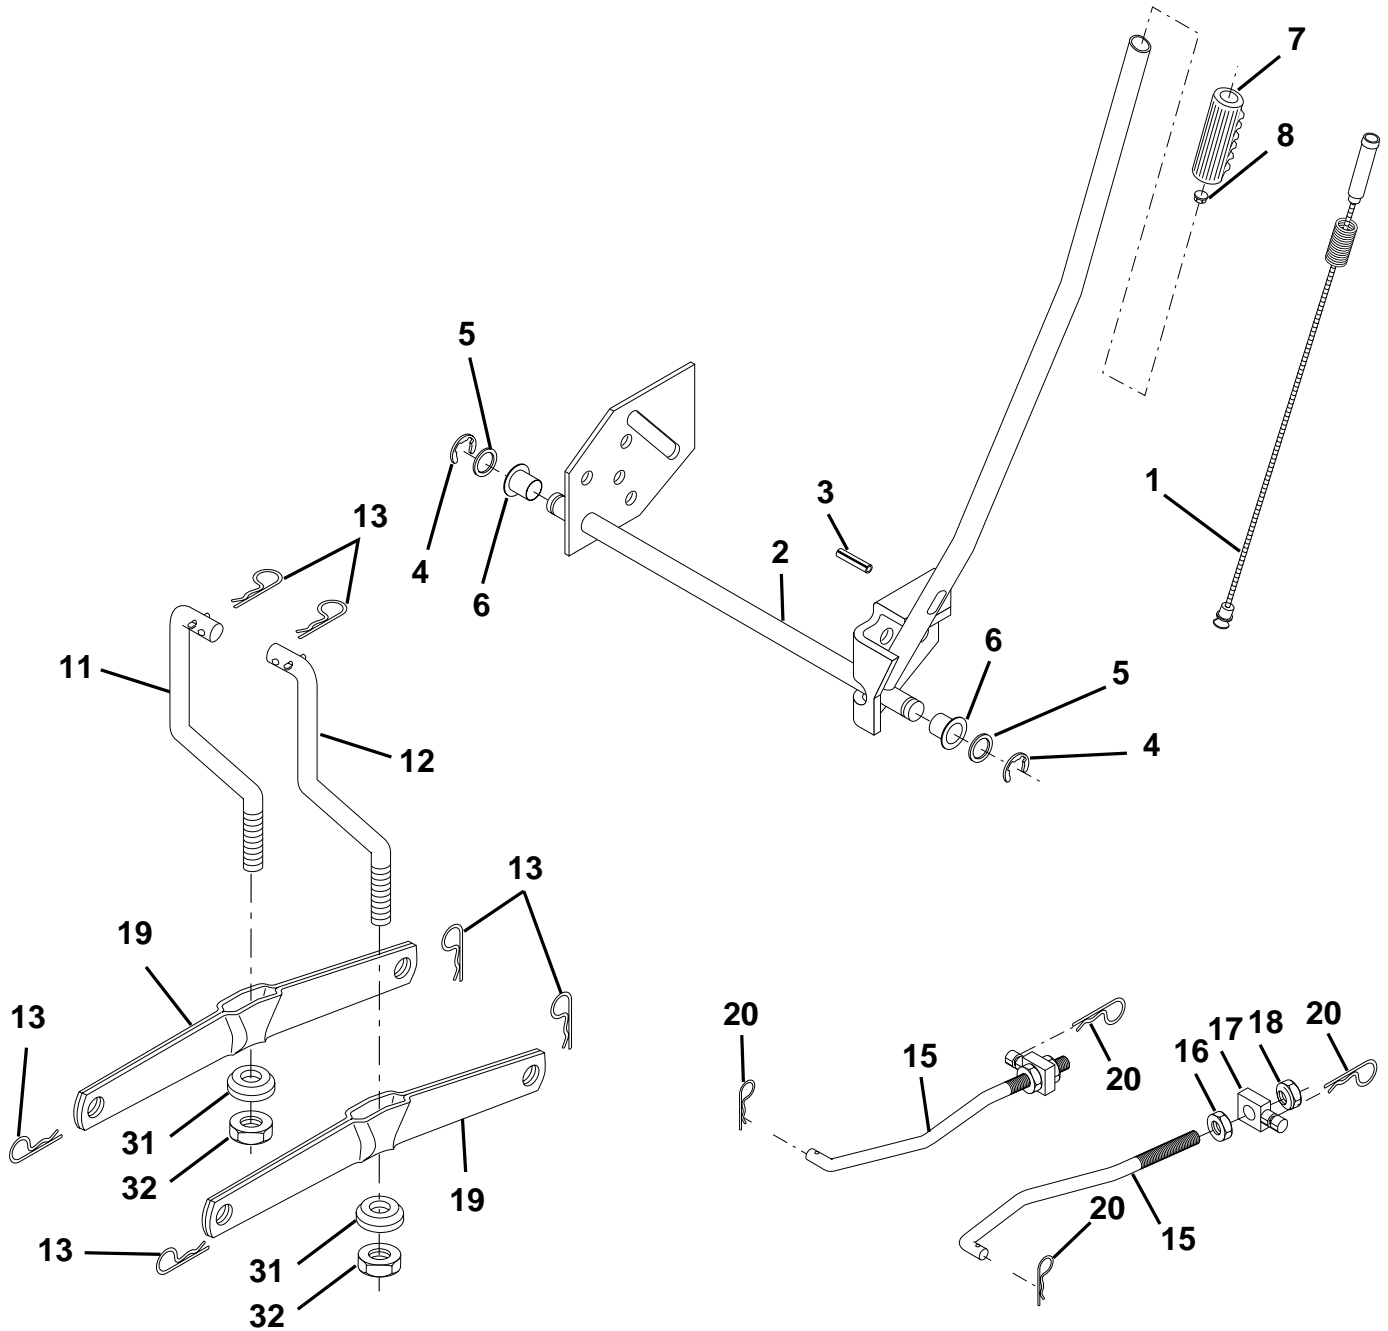

# REPAIR PARTS

TRACTOR - MODEL NO. LTH130 (954140107A), PRODUCT NO. 954 14 01-07

## MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	532159460	Wire Asm Inner W/plunger
2	532159471	Shaft Asm Lift
3	532105767	Pin Groove
4	812000002	E Ring #5133-62
5	819211621	Washer PLTD 21/32 X 1 X 21 ga
6	532120183	Bearing Nylon Blk 629 Id
7	532109413	Grip Handle Bicycle
8	532124526	Button Plunger Black
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532167253	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873680800	Nut Crownlock 1/2-13 Unc
19	532139868	Arm Suspension Rear
20	532163552	Spring, Retainer
31	532140302	Bearing Pvt. Lift Spherical
32	873540600	Nut Crownlock 3/8-24

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm