


ILLUSTRATED PARTS LIST

MODEL NUMBER **HU725BBC**

PRODUCT NUMBER **961 43 00-94**

MFG. ID. NUMBER **96143009401**

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. HU725BBC (96143009401) PRODUCT NO. 961 43 00-94

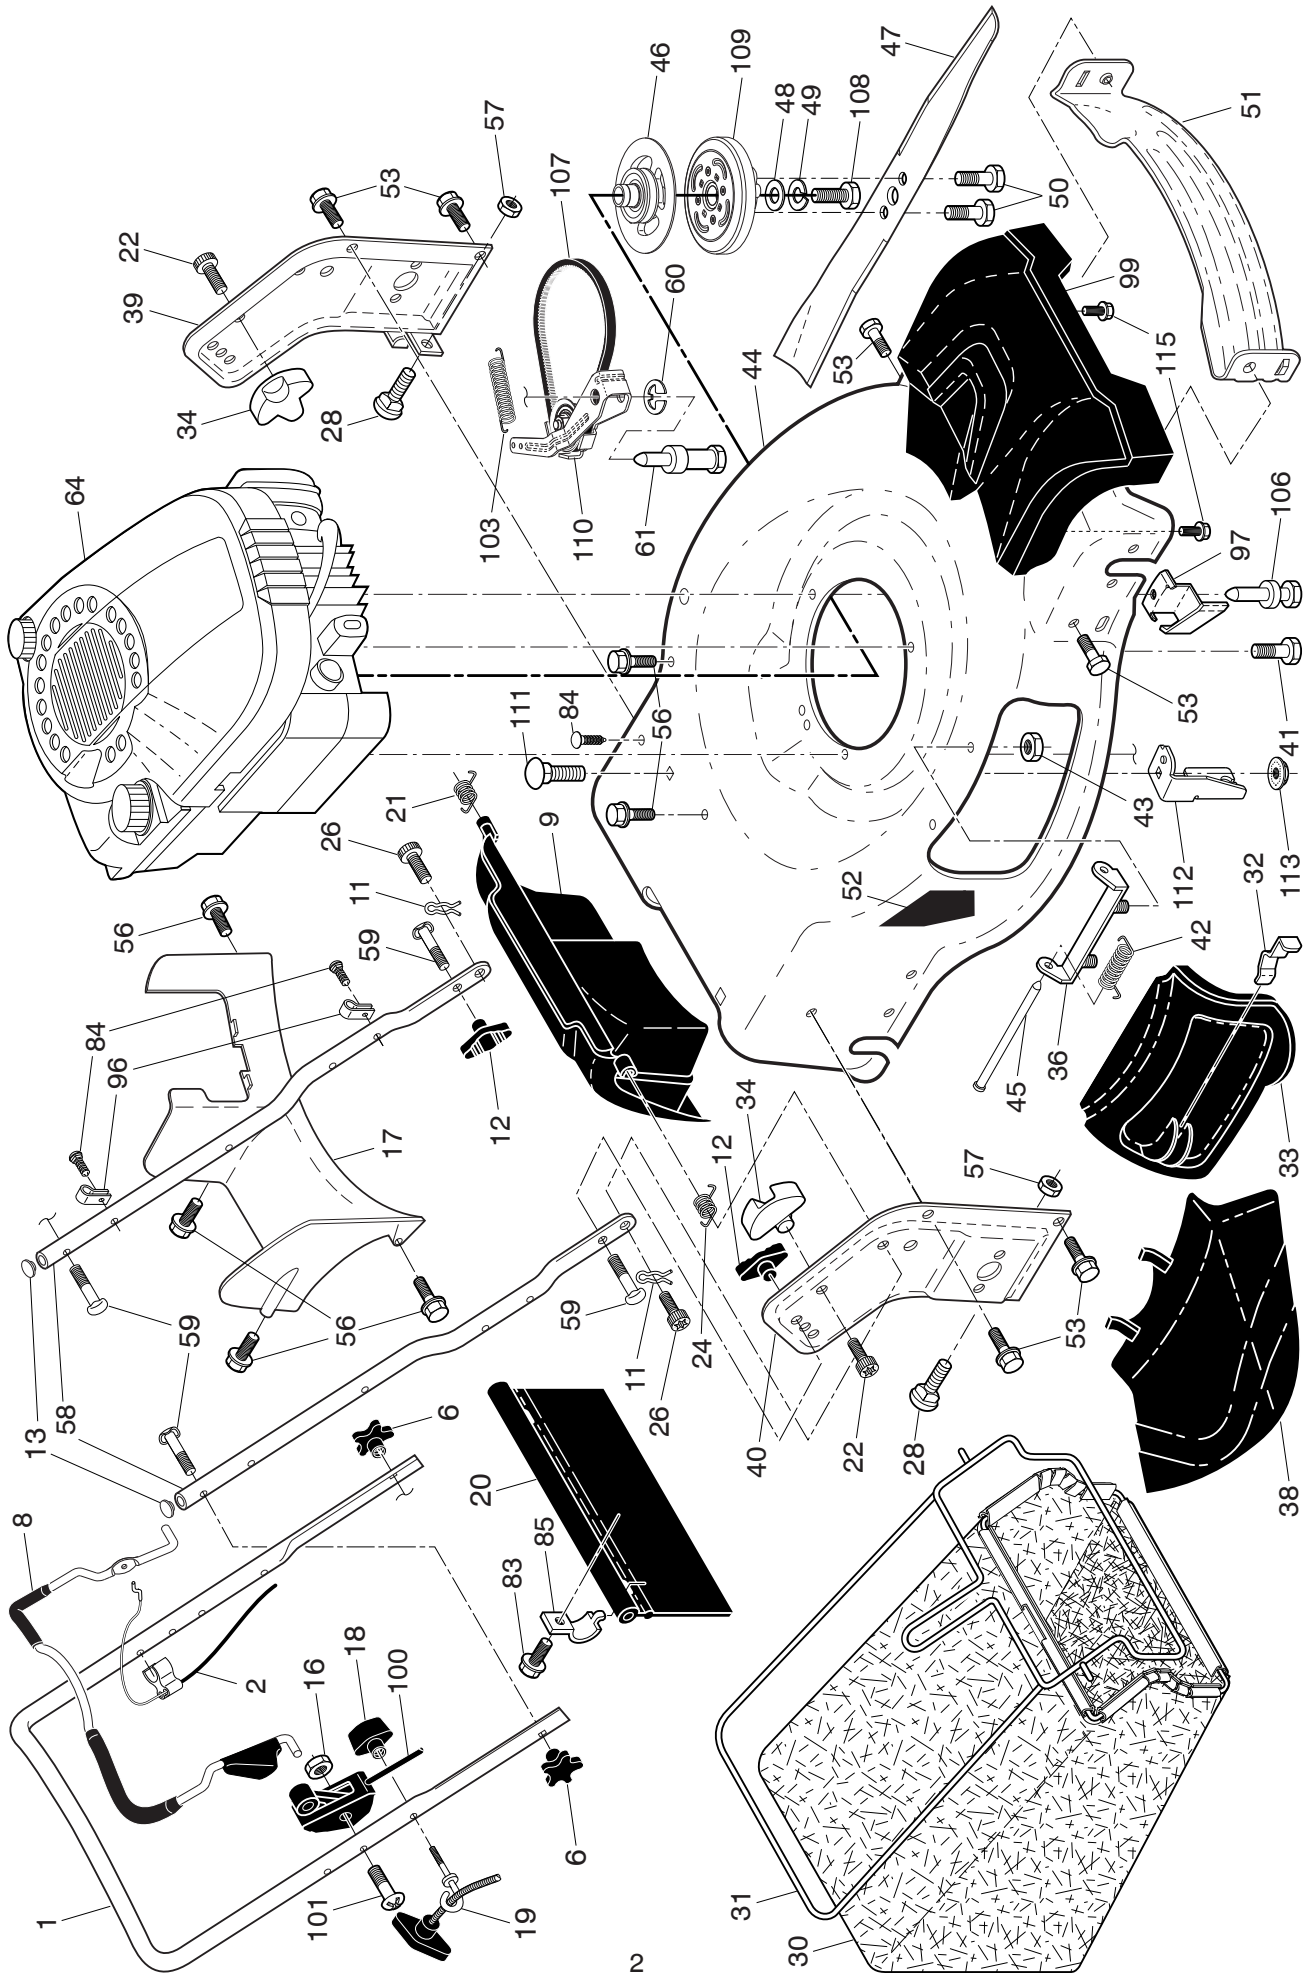


HUSQVARNA ROTARY LAWN MOWER - MODEL NO. HU725BBC (96143009401) PRODUCT NO. 961 43 00-94

KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	580 63 87-06 Upper Handle	48	579 27 38-01 Washer, Flat
2	579 48 42-02 Cable, Blade Brake / Clutch Control	49	532 85 02-63 Washer, Lock
6	532 18 23-98 Handle Knob, Star	50	532 18 04-60 Bolt, Hex Head, Grade 8
8	587 56 41-11 Control Bar Assembly (Includes Blade Control Lever, Roll Pin and Spring)	51	532 43 05-99 Front Baffle
9	532 43 13-90 Rear Door Assembly	52	532 40 47-63 Decal, Danger
11	532 42 55-75 Hairpin, Door/Handle Pivot	53	817 00 05-10 Screw
12	532 19 19-38 Handle Knob, Standard	56	817 41 13-12 Screw, Hex Washer Head #13 x 3/4
13	532 43 75-16 Pug, Handle Bar	57	532 15 53-77 Nut, Hex
17	581 78 21-01 Rear Baffle	58	532 44 11-97 Bar, Lower Handle
16	532 13 20-04 Keps Locknut 1/4-20	59	532 19 15-74 Handle Bolt
18	581 91 26-01 T-Knob	60	579 48 28-01 E-Ring
19	581 90 21-01 Rope Guide	61	581 42 45-01 Bolt, Pivot, Tension Arm
20	532 44 45-01 Rear Skirt	64	--- Engine, Briggs & Stratton, Model Number 128M02-0005-F1 (order parts from Briggs & Stratton)
21	532 41 99-49 Spring, Rear Door, LH, Black	83	532 75 00-97 Screw
22	532 14 18-41 Screw, Panhead, Torx #20	84	532 42 81-24 Fastener, Push
24	532 41 99-48 Spring, Rear Door, RH, Grey	85	532 43 45-30 Mounting Bracket, Skirt
26	532 41 99-45 Screw, Rear Door/Handle Pivot	96	532 19 79-91 Clip, Cable
28	872 25 05-05 Bolt, Carriage 5/16-18 x 5/8	97	581 11 53-02 Belt Keeper
30	580 94 34-05 Grassbag	99	585 66 87-02 Cover, Drive
31	532 41 99-51 Frame, Grass Catcher	100	580 32 48-01 Control, Throttle/Engine
32	532 44 11-92 Latch, Mulcher Door	101	532 18 33-65 Screw
33	532 41 99-27 Mulcher Door	103	581 53 07-01 Spring, Brake Reset
34	532 43 81-34 Bracket, Grassbag	106	579 14 69-01 Bolt, Brake Reset Spring
36	532 17 57-35 Hinge Bracket Assembly	107	579 27 32-01 Belt, Blade Brake/Clutch
38	532 42 61-29 Discharge Deflector	108	532 85 10-84 Bolt, Blade Brake/Clutch
39	581 35 37-02 Handle Bracket, LH	109	581 30 81-01 Free Hub/Blade Adapter
40	581 35 36-02 Handle Bracket, RH	110	581 35 45-01 Tension Arm Assembly, Blade Brake/Clutch
41	532 15 04-06 Screw, Dogpoint 3/8-16 x 1-1/8	111	872 14 04-05 Bolt, Carriage 1/4-20
42	532 19 30-00 Spring, Torsion	112	579 47 18-02 Bracket, Mounting, Blade Brake/Clutch Cable
43	532 19 17-30 Nut, Hex, Nylock	113	532 43 81-30 Nut, Hex, Flanged 1/4-20
44	581 70 83-28 Kit, Lawn Mower Housing	115	532 43 73-45 Screw, Hex Washer Head
45	532 17 56-50 Rod, Hinge	--	115 63 11-96 Operator's Manual, English / Spanish
46	581 27 74-01 Blade Brake/Clutch Assembly		
47	581 04 52-03 Blade, 22"		

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. HU725BBC (96143009401) PRODUCT NO. 961 43 00-94

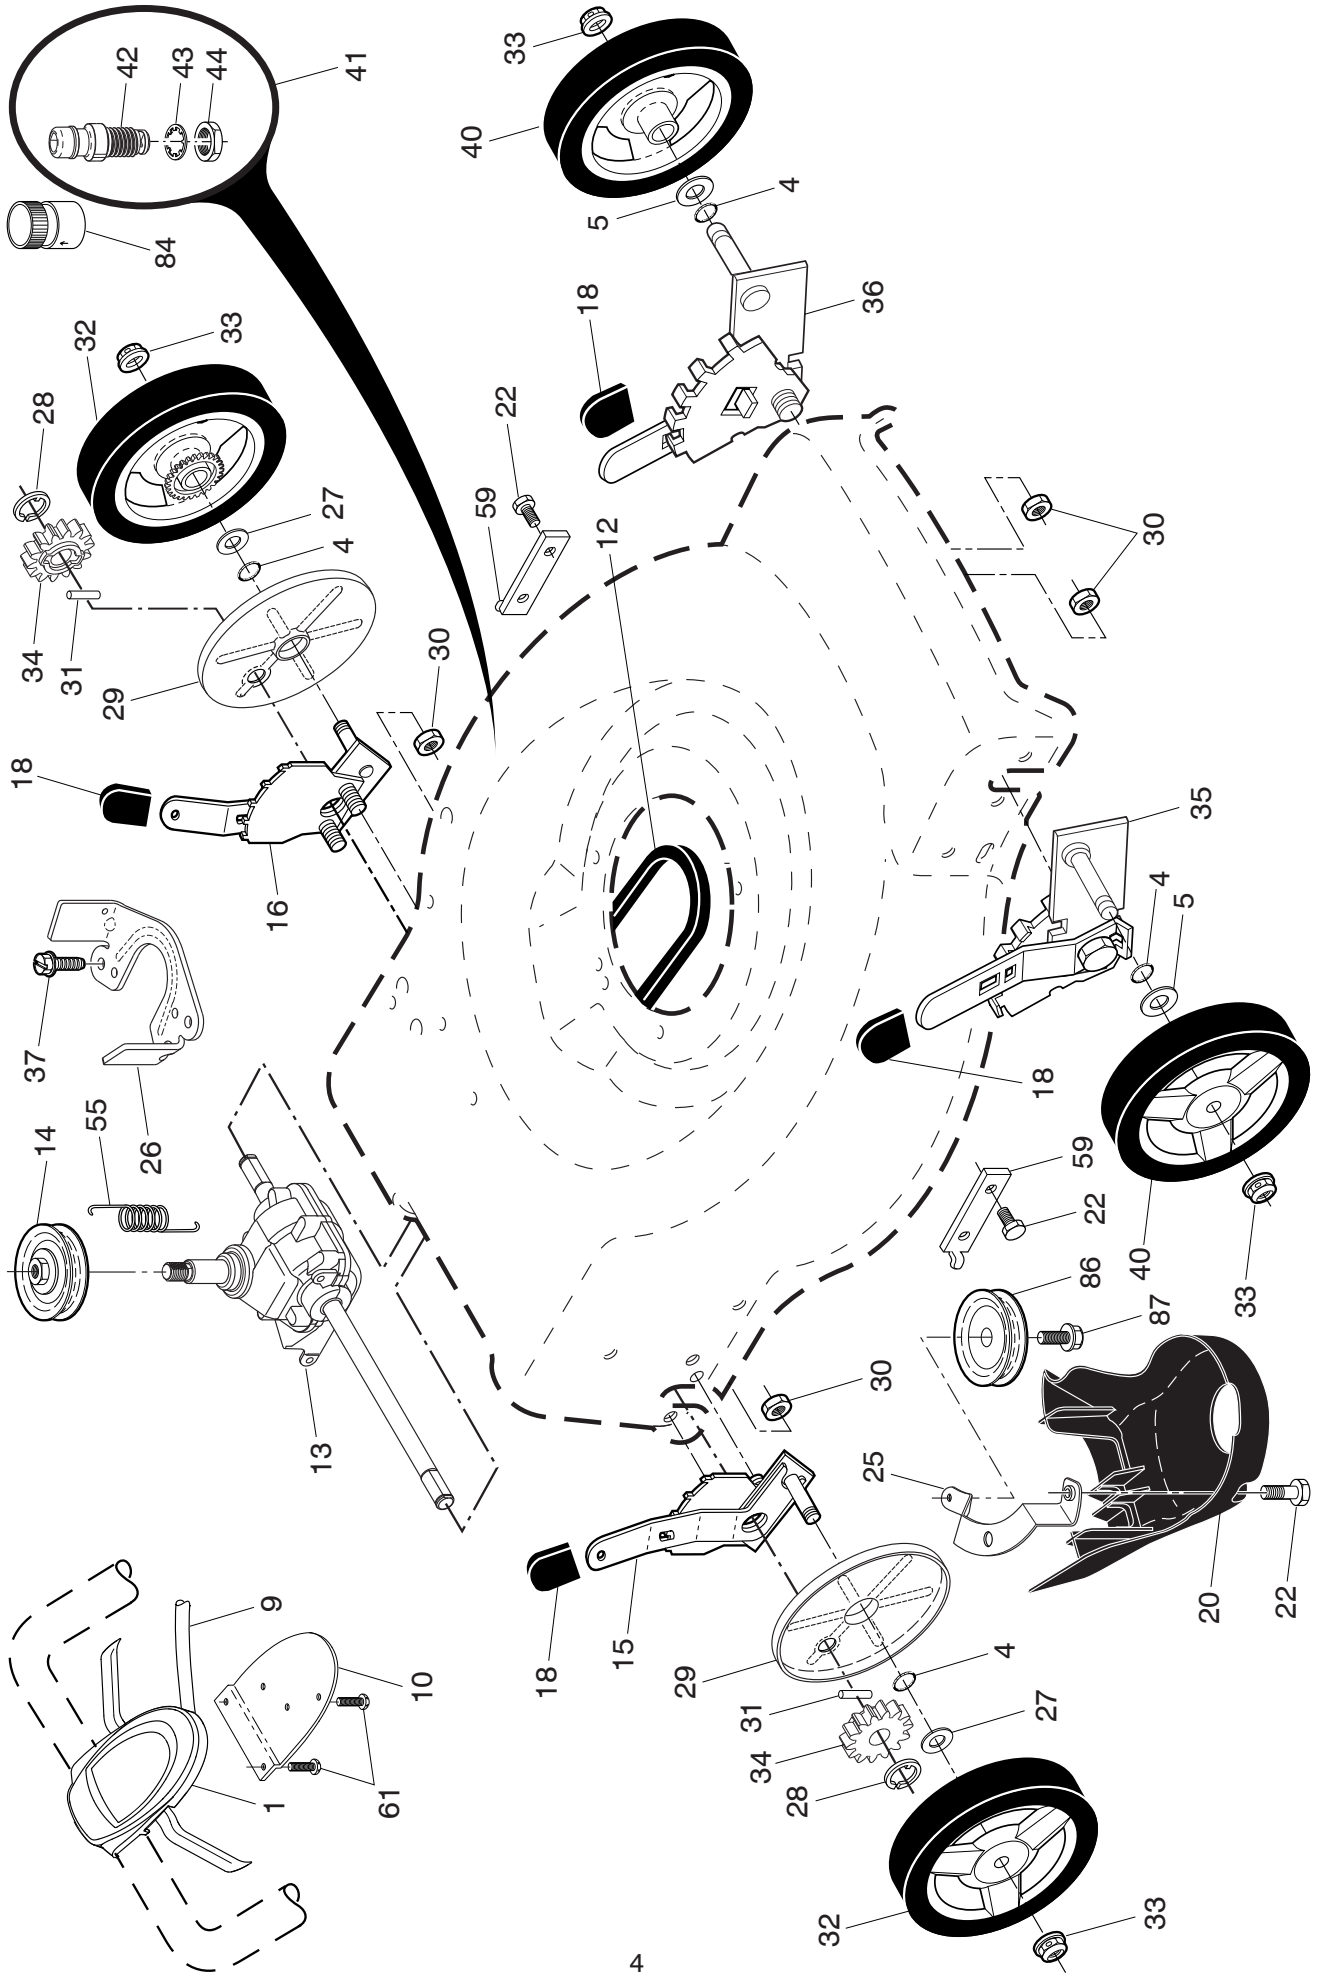

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. HU725BBC (96143009401) PRODUCT NO. 961 43 00-94

KEY PART NO.	PART NO.	DESCRIPTION	KEY PART NO.	PART NO.	DESCRIPTION
1	581 95 05-05	Drive Control Assembly (Includes Cable)	30	532 19 17-30	Nut, Hex
4	532 19 74-80	O-Ring	31	532 40 48-45	Pawl, Drive
5	532 08 83-48	Washer, Flat	32	581 68 51-01	Wheel & Tire Assembly, Rear
9	581 95 21-01	Cable, Drive	33	532 40 91-48	Nut, Flangelock 3/8-16
10	532 43 27-90	Mounting Bracket, Drive Control	34	532 40 48-35	Pinion
12	532 40 65-57	Belt, Drive	35	532 43 11-38	Kit, Wheel Adjuster, Front, RH
13	581 68 08-01	Gear Case Assembly, Complete	36	532 43 11-39	Kit, Wheel Adjuster, Front, LH
14	532 19 41-28	Pulley, Drive	37	532 16 34-09	Screw, Hi-Lo Thread
15	581 49 79-04	Wheel Adjuster, Rear, RH	40	532 41 08-31	Wheel & Tire Assembly, Front
16	581 49 79-03	Wheel Adjuster, Rear, LH	41	532 43 84-89	Kit, Water Washout Assembly
18	532 70 10-37	Selector Knob	42	532 43 49-94	Fitting, Water Washout
20	580 80 69-01	Debris Shield	43	532 41 55-85	Washer, Lock, Internal Tooth
22	817 00 05-10	Bolt, Hex Head 5/16-18	44	532 41 55-86	Locknut, Hex, with O-Ring
25	581 31 38-02	Mounting Bracket, Debris Shield	55	581 35 13-01	Spring, Return
26	532 42 60-66	Belt Keeper	59	532 44 21-13	Support Bracket, Front Axle
27	532 06 77-25	Washer	61	532 18 16-98	Screw
28	812 00 00-58	E-Ring 7/16	84	532 41 64-05	Adapter, Quick-Connect
29	581 84 04-01	Cover, Dust, Wheel	86	580 36 43-01	Pulley, Idle
			87	581 12 76-01	Screw

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.