

INSTALLATION INSTRUCTIONS

ROPS (Roll-Over Protection System) KIT -575 274801

Note:


For illustration purposes, the unit is shown with parts removed. No disassembly is needed for the following installations.

ROPS INSTALLATION

1. Secure the side tubes to the frame using four bolts, washers and lock nuts,
2. Install the top loop to both side tubes with two bolts and nuts so that the top loop folds to the rear of the unit.
3. Insert the ROPS pins into the top loop brackets to set the desired position.

SEAT BELT INSTALLATION

4. Secure the seat belt to each side of the seat support frame. Install with the female end on the left side and the male end on the right side.

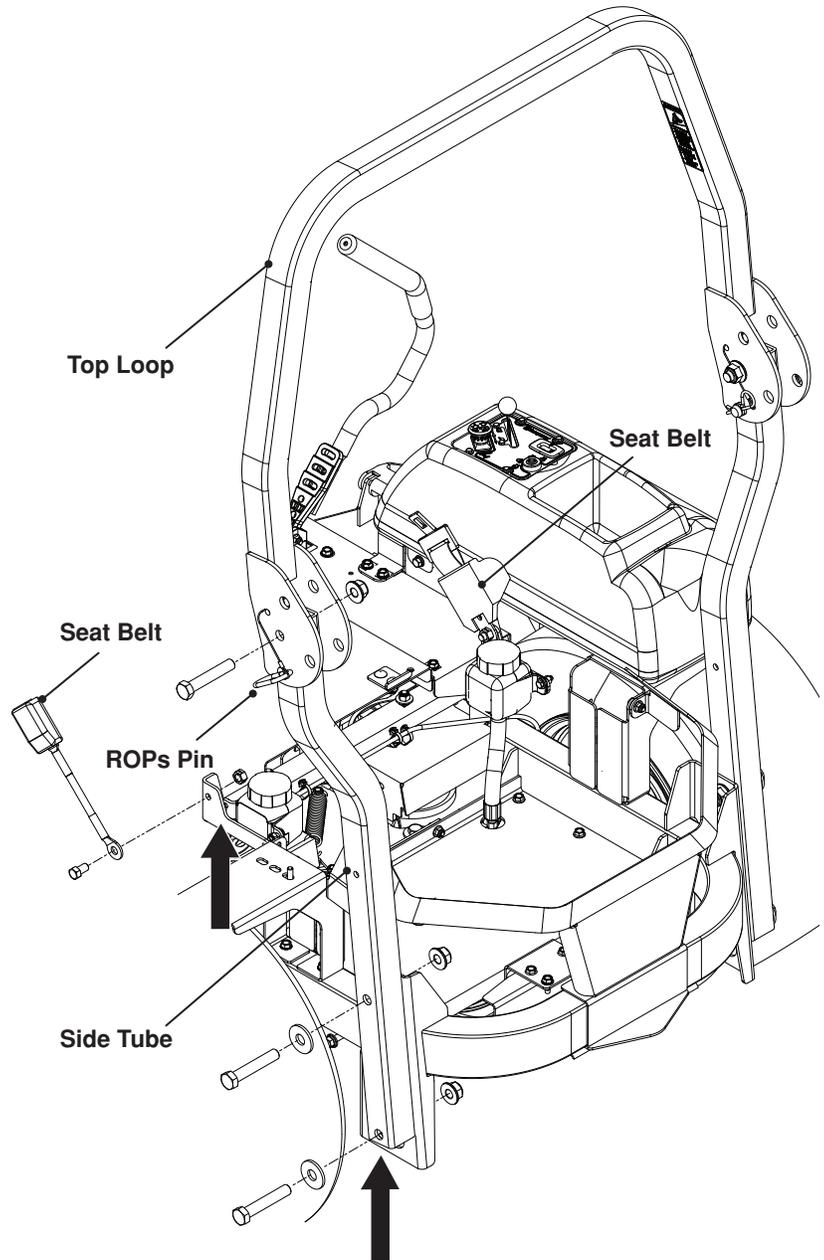

WARNING!

Keep the ROPS in the upright locked position and use the seat belt.

When the ROPS must be folded down, do not use the seat belt and operate with extra care.